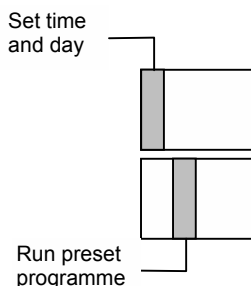
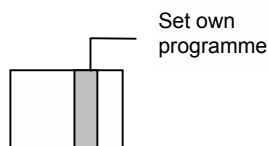


QE2 Electronic Programmer: Short Form Programming Guide**Slide switch position****Set time and day**

1. Press RESET button
2. Press DAY; HOUR +/-; MINUTES +/- to set current time and day.
3. Press summer/winter button with (e.g.) a matchstick to set GMT or BST.
4. Move slide switch to next position RUN PRESET PROGRAMME
5. Clock runs (flashing colon)
6. Preset programme in operation
7. COPY button displays ON/OFF times of preset programme (press repeatedly to view each time set).

Your QE2 will now run on the factory preset programme. If you wish to insert your own programme sequence, please follow the instructions below.

Programming


Move the slide switch to 'Set own programme'.

First heating ON space is displayed; programme as required – following instructions below. If you wish to programme Hot Water, press the Hot Water button to view first ON space

1. Day button selects day(s) – press repeatedly to view day group options
2. Hour +/-; MINUTES +/- buttons select time.
3. HEATING button stores selection in memory as first ON programme (HOT WATER button if programming Hot Water). If you have programmed HEATING, and require the same time for HOT WATER, press the COPY button.
4. First OFF space now displayed, programme in similar fashion. Press HEATING (or HOT WATER, or COPY) button to store and move to next ON space.
5. Once ON / OFF times programmed, move slide switch to next position – RUN OWN PROGRAMME.

Viewing – slide switch in SET OWN PROGRAMME position:

1. HEATING or HOT WATER buttons display ON / OFF times.
2. While viewing any programme space, it can be changed with Day, Hour, Minutes buttons, or cleared (deleted) with the CLEAR button.

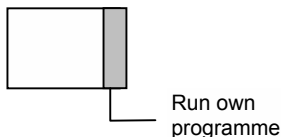Run own programme

1. Clock runs (flashing colon).
2. Your own programme is in operation.

Summer/Winter time change

When the clocks change, press the summer/winter button with (e.g.) a matchstick to move the time display from GMT to BST. One press of the button moves the indicating arrow from one mode to the other, and changes the clock's current time reading as well.

Manual override

N.B. SLIDE SWITCH MUST ALWAYS BE LEFT IN "RUN PRESET PROGRAMME" OR, "RUN OWN PROGRAMME" POSITION, OTHERWISE THE CLOCK WILL NOT RUN, AND NO SWITCHING WILL OCCUR. THE HEATING AND HOT WATER BUTTONS WILL ALLOW MANUAL OVERRIDE CONTROL. PRESS THE SELECT BUTTON TO MOVE THE ARROW TO ANY OF THE SELECTIONS: TMD – TIMED. BOOST – 1 HOUR OUTPUT. ADV – SWITCH ON OR OFF EARLY. CONST – PERMANENTLY ON. OFF – PERMANENTLY OFF. IN THE CONST AND OFF POSITIONS, THE OUTPUT WILL NOT CHANGE UNTIL YOU USE THE SELECT BUTTON TO MOVE TO ANOTHER MODE OF OPERATION.