 


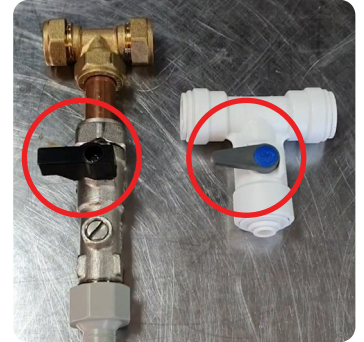

Disconnection for collection and repair

1

Please find the installation valve and turn the leavers horizontally, these can be found underneath the sink. Once turned horizontally the water is shut off. (if you are struggling to find the installation valves move to point 2. Which should still suffice).



2

Behind your Water System, you should find this in-line tap, please isolate by turning the valve horizontally which will stop the water flow to your System.



3

As the valves have now been isolated and water flow stopped, you now need to release the pressure in the System. Please do this by pressing the cold water dispense button on the front of your machine for a couple of seconds. You should not see any water coming out.




4

Please switch off and disconnect the plug from the socket.



5

At the rear of your System you should see the main inlet. This needs to be disconnected. Please do so by pushing the darker grey ring inwards, and at the same time pulling the waterline pipe out.

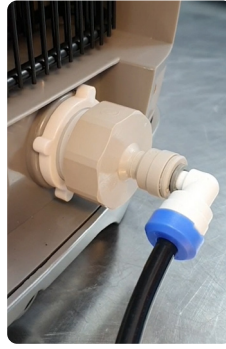

6

Now remove the filter and UV lamp from your old Water System. Please place them to one side.



7

Congratulations, you have successfully disconnected your machine. Please place inside the box provided and remember to keep the machine upright.

