



Operating Instructions for 6-Burner Stove

- Dimensions 36"W x 33"D x 56"H

1. Connect regulator to propane tank (counter clockwise)
2. Turn gas valve on & check for leaks
3. To light burners - lift top of stove & light pilots
4. To light oven – open kick plate at bottom front & light pilot
5. Set oven temperature knob to desired setting
6. Press red/black button down for 15 seconds to bleed line
7. While holding button down press igniter button

- All equipment is tested before delivery but should be rechecked at least 6 hours prior to use in case of malfunction
- Equipment must be kept dry and away from moisture
- When using multiple pieces of electrical equipment, do not overload the circuit, this may cause the equipment to fail