
Blade Control Board Changing

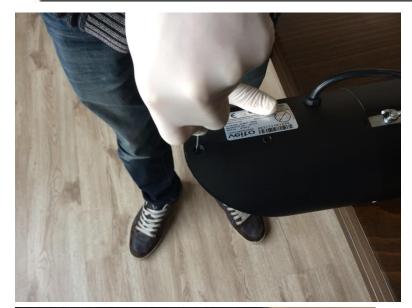


Step1: Push the plastic part which is behind the head part

Step2: Dismount the plastic parts



Step3: Disassemble the L (line, brown cable), N (neutural, blue cable) res1 and res2 (blue and red cable) sockets

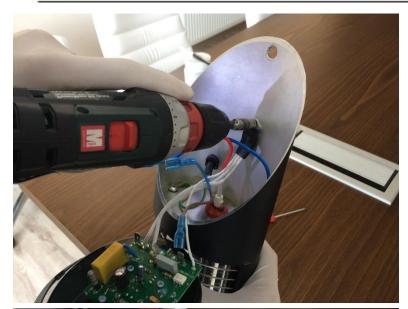


Step 4: Remove the nut and bolt



Step 5: Remove the three screws on the Control board



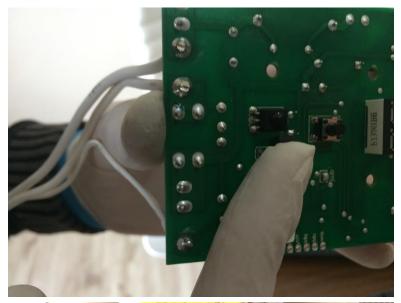


Step 6: Push gently the sensor



Step 7: Placed the Control Board



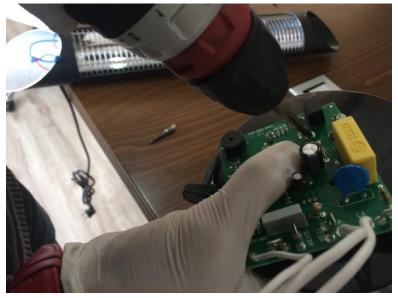

Step 8: Tighten the three screws



Step 9 : Paint triac with thermal paste




Step 10: Placed triac and bolt



Step 11: Tighten the nut



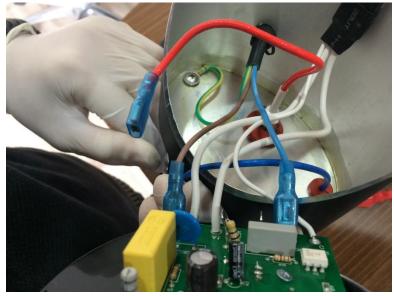

Step 12: Attach Brown cable to L socket and blue cable to N socket



Step 13: Attach rezistance cables to res1 and res2 socket



Step 14: Placed plastic parts



Step 15: Push plastic part to fix it