



## Amika 6 XL dishwasher operating instructions

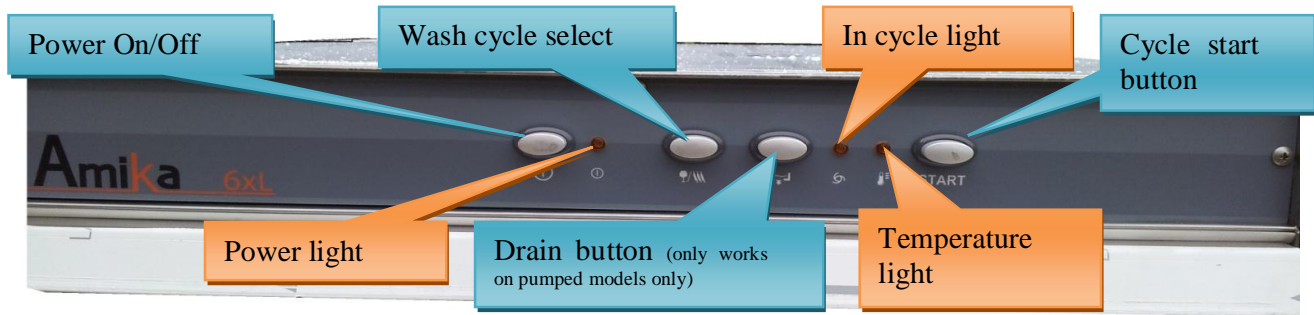

1. To turn on & fill machine, first check **“drain plug”** is in place.
2. Then press **“power on/off button”** to fill machine.
3. Machine will then fill with water and dose chemicals.
4. Once machine has stopped filling heating will commence.
5. Wait approximately **30 minutes** for heating to finish or **“temperature light”** to go out, (only on initial fill).
6. Once heated select wash cycle by pressing **“wash cycle select”** button, (*in=1½ mins out=3mins*)
7. Once selected load dishes and close door. Then press **“cycle start button”** to start wash cycle.
8. When in wash cycle **“in cycle light”** will flash, and then go out when finished.
9. Open door when cycle has finished and place basket **outside** of machine to air dry (approx *1½ mins*).
10. To drain machine (when shift has finished at end of day). First turn **“power on/off”** to **OFF**, then pull out **“drain plug”** to gravity drain. On pumped models press drain button until **“in cycle light”** flashes. Machine will drain in approximately 3 minutes.
11. Once drained check **“wash filter/s”** and clean if necessary. Also check & clean wash and rinse arms.

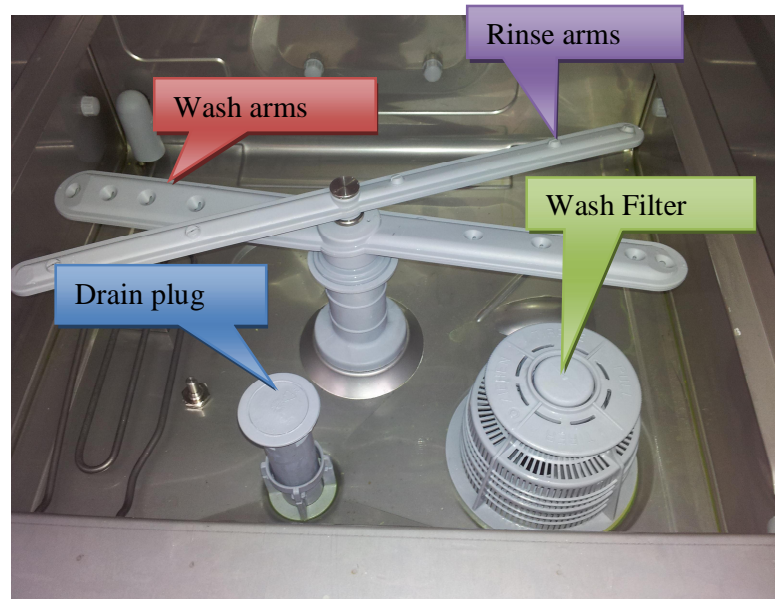

12. Always check and regenerate watersoftener weekly (or advised) to keep machine in good condition and to prevent any warranty becoming invalid.

Any problems please call System-Matic on: **08442 720 556**