



load test & maintenance guide

SUPPORT SYSTEMS



LOAD TEST DATA

	MAXIMUM RECOMMENDED USER LOAD	TESTED UP TO
FREEDOM GRAB RAILS	100kg	175kg
FREEDOM SEATS (NO LEG)	125kg	225kg
FREEDOM SEATS WITH LEG AND BENCH SEATS	200kg	350kg
ALUTEC GRAB RAILS	75kg	150kg
ALUTEC SEATS (NO LEG)	100kg	200kg
ALUTEC SEATS (WITH LEG)	125kg	250kg

(subject to suitable support and installation in accordance with the manufacturer's instructions)

In accordance with neacois policy of rigorously checking and testing our products to maintain quality and safety, all neaco grab rails and seats have been tested to strict loadbearing parameters.



PERIODIC CLEANING & MAINTENANCE INSTRUCTIONS

All surfaces require periodic washing down with soap and warm water, and finally drying off with a clean cloth.

DAMAGE

Should the surface of powder coated Support System become heavily scratched or cut, specialist attention will be required in order to repair or replace.

NOTE: On no occasion use ACIDS or CAUSTICS.

In the event that any problem should arise please contact the manufacturer.



