

ASSEMBLY INSTRUCIONS



Thank you for purchasing this quality Porduct,Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

#### PARTS LIST


NO.	Description	Sketch	QTY
А	POST	$\overleftarrow{\ }  \qquad \qquad$	4 PCS
В	SIDE FRAME	<u></u>	4 PCS
С	LONG TOP FRAME BEAM		4 PCS
D	MIDDLE TOP BEAM	·	4 PCS
Е	SLIDE RAIL		4 PCS
F	LEFT ROOF SUPPORT BAR		4 PCS
G	RIGHT ROOF SUPPORT BAR		4 PCS
Н	FINISHING ROOF SIDE STRUCTURE (LEFT)		4 PCS
I	FINISHING ROOF SIDE STRUCTURE (RIGHT)		4 PCS
J	BASE		4 PCS
K	CORNER SUPPORT BAR	e de la constanción de la constancición de la constanción de la constanción de la constanción de la co	8 PCS
L	CORNER COVER		4 PCS
М	CORNER CONNECTOR	e - e	4 PCS
Ν	MIDDLE CONNECTOR	R Contraction of the second se	4 PCS
0	INSIDE ROOF CONNECTOR		1 PC
Р	OUTSIDE ROOF CONNECTOR		1 PC
Q	CORNER FINISHING END	Ð	4 PCS
R	FINISHING END	D	4 PCS
S	LEFT ROOF PANEL (UPPER)		4 PCS
S1	RIGHT ROOF PANEL (UPPER)		4 PCS
Т	LEFT ROOF PANEL (LOWER)		4 PCS
T1	RIGHT ROOF PANEL (LOWER)		4 PCS
U	PEG		16 PCS
V	MESH		4 PCS
W	CURTAINS		4 PCS
Х	НООК		64 PCS
Y	VALANCE		2PCS

### HARDWARE LIST

NO.	Description	Sketch	Size	QTY
1	BOLT		M6x15mm	70 SETS
2	BOLT		M6x45mm	16 SETS
3	BOLT			12 PCS
4	ALLEN KEY			1 PC


Note: Straight ALLEN Key(  ${\sf W}$  ) is for use with a power drill.



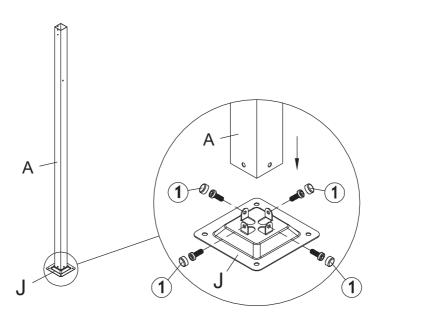





2 of 12

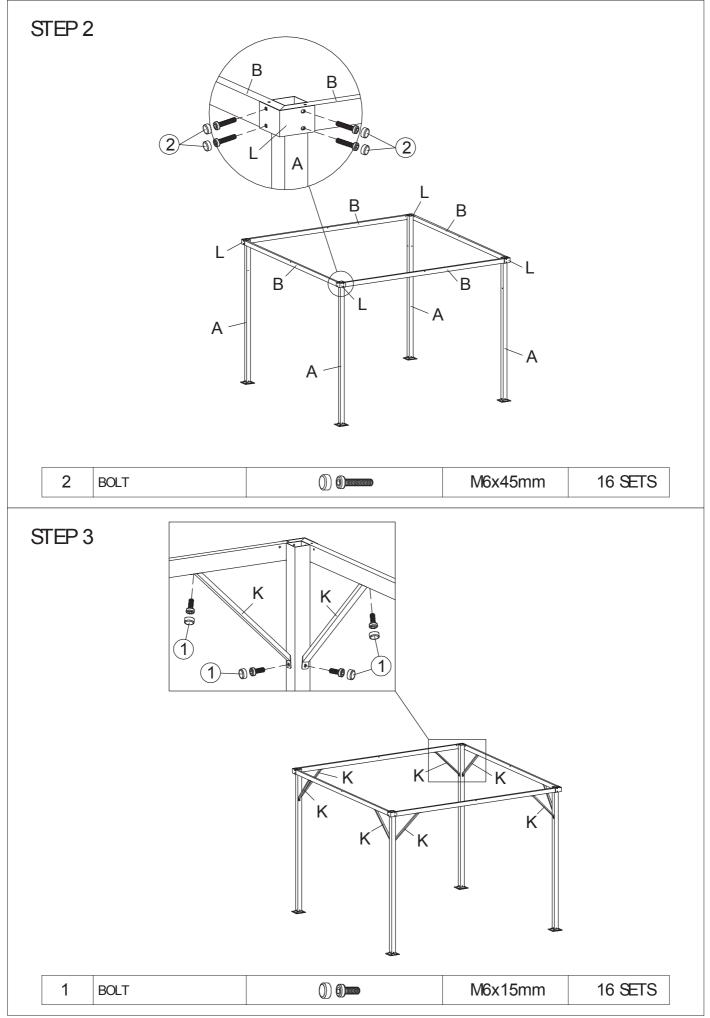


3 of 12

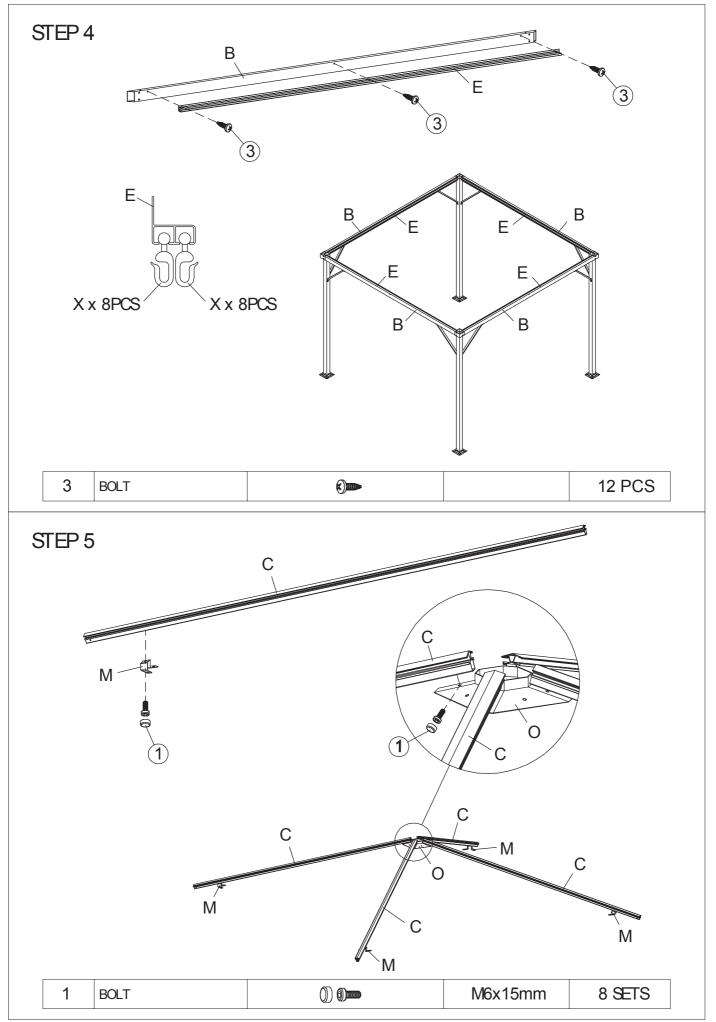



<sup>4</sup> of 12

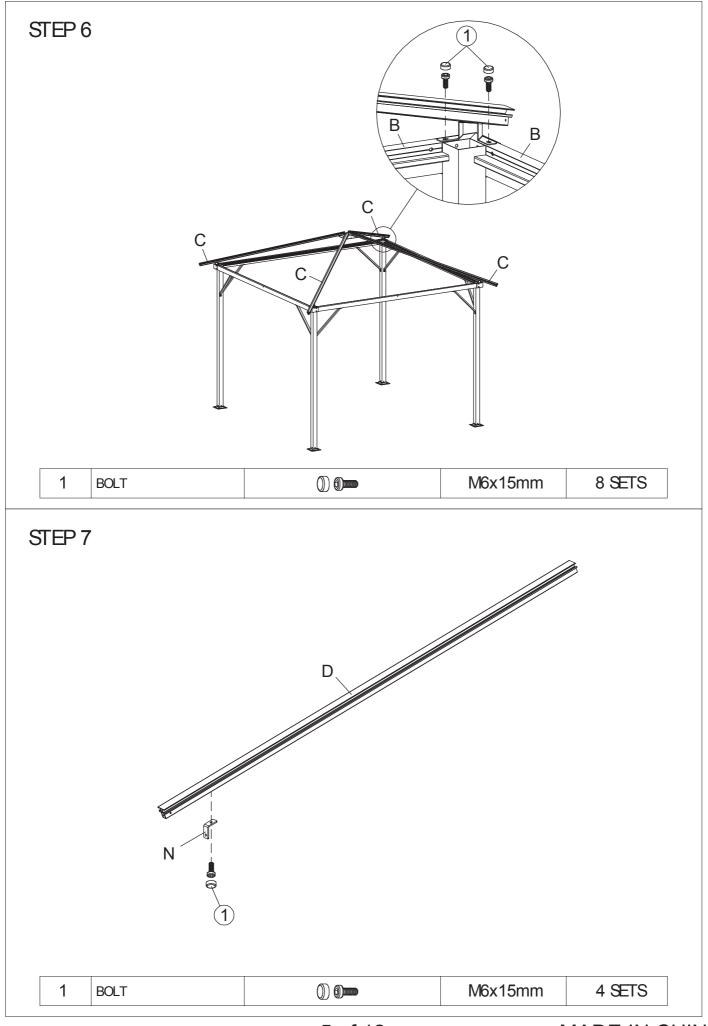


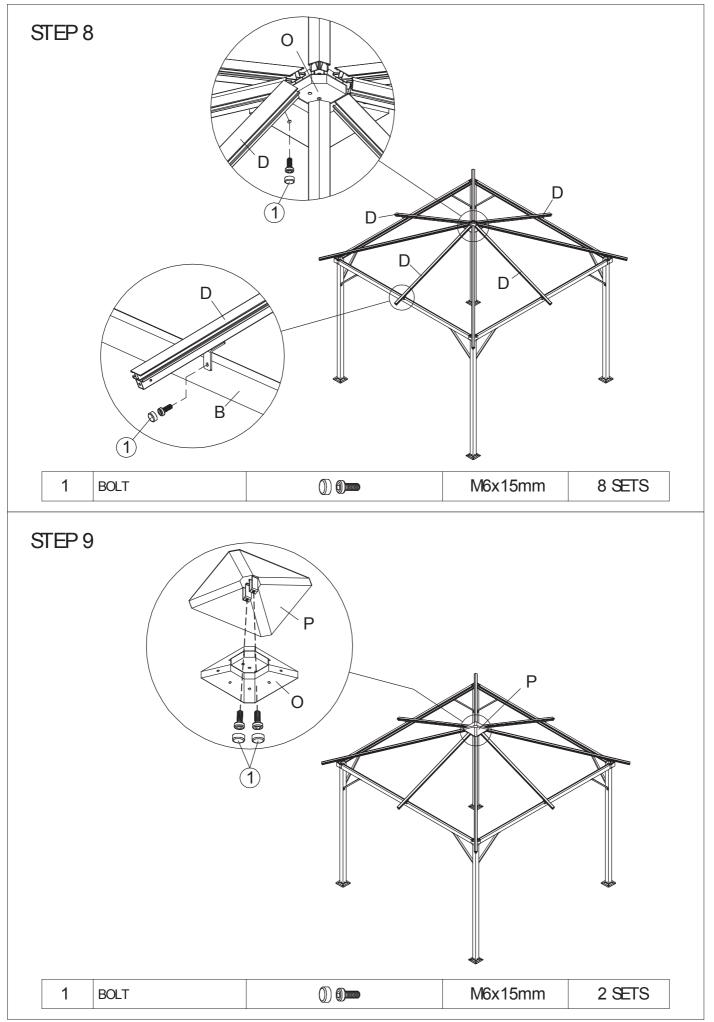


<sup>6</sup> of 12

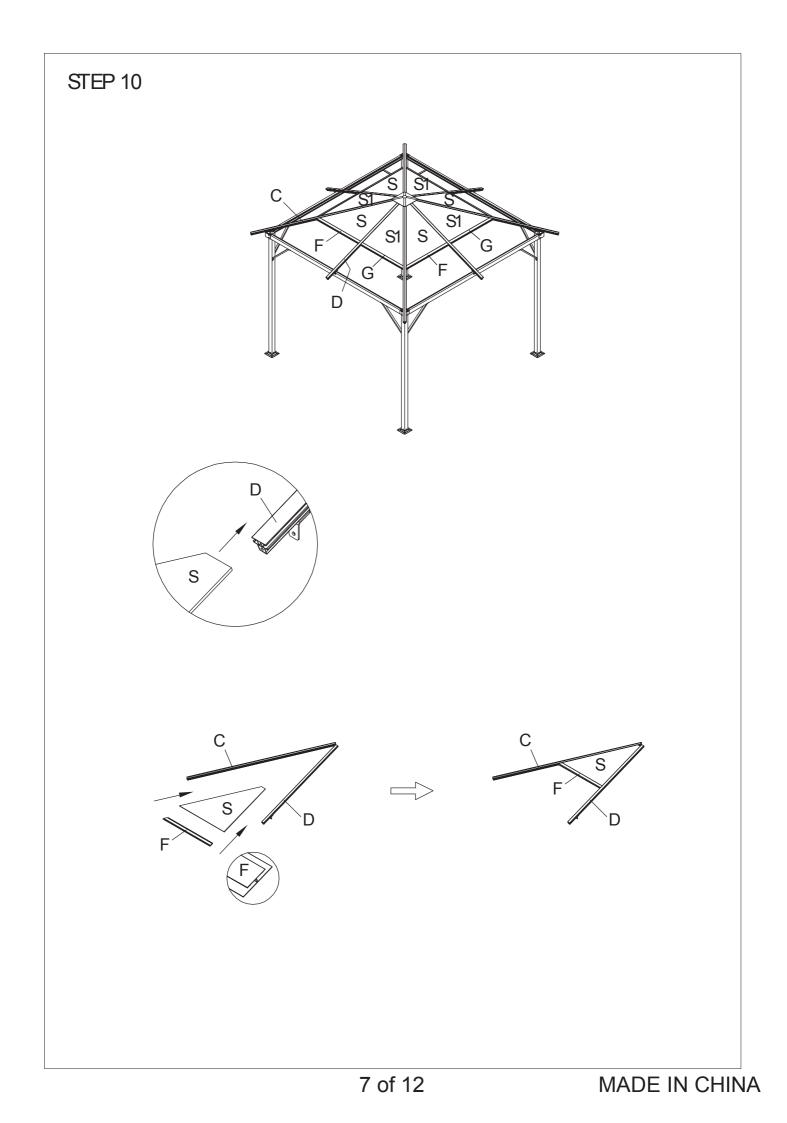

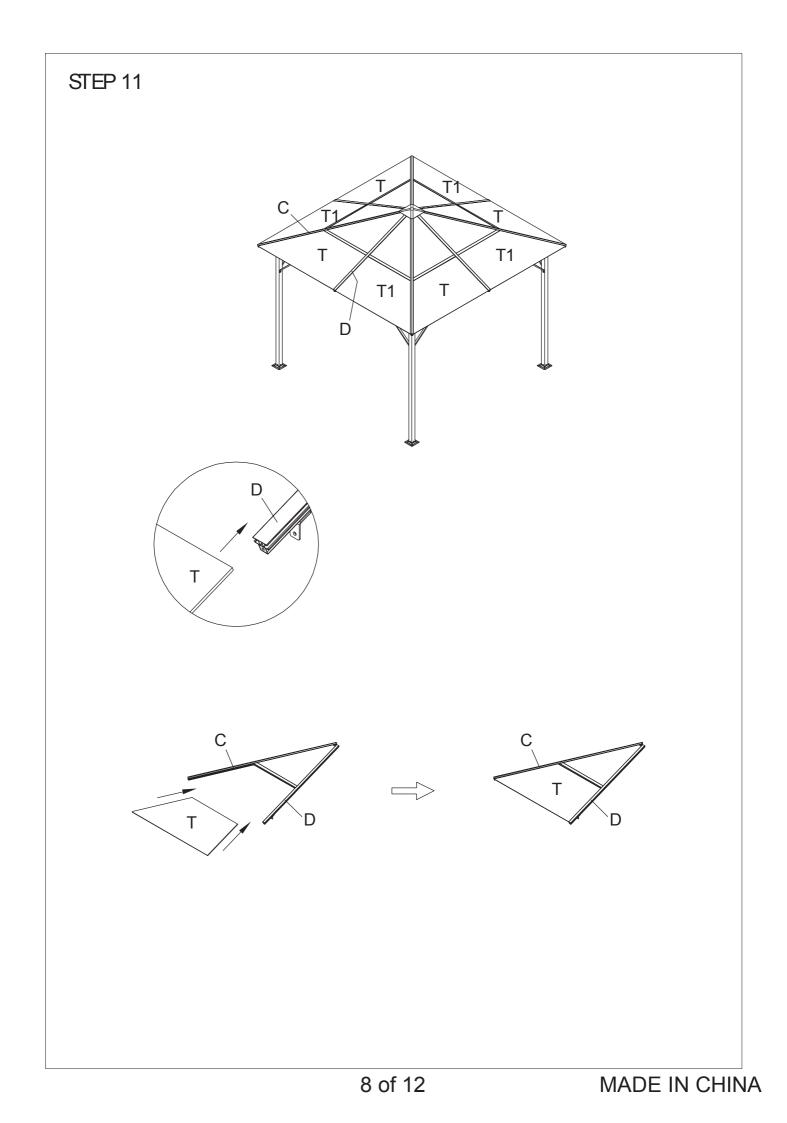

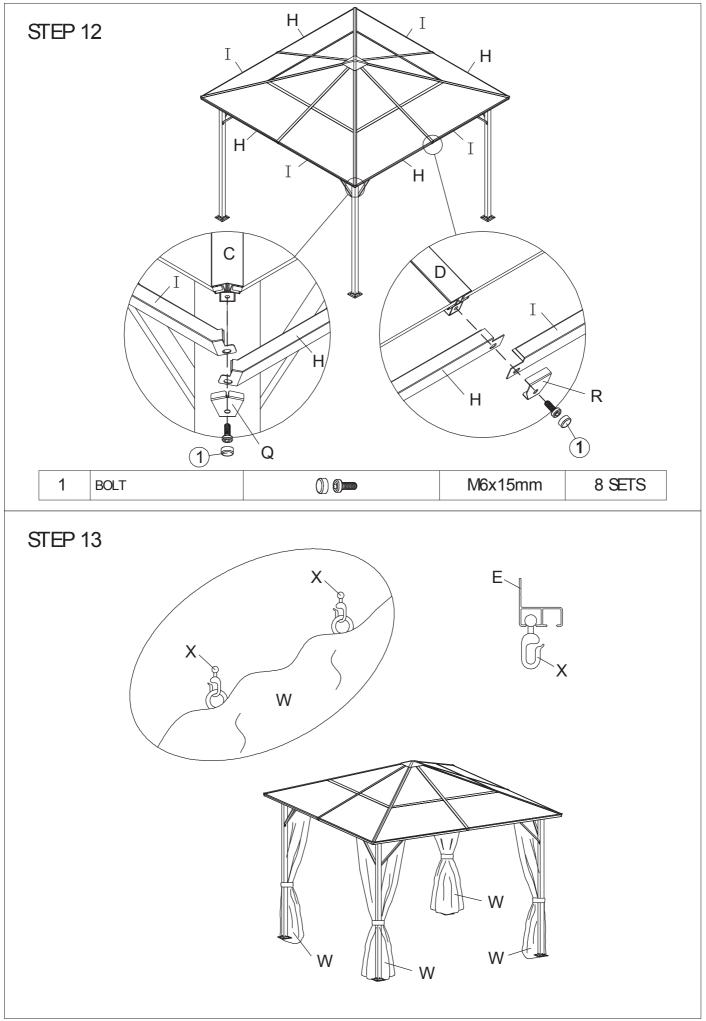

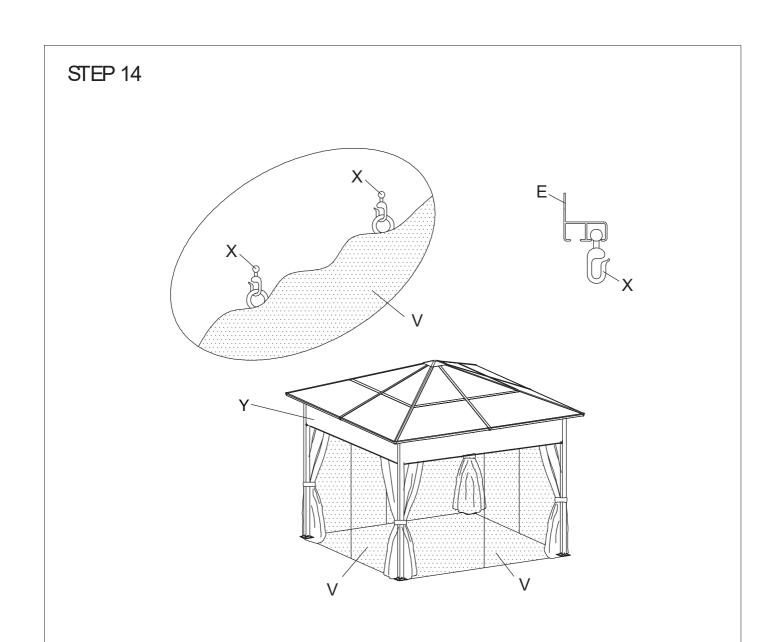

Note: This gazebo is meant to be used for decorat ive and sunshade purposes only and is not meant to withstand inclement weather.

Please read these inst ruct ions carefully before start ing assembly.

- 1). Do not cook underneath gazebo.
- 2). Do not ignite fireworks underneath gazebo.

3). Please keep the part s list . It will be useful if it's necessary to replace parts.

# "IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"

Factory: Linhai Taipeng Arts & Crafts Co., Ltd. Address: No. 53, Houyang village, Dongcheng Town, Linhai City, Zhejiang Province, China

a) Do not wash canopy. Spot clean only with mild soap and water. Rinse thoroughly. Do not bleach.

Leave open to air dry before closing. Frame and pole can be wiped with a damp cloth. Store indoors during the off-season.

- b) Keep all flame and heat sources always from tent fabric. This canopy is made of flame-resistant fabric, but it is not fireproof. This fabric will burn if left in continuous contact with a flame source. Do not hang heavy items from gazebo frame. Remove cover during high wind and during the off-season.
- c) DO NOT ENTER into gazebo if there exist any of the following conditions or of similar intent:
  - visible movement of support members, roofing panels or sagging roofline
  - creaks or audible noise from the gazebo
  - cracks, fractures or malformation (e.g., bends, ripples, broken welds or damaged webs/flanges) of support member or roof panels
  - damaged or missing fasteners
  - DO NOT USE under high gusty winds, thunderstorms or heavy snowstorms
  - KEEP AWAY from heat or flame source
  - KEEP AWAY from falling ice and snow
- d) DO NOT use or enter the gazebo under harsh weather (e.g. thunderstorms, high winds, hail, heavy snow etc.). In these conditions, it may tip over or collapse causing serious injury or death
  - When assembling and using this product, basic safety precautions shall always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembling and using the gazebo
  - Keep all children and pets away from assembly area. Children and pets should be supervised while gazebo is being assembled
  - The assembled gazebo should be located at least 6 feet (2 m) from any obstruction such as fence, garage, house, overhanging branches, laundry lines or electrical wires. Consult with local municipal office for specific requirements.
  - This product is for domestic outdoor use (i.e. decorative and sunshade purpose only)
  - Install the gazebo on level ground. Stakes are provided to secure the gazebo to the ground. If you wish to secure the gazebo to a wood deck or concrete surface, use anchors suited to these surfaces (anchors are not included)

- Some parts may contain sharp edges. Wear protective gloves if necessary during assembly
- This unit is heavy. DO NOT assemble this item alone. Make sure there is sufficient manpower for safe assembling or moving the gazebo
- Check all nuts and bolts periodically for tightness and when required, tighten them again
- While this gazebo is manufactured to withstand winds through only the supplied ground stakes, in areas subject to frequent severe weather, securing the gazebo to a deck, concrete patio or footings shall be considered
- Remove accumulated water on the roof immediately or disassemble the gazebo in order to avoid damages
- Snow must be cleared off regularly during snowy day, remove the snow off the roof when it is greater than 4" (10cm). In order to avoid damages, use a plastic snow rake to remove excessive snow and ice build-up from roof and keep away from falling debris
- ALWAYS DISASSEMBLE the gazebo before experiencing heavy wind conditions, as it is not designed to withstand harsh weather, including high wind, rain and snow.
- Please check your provincial and local regulations prior to purchasing. Some jurisdictions may require permits for installation and use. Some special procedures may be valid in your area
- DO NOT install the gazebo adjacent to trees or a sloped roof. Snow and ice may slide onto the gazebo and cause it to collapse
- DO NOT hang any weights or articles on the roof frame
- If the gazebo will not be used for a long period of time (e.g. during winter season), disassemble and store it in a clean, dry environment.
- KEEP AWAY from falling ice and snow
- Warn not to use ladder leaning against the gazebo or climb onto the roof
- Keep and store instruction manual for future reference.