



CORNER FRIDGE INTEGRATED COLD ROOM INSTALLATION AND OPERATION INSTRUCTIONS



DEFYING
CONVENTION

Contents

Important Information	3
Installation of your Cold Room Pantry	4-6
Step 1	4
Step 2	4
Step 3	4
Step 4	5
Step 5	5
Step 6	5
Step 7	6
Step 8	6
Step 9	6
Operation of your Cold Room Pantry	7
Cleaning and Maintenance	7
Adjusting the Temperature	7
Warranty Information	7

Important Information

Congratulations...

...on your new Integrated Cold Room 600mm x 1200mm Pantry

Please read the instructions thoroughly to understand how to install your Cold Room as well as how to look after it.

Before you start installing your Cold Room and in fact at the time of delivery, if The Corner Fridge Company is not installing your Cold Room for you, please make sure you check that the product has not been damaged during transport.

Any damage must be reported immediately. Both to the transport company that delivered the product and to The Corner Fridge Company.

Installation of your Cold Room

Below is a step by step guide and the drawings or Figures (Fig) corresponding to each step provided. We recommend that all internal joints are sealed with silicone.

Step. 1

First select the floor, and place where the unit wall will stand. (Please note that floor and ceiling panels are the same).

Place the floor with the bottom facing upwards and pull out a little insulation from the large holes. Secure the attachments for the plinth legs.

Screw the adjustable plinth legs down fully until they reach the bottom of the plastic cups (Fig. 1).


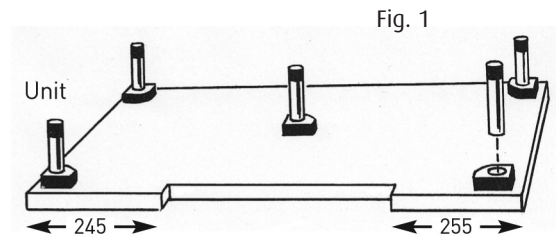


Fig. 2

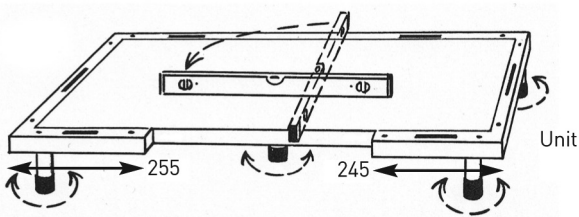

Step. 2


Position the floor approximately in its final location and level it by adjusting the plinth legs. (Fig. 2).

Step. 3

Position the unit wall (right/left) and rotate the lock towards the floor using the allen key supplied (Fig. 3).

Then secure the other elements to one another in the same way, and finally fit the ceiling.

If the hook fails to engage the first time, it must be turned back fully until it clicks before it can be rotated into the lock once more.

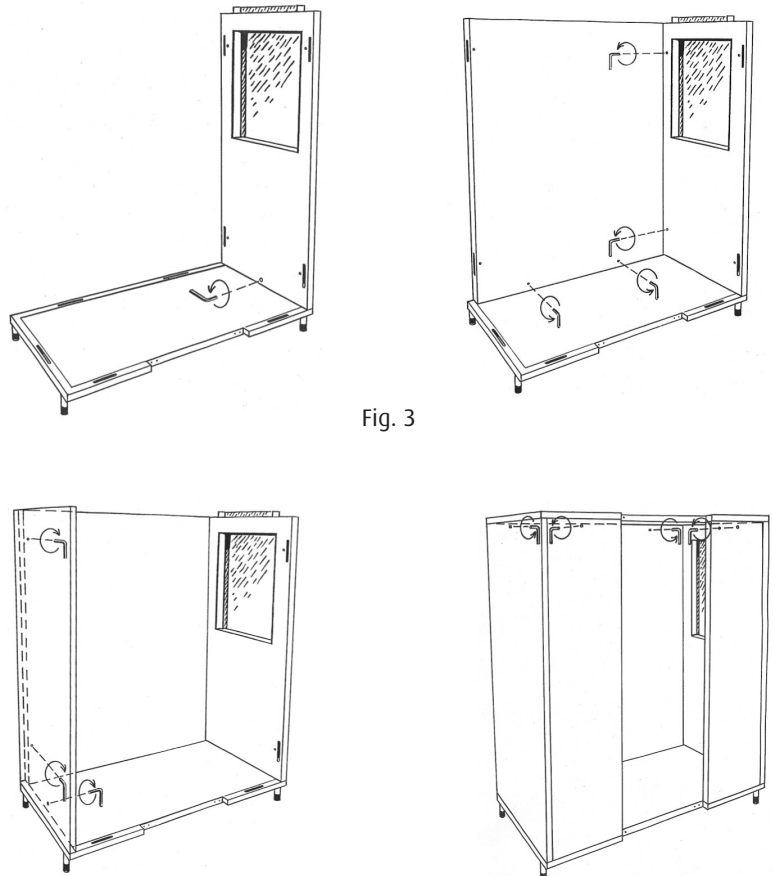

Step 4

Select the hinge side on the door by turning the door frame with the door.

Place the door with the frame into the opening to ensure that it fits.

Remove it again and apply a thick strip of sealant (cartridge supplied) in the opening approximately 1cm from the edge and internally around the entire door opening.

Insert the door frame with the door and screw the door frame securely to the ceiling on the upper side. Seal around the whole frame from the inside, make sure that it is tight. (Fig. 4).

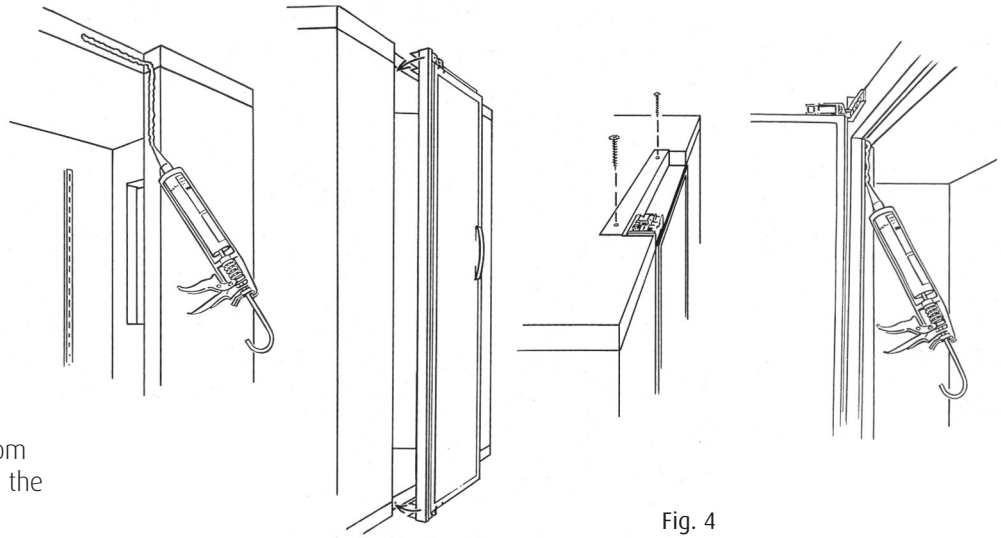


Fig. 4

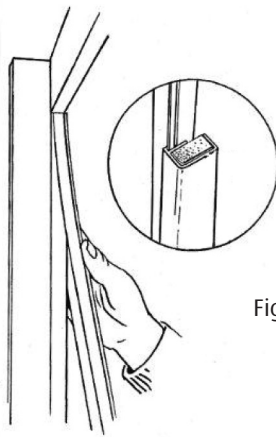


Fig. 5

Fit the long plastic profile with insulation into the groove on the door frame and press it into place so that the lip lies against the side wall on both sides. (Fig. 5).

Step 5

Step 6

Remove the packaging from the compressor unit and pull out the power cord.

Lift the unit into the opening, and at the same time pass the power cord up between the cover on the back.

Carefully screw the unit securely at each corner so that the gasket on the flange is pressed neatly against the element wall.

NOTE: Secure the power cord over the ceiling with the clips supplied, to prevent it from falling into the noise channel and damaging the fan. (Fig. 6).

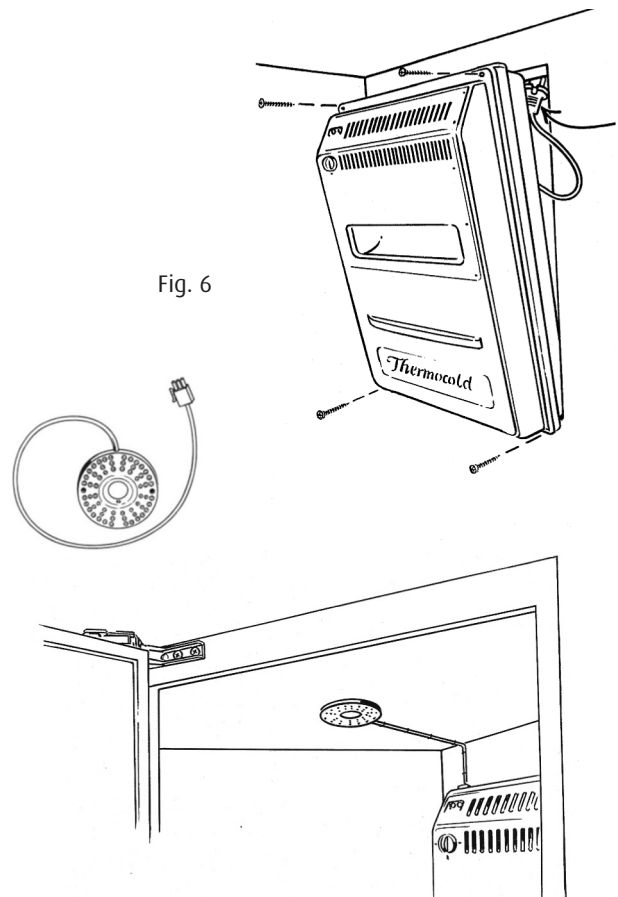


Fig. 6

Step 7

Screw the LED lamp securely to the ceiling at a point about 25 cm in from the door frame.

Remove the protective tape on the cable conduit/connector bar and press it securely in place on the ceiling as far as the female connector on the unit.

Then press the cable into the conduit and insert the contact.

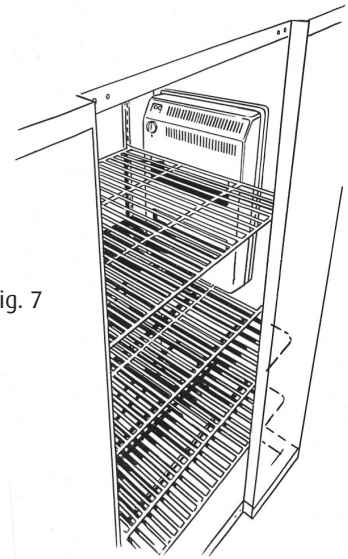


Fig. 7

Step 8

Place the shelves at the bottom of the cabinet, with the 2 shortest on top (Fig. 8.).

Fit the uprights/brackets onto the back wall using the screws supplied.

Lift the top shelf into the desired position in the cabinet and then attach the shelf brackets to the uprights just below the shelf. Repeat the process for the remaining three shelves.

Press the shelves down into the groove to secure them.

Make sure that the second top shelf does not come into conflict with the dust filter tray on the unit.

NOTE: If the cold room is to be integrated, this should be done before the shelves are placed in position. See Step 9.

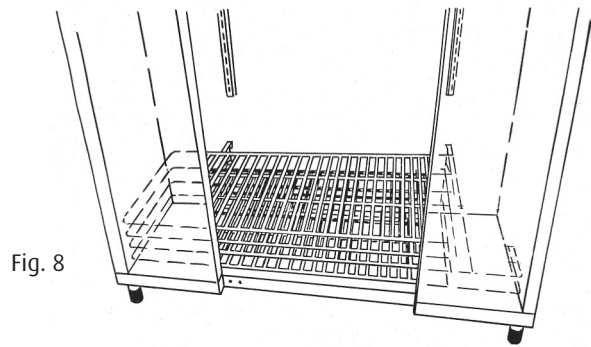


Fig. 8

Step 9 - Integration

The depth of the cover panels and the worktop will determine the distance from the wall at which the cold room must be positioned.

First fit the finishing panel securely onto the door in the correct position using the Velcro hooks and loops fasteners supplied.

Drill eight 5 mm holes in the Cold Room door. Screw the finishing panel in place using the 5 mm long screws supplied. Screwing is done from the inside outwards. Use the plastic discs and decorative cups supplied to conceal the screws.

For integration of the side walls, repeat the procedure omitting the hook and loop fasteners.

NOTE: Screw in the integration screws carefully, so that they do not pass through the finishing panel.

Apply the sealing foam strip supplied between the Cold Room and the wall on the top edge, but avoiding sealing where the air channel from the unit comes up (this must not be blocked). (Fig. 9)

Place a ventilation grille in the base plate under the door. In the case of ceiling-height integration, two ventilation grilles must be installed above the Cold Room too as shown.

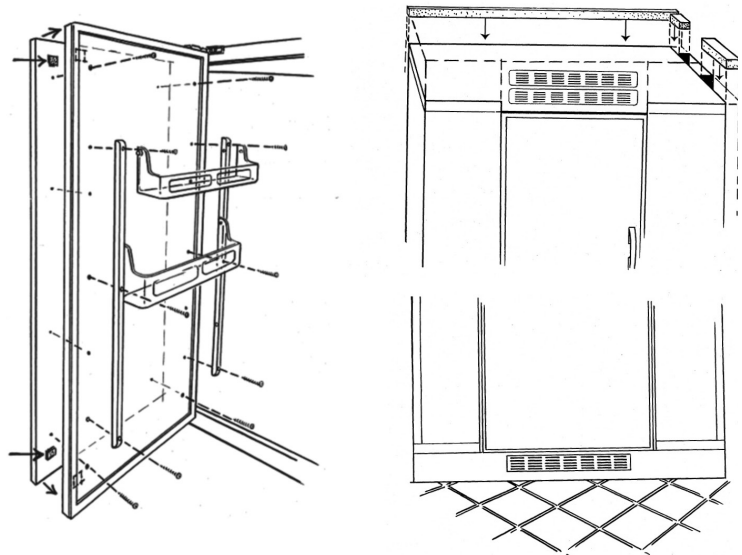


Fig. 9

Operation of your Cold Room

Cleaning and Maintenance

The Refrigeration Unit

The refrigeration unit is equipped with a dust filter, which can be pulled out easily and should be vacuum cleaned approximately every other month or as required. Failure to do this will cause the temperature to rise gradually, and the service life of the compressor will be reduced. The Charcoal filter should be replaced at least every 5 years.

The Cold Room

To avoid the formation of mould, odours etc. it is very important to clean the Cold Room at regular intervals. Wipe the door seal every 4 weeks to keep in good condition.

Outer Facings

- ▶ A neutral detergent product is recommended. (Mild soapy water containing a little chlorine should be used to prevent fungal growth when cleaning the inside of your Cold Room.)
- ▶ Rinse carefully
- ▶ Do not use abrasive products
- ▶ Never use bleach, even if highly diluted.

Inner Facings

- ▶ Use a sponge with a mild cleaning product added to warm water. Should there be unpleasant smells or in order to disinfect, a deodorising product may be used.
- ▶ Rinse with warm water and then dry the inner cabinet thoroughly.

NOTE: After any cleaning, dry the door seals

Adjusting the Temperature

The temperature is reduced by turning the knob in the clockwise direction, and it becomes cooler inside the larder. The temperature is adjusted according to a thermometer placed in a glass of water at about 5°C.

Warranty Information

The Cold Room from the Corner Fridge Company is supplied with a 2 years manufacturer's warranty from the date of delivery. (UK Mainland)

A two-year parts only warranty is provided for other areas

Trade purchases

Trade purchases include everything that is not a consumer purchase, for example if the product is installed in a business, café, institution, nursery, catering establishment, etc. The right to make a claim in this case applies for two years, and the guarantee on wearing parts is one year under the terms of the Sale of Goods Act.



T 00 44 (0) 1302 759308
F 00 44 (0) 1302 751233
E info@cornerfridge.com
W cornerfridge.com

Unit 4 Brunel Close,
Harworth, Doncaster,
South Yorkshire,
DN11 8QA