

Insert the filter and UV lamp into the new System.



Reconnection after repair





2

Reconnect the waterline into the new System by pushing back into the dark grey ring.





3

Ensure that the heating element is switched off on the new machine. The 0 should be pushed down and in.





Plug in your new System and switch on the power.





5

Turn on the installation valves if you turned them off.







Turn on the in-line tap behind the System.







At this point please check the waterline pipe to ensure there are no leaks.

If any leaks happen, please re-isolate and check your connections.









Once you have checked there are no leaks, place a jug underneath the spout and follow the on-screen instructions to fill the hot and cold water tanks and to flush them through (this is normal practice with a new system). At this stage please do not set the boiling temperature above 96 degrees as this may cause leaks.

9

After flushing the hot and cold-water tank, please switch on the heating element at the back of the machine.







10

Congratulations! You have now successfully reconnected your machine. Please refer to your user manual for all other settings.

