 
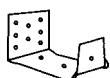 
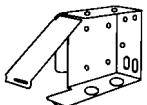


**Fixings**


You will find enclosed all the necessary brackets and screws to either top fix or face fix your wooden blinds.

**Fitting Methods**

Your wooden blinds have been made to be fitted either inside or outside the window recess. Please follow the relevant instructions for your blind. For blinds to be fitted inside the recess blinds a 10mm deduction has been made for ease of installation.

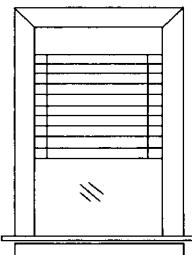


inside recess

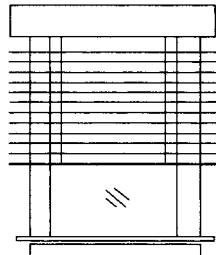


outside recess

**Fixing the Brackets**

The fitting brackets can be mounted using the screws provided in three different orientations, depending on where you intend to fit the blinds - see below.

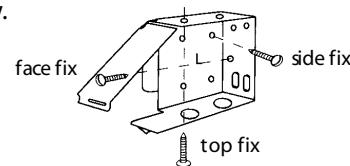**Measure for Installation**


If fitting outside the recess, first measure the head box with the brackets on. Next mark the area where you intend to fix the blind and screw the brackets into place (with the catch facing out). If fitting inside the recess, position the right hand and left hand brackets inside the recess were fitting and mark holes, drill and place plugs and fit the brackets. When brackets are in place slide head box into the brackets horizontally. Secure by clipping the catches over - see illustration.

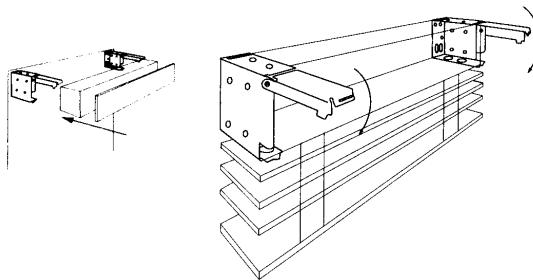**Pelmet / Valance**


Your wood venetian blind is supplied with a valance / pelmet to cover the front of the cassette box. This simply attaches using either the velcro or brackets provided.

**Pelmet for Outside Recess**

A mitred pelmet for the returns is supplied at customers request for blinds to be fitted outside the recess. When measuring for blinds to fit outside the window recess please note that the mitred returns will add an extra 16mm to the overall width of the blind.

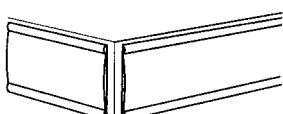

mitred corner for pelmet / valance

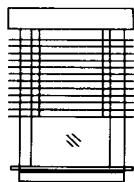**Operating your wooden blind**

Raising and Lowering (Multi-cord Acorn). The wood slat's should be fully open and not tilted when raising or lowering. the blind. To raise the blind pull the cord straight down and lock by pulling cords to the right. To lower the blind simply pull the cords towards the left of the blind and slowly raise your hand whilst holding onto the cords. Move the cord back to the vertical position and the cord lock will hold the blind in position.

Tilt (Single Cord Acorn). To tilt your slatted blind pull either one of the single acorn cords.

**Cleaning your wooden blind**

Routine dusting with a cloth or soft brush or alternatively clean them with the brush attachment of a vacuum cleaner is highly recommended. If the blinds become soiled, they can be cleaned with a soft cloth moistened with warm water. You can also add a small amount of mild, non-abrasive liquid soap to the warm water. We advise that you to use a professional window treatment cleaning services if you have chosen to have your wood venetian blind cleaned by any method other than those suggested above.

