



### **Operating Instructions for Popcorn Machine**

1. Turn kettle heat and kettle motor switch "ON"
  2. Make a test pop by putting 3 corn kernels and 1 oz of oil in kettle
  3. When the test kernels have popped, load kettle with corn kernels (6 oz) and oil (1.6 to 2 oz)
  4. When corn is fully popped, dump kettle
  5. Repeat cycle starting with a full load (see #3)
  6. For the best popcorn, always make 3-5 batches
  7. Be sure to switch on the light and warmer to keep popcorn warm
- 
- All unused popcorn must be disposed of before pick-up
  - All equipment is tested before delivery but should be rechecked at least 6 hours prior to use in case of malfunction
  - Equipment must be kept dry and away from moisture
  - When using multiple pieces of electrical equipment, do not overload the circuit, this may cause the equipment to fail