

Accessories

The one to five SCART adaptor is recommended if prolonged testing of SCART cables is intended:



DECLARATION OF CONFORMITY

Manufacturers Name: CableJoG Ltd.
Address: 18 Browmere Drive, Croft,
Warrington. WA3 7HT.

Type of equipment: Cable tester

Model: AVjog



I hereby declare that the equipment specified above conforms to the provisions of the EC DIRECTIVE 2004/108/EC on Electromagnetic Compatibility (EMC). Having applied the following standards;

BS EN61000-6-1 :2007

"Generic EMC Immunity Standard for the residential, commercial & light industry enviroment".

BS EN61000-6-3 :2007

"Generic EMC Emissions Standard for the residential, commercial & light industry enviroment".

Edward Stefan Zych, Director.10th April 2014

RoHS+WEEE



AVjogTM
Operations Manual

Introduction

The AVjogTM Cable Tester is a versatile unit that allows the user to either identify the connections within a variety of Professional Audio, Video & digital Network cables. Cables fitted with any of the following connectors may be checked:

- | | |
|---------------------------|--|
| • DVI | • 3 pole XLR |
| • HDMI | • 3.5mm jack stereo or mono |
| • SCART | • RCA Phono RGB & RWY |
| • SVGA 15w HD 'd' type | • BNC 50/75Ω / HD SDI RGB Horiz & Vert |
| • RJ45 | • F Type |
| • S-Video MINI DIN 4 pole | • COAX |
| • USB A & B | |

The tester comes in two parts. Part one the Local end is the main control unit and part two is a diode loop back unit or Remote unit. The tester can test cables or AV panel installations for the following conditions:

- Continuity
- Short Circuits (end to end & between unconnected pins)
- Open Circuits (end to end & between unconnected pins)

Please read the following instructions carefully before using the AVjogTM Cable Tester.

Warning:

The Cables or AV panel installations to be tested must be fully disconnected from any other equipment or electrical source. Failure to do so could result in electrical shock and permanent damage to the AVjog Cable Tester, for which the manufacturer and suppliers can accept no liability.

Getting started

The AVjog^(TM) Cable Tester comes with a plug top mains adaptor which may require fitting of the correct plug pin assembly. The tester will also work using four AAA batteries (not rechargeable ones). Access to the battery holders is via the front panel. Using a screwdriver to undo the screws holding the panel on the top of the tester to gain access to the battery compartment. Fit the four 1.5 volt AAA batteries observing correct polarity.



Picture shows battery orientation and display contrast control

Batteries/mains useage

As in most cases the unit will not be far from a source of mains electricity the tester has been designed to work mainly in this mode. However, if mains power is not available the tester will work from the internal batteries. To save battery power the LCD display backlight only comes on when working from the mains supply.

Special Functions

These special functions are accessed by pressing and holding the test button before switching on.

1.	Clear	MEMORY					
[[OK]]				[Next]

Function 1

Press and hold the test button to clear the stored cable from memory.

2.	Select	Cable					
[[OK]]				[Next]

Function 2.

If you know what sort of cable you are going to be testing you select this by pressing and hold the test button until the first cable title is shown:-

3.	5mm	Stereo					
[[OK]]				[Next]

Press and hold the test button to select this cable or step onto the next cable.

Stored cables

- 3.5mm Stereo

BNC-BNC HORI

Coax TV

DVI-D single Ink

DVI-I Dual Ink 1

DVI-I Dual Ink 2

DVI-I Dual Ink 3

DVI-I Single Ink

DVI HDMI

DVI SVGA

F Type

HDMI

HDMI DVI

Monitor cable 1

Monitor cable 2

Phono/BNC RGB

Phono RW

Phono RWY

Phono single (Y)

RJ45/CAT5 no scr

RJ45/CAT5 scr

RJ45/CAT5 Xover

RJ45/CAT5 Xoverg

S-Video

Scart

Scart BNC RGBHV

Scart Phono RWY-1

Scart Phono RWY-2

Scart TV lead
- Scart TV no p12

Scart TV 16 way

SVGA-BNC BLUE-1

SVGA-BNC BLUE-2

SVGA-BNC BLUE-3

SVGA-BNC GREEN-1

SVGA-BNC GREEN-2

SVGA-BNC GREEN-3

SVGA-BNC RED-1

SVGA-BNC RED-2

SVGA-BNC RED-3

SVGA-BNC HORIZ-1

SVGA-BNC HORIZ-2

SVGA-BNC HORIZ-3

SVGA-BNC VERT-1

SVGA-BNC VERT-2

SVGA-BNC VERT-3

SVGA-BNC RGB+HV1

SVGA-BNC RGB+HV2

SVGA-BNC RGB+HV3

SVGA cable 9w

SVGA cable 10w

SVGA cable 12w

SVGA cable 14w

SVGA cable 15w

SVGA DVI

SVGA Phono RGB

USB

XLR scr

XLR no scr

For detailed connection information please contact us via fax or email

Terminology

Local unit:



Remote unit:



Key options:

Single Bracket [] press and release.
Double Brackets [[]] press and hold until the display changes usually about 2 seconds.



In this example pressing and releasing the test button quickly will repeat the test program while pressing and holding the test button down will put the found cable into memory

Test Procedure

Switch the Local unit ON and the display will show the current software version installed:



AUj09 v1.32
[Next]

To test a cable, or lead, simply connect the Local and Remote units using the cable or lead and press the test button.

If the tested cable matches any one of the cables held in the program see the table of cables on page 10. In this example a Scart extension cable then the display will show:-



Scart
PASS 001 [Again]

If on subsequent testing the cable doesn't match any held in the program then it is assumed that it is probably a faulty version of the last good cable. Faults can either be OPEN circuits in which case the display will show:-



Scart
Open Pin03 [Nxt]

When you see the [Agn] display this means that all the faults have been shown and the tester is ready to test the next cable:-



Scart
Open Pin03 [Agn]

Faults can also be SHORT circuits in which case the display will show:-



Scart
Short18-19 [Nxt]

Finishing with:-



Scart
Short19-18 [Agn]

Note: Short circuits are shown in pairs as in the two examples. This is because a normal connection goes through a diode to Pin 1 of the connector and so only gives a connection one way e.g. 01 to 18.
A short circuit bypasses the diodes and so will in most cases result in a pair of connections.


Test Procedure continued

If no connections are found the display will show:-



Ready
[Test]

If the connections found do not match any of the stored cables and no cable has been properly identified i.e. the first test after switching on then the connections will be displayed:-



Found 01 to 02
[Next]

Press the test button to step through the connections.

When the last connection is reached you will have the option of putting this cable into MEMORY so that similar cables can be tested against this one.



Found 01 to 21
[[MEM]] [Again]

Press and hold the test key to place this cable into memory. If you later on want to clear this see the Special Functions page 6.

If set the display will show:-



MEMORY
[Test]

OPEN and SHORTS will be displayed just as in a normal stored cable.

Should you see:-



Too many conns
[Again]

Then the tester has found more connections than it can cope with (96) and there are probably several short circuits in the cable.

This page is intentionally left blank

This page is intentionally left blank

CONNECTOR PIN ASSIGNMENTS

CONNECTOR															PHONO		PHONO		BNC			
DVI	SCART	HDMI	SVGA	SVIDEO	USB	XLR	JACK	COAX	FTYPE	RED	WHITE	YELLOW	RED	GREEN	BLUE	RED	GREEN	BLUE	HORIZ	VERT		
1=>1	1=>1	1=>1	1=>1	1=>1																		
2=>2	2=>2	2=>2	2=>2	2=>2																		
3=>3	3=>3	3=>3	3=>3	3=>3																		
4=>4	4=>4	4=>4	4=>4	4=>4																		
5=>5	5=>5	5=>5	5=>5	5=>GND																		
6=>6	6=>6	6=>6	6=>6		6=>1																	
7=>7	7=>7	7=>7	7=>7		7=>2																	
8=>8	8=>8	8=>8	8=>8		8=>3																	
9=>9	9=>9	9=>9	9=>9		9=>4																	
10=>10	10=>10	10=>10	10=>10																			
11=>11	11=>11	11=>11	11=>11			11=>1																
12=>12	12=>12	12=>12	12=>12			12=>2																
13=>13	13=>13	13=>13	13=>13			13=>3																
14=>14	14=>14	14=>14	14=>14			14=>GND																
15=>15	15=>15	15=>15	15=>15				15=>TIP															
16=>16	16=>16	16=>16	16=>16				16=>RING															
17=>17	17=>17	17=>17	17=>17				17=>SLEEVE															
18=>18	18=>18	18=>18	18=>18																			
19=>19	19=>19	19=>19	19=>19																			
20=>20	20=>20							20=>TIP		20=>TIP									20=>TIP			
21=>21	21=>21								21=>TIP	21=>SLEEVE									21=>SLEEVE			
22=>22											22=>TIP								22=>TIP			
23=>23											23=>SLEEVE								23=>SLEEVE			
24=>24												24=>TIP							24=>TIP			
25=>25												25=>SLEEVE							25=>SLEEVE			
26=>26													26=>TIP						26=>TIP			
27=>27													27=>SLEEVE						27=>SLEEVE			
28=>28														28=>TIP					28=>TIP			
														29=>SLEEVE					29=>SLEEVE			
															30=>TIP							
															31=>SLEEVE							
32=>GND		32=>GND	32=>GND		32=>GND			32=>SLEEVE	32=>SLEEVE													