

		Wiring connection chart							
Manufacturer	Product Reference	Earth	Neutral	Live	Compatible terminal numbers				Programmer Links
Towerchron	QE2 / QM2 / DP72	E	N	L	4	3	2	1	
	T2002	E	N	L	CH	HW			
	T2000 & T2003	E	N	L	CH on	HW on	CH off	HW off	L-C-C-
ACL Drayton	LP112 / 241 / 5 / 722	E	N	L	4	3	2	1	
	TEMPUS 3 / 4 / 7	E	N	L	4	3	2	1	
Glow-Worm	MASTERMIND	E	N	L	4	3	2	1	
Honeywell	ST 6200 / 6300 / 6400	E	N	L	4	3	2	1	
	ST 6200A	E	N	L	4	3	2	1	
	ST 7000	E	N	L	4	3	2	1	
	ST 699	E	N	L	3	6		7	L-5-8
	ST 7100	E	N	L	5	8		7	L-3-6
Horstmann	425 / 525 / 527 / 582	E	N	L	4	1		3	L-2-5
	C21 Centaurplus	E	N	L	4	3	2	1	
Landis & Gyr	RWB range	E	N	L	4	3	2	1	
Landis & Staefa	RWB 2	E	N	L	4	3	2	1	
Potterton	MINIMINDER	E	N	L	4	3	2	1	
	MINIMINDER 'E'	E	N	L	4	3	2	1	
	EP 2001 / 3000 / 6000	E	N	L	4	3		1	L-5, N-N
Randall	102 & 'E'	—	5	6	2	1			3 - 6
	3060 / 3020P	E	7	6	2	4			
	4033	E	7	6	2	4		5	6 - 1
Dantoss Randall	FP715	E	N	L	4	3	2	1	
Sunvic	SP50 & 100	E	N	L	5	2		1	L-6
	SELECT 207	E	N	L	4	3	2	1	
Switchmaster	400 & 600	—	N	L	1	3			
	805 / 900 / 9000 / 1	—	N	L	1	3		4	
Myson	MICROTIMER	—	N	L	3	6		7	L-5-8