

The MSB Remote

1	Indicator LED	While in use: White - Command Sent Red and White - Command Sent and Low Battery Red Flashing - Needs Charging While charging: Red - Charging White - Fully Charged
1	Power	Powerbase on and off. When the powerbase is linked to an amplifier or MSB product, this system will turn off the entire system (See powerbase manual for details)
3	Input	Toggles directly through DAC inputs
4	Action 1	Toggles phase invert
5	Action 2	Toggles video mode
6	DAC Menu	Enter DAC menu While in menu: Up - Volume Up Down - Volume Down Enter - Mute Return - DAC Menu
7	Volume	The center scroll wheel controls DAC volume
8	Mute	DAC mute
9	Track Backward	Skip/scan backward <i>(MSB Transport Only)</i>
10	Play/Pause	Play and pause <i>(MSB Transport Only)</i>
11	Track Forward	Skip/scan forward <i>(MSB Transport Only)</i>
12	Eject	Eject media disc <i>(MSB Transport Only)</i>
13	Stop	Stop media <i>(MSB Transport Only)</i>
14	Track Repeat	Track or album repeat <i>(MSB Transport Only)</i>
15	Charging Port	Micro-USB to charge the remote battery

