

cut'n'boss™

craftwell™

fully automatic
embosser & die cutter

LIMITED EDITION

USER MANUAL



FULLY AUTOMATIC • AUTOMATIQUE • COMPLETAMENTE AUTOMÁTICO

NO MANUAL CRANKING • PAS DE MANIVELLES • SIN MANIVELAS


QUICK & EASY • RAPIDE ET FACILE • RÁPIDA Y FÁCIL

IN THE BOX*

- Cut'n'Boss machine
- Platforms
 - (2) Platform A
 - (1) Platform B
 - (1) Platform D
- User Manual
- Power Adaptor
- (2) Magnetic Shims
 - (1) 0.5mm glossy thick black magnetic shim
 - (1) 0.4mm glossy thin black-blue magnetic shim
- (2) Rubber Embossing Mats
 - (1) 0.7mm matte thick black embossing mat
 - (1) 0.5mm matte thin blue embossing mat

*The box may include additional (optional) accessories

GETTING STARTED

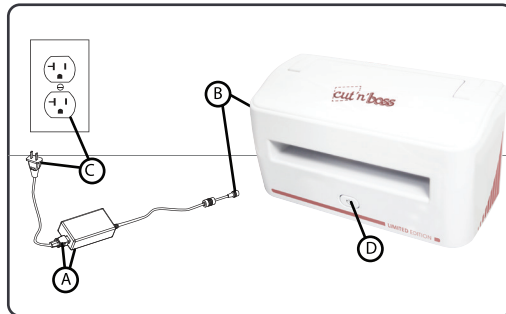

Position the Cut'n'Boss on a flat & dry surface.

Connect the power adaptor to the power cord (A).

Connect the power cord to the Cut'n'Boss (B).

Connect the power plug to a grounded power outlet (C).

Press the power button to turn on (D).

OPERATING YOUR CUT'N'BOSS™




Press the power button to turn on; the power button will light up.

Guide the correct platform combination into the front of the machine. There may be a click sound to indicate the sensors have been activated.

Feed the platforms into the opening until the machine automatically activates and the platform combination feeds through on its own.

The machine will stop automatically when it reaches the end of the platform combination.

USING CRAFTWELL™ EMBOSSING FOLDERS

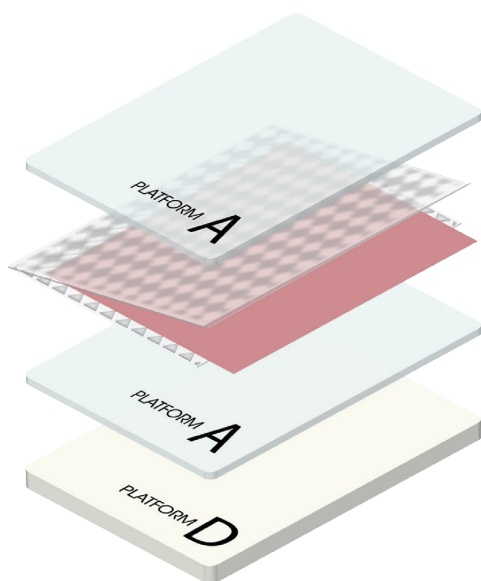

Platform A

Embossing Folder
+ Material

Platform A

Platform D

Position material inside the embossing folder.

Position the embossing folder between Platforms A & A.

Stack the combination onto Platform D.

Keeping the platform combination straight, guide it into the Cut'n'Boss with a steady forward motion.


Release the platforms when the rollers begin pulling them into the machine.

Remove the platforms once the motor stops running.

TIPS: Different brands of embossing folders may require different platform combinations (see page 8).

For greater pressure, insert the thin rubber embossing mat or magnetic shim between Platform A and Platform D.

USING CRAFTWELL™ CUTTING DIES

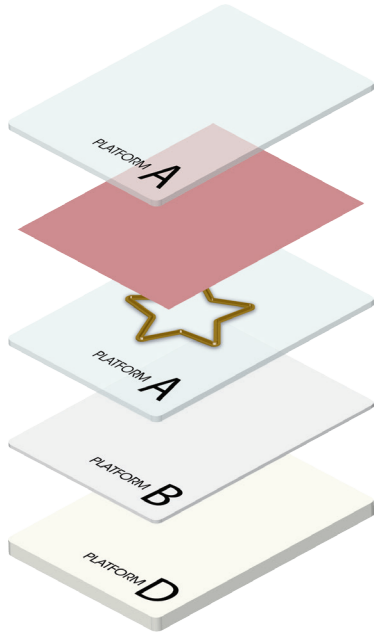

Platform A

Material

Cutting Die

Platform A

Platform B

Platform D

Position the cutting die, blade side up, smooth side sitting on one Platform A.

Position the material over the cutting die then place all on top Platforms B & D. Place the second Platform A on top of the rest of the platforms. It should be directly above the material.


Keeping the platform combination straight, guide them into the Cut'n'Boss with a steady forward motion.

Release the platform when the rollers begin pulling the platforms into the machine. A cracking sound is normal.

Remove the platforms once the motor stops running. The top Platform A may have an impression, this is normal.

TIP: Place the thin magnetic shim under the cutting die, on top of Platform A if more pressure is needed.

USING THIN METAL CUTTING DIES

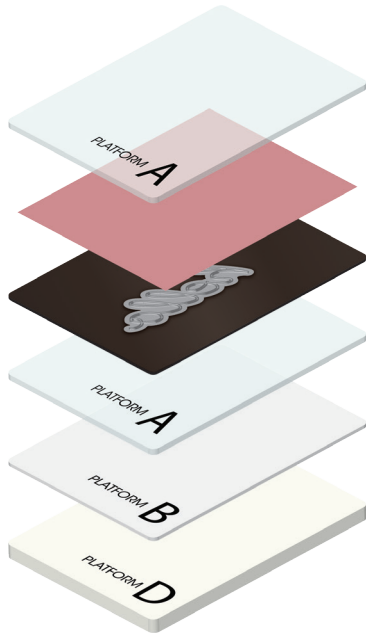

Platform A

Material

Cutting Die

Thick Magnetic Shim

Platform A

Platform B

Platform D

Position the cutting die, blade side up, smooth side sitting on the thick magnetic shim & one Platform A.

Position the material over the cutting die then place all on top Platforms B & D. Place the second Platform A on top of the rest of the platforms. It should be directly above the material.

Keeping the platform combination straight, guide them into the Cut'n'Boss with a steady forward motion.


Release the platform when the rollers begin pulling the platforms into the machine. A cracking sound is normal.

Remove the platforms once the motor stops running. The top Platform A may have an impression, this is normal.

TIP: Place cutting dies on the platforms so that it will feed the "long way," or vertically, to evenly distribute pressure.

CUTTING & EMBOSSED WITH THIN DIES

When cutting & embossing with the same thin metal die, only use thick cardstock with the following combinations:

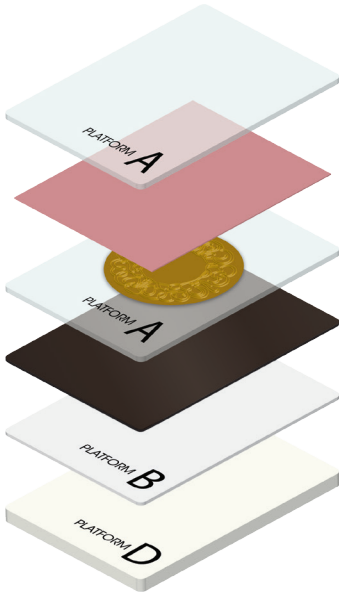

Platform A

Thick Cardstock ($\geq 100\text{lb}/300\text{gsm}$)

Thin Metal Cutting Die


Platform A

Thick Magnetic Shim

Platform B

Platform D

Remove the magnetic shim from the combination shown above. Carefully place the thick rubber embossing mat on top of the partially cut material & feed through the machine for a second time.

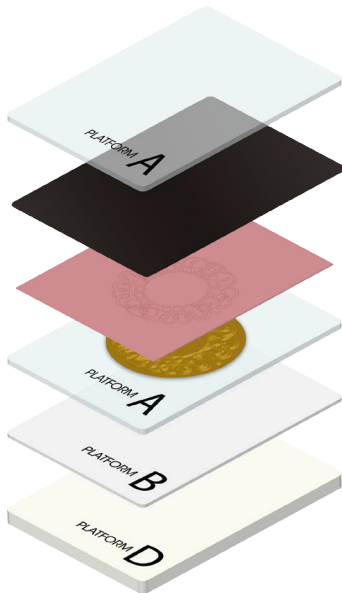

Platform A

Thick Rubber
Embossing Mat

Thick Cardstock ($\geq 100\text{lb}/300\text{gsm}$)

Thin Metal Cutting Die


Platform A

Platform B


Platform D

OTHER EMBOSSING FOLDER BRANDS


Anna Griffin Mix & Match Embossing Folder

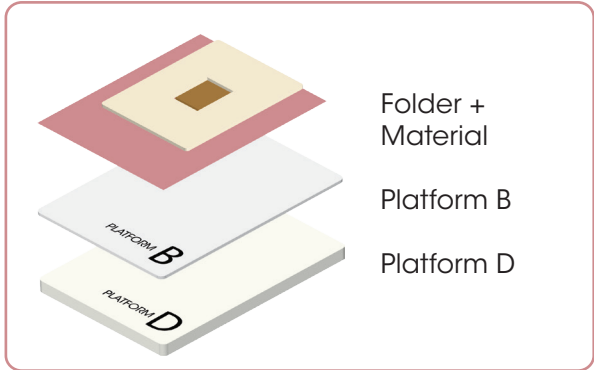

Tim Holtz Embossing Diffusers

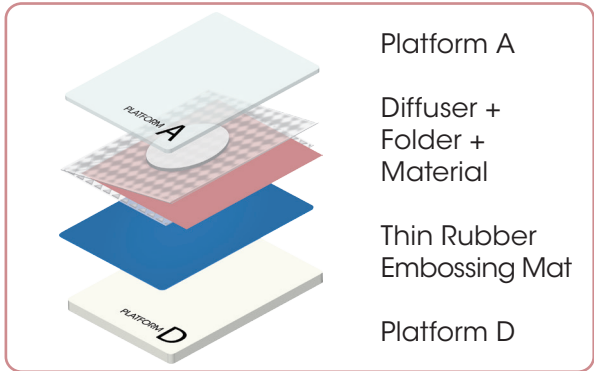

Spellbinders M-Bossabilities 3D Folders

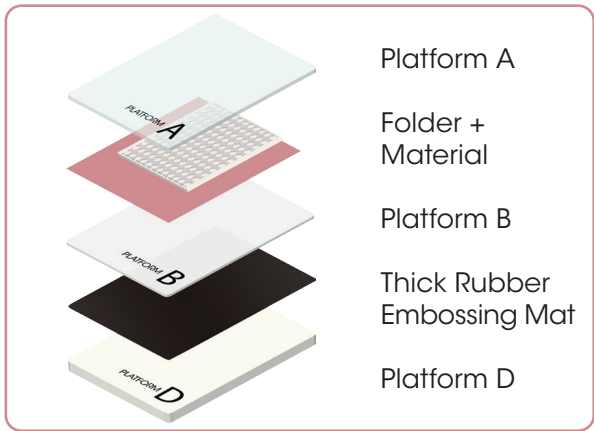


TIP: Check our website for all the different brand combinations: craftwellusa.com/content/cutnboss-platform-combinations

OTHER CUTTING DIE BRANDS

Sizzix Originals & Sizzix Bigz Cutting Dies


Tim Holtz Alterations Cutting Dies

best for fabric, leather,
thin metal, plastics, cork, etc

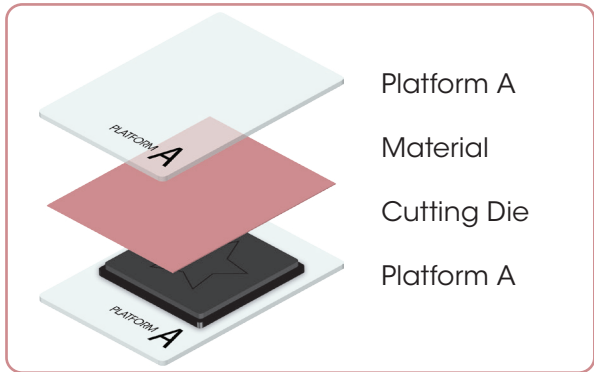

Accuquilt GO! Cutting Dies

best for fabric, leather,
thin metal, plastics, cork, etc

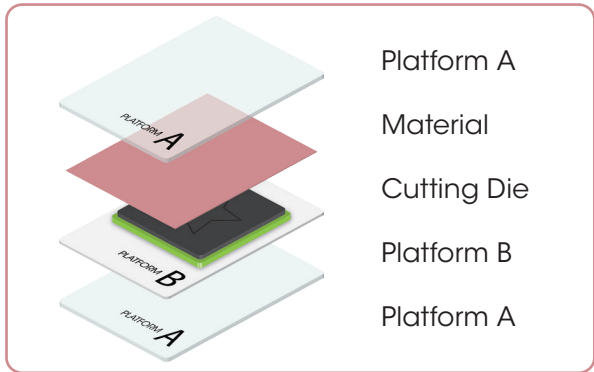

Spellbinders Dies Thinlits Cutting Dies Tonic Cutting Dies

(see page 6 for instructions)

Die'sire Create-A-Card Cutting Dies

(see page 7 for instructions)

TIP: Never place Platform B or any of the shims or mats as the very top or bottom of the platform combination.

TROUBLESHOOTING

If the machine does not turn on, check that the power cord is securely connected to the power adaptor and that the adaptor light is on.

To remove jammed platforms, press and hold the power button until the reverse feature engages and the platforms are released.

If the emboss or cut is not deep enough, try adding a magnetic shim or a rubber embossing mat.

If a portion of the die design does not cut or emboss, fold a piece of paper twice, then place the folded paper on top of the material above the uncut design. Feed the combination back into the machine. The paper will apply additional pressure to that area.

If the material has not cut properly after a second time, check that the die has not been damaged.

If the platforms are rejected from the device, check if too much material has been placed for cutting or embossing.

To minimize warping of platforms, periodically rotate & turn the platforms over with each use. To replace platforms, go to shop.craftwellusa.com.

CAUTION

Do not allow children to operate the Cut'n'Boss machine unsupervised.

Do not remove platforms until the motor has automatically shut off.

Keep hands away from platforms & parts in motion.

Do not leave objects inside the Cut'n'Boss machine when not in use.

Do not disable the safety sensors to override the motor control.

Forcing platforms & materials through the Cut'n'Boss will cause damage to your machine and may void the warranty.

Do not use the Cut'n'Boss for 60 minutes of continuous use without proper cool down.

Allow the Cut'n'Boss to cool down for 15 minutes before re-using.

The Cut'n'Boss is designed for home and recreational use.

Always power off your machine when not in use.

LIMITED WARRANTY

Craftwell Incorporated ("Craftwell") warrants that our machines and their related accessories (collectively and individually referred to as "Product(s)") will be free from defects in material and workmanship. This limited warranty will extend for a period of one (1) year from date of purchase for electronic parts, such as motors, wiring, and switches, and thirty (30) days from date of purchase for accessories including platforms, dies, and embossing folders. The limited warranty period for all labor will extend for a period of ninety (90) days from date of purchase. This limited warranty applies only to Products purchased from Craftwell, an authorized Craftwell distributor (collectively referred to as "Craftwell Seller"). This limited warranty runs exclusively to the initial retail purchaser of the Product and may not be transferred or assigned. This limited warranty gives purchaser specific legal rights. Purchasers may have other legal rights which vary from jurisdiction to jurisdiction.

TO THE FULLEST EXTENT PERMITTED BY LAW, THESE WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES, SO THE ABOVE LIMITATION MAY NOT APPLY TO ALL PURCHASERS. IN SUCH EVENT, THE TERM OF SUCH IMPLIED WARRANTIES ARE LIMITED TO THE LIMITED WARRANTY PERIOD IDENTIFIED IN THE ABOVE PARAGRAPH. THIS LIMITED WARRANTY IS VOID IF THE LABEL BEARING THE PRODUCT'S SERIAL NUMBER IS REMOVED OR ALTERED. ANY TECHNICAL OR OTHER SUPPORT PROVIDED BY CRAFTWELL IS "AS IS" AND WITHOUT WARRANTIES OF ANY KIND. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO ALL PURCHASERS.

Exclusive Remedies

Remedies under this limited warranty are limited, at Craftwell's sole discretion, to replacement or repair of defective Product/parts at Craftwell's expense. All defective Products/parts replaced under this limited warranty become the property of Craftwell. Craftwell will repair or replace defective Product/parts with new Product/parts, or used Product/parts that are at least functionally equivalent to the replaced Product/parts. If a Product/part is determined not to be defective, Craftwell will return the Product/part to purchaser without replacement or repair. Unless otherwise required by law, this is purchaser's sole and exclusive remedy for breach of this limited warranty.

Exceptions

Craftwell does not warrant that the Products will meet specific requirements of purchaser or end user or that it will operate error-free or uninterrupted. This limited warranty does not cover Product defects or failure resulting from: (1) improper or unreasonable use or maintenance; (2) failure to follow operating instructions; (3) business or commercial use; (4) accident; (5) improper storage or operating conditions, including, but not limited to, excess moisture, lightning, power surges and connections to improper voltage supply; (6) unauthorized alteration or modification of original condition; (7) inadequate packing or shipping by purchaser; (8) alteration, loss of, damage to, or corruption of stored data; or (9) use with non-Craftwell products that cause damage to the Products.

Limitation of Liability

CRAFTWELL IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL, OR PUNITIVE DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, LOST REVENUES OR LOST SAVINGS, REGARDLESS OF CAUSE OR LEGAL THEORY, EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN ANY EVENT OF LIABILITY, CRAFTWELL'S LIABILITY WILL NOT EXCEED THE AMOUNT OF THE PRICE PAID BY PURCHASER FOR PRODUCT. SOME STATES DO NOT ALLOW EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO ALL PURCHASERS.

Governing Law and Venue

The laws of the State of New York will govern the validity, interpretation and enforcement of this limited warranty and any claims between the parties, without regard to conflicts of law principles. Venue for any dispute arising under this limited warranty or any claims between the parties will exclusively be a state or federal court of competent jurisdiction located in Queens, New York. The United Nations Convention on Contracts for the International Sale of Goods is specifically excluded and will not apply. All claims against Craftwell will be brought within two (2) years from purchaser's date of purchase, or one (1) year from the date of the occurrence, whichever is shorter.

Obtaining Technical Support

To obtain technical support, the purchaser shall contact Craftwell Customer Service at (888) 315-8885 or by emailing cs@craftwellusa.com, and adhere to the instructions provided. Purchaser shall return or ship the defective Product/parts to Craftwell, freight and all fees, including, but not limited to, duty, tax and freight ("Shipping Fees"), prepaid by purchaser. Purchaser remains responsible for Product/parts while in transit to and from Craftwell. Product/parts shall be accompanied, to the extent possible, by: (1) proof of purchase; (2) Return Merchandise Authorization number (RMA #), which must be clearly displayed on the outside of the shipping carton or a similar package affording an equal degree of protection; and (3) written document with (i) clear explanation of problem, (ii) date of purchase, (iii) name and address of Craftwell Seller, and (iv) model and serial number of Product. Craftwell will ship repaired or replaced Product/parts to purchaser, freight prepaid, unless Product/parts are determined not to be defective by Craftwell, or purchaser is outside of the US, in which case purchaser is responsible for all Shipping Fees. Repair or replacement of Product/part does not extend the original limited warranty period.



craftwell[™]
fully automatic
embosser & die cutter

LIMITED EDITION

USER MANUAL

Look for our...

Embossing folders

**Cutting Dies &
Die Sets**

Extra Platforms

**Featured Craft
Project Ideas**

...and more!

Follow us!



CW-MAN-LE1

