365 blinds direct

SHOP AT 365blindsdirect.com

HOW-TO-MEASURE GUIDES

E help@365blindsdirect.com T 01444 470151

Pleated blinds

Measuring for Cord tensioned (P1402)

Measuring instructions

Step one

Measure for your width and drop for each window. It is important to measure from bead to bead (inside frame to inside frame). Always measure the width and the drop in 3 places and take the smallest measurement.




When an order is placed you must deduct 4mm from the width to allow for clearance and 10mm from the drop of the blind to add tension to the blind.

Step two

Measure your glass bead depth this is the distance from the glass to the face for the door frame. Minimum bead depth required 15mm.

Please note: Bracket needs to be screwed onto the door's beading (as per picture below) we advise requesting a sample bracket before placing your order.

(tip: put a credit card or ruler over the corner of the door frame and measure from the glass to the underside of the credit card/ ruler.) Finished bracket and rail position

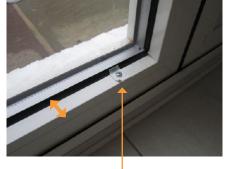



365 blinds direct

SHOP AT 365blindsdirect.com

HOW-TO-MEASURE GUIDES

E help@365blindsdirect.com T 01444 470151

Pleated blinds

Measuring for Cord tensioned (P1402)

Measuring instructions

Step three

Check your hinge side clearance. The head rail is available in White, Brown or Silver.

Overall bracket width approx 27mm (including bracket tail)

Head rail/Bottom rail width approx 20mm





Samples of rail and bracket are available on request

Finished installation



If you require further advice or more information on INTU blinds please call 01444 470151 or email help@365blindsdirect.com