

Door Tension Adjustment Instructions

Your new Fort Knox Safe was enclosed in protective packaging material to protect the finish from damage during shipment.

After removing the packaging it may be necessary to adjust the tension (in & out movement of the door in its closed and locked position).

Ideally the door in & out play should be approximately 1/16" with the door closed and locked.

Adjustment Instructions

Step 1 - With the packaging material removed and the door closed and locked, push the door in and out to check for any movement. If the door is either too loose or too tight, proceed to step 2.

Step 2 - Open the door and locate the door tension adjustment screw inside of the opening side of the door jamb. (see image below)

Step 3 - Using a 7/32" size hex key, adjust the socket head cap screw in the counter-clockwise direction to increase the tension or the clock-wise direction to decrease the tension.



Adjuster screw
viewed from inside
of safe at the
open jamb side.

