



ROBERT C SCUTT LTD

Installation and Maintenance Hand Book

Slimline Air Cooled Condensing Units

Issue Date : September 2016



<u>Table of Contents</u>	<u>Page</u>
Product Description & Model Identification	2
General Safety, Engineering Qualifications and Production Standards	3
Inspection of Equipment prior to Installation	3
General Warranty Policy	4
Handling and Positioning	5
General Installation Guidance	
• Refrigerant Pipework Connections	6
• Adding Oil	6
• System Evacuation	6
• Dehydration Procedure	6
• Refrigerant Charging	7
System Components	
• Protective Devices	8
• Thermistor Sensor	8
• Discharge Gas Temperature Sensor	8
• Crankcase Oil Level Control	8
• Oil Separator	8
• High and Low Pressure switches	8
• Pressure Relief Valves	8
• Crankcase Heater	9
• Discharge pressure Optimisation	9
• Suction Filter, Liquid Line Drier & Sight Glass	9
Electrical Installation & Wiring Diagrams	10
Maintenance Schedule	
• Pressure Relief Valves	11
• Oil Separators	11
• Refrigerant Charge	11
• Compressor Oil Charge	11
• Liquid Line Driers and Suction Filters	11
• Refrigerant Leak Checks	11
General Information	
• Dimensions	12
• Technical & Electrical Data	13 to 16
• Operational Check List	17
• End of Life Decommissioning Instructions	18

Product Range Description

The SH/QH and SL/QL series of air cooled housed condensing units have been designed and built in the UK especially for the ever increasing demand in modern styling and low noise output condensing units. With noise levels as low as 28 dB(A) @ 10 metres these units are ideally suited to the many noise sensitive applications the modern refrigeration industry demands.



The units are designed to operate on HFC refrigerants and the Slimline Technical catalogue shows capacity data for R404A, R407A, R407F, R134a and R449A.

Robert C Scutt are constantly working with compressor and heat exchanger manufacturers and it is our policy to fully support the development of new low GWP gases as they are introduced however approval for their use will be required in order to maintain the warranty of the Slimline series.

Model Identification: Each individual model leaves the factory fitted with an identification plate attached to the condensing unit. The identification plate is unique to each unit in that it contains the unit serial number together with a number of other basic details specific to the unit.

Serial Number: This is a unique identification number and must be quoted when requesting technical support and or warranty claims as it is used to reference the original bill of materials and the manufactured date.

Max Allowable Pressure: This is the maximum refrigerant pressure that the system has been designed to contain.

The HP switch and Pressure relief valve have been selected to protect the system against pressures in excess of this value.

Lubricant: This is the approved oil that the system contains, and any oil that is added to the system must be of compatible specification.

Liquid Receiver: This is the total internal volume of the liquid receiver. The total system refrigerant charge must not exceed this value if 100% pump down capability is to be maintained.

Refrigerant Type: This is the refrigerant for which the system has been designed. If refrigerants other than this are used the system performance may be compromised and warranty may become null and void. Contact the RCS technical team for advice before applying any other refrigerants.

Electrical Data: These values indicate whether the system is designed for 3 phase or 1 phase operation together with the maximum compressor and condenser fan running amps.

 Manufactured by Robert C. Scutt Limited Milland Road, Lion Barn Industrial Estate, Needham Market, IP6 8NZ T: 01449 722274 F: 01449 723311 e: info@rcscutt.co.uk				
Model : Slimline QH2-32-ZB19EC				
Serial No: C23456		Date of Manufacture : September 2016		
Max Allowable Pressure : Discharge : 26 barg Suction : 14.1 barg	Lubricant : Emkarate Soleol RL32 POE	Liquid Receiver : 6.0 Litre	This system contains fourteen grams of gas covered by the Kyoto Protocol R407F	
Electrical Data				
Compressor: 380v-3ph-50hz MRA: 6.50 amps LRA: 32.0 amps	EC Condenser Fans: 230v-1ph-50hz 1 x 2.5 amps			Crankcase Heater: 230v-1ph-50hz 0.21 amps



General Safety Rules, Engineers Qualifications and Production Standards

Installation & Maintenance Engineers Qualifications:

- All work on the compressors and any component or refrigerant control incorporated into this system must only be carried out by refrigeration engineers who hold the current level of refrigerant handling qualification (City & Guilds 2079 or CITB J11-14) at the required level for the task being performed.

Operating Temperatures and Pressures:

- During normal operation surface temperatures exceeding 80°C and below -20°C can be reached therefore extreme caution must be taken as serious burns and frostbite are possible.
- Operating pressures in excess of 25 barg and below 0.5 barg can be reached therefore great care must be taken when working on this plant.
- The appropriate personal protective clothing must be worn at all times when working on this equipment.

Refrigerant type and Operating range:

- The system data/quotation will specify the type of refrigerant and the operating range which this equipment has been designed to operate with and no other refrigerant or operating range must be employed without the consent in writing of Robert C. Scutt Ltd.

Production Standards

- All Refrigeration equipment manufactured by Robert C. Scutt Ltd is in accordance with the following design standard and specifications :-
 - The Pressure Equipment Directive 2014/68/EU (Formally 97/23/EC)
 - BS EN 378-1:2008, EN14276-2-2006
 - Machinery Directive BS EN 2006/42/EC
 - Institute of Refrigeration Safety Code of Practice for Refrigeration Systems utilising groups A1 and A2 refrigerants.

General Safety Considerations

- To avoid potential injury, use care when working around heat exchanger coil surfaces (fins) or the sharp edges of metal cabinets. All piping and electrical wiring must be installed in accordance with applicable codes of practice, and current legislation.

Inspection of Equipment prior to Installation

All equipment must be visually inspected before it is unpacked for signs of damage or loss. Check the delivery note against the material received to ensure the shipment is complete.

Important: Remember, you are the consignee and it is your responsibility to report any shipping damage or missing parts as soon as delivery is accepted or at least within 12 hours. Should the packaging be damaged, but damage to the equipment is not obvious, a claim should be filed for "concealed damage" and the product signed for as "unexamined".

Important Electrical Inspection: Check the electrical ratings on the equipment *(voltage, phase and frequency) to make sure they correspond to those ordered and to the electrical power available at the installation site.

Shipping documents: All shipping papers, tags and instruction sheets must be retained and kept in a safe place for reference by the installer and/or the owner of the equipment.



General Warranty Policy

Subject to the terms and conditions set out in this General Warranty Policy, during the first 12 months after installation of this equipment we will supply under warranty any component part(s) of our product found to be defective in materials or workmanship. Replacement parts will be supplied and invoiced under our normal terms of payment pending the return of the suspect component. If the component is proved to be defective and is accepted under warranty by our supplier, a credit will be issued for our replacement part invoice. If warranty is not accepted by our supplier our replacement part(s) invoice will become due for payment.

Any replacement parts supplied under warranty will inherit the unexpired warranty life of the original component e.g. if a component fails after 3 months and is accepted under warranty the replacement will inherit 9 months of unexpired warranty of the original component. In the event that warranty is rejected the replacement part will (once paid for) carry 12 months warranty from the date of our replacement invoice.

It is a condition of this warranty that the part(s) to be replaced must be made available in exchange for the replacement parts and proof of the original installation date of the parent product must be provided together with the R C Scutt Serial number e.g. C12136 in order to establish the effective warranty date. In order to remove any uncertainty if the installation date is not supplied the effective date will be based on the manufactured date plus 30 days which will be calculated using the unit serial number. Any labour, material, refrigerant, transportation, freight of other charges incurred in connection with the performance of this warranty will be the responsibility of the owner of the equipment.

It is an express condition of this warranty that regular maintenance and servicing is carried out by qualified personnel in accordance with the qualifications set out in the Installation & Maintenance Engineers Qualifications section above.

This warranty may be transferred to a subsequent owner of the product.

Warranty Exclusions:

Damages and Expenses caused by :-

- a) Accident, abuse, negligence, misuse, riot, fire or flood.
- b) Operation of the equipment in a corrosive atmosphere
- c) Any unauthorized alteration or repair to the system affecting the equipment's reliability of performance.
- d) Improper matching or application of the equipment to other system components not in our control such as evaporators, expansion valves and controllers.
- e) Failing to provide routine and proper maintenance or service to the equipment.
- f) Parts use in connection with routine service and maintenance such as filters, oil, refrigerant etc.
- g) The equipment being moved and re-installed at a location other than the original site.
- h) Equipment installed and operated other than in accordance with the printed instructions.



Handling, Positioning and Installation Location

When selecting a location for the Slimline unit, the following constraints and design issues must be considered:-

- Loading capacity of the floor or roof. Check building codes for weight distribution requirements.
- A flat and level site.
- Distance to suitable electrical supply.
- Adequate air circulation and ventilation. (allow a minimum of 300mm behind the unit air intake to the nearest wall and 1000mm space in front of the air exhaust)
- Adequate electricity supply
- Accessibility for maintenance and service.
- Local building regulations and/or codes.
- Adjacent buildings relative to noise levels.

When all of the above points have been considered and a specific location chosen, it is advisable to obtain written approval of this location from the building and/or condensing unit owner. This may be a means of avoiding disagreement and expense at a later date.

Positioning the Slimline Condensing Unit:

- The smaller units in the range can be man handled into position by no less than 2 people utilizing safe and proper manual lifting techniques
- The larger units must be positioned by a fully qualified and properly equipped crew with the necessary lifting tackle and rigging who should be engaged to locate the equipment into position. When lifting the unit, spreader bars and chafing gear should be used to prevent damage.
- The Slimline range are all housed in a weather proof steel housing and are all designed to be positioned outside and require no special protection from the elements.
- The unit should be placed on a base, which is level and even. Place unit where it will not be subject to damage by traffic or flooding.
- On critical installations where noise is liable to be transmitted through the floor structure, vibration isolators should be installed.
- **DO NOT USE THE SHIPPING PALLET AS A PERMANENT BASE**
- The equipment should be positioned to allow adequate space for performing service work, and air inlet and exhaust.

Special note for the larger Slimline condensing units:

- Great care must be taken with the larger models in the range as there is a risk of damage and/or personal injury if they are not handled correctly. A fully qualified and properly equipped crew with the necessary tackle and rigging should be engaged to locate these condensing units into position. Spreader bars should be used to prevent damage to the sides of housing. Do not sling directly around the base of unit. The unit should be placed on a base which is level and even.



General Installation Guidance

Refrigerant Pipework Connections

- The Slimline units leave the factory with a holding charge of OFN (1.4bar, 20psi) in order that the installation engineer can be confident that there have been no leaks created by the delivery process prior to installation and to ensure that the system remains fully de-hydrated. This charge can be released to atmosphere at the time the pipework connections are made.
- The Suction and liquid lines must be brazed in place and the lines must be at least the same diameter as the connections fitted to the Slimline model. These diameters are only valid up to a maximum pipe run of 10 meters. For longer pipe runs the diameters must be verified to ensure the correct refrigerant velocity to ensure correct oil return and line pressure drops. Excessive pressure drops will diminish the system capacity. Good refrigeration practice must be followed.

Suction Line Insulation

- Suction lines operating at evaporating temperatures in below -10°C must be insulated to avoid excessive suction line superheat values and condensation formation on the outside of the line.
 - Suction Lines at -30°C evaporating temperature = ¾" wall insulation
 - Suction Lines at -10°C evaporating temperature = ½" wall insulation
 - Liquid Lines exposed to ambient temperatures above 35°C = ½" wall insulation

Adding Oil

- If the pipe run is less than 10 meters it will not normally be necessary to add oil to the system, however for longer runs and larger pipe work a small quantity of oil should be added. After a few days of normal operation compressor oil levels should be checked (1/2 sight glass) and adjustments made if necessary.

System Evacuation Dehydration

- When the system is completely free of refrigerant leaks, an evacuation of the entire system should be completed by using a "high vacuum" pump. This evacuation, if completed correctly, will ensure long life for the system as well as elimination of moisture and non-condensable gas problems. Moisture problems causing compressor failure will void warranty.
- **Caution: Do not use the refrigeration compressor to evacuate the system. Never start the compressor or perform a megger insulation test while the system is in a vacuum.**

Dehydration Procedure

- Use only a "high vacuum" pump capable of drawing a vacuum of 100 microns. Change the vacuum pump oil frequently. Gauges or vacuum measuring instruments should be suitable to measure conditions at any stage of the process in order to give the refrigeration engineer indications of progress.

Refrigerant Charging

Refrigeration equipment must only be charged with the refrigerant for which it has been designed. The type of refrigerant for which the Slimline unit has been designed is specified on the serial plate of the unit.

Installing a liquid line drier between the service gauge and the liquid service port when charging a unit will ensure the refrigerant supplied to the system is clean and dry.



This is especially important when charging a low temperature system using a blended refrigerant such as R404A.

Blended 400 Series refrigerants such as R404A, R407A, R407F, R448A, R449A etc. must not be vapour charged unless the cylinder is completely emptied into the system. These refrigerants only retain their correct formulation in the liquid phase therefore they must always be charged in liquid form to ensure the correct blend is in the system. This may mean inverting the refrigerant cylinder if it only has a single (vapour) outlet valve. Larger cylinders with a double outlet valve will have an internal liquid dip tube and therefore inverting these cylinders is not necessary.

Weigh the refrigerant cylinder before and after charging in order to keep an accurate record of the weight of refrigerant put into the system in accordance with the 'F' Gas Regulations. The total system charge must then be recorded in the plant record log that must be left on site as a permanent record of refrigerant usage in the system.

- **DO NOT** charge strictly by the holding capacity of the receiver.
- **DO NOT** assume that bubbles in a sight glass, when located at the condensing unit, indicates the system is undercharged.



System Components

Protection Devices:

The condensing units are extremely flexible in their application and may incorporate a built-in range of safety devices to protect the equipment against malfunction. The safety devices that are applied to equipment will be automatically selected by Robert C. Scutt, unless specifically requested by the customer, dependent on the size and type of equipment and the application. The range of devices that are applied are as follows:-

- Thermistor Sensor: The compressors fitted to this equipment contain an electronic thermistor sensor fitted into the compressor terminal box to protect against compressor motor overheating. This is an auto-reset device and if tripped will automatically restart the compressor once the motor winds have cooled down to a safe operating level.
- Discharge Gas Temperature: Discharge Gas Temperature Sensors are available as an option and may be fitted to individual compressors to protect against excessive discharge superheat values as an additional safety device if required.
- Crankcase Oil Level Control: On multi-compressor systems and inverter controlled single compressor systems each compressor is fitted with an electronic oil level controller which feeds and monitors each individual crankcase oil level. If this level falls too low for safe operation of the compressor the control will automatically stop the compressor. This is an auto-reset control and if tripped will automatically restart the compressor once the optimum oil level has been restored.
- Oil Separators: The compressor crankcase oil level control valves are fed directly from an oil separator mounted in the common discharge line. There are two types of oil separator design applied to Robert C Scutt equipment dependant on the type of application.
 - Impingement type: This design is applied to smaller single compressor condensing units and compressor/receiver units. Oil return from this design of oil separator is fed directly into the compressor crankcase.
 - Coalescent type: This design is applied to larger single compressor applications and multi compressor systems, particularly where compressors are inverter speed controlled. Oil return from this design is generally fed to the compressor crankcase via an electronic oil level control. Due to the high filtration efficiency of these oil separators they may be fitted with a monitoring device which displays the pressure drop through the separator vessel.
- High and Low Pressure Controls: Dependant on the application and system design equipment may be fitted with a range of electro-mechanical or transducer high and low pressure controls as follows:-
 - Auto/Manual Dual pressure safety controls to safeguard against too high discharge pressure or too low a suction pressure.
- Pressure Relief Valves: In order to protect the equipment from excessive internal pressure equipment will be fitted with pressure relief valve(s). The design, pressure setting and number of valves will be in accordance with EN378-2008 and the discharge rate and valve size has been applied in accordance with EN13136. The application of these valves is also governed by the



rules set out in the Pressure Equipment Directive 97/23/EC. Typical valve settings for various refrigerants for operation up to an ambient temperature of 32°C are as follows:-

- R404A, R407A: HP = 24.8bar LP = 14.09bar
- R407F, R448A: HP = 27.6bar LP = 15.3bar
- R134a: HP = 14.0bar LP = 7.20bar

Pressure relief valves for HP protection are generally fitted directly onto the liquid receiver.

- **Crankcase Heaters:** Crankcase heaters are fitted to each individual compressor to protect the compressor against refrigerant being dissolved into to oil and the subsequent oil foaming at start-up which can damage the compressor crank shaft, bearings and pistons. These heaters are automatically energised during compressor standstill, periods.
- **Discharge Pressure Optimisation:** This control enhances the operational efficiency of the equipment by automatically maintaining a constant refrigerant discharge pressure. This is achieved by varying the speed of the condenser fans for air cooled plant or alternatively by-passing the water flow around the condenser on water cooled equipment. Dependant on application and size of equipment the controls are as follows:-
 - Small single compressor air cooled condensing units are fitted with an electro-mechanical fan speed controller which controls all fans at the same time. This form of control can be applied to single or three phase fans dependant on total absorbed power.
 - Larger air cooled condensing units and multi fan remote air cooled condensers are controlled by an inverter system driven by pressure transducers.
 - Optional EC fans can also be applied to larger remote air cooled condensers together with transducer pressure sensors.
 - Water cooled systems are fitted with either electronic or mechanical by-pass valves dependant on customer requirements.
- **Suction Line Filters & Liquid Line Driers & Sight Glasses:** In order to protect the compressor motion work from foreign bodies and moisture the equipment may be fitted with a suction line filter and a liquid line filter/drier.
 - Suction Line Filter: Normally only applied to larger condensing units and multi compressor systems these filters have replaceable cores that can be replaced on site. Various types of cores are available e.g. Standard filtration quality, High filtration quality, Moisture/Acid absorption and Felt filters.
 - Liquid Line Filter Drier: These filter driers are installed in the liquid line and are selected against the system capacity. The function of this filter is to dehydrate the refrigerant as it passes through the desiccant contained in the shell and to protect any downstream components from foreign matter.



Maintenance Schedule

There are a number of items that require regular maintenance checks and although not exhaustive, the following list highlights the major components that require regular attention.

Pressure Relief Valves & Rupture Discs

- The relief valve/rupture disc assemblies are fitted with a pressure gauge that indicates whether the rupture disc has burst and this must be checked at each visit to the plant.
- The manufacturer recommends that in the event of a PRV has discharged it should be replaced as the set pressure can no longer be guaranteed.
- In any event all pressure relief valves should be replaced every 5 years.
- If the operating pressure of the system has exceeded 90% of the rated burst pressure of the rupture disc, the disc should be replaced as it is most likely that fatigue will have occurred and the disc may be susceptible to premature rupture.

Coalescent Oil Separator

- Coalescent oil separators contain a filter element for extreme efficiency. The filter will “clean up” a new system and it may therefore be necessary to replace the filter shortly after commissioning. In order to maintain optimum operation the vessel may be fitted with a visual pressure difference gauge and if this gauge shows a pressure difference in excess of 13psig/0.9bar the filter should be changed.
- This filter must always be changed after the replacement of a compressor.

Refrigerant Charge. (F-Gas Directive)

- During the commissioning process a label must be attached to the plant showing the actual total operating system refrigerant charge and type which must be also recorded on the F-Gas record sheet for the plant. Any additions or subtractions to the charge must be recorded as part of the maintenance regime for the plant.

Compressor Oil Charge

- Regular checks must be carried out to verify the compressor oil charge $\frac{1}{4}$ to $\frac{3}{4}$ sight glass. It is not normally necessary to change the oil for factory assembled plant but for “field assembled” installations an oil change is recommended after 100 hours operation. This includes cleaning the magnetic oil plug which is fitted to larger semi-hermetic compressors.
- In any event the oil should be completely replaced every 3 years or 10,000 hrs to 12,000 hrs operation.

Liquid Line Filter Driers and Suction Filters

- Multi-compressor pack systems with integral liquid receivers are fitted with replaceable core liquid line driers, which gives the maintenance engineer the opportunity to check for excess pressure drop through this vessel. If a pressure drop in excess of 2psig/0.14bar is observed through this vessel it is recommended that the replaceable core is changed.
- Smaller single compressor condensing units are fitted with sealed filter driers which should be replaced every time the system is broken into.


Refrigerant Leak Checks

- Regular leak detection must be carried out, the frequency of which is dependent on the total system operating charge.
 - Systems containing more than 5 tonnes of CO₂ equivalent but less than 500 tonnes equivalent must be checked at least once every 6 months


- Systems containing 500 tonnes of CO₂ equivalent or more must be checked every 3 months or where a fixed leak detector is fitted at least every 6 months.
- Once a leak has been identified and repaired a further leak test must be carried out within one month to ensure that the repair has been successful.

Dimensions


These outline drawings represent the overall dimensions of the Slimline housings

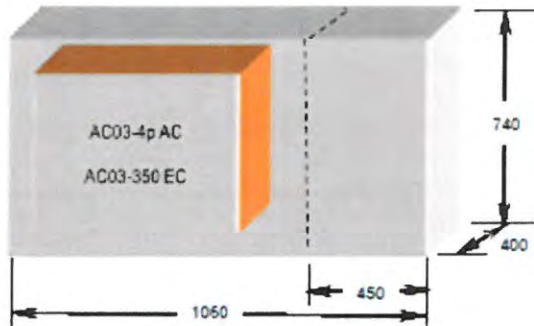

Housing Model
SH/QH 1
SL/QL 1

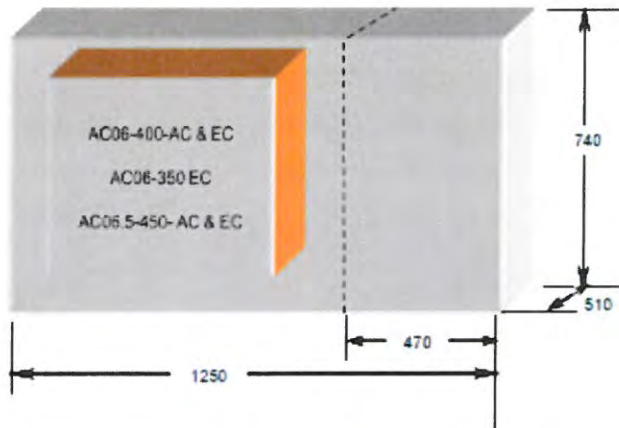

Housing Model
SH/QH 2
SL/QL 2

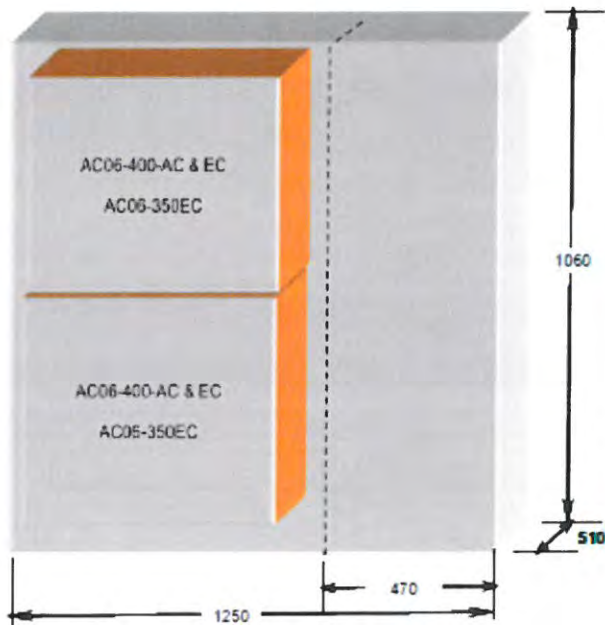

Housing Model
SH/QH 3
SL/QL 3



The Model Range – High Temperature

High Temperature Scroll Models

Technical Data

Condensing Unit Model	Compressor	Condenser	Receiver (litres)	Connections		Weight kgs	dBA @ 10M		Condenser Fan(s) 1ph		
				Suct.	Liq.		SH-4p	QH-EC	No.	Dia (mm)	M ³ /hr
SH1-25-Z509	Z509KA-618	AC03-350-4P	3.4	5/8"	3/8"	56	36	-	1	350AC	1920
QH1-27-Z509EC		AC03-350EC				59	-	32		350EC	2200
SH1-25-Z511	Z511KA-618	AC03-350-4P	3.4	5/8"	3/8"	56	36	-	1	350AC	1920
QH1-27-Z511EC		AC03-350EC				59	-	32		350EC	2200
SH1-25-Z513	Z513KA-618	AC03-350-4P	3.4	3/4"	3/8"	58	36	-	1	350AC	1920
QH1-27-Z513EC		AC03-350EC				61	-	32		350EC	2200
SH1-25-Z515	Z515KA-618	AC03-350-4P	3.4	3/4"	3/8"	59	36	-	1	350AC	1920
QH1-27-Z515EC		AC03-350EC				62	-	32		350EC	2200

SH2-35-Z515	Z515KAE-618	AC06-400-4p	6.9	3/4"	3/8"	81	41	-	1	400	3400
QH2-32-Z515EC		AC06-350EC				83	-	32		350EC	2980
SH2-35-ZB19	ZB19KCE-551	AC06-400-4p	6.9	3/4"	3/8"	83	41	-	1	400AC	3400
QH2-32-ZB19EC		AC06-350EC				84	-	32		350EC	2980
QH2-40-ZB19EC		AC06-400EC				97				400EC	4050
QH2-45-ZB19AC		AC06.5-450AC				101				450AC	5100
QH2-45-ZB19EC		AC06.5-450EC				102				450EC	4800
SH2-35-ZB21	ZB21KCE-551	AC06-400-4p	6.9	7/8"	1/2"	85	41	-	1	400AC	3400
QH2-32-ZB21EC		AC06-350EC				86	-	32		350EC	2980
QH2-40-ZB21EC		AC06-400EC				99				400EC	4050
QH2-45-ZB21AC		AC06.5-450AC				103				450AC	5100
QH2-45-ZB21EC		AC06.5-450EC				104				450EC	4800
SH2-35-ZB26	ZB26KCE-551	AC06-400-4p	6.9	7/8"	1/2"	86	41	-	1	400AC	3400
QH2-32-ZB26EC		AC06-350EC				88	-	32		350EC	2980
QH2-40-ZB26EC		AC06-400EC				101				400EC	4050
QH2-45-ZB26AC		AC06.5-450EC				106				450AC	5100
QH2-45-ZB26EC		AC06.5-450AC				107				450EC	4800
SH2-35-ZB29	ZB29KCE-551	AC06-400-4p	6.9	7/8"	1/2"	91	41	-	1	400AC	3400
-		-				-	-	-		350EC	2980
QH2-40-ZB29EC		AC06-400EC				104				400EC	4050
QH2-45-ZB29AC		AC06.5-450EC				109				450AC	5100
QH2-45-ZB29EC		AC06.5-450AC				110				450EC	4800

SH3-38-ZB21	ZB21KCE-551	AC06D-400-4p	6.9	7/8"	1/2"	142	44	-	2	400AC	6800
QH3-36-ZB21EC		AC06D-350EC				146	-	35		350EC	4360
QH3-40-ZB21EC		AC06D-400EC				148				400EC	8100
SH3-38-ZB26	ZB26KCE-551	AC06D-400-4p	6.9	7/8"	1/2"	143	44	-	2	400AC	6800
QH3-36-ZB26EC		AC06D-350EC				147	-	35		350EC	4360
QH3-40-ZB26EC		AC06D-400EC				149				400EC	8100
SH3-38-ZB29	ZB29KCE-551	AC06D-400-4p	6.9	7/8"	1/2"	149	44	-	2	400AC	6800
QH3-36-ZB29EC		AC06D-350EC				153	-	35		350EC	4360
QH3-40-ZB29EC		AC06D-400EC				155				400EC	8100
SH3-38-ZB38	ZB38KCE-551	AC06D-400-4p	6.9	7/8"	1/2"	151	44	-	2	400AC	6800
QH3-36-ZB38EC		AC06D-350EC				155	-	35		350EC	4360
QH3-40-ZB38EC		AC06D-400EC				158				400EC	8100
SH3-38-ZB45	ZB45KCE-551	AC06D-400-4p	6.9	7/8"	1/2"	152	44	-	2	400AC	6800
QH3-36-ZB45EC		AC06D-350EC				156	-	35		350EC	4360
QH3-40-ZB45EC		AC06D-400EC				159				400EC	8100



Electrical Data

Electrical Data

Compressor				Condenser Fan(s)		Condensing Unit Total				Condensing Unit Model
230/1/50		420/3/50		230/1/50		230/1/50		420/3/50		
FLA	LRA	FLA	LRA	N ^o	MRA	FLA	LRA	FLA	LRA	
7.2	45.0	3.0	27.0	1	0.75	7.95	48.00	3.75	30.00	SH1-25-Z509
7.2	45.0	3.0	27.0	1	1.23	8.43	49.92	4.23	31.92	QH1-27-Z509EC
8.7	45.0	3.3	27.0	1	0.75	9.45	48.00	4.05	30.00	SH1-25-Z511
8.7	45.0	3.3	27.0	1	1.23	9.93	49.92	4.53	31.92	QH1-27-Z511EC
9.9	54.0	3.8	29.0	1	0.75	10.65	57.00	4.55	32.00	SH1-25-Z513
9.9	54.0	3.8	29.0	1	1.23	11.13	58.92	5.03	33.92	QH1-27-Z513EC
11.50	61.0	4.40	29.0	1	0.75	12.25	64.00	5.15	32.00	SH1-25-Z515
11.50	61.0	4.40	29.0	1	1.23	12.73	65.92	5.63	33.92	QH1-27-Z515EC

11.5	61.0	4.4	29.0	1	1.35	12.85	66.40	5.75	34.40	SH2-35-Z515
11.5	61.0	4.4	29.0	1	1.23	12.73	65.92	5.63	33.92	QH2-32-Z515EC
12.8	61.0	6.5	32.0	1	1.35	14.15	66.40	7.85	37.40	SH2-35-ZB19
12.8	61.0	6.5	32.0	1	0.70	13.50	63.80	7.20	34.80	QH2-32-ZB19EC
12.8	61.0	6.5	32.0	1	2.50	15.30	71.00	9.00	42.00	QH2-40-ZB19EC
12.8	61.0	6.5	32.0	1	2.90	15.70	72.60	9.40	43.60	QH2-45-ZB19AC
12.8	61.0	6.5	32.0	1	2.20	15.00	69.80	8.70	40.80	QH2-45-ZB19EC
16.4	82.0	7.2	40.0	1	1.35	17.77	87.40	8.55	45.40	SH2-35-ZB21
16.4	82.0	7.2	40.0	1	1.23	17.65	86.92	8.43	44.92	QH2-32-ZB21EC
16.4	82.0	7.2	40.0	1	2.50	18.92	92.00	9.70	50.00	QH2-40-ZB21EC
16.4	82.0	7.2	40.0	1	2.90	19.32	93.60	10.10	51.60	QH2-45-ZB21AC
16.4	82.0	7.2	40.0	1	2.20	18.62	90.80	9.40	48.80	QH2-45-ZB21EC
18.0	97.0	8.85	46.0	1	1.35	19.35	102.40	10.20	51.40	SH2-35-ZB26
18.0	97.0	8.85	46.0	1	1.23	19.23	101.92	10.08	50.92	QH2-32-ZB26EC
18.0	97.0	8.85	46.0	1	2.50	20.50	107.00	11.35	56.00	QH2-40-ZB26EC
18.0	97.0	8.85	46.0	1	2.90	20.90	108.60	11.75	57.60	QH2-45-ZB26AC
18.0	97.0	8.85	46.0	1	2.20	20.20	105.80	11.05	54.80	QH2-45-ZB26EC
-	-	10.3	49.3	1	1.35	-	-	11.65	54.70	SH2-35-ZB29
-	-	-	-	-	-	-	-	-	-	-
-	-	10.3	49.3	1	2.50	-	-	12.80	59.30	QH2-40-ZB29EC
-	-	10.3	49.3	1	2.90	-	-	13.20	60.90	QH2-45-ZB29AC
-	-	10.3	49.3	1	2.20	-	-	12.50	58.10	QH2-45-ZB29EC

16.4	82.0	7.2	40.0	2	1.35	19.10	92.80	9.90	50.80	SH3-38-ZB21
16.4	82.0	7.2	40.0	2	1.23	18.86	91.84	9.66	49.84	QH3-36-ZB21EC
16.4	82.0	7.2	40.0	2	2.50	21.40	102.00	12.20	60.00	QH3-40-ZB21EC
18.0	97.0	8.85	46.0	2	1.35	20.70	107.80	11.55	56.80	SH3-38-ZB26
18.0	97.0	8.85	46.0	2	1.23	20.46	106.84	11.31	55.84	QH3-36-ZB26EC
18.0	97.0	8.85	46.0	2	2.50	23.00	117.00	13.85	66.00	QH3-40-ZB26EC
-	-	10.3	49.3	2	1.35	-	-	13.00	60.10	SH3-38-ZB29
-	-	10.3	49.3	2	1.23	-	-	12.76	59.14	QH3-36-ZB29EC
-	-	10.3	49.3	2	2.50	-	-	15.30	69.30	QH3-40-ZB29EC
-	-	12.80	65.5	2	1.35	-	-	15.50	76.30	SH3-38-ZB36
-	-	12.80	65.5	2	1.23	-	-	15.26	75.34	QH3-36-ZB36EC
-	-	12.80	65.5	2	2.50	-	-	17.80	85.50	QH3-40-ZB36EC
-	-	13.1	74.0	2	1.35	-	-	15.80	84.80	SH3-38-ZB45
-	-	13.1	74.0	2	1.23	-	-	15.56	83.84	QH3-36-ZB45EC
-	-	13.1	74.0	2	2.50	-	-	18.10	94.00	QH3-40-ZB45EC



The Model Range – Low Temperature

Low Temperature Scroll Models

Condensing Unit Model	Compressor	Condenser	Receiver (litres)	Connections		Weight kgs	dBA @ 10M		Condenser Fan(s) 1ph		
				Suct.	Liq.		SH-4p	QH-EC	No.	Dia (mm)	M ³ /hr
SL1-25-ZF09	ZF09K4E-556	AC03-350-4P	3.4	3/4"	3/8"	61	37	-	1	350AC	1920
QL1-27-ZF09		AC03-350EC				64	-	32		350EC	2200
SL2-35-ZF09	ZF09K4E-556	AC06-400-4p	6.9	7/8"	1/2"	83	41	-	1	400AC	3400
QL2-32-ZF09EC		AC06-350EC				84	-	32		350EC	2980
QL2-40-ZF09EC		AC06-400EC				86	-	-		400EC	4050
QL2-45-ZF09AC		AC06.5-450EC				91	-	-		450AC	5100
QL2-45-ZF09EC		AC06.5-450AC				92	-	-		450EC	4800
SL2-35-ZF11	ZF11K4E-556	AC06-400-4p	6.9	7/8"	1/2"	84	42	-	1	400AC	3400
QL2-32-ZF11EC		AC06-350EC				85	-	32		350EC	2980
QL2-40-ZF11EC		AC06-400EC				88	-	-		400EC	4050
QL2-445-ZF11AC		AC06.5-450EC				93	-	-		450AC	5100
QL2-45-ZF11EC		AC06.5-450AC				94	-	-		450EC	4800
SL2-35-ZF13	ZF13K4E-556	AC06-400-4p	6.9	7/8"	1/2"	94	42	-	1	400AC	3400
QL2-32-ZF13EC		AC06-350EC				95	-	33		350EC	2980
QL2-40-ZF13EC		AC06-400EC				98	-	-		400EC	4050
QL2-45-ZF13AC		AC06.5-450EC				103	-	-		450AC	5100
QL2-45-ZF13EC		AC06.5-450AC				104	-	-		450EC	4800
SL2-35-ZF15	ZF15K4E-556	AC03-400-4P	6.9	7/8"	1/2"	95	42	-	1	400AC	3400
SL2-32-ZF15EC		AC06-350EC				96	-	33		350EC	2980
SL2-40-ZF15EC		AC06-400EC				99	-	-		400EC	4050
SL2-45-ZF15AC		AC06.5-450AC				104	-	-		450AC	5100
SL2-45-ZF15EC		AC06.5-450EC				105	-	-		450EC	4800
SL2-35-ZF18	ZF18K4E-556	AC03-400-4P	6.9	7/8"	1/2"	96	42	-	1	400AC	3400
-		-				-	-	-		-	-
SL2-40-ZF18EC		AC06-400EC				101	-	-		400EC	4050
SL2-45-ZF18AC		AC06.5-450AC				106	-	-		450AC	5100
SL2-45-ZF18EC		AC06.5-450EC				107	-	-		450EC	4800
SL3-38-ZF13	ZF13K4E-556	AC06-400-4p	6.9	7/8"	1/2"	151	42	-	2	400AC	6800
QL3-36-ZF13EC		AC06-350EC				155	-	33		350EC	4360
QL3-40-ZF13EC		AC06-400EC				159	-	-		400EC	8100
SL3-38-ZF15	ZF15K4E-556	AC06-400-4p	6.9	7/8"	1/2"	152	42	-	2	400AC	6800
QL3-36-ZF15EC		AC06-350EC				156	-	33		350EC	4360
QL3-40-ZF15EC		AC06-400EC				160	-	-		400EC	8100
SL3-38-ZF18	ZF18K4E-556	AC06-400-4p	6.9	7/8"	1/2"	154	42	-	2	400AC	6800
QL3-36-ZF18EC		AC06-350EC				158	-	33		350EC	4360
QL3-40-ZF18EC		AC06-400EC				162	-	-		400EC	8100

Acoustic Data: Noise level data is available for all models expressed as Free Field Sound Pressure db(A) values at various radial distances, or alternatively expressed as Sound Power values relating to a sound spectrum of frequencies from 63Hz to 8000Hz. This acoustic data is based on manufactures measured component values as the elements of a calculated assembly value and is offered in order that the design engineer will have indicative data to use as part of the equipment design process.

Actual site measurements may vary from these values dependant on equipment location and site conditions therefore specific on site measurements will be the responsibility of the installer.



Electrical Data

Electrical Data

Compressor				Condenser Fan(s)		Condensing Unit Total				Condensing Unit Model
230/1/50		420/3/50		230/1/50		230/1/50		420/3/50		
FLA	LRA	FLA	LRA	N ^o	MRA	FLA	LRA	FLA	LRA	
-	-	6.00	40.0	1	0.75	-	-	6.75	43.00	SL1-25-ZF09
-	-	6.00	40.0	1	1.23	-	-	7.23	44.92	QL1-27-ZF09

-	-	6.0	40.0	1	1.35	-	-	7.35	45.40	SL2-35-ZF09
-	-	6.0	40.0	1	0.70	-	-	6.70	42.80	QL2-32-ZF09EC
-	-	6.0	40.0	1	2.50	-	-	8.50	50.00	QL2-40-ZF09EC
-	-	6.0	40.0	1	2.90	-	-	8.90	51.60	QL2-45-ZF09AC
-	-	6.0	40.0	1	2.20	-	-	8.20	48.80	QL2-45-ZF09EC
-	-	7.1	46.0	1	1.35	-	-	8.45	51.40	SL2-35-ZF11
-	-	7.1	46.0	1	0.70	-	-	7.80	48.80	QL2-32-ZF11EC
-	-	7.1	46.0	1	2.50	-	-	9.60	56.00	QL2-40-ZF11EC
-	-	7.1	46.0	1	2.90	-	-	10.00	57.60	QL2-45-ZF11AC
-	-	7.1	46.0	1	2.20	-	-	9.30	54.80	QL2-45-ZF11EC
-	-	8.0	51.5	1	1.35	-	-	9.35	56.90	SL2-35-ZF13
-	-	8.0	51.5	1	0.70	-	-	8.70	54.30	QL2-32-ZF13EC
-	-	8.0	51.5	1	2.50	-	-	10.50	61.50	QL2-40-ZF13EC
-	-	8.0	51.5	1	2.90	-	-	10.90	63.10	QL2-45-ZF13AC
-	-	8.0	51.5	1	2.20	-	-	10.20	60.30	QL2-45-ZF13EC
-	-	10.00	64.0	1	1.35	-	-	11.35	69.40	SL2-35-ZF15
-	-	10.00	64.0	1	0.70	-	-	10.70	66.80	SL2-35-ZF15EC
-	-	10.00	64.0	1	2.50	-	-	12.50	74.00	SL2-40-ZF15EC
-	-	10.00	64.0	1	2.90	-	-	12.90	75.60	SL2-45-ZF15AC
-	-	10.00	64.0	1	2.20	-	-	12.20	72.80	SL2-45-ZF15EC
-	-	12.5	74.0	1	1.35	-	-	13.85	79.40	SL2-35-ZF18
-	-	-	-	-	-	-	-	-	-	-
-	-	12.5	74.0	1	2.50	-	-	15.00	84.00	SL2-40-ZF18EC
-	-	12.5	74.0	1	2.90	-	-	15.40	85.60	SL2-45-ZF18AC
-	-	12.5	74.0	1	2.20	-	-	14.70	82.80	SL2-45-ZF18EC

-	-	8.0	51.5	2	1.35	-	-	10.70	62.30	SL3-38-ZF13
-	-	8.0	51.5	2	1.23	-	-	10.46	61.34	QL3-36-ZF13EC
-	-	8.0	51.5	2	2.50	-	-	13.00	71.50	QL3-40-ZF13EC
-	-	10.00	64.0	2	1.35	-	-	12.70	74.80	SL3-38-ZF15
-	-	10.00	64.0	2	1.23	-	-	12.46	73.84	QL3-36-ZF15EC
-	-	10.00	64.0	2	2.50	-	-	15.00	84.00	QL3-40-ZF15EC
-	-	12.5	74.0	2	1.35	-	-	15.20	84.80	SL3-38-ZF18
-	-	12.5	74.0	2	1.23	-	-	14.96	83.84	QL3-36-ZF18EC
-	-	12.5	74.0	2	2.50	-	-	17.50	94.00	QL3-40-ZF18EC

The data shown in the tables are representative of the Slimline units when fitted with Copeland Scroll compressors. Models fitted with Frascold or Bock semi-hermetic or Tecumseh hermetic compressors are also available. Please consult our Technical Support team for further details. Larger SH/SL 4 Models are also available against specific design criteria.



System Operational Check List

When the system has been running trouble free for an extended time (two weeks or more) and design conditions are satisfied, the following check list should be followed:

- 1) Check that compressor discharge and suction pressures are operating within the allowable design limits for the compressor. If not, take the necessary corrective action.
- 2) Check the liquid line sight glass and expansion valve operation. If there is an indication that the system is low on refrigerant, thoroughly check the system for leaks before adding refrigerant.
- 3) Check the level of the oil in the compressor sight glass (if so equipped). Add oil as necessary.
- 4) The thermostatic expansion valve must be checked for proper superheat settings.
- 5) Check the voltage and amperage readings at the compressor terminals. Voltage reading must be within the recommended guidelines. Normal operating amperages can be much lower than the compressor nameplate values.
- 6) To check the high pressure control setting it is necessary to build up the head pressure to the cut-out point of the control. This can be done by stopping the condenser fan(s) (air cooled condensing units) or pump and watching the pressure rise on a high pressure gauge to make sure the high pressure control is operating at the setting
- 7) Check the low pressure settings by throttling the compressor shut-off valve and allowing the compressor to pump down. This operation must be done with extreme caution to avoid too sudden a reduction in crankcase pressure, which will cause oil slugging and possible damage to the compressor valves. Close the valve a turn at a time while watching the compound gauge for change and allowing time for the crankcase pressure to equalize with the pressure control bellows pressure. The slower the pressure is reduced, the more accurate will be the check on the pressure control setting.
- 8) Recheck all safety and operating controls for proper operation and adjust as necessary.
- 9) If the system is equipped with winter head pressure controls, check for operation.



End of Life Decommissioning Instructions

Refrigerant: The decommissioning process involves removing the refrigerant from the system which must be carried out by use of a refrigerant recovery unit; the refrigerant must be recovered into a purpose made recovery cylinder. Recovered HFC refrigerant is hazardous waste and must be disposed of under the control of current legislation.

Oil Charge: The compressor will contain oil that is classified as controlled waste and must therefore be disposed of by a licenced waste contractor. Recovered oil cannot be re-used.

System Components: Components such as Filter dries, Sight Glasses, Expansion Valve, Pressure switches, Electrical Control Panel etc. can be re-used if it is deemed that their condition is such that this is economic. If deemed too worn or damaged they must be disposed of in a manner that is compliant with current legislation.

Copper Tube: Copper tube removed from an installation is likely to be contaminated with oil and impurities and should therefore be re-cycled via a licenced scrap metal dealer.

Electrical Installation: Once decommissioned and all equipment has been removed from site the electrical supply apparatus must be left in a safe condition.