

DOORSTRIP QUICKMOUNT™ SYSTEM

Installation

Important

Prior to installation, unroll all the PVC strips and place them on a clean, flat surface in a warm atmosphere for a minimum of twenty-four (24) hours. This will allow them to return to their original form.

1. Mount the QuickMount™ headrail in either the Soffit or Face Fixing positions shown in Diagrams 1 and 2 using suitable fixings.

2. Begin attaching the PVC strips. Start with numbers 1 and 3 (see Diagram 3). Hang with their concave sides towards you, leaving the desired spacing between the strips as indicated by the Strip Placement Guide.

Fit the strips onto the headrail pegs as follows: with the top of the strip angled back towards you, insert the bottom of the oval retaining pegs into the pre-punched holes. Then, using a quick up and over motion, lift the top part of the strip onto the top of the pegs until the strip rests securely in position.

3. Attach strip number 2 with its concave side facing away from you so that it interlinks with strip numbers 1 and 3.

4. Attach all remaining strips in the same manner as in Steps 2 and 3, making certain that all the concave sides face each other (Diagram 4).

5. Once all of the strips have been attached, the strips should be trimmed 20mm above floor level to allow them to hang freely. The strips can be trimmed using a standard craft knife.

Diagram 1
Soffit Position

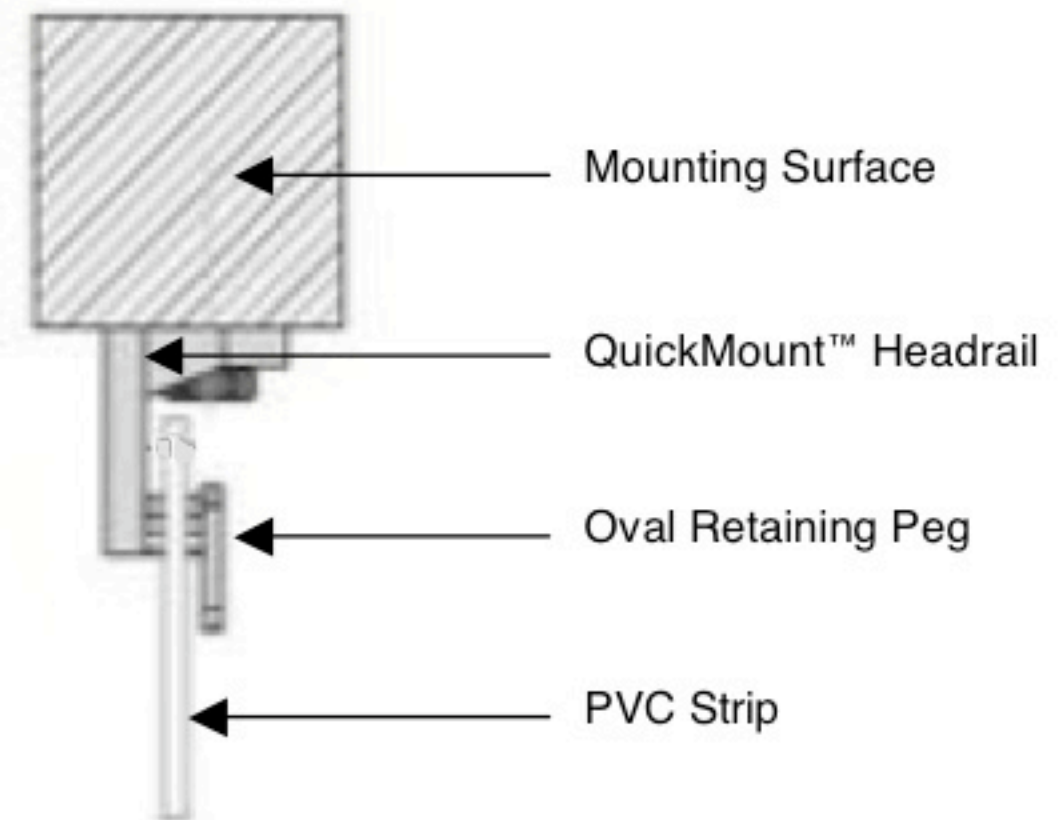


Diagram 2
Face Fixing Position

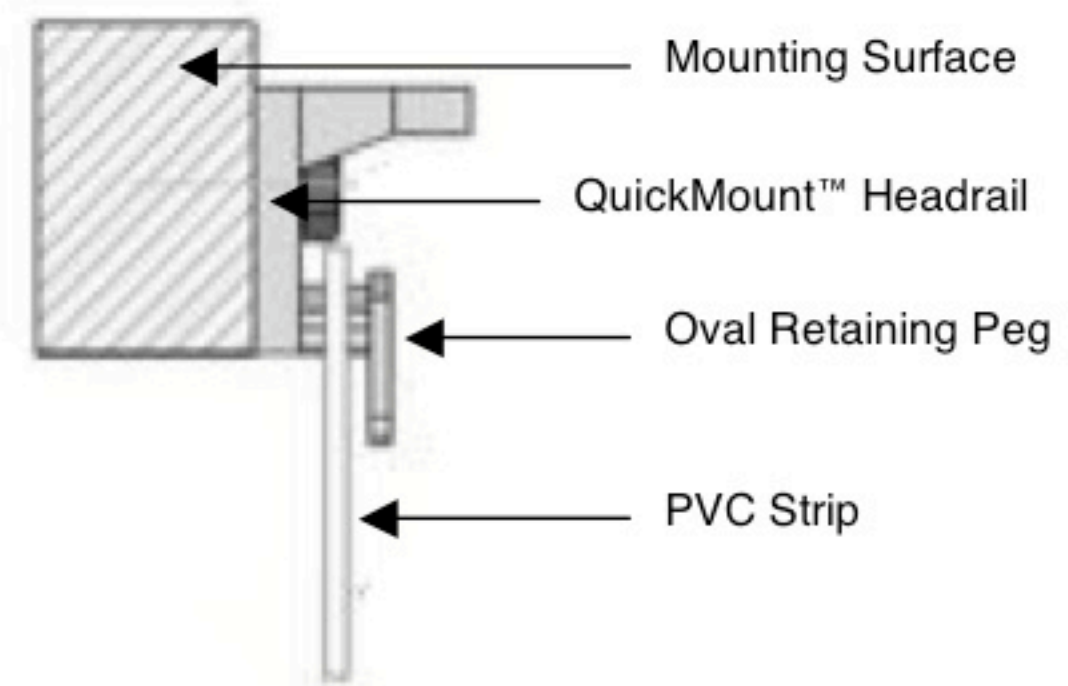


Diagram 3
Front View Strip Spacing

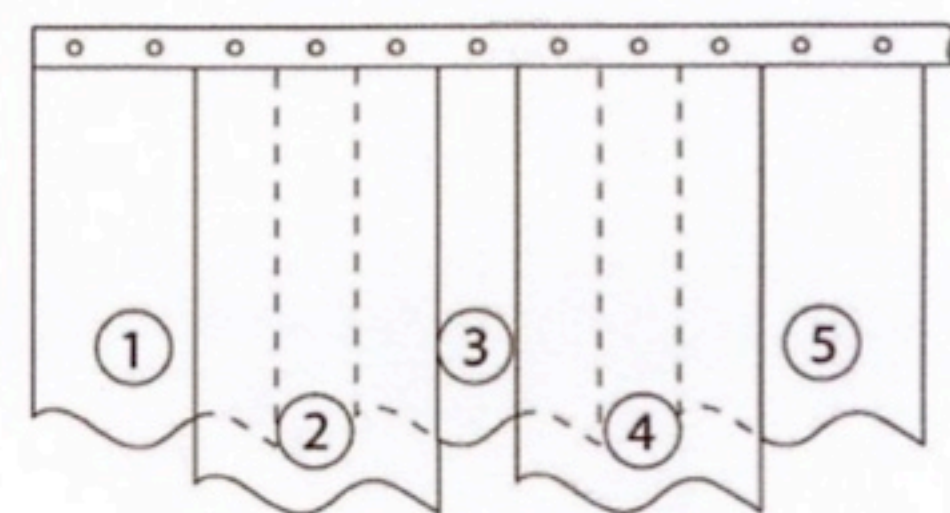


Diagram 4
Concave Sides Interlinking



DOORSTRIP