

HEAVY DUTY WOVEN POLYESTER LASHINGS


How to use Woven Lashings with Flat Buckles



Lead one end of the lashing through the middle of the buckle




Make a loop and insert back through the first buckle opening

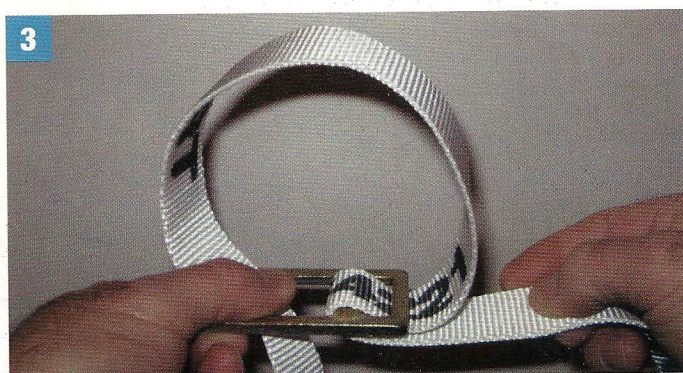


Lead the end back through the centre opening



Pull the lashing away from the buckle

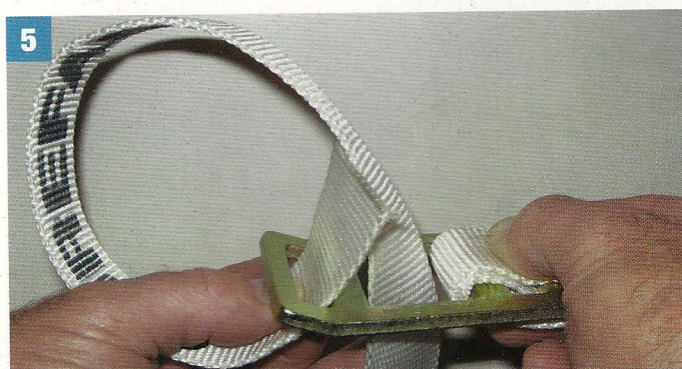


Repeat the last 4 steps with opposite lashing end

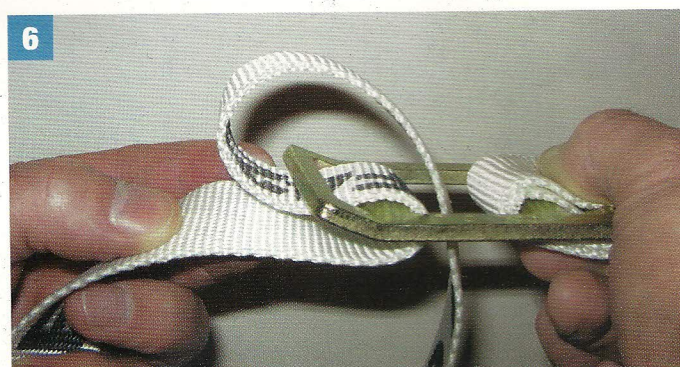


Pull tight and allow overlap of 25cm for tensioner use

HEAVY DUTY WOVEN POLYESTER LASHINGS


How to use Woven Lashings with Flat Buckles

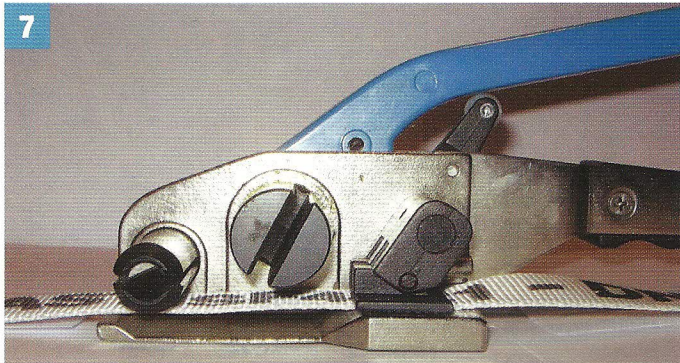



Squeeze handle of the tensioner and lead the webbing under the break lever

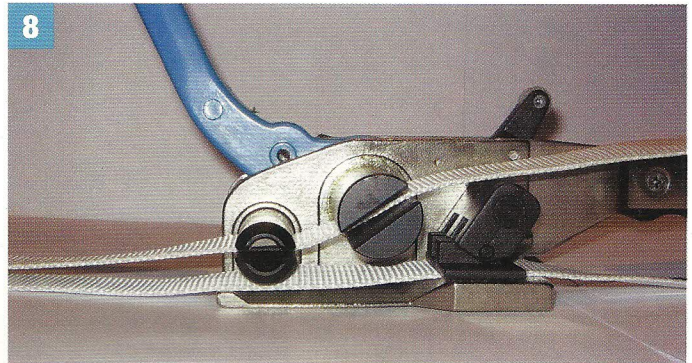

Pull the handle wide open and place top webbing part through cutter and tensioner slot

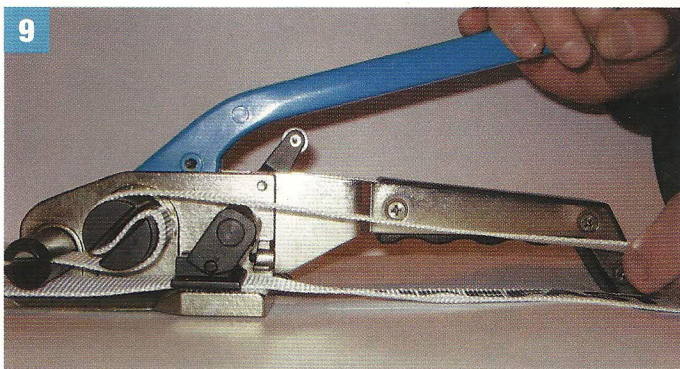

Move handle up and down for tensioning

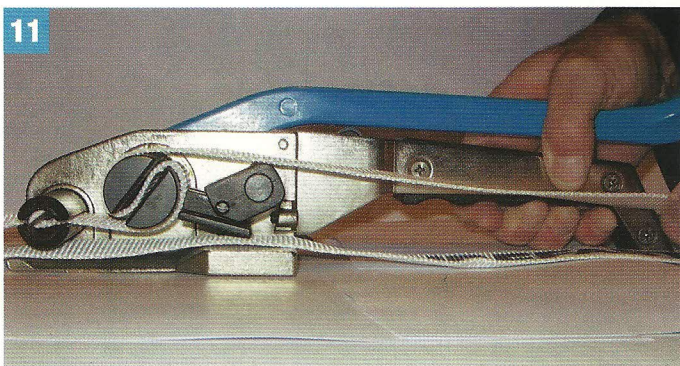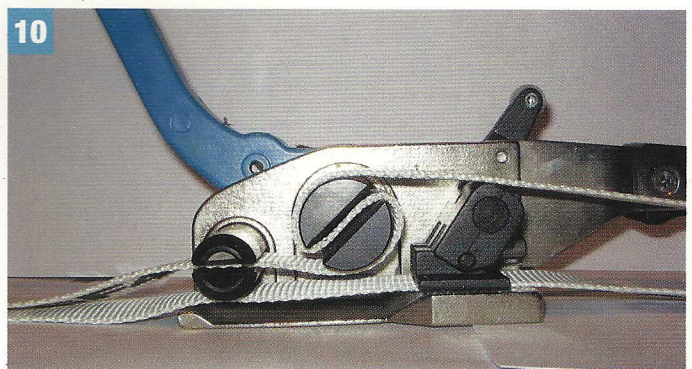

Squeeze handle for cutting, release the break and remove tensioner to the right

