

**FENNEL**

Lead by Innovation



# Fennel UK

Modular Tambour Doors

*Inspired design and engineering*

[www.fenneluk.com](http://www.fenneluk.com)



## Modular Tambour Sets

Supplied as a pre-assembled cartridge style unit our modular tambour door is an elegant space efficient storage solution

Item Code	Fits cabinet width (mm)**	Maximum Height mm
95.7000.1100	400	1450
95.7000.1101	500	1450
95.7000.1102	600	1450
95.7000.1104	800	1450
95.7000.1105	900	1450
95.7000.1103	1000	1450



\*\* Designed for use with standard 18mm carcass


Internal Cabinet Dimensions required = 270 mm depth x 188mm height

Any internal cabinet shelves should be set back by a minimum of 5mm from the front edge of the cabinet

Fennel Modular Tambour Door Systems are a combination of inspired design and clever engineering, providing functional yet elegant solutions.

Equally suited to space limited environments our systems can be used in a variety of rooms ...

Elegant kitchen solutions.....

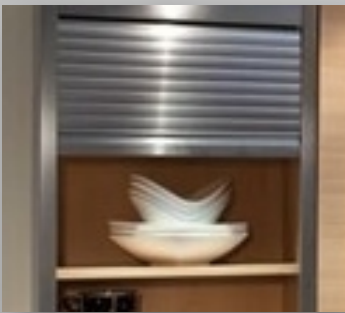

..... to close off storage compartments



..... protect technical items



Or discreetly hide away in-built appliances, boilers or pipework.

## Fitted in 5 easy steps



### Step 1

Insert the TZ28 blocks into the four shallow holes (front and fourth from front) on the underside of the modular.



### Step 2

Place the modular carefully into the cabinet and move it to the top edge of the cabinet. It is ESSENTIAL that the front edge of the modular is flush with the front edge of the carcass. Fix through the TZ28's with screws.



### Step 3

Fix the left and right screw on tracks to the front face of the carcass gable. Use the 'lip' to locate it tight to the inside of the gable ensuring the 'lip' does not come above the modulars base shelf. If your cabinet has a base panel cut the profile so it fits just above the base panel.



### Step 4

Lower the tambour  $\frac{1}{4}$  -  $\frac{1}{2}$  way and snap on the gable fascias. Fit the end caps onto the fascias.



### Step 5

Screw on the base part of the top fascia piece ensuring the small lip is flush to the underside of your cabinet top. Finally, push the top fascia cover into the groove in the base part.

**NOTE** The modular is designed to fit a maximum height of 1450mm however it is possible to fit to a reduced height by cutting the left and right screw on tracks and also the snap on profiles to suit.

Always cut the profiles from the bottom edge, taking care not to damage.

Open your doors to modern  
design possibilities.

Fennel UK Ltd  
Unit 3  
Garden Vale Business Centre  
Greenfield Road  
Colne  
Lancashire BB8 9PD

Tel: +44 (0)1282 871806  
Fax: +44 (0)1282 863790  
Email: [sales@fenneluk.com](mailto:sales@fenneluk.com)

*Inspired design and engineering*