



Fixing Guide

April 2019



– Contents –

	PAGE
Product Information	3
No Special Tools Required	3
Storing the Product	3
Product Description	3
TapcoSlate Information	4
Pitch, Gauge, and Coverage	5
Recycling	5
Fastener Recommendations	5
Roof Decking Materials	5
Roofing Membrane/Underlay	6
Installation Guidelines	7
Spacing Between the Slates	7
Laying Out ½ Slates or Cut Slates	7
Preparation	7
Hip Roof Layout	7
Fully Boarded Roof	9
Felt and Batten Roof	10
Fixing TapcoSlate Ridge/Hip Caps	13
Ridge/Hip Cap Finishing	14
Angled Ridge-to-Hip Junction	14
Ridge 90° End Cap	15
Alternate Ridge/Hip Cap Finishing	15
Standard Ridge Cap End Piece	15
Angled Ridge Cap End Piece	16
5-way Ridge to Hip Joint	16
Weatherproofing the Ridge-to-Hip Intersection	17
Valleys	17
Closed Valley Design	17
Open Valley Design	18
Flashings	18
Apron (Roof to Wall) Flashing	18
Step Flashings	19
Counter Flashing	19
Vent Flashings	20
Soil Stack	20
Pitch changes	20
Chimney Saddles	20
Hip & Ridge Detail	21
Special Instructions	23
Installation in Exceptionally High Wind Areas	23
Turret Installation	24
Removing/Re-fitting TapcoSlates	25
TapcoSlate Accessories	27

Please note that the following Accessory fixing guides are also available on our website as downloads:

- | | |
|--|---|
| <ul style="list-style-type: none"> • Conservatory Roof Accessories • RidgeMaster Plus & HipMaster • Dry Verge | <ul style="list-style-type: none"> • Inline Slate Vent • Cowl Vent • TapcoSlate Care and Maintenance |
|--|---|

Visit: www.TapcoRoofingProducts.com/product-guides

This fixing guide covers both TapcoSlate Classic and TapcoSlate Aledora roofing slates as both products are very similar in the way they are fixed. Differences will be clearly labelled.

– Product Information –

No Special Tools Required

- Hand fastened (hammered or screwed) or fastened with a nail/screw gun.
- Sharp utility blade or a standard circular saw.
- Tape measure, pry bar, tin snips.
- Chalk line with blue chalk (do not use red chalk as this can stain the product).


Storing the Product

For proper installation, the slates need to be stored on the original pallet on a flat surface. Proper storage of the product at the job site is important. Classic slates are cambered to ensure that maximum pressure is transferred to the leading edge of the slate during installation and should be stacked face down (as originally delivered). **Do not double stack pallets.**

Conditions: Perform work when existing and forecasted weather permits. Work should be performed in a safe and professional manner and when ambient weather conditions are within the limits established by TapcoSlate roofing products.

Storage: TapcoSlates should not be stored on roof decks in such a manner as to over-stress and/or damage the deck and supporting structure.

Cold Weather Installation: TapcoSlates should be stored in original packaging in a storage facility where the temperature meets or exceeds 7°C. Use protective coverage over all pallets while being temporarily stored on-site. TapcoSlates must be conditioned at a temperature no lower than 7°C for twenty-four (24) hours prior to use. TapcoSlate may be installed at temperatures as low as 0°C but must be hand fastened, the use of a pneumatic gun below 7°C will result in cracking and webbing in the fastened area. Be sure to follow the manufacturer's installation requirements for all underlay or membrane and any other applications. Comply with any and all local building regulations. **Note of Caution:** The slates can be slippery under certain conditions and job site safety procedures should be enforced.

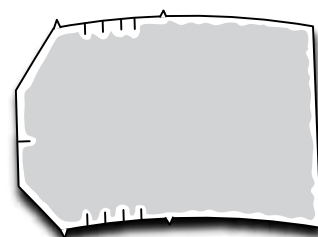




Product Description

TapcoSlates are manufactured from a recyclable blend of limestone and polypropylene, and are made from multiple natural patterns.

WARRANTY:	40 Years	ROOFING BOARD:	0.7" (18mm) OSB.
WEIGHT (CLASSIC SLATE):	0.7 kg	MINIMUM PITCH:	14° (Board & Batten and Fully Boarded).
WEIGHT (ALEDORA SLATE):	0.52 kg	MAXIMUM PITCH:	90°
WEIGHT (CLASSIC RIDGE):	0.7 kg	SORTING:	No sorting required.
WEIGHT (ALEDORA RIDGE):	0.52 kg	DRILLING:	No drilling required
PACKAGING (CLASSIC 12"):	Pallet: 1600 slates (1.04 tonnes), Bundle: 25 slates (16.25 kg).	BATTEN SIZE:	2" (50mm) by 1" (25mm) treated battens (minimum).
PACKAGING (ALEDORA 12"):	Pallet: 1152 slates (0.65 tonnes), Bundle: 24 slates (13.6 kg).	CUTTING:	Fine-toothed handsaw, jigsaw, circular saw, or sharp utility blade.
FIXING:	Large 10mm diameter head, galvanised 1.2" (30mm) by 0.1" (2.5mm) steel nails or 1.2" (30mm) by 0.14" (3.5mm) outdoor Phillips bugle screws (using hammer/screwdriver or nail/screw-gun). Longer 3" (76mm) nail or outdoor Phillips bugle screw required for fixing ridges and hips. Corrosion resistant fasteners are always recommended, especially in coastal areas. In Scotland we recommend the use of Stainless Steel nails for fixing.		

Please note: the diagrams in this guide are for illustration purposes only, actual sizes/placement may vary from those shown. If in doubt, please contact your local representative for advice, or contact our technical department: +44 (0)1482 880478.

TapcoSlate Information

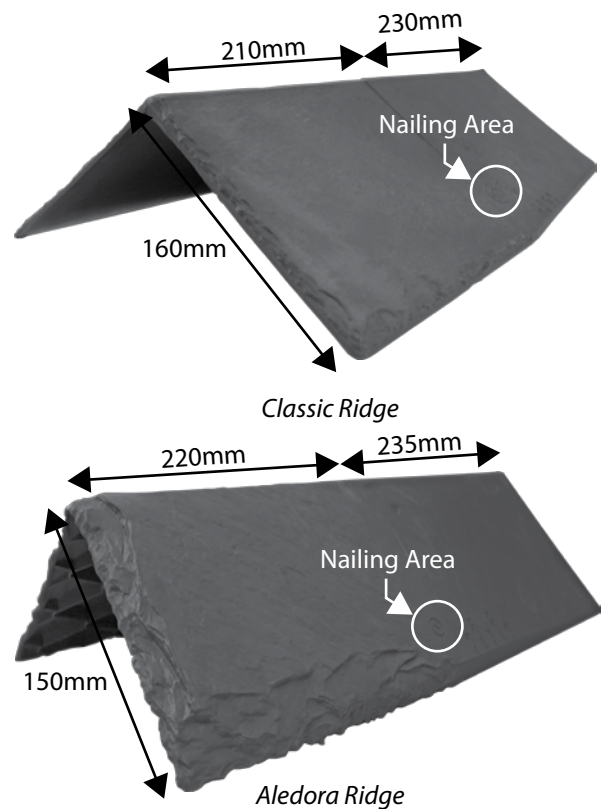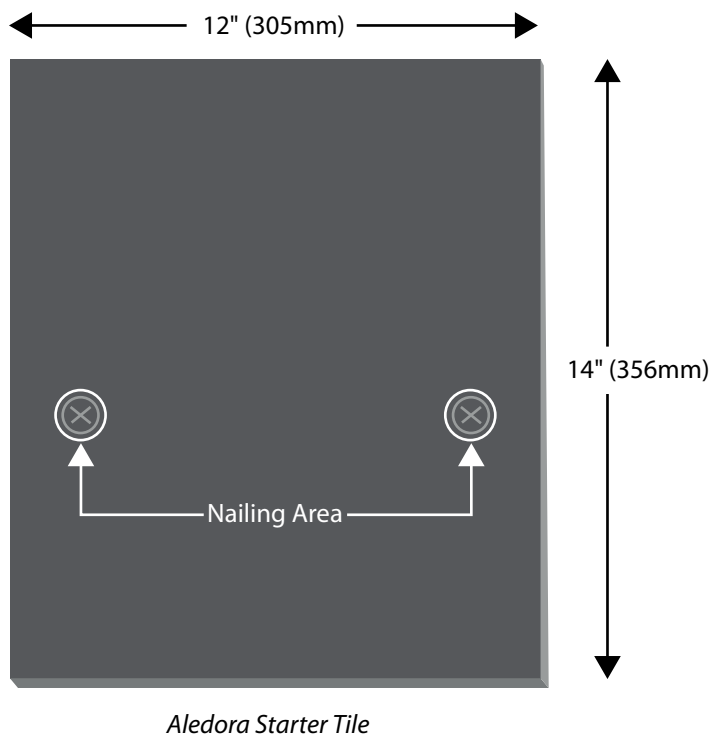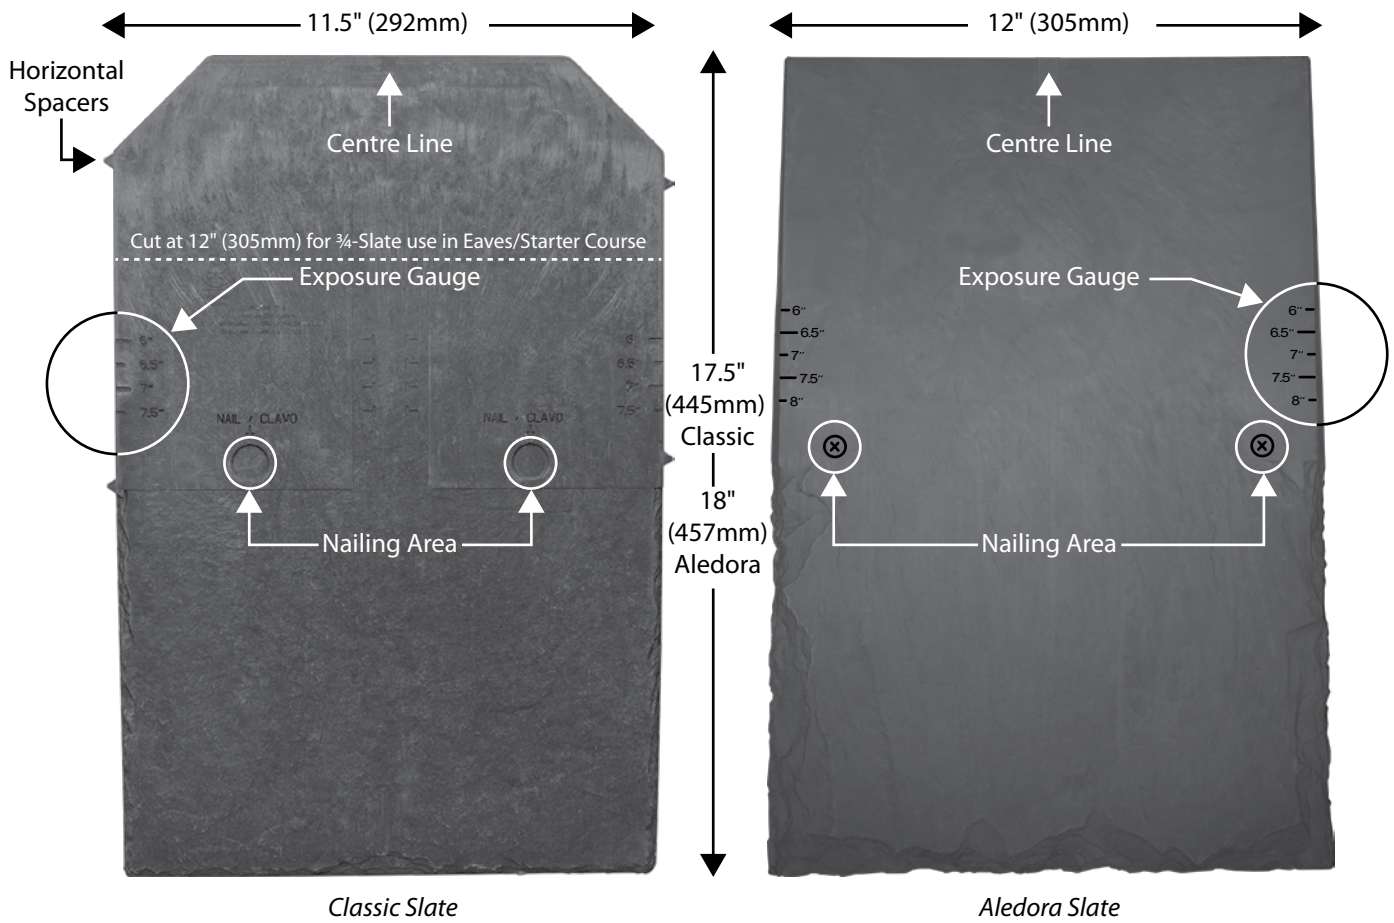

Pitch, Gauge, and Coverage

TapcoSlate Classic

ROOF PITCH	GAUGE	SLATES PER M ²	RIDGE & HIP CAPS	1 Metre Length
14* to 25 degrees (fully boarded or felt & battens)	6" (152mm)	22	Ridge Cap	6 Units
25 to 27.5 degrees (fully boarded or felt & battens)	6.5" (165mm)	20	Hip Cap	6 Units
27.5 to 30 degrees (fully boarded or felt & battens)	7" (178mm)	19		
above 30 degrees (fully boarded or felt & battens)	7.5" (191mm)	18		

TapcoSlate Aledora

ROOF PITCH	GAUGE	SLATES PER M ²	RIDGE & HIP CAPS	1 Metre Length
14* to 22.5 degrees (fully boarded or felt & battens)	6" (152mm)	21	Ridge Cap	6 Units
22.6 to 90 degrees (fully boarded or felt & battens)	6.5" (165mm)	20	Hip Cap	6 Units
22.6 to 90 degrees (fully boarded or felt & battens)	7" (178mm)	18		
22.6 to 90 degrees (fully boarded or felt & battens)	7.5" (191mm)	17		
22.6 to 90 degrees (fully boarded or felt & battens)	8" (203mm)	16		

The **TapcoSlate Aledora** tile has 5 gauge markers, the 6" (152mm) gauge is for roof pitches of 14 to 22.5 degrees, and the 6.5", 7", 7.5" and 8" (165mm, 178mm, 191mm and 203mm) gauge markers are for 22.6 degrees to a 90 degree (maximum) pitch. These are the only stipulations on roof pitch, the gauges 6.5" and above are to help with the aesthetics of your roof, you can decide how you want the slate spacing on your roof to look.

* The minimum recommended pitch and lap may be influenced by special circumstances, please contact our technical department for advice.

IMPORTANT:

Advice from our technical department should be sought when installing on high buildings and/or in exceptionally windy areas. Telephone: 01482 880478

Recycling

TapcoSlate is 100% recyclable, but because the product is not marked with a recycling symbol or logo the contractor should contact a local recycler to make the necessary arrangements, stating that the product is "mineral-filled Polypropylene" plastic. If there is any difficulty in locating a recycling facility, please contact us.

Fastener Recommendations

Slates should be applied using two (2) large 10mm diameter head, galvanised 1.2" (30mm) by 0.1" (2.5mm) steel nails or 1.2" (30mm) by 0.14" (3.5mm) outdoor Phillips bugle screws (using hammer/screwdriver or nail/screw-gun). Corrosion resistant fasteners are always recommended, especially in coastal areas. In Scotland we recommend the use of Stainless Steel nails for fixing. All slates will be attached with two fasteners, as per these instructions.

The length of the Hip & Ridge fastener should be a minimum length of 2" (51mm) over the slates and 3" (76mm) over ridge vent.

Note: Caution should always be used to ensure against over/under penetration of the fastener. **Do not over-drive the fastener.** The fastener head should be contacting the slate within the centre of the nailing target circle.

Improper fastening can compromise the roof system and voids the manufacturers' warranty.

Roof Decking Materials

- Minimum of 23/32" (18mm) plywood decking, solid wood decking, or oriented strand board (OSB).

Roofing Membrane/Underlay

TapcoSlate Classic and Aledora roofing slates are classed as **insufficiently air-open** products and therefore, following the guidance within BS5250, a **vapour impermeable (HR)** roof membrane/underlay should be used. Tapco Roofing Products recommends *Protect Wunderlay* for TapcoSlate Classic and TapcoSlate Aledora and offers the following guidance:


Air Permeability

The detail below explains how a vapour permeable (LR) roofing membrane allows water vapour to escape the structure and requirements for ventilation of the counter batten space when using a roof covering that is insufficiently air-open.


Roof coverings and batten space ventilation using vapour permeable underlays (type LR)

Where vapour permeable underlays (type LR) are used in both cold and warm roofs to contribute to the control of condensation, they do so by allowing water vapour to escape through the material by diffusion. It is important that this water vapour can escape through the roof covering to atmosphere from the tiling batten space. BS 5250 defines the level of air openness required of the roof covering and the test method. Traditional concrete and clay tiles should be sufficiently air open, but advice should be sought from the roof covering manufacturer/supplier.

Roof covering sufficiently air-open

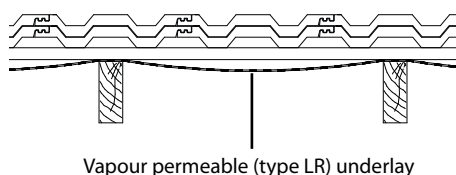

Roof covering insufficiently air-open

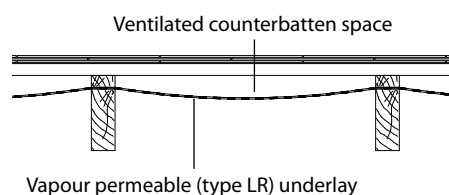


For roof coverings that do not meet the required air openness, provide a counterbatten space at least 25mm deep, with ventilation of 25 000mm²/m at eaves or low level and 5000mm²/m at ridge or high level. This is in addition to the ventilation already specified for cold and warm roofs.


With impermeable underlays (type HR) this ventilation is unnecessary as there will be relatively little moisture transfer from within the building to the batten space.

Cold Roof Applications

When installing TapcoSlate Classic and Aledora onto battens or OSB a vapour impermeable (type HR) roof membrane/underlay should be used. When installing directly onto OSB, ventilation in accordance with BS5250 to the loft void should be adhered to. Insulation should be installed on the horizontal ceiling below. To further enhance this construction, improving thermal performance of all insulation by reducing convection flow and help to avoid interstitial condensation risk within insulation in accordance with BS5250, we would recommend installing an air barrier on the warm side of the insulation, a suitable product would be *Protect BarriAir* – an air barrier membrane with some vapour control properties.

Cold Roof: with large voids above horizontal insulation using impermeable underlays (type HR)

Vapour impermeable underlay =  Figures are given in 000s of mm² per metre, e.g. 5 = 5000mm²/m

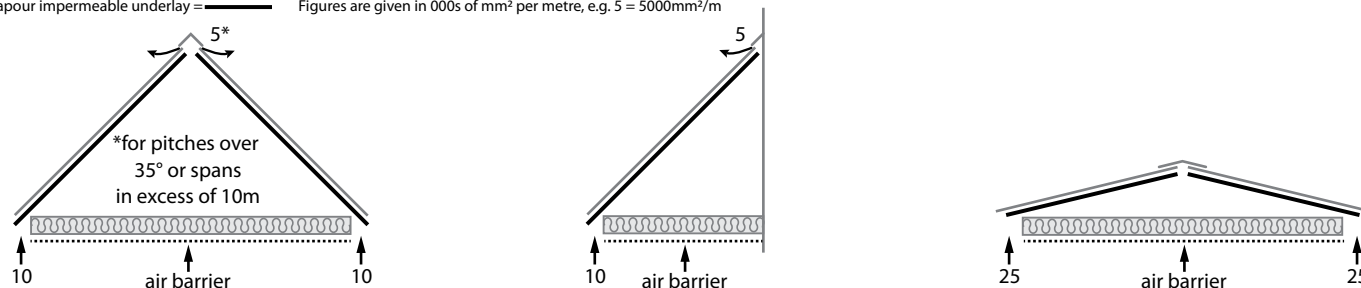


Warm Roof Applications

When installing TapcoSlate Classic and Aledora onto battens or directly onto OSB a vapour impermeable roof membrane/underlay should be used. Insulation should follow the line of rafters, with a 50mm deep void between the top of the insulation and the underside of the underlay/OSB. This void to be ventilated in accordance with BS5250. An air and vapour control barrier membrane to the warm side of the insulation must also be installed, we recommend the *Protect VC Foil Ultra* – low emissivity air and vapour control layer product.

Warm Roof: with small or no voids above sloping insulation using impermeable underlays (type HR)

Vapour impermeable underlay = ——— Figures are given in 000s of mm² per metre, e.g. 5 = 5000mm²/m

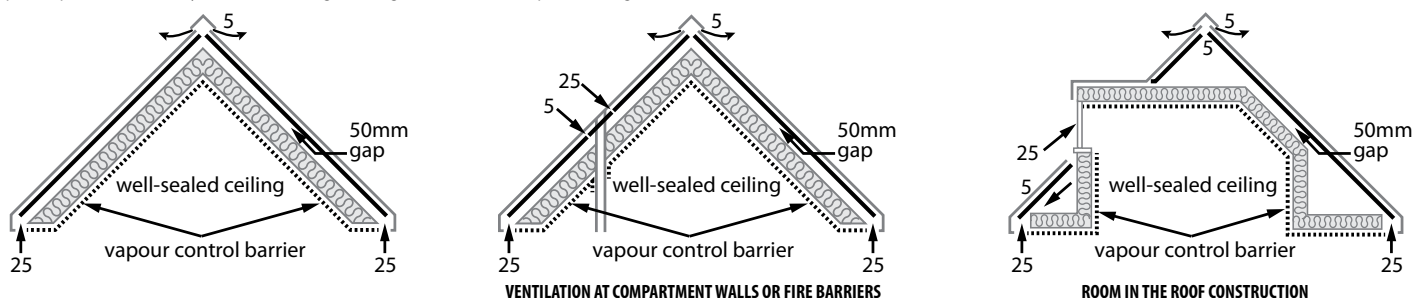

Please note that the preceding is purely manufacturers guidance and should not supersede local building authority recommendations.

– Installation Guidelines –

Spacing Between the Slates

0.25" (6mm) spacer tabs are provided on every Classic slate to aid in maintaining consistent spacing. The spacers will allow for any movement of the roof deck and expansion/contraction of the slate (although thermal expansion is highly unlikely in European climates). Aledora does not have mechanical spacers, the slates should be laid with a 0.5" (13mm) spacing in between.

Laying Out ½ Slates or Cut Slates

When beginning or finishing with a cut piece of slate, the cut edge should be installed inward. The manufactured edge should be installed to the outside edge of the roof. This is to maintain an acceptable roof appearance along the gable edge of the roof.

The centre mark of the slate can be used as a guide to cut ½-slates. This can also be used as a guide to keep courses straight and to assist in maintaining the proper Classic slate 0.25" (6mm) spacing or Aledora slate 0.5" (13mm) spacing when aligning with intermittent vertical chalk lines. **DO NOT install slates smaller than 3" (76mm).**


Preparation

Inspect all areas of the roof surface to be covered.


1. The surface area must be uniformly flat, smooth, sound, clean and free of irregularities.
2. Examine roof sheathing to verify that sheathing joints are supported by framing and blocking and/or metal clips.
3. Verify that substrate is sloped for drainage and completely anchored to sound framing. Any foreign particles shall be cleaned from interlocking areas to ensure proper seating and to prevent moisture intrusion and ice damming. Proper provisions must be made for flashings and roof penetrations.
4. Even though metal flashing and other specialty flashings may not be the responsibility of the roofing contractor, these items must be in place prior to the roof slate installation. Work by other trades which penetrate the roof plane must be completed.

Hip Roof Layout

1. Initial starting points may be from left side, right side or centre of the area to be installed. Mechanical 0.25" (6mm) spacer tabs are provided on every Classic slate. Aledora slates need to be physically spaced 0.5" (13mm) between every slate.
2. A full Classic slate should be cut into ¾ size, approximately 12" (305mm), to create an eaves or starter slate for the starter course and at the ridge if necessary. Aledora slate has a specialised starter tile that should be used.
3. One method of starting on a hip roof is to locate the centre of the roof area to be covered. From both ends, position starter pieces and snap a horizontal line from the tops of the starters between these two points. Next snap a vertical perpendicular line. This can be done easily by marking 3ft (0.91m) along the eve, then where 4ft (1.22m) and 5ft (1.52m) intersect will form a perpendicular line. As long as the ratio 3:4:5 stays the same this will hold true, for example, 21:28:35. More horizontal and vertical lines may be snapped to ensure the roof slates will stay true and plumb throughout installation. Begin by placing an eaves slate on the right and left side of the vertical line maintaining a 0.25" (6mm) or 0.5" (13mm) spacing, depending on slate type used, and continue to both ends.

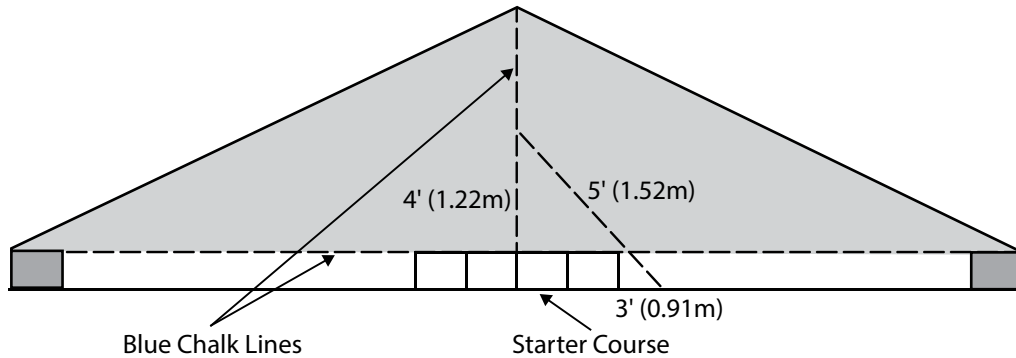


4. The eaves course should overhang a maximum of 2" (50mm) at the eave.
5. Begin the first course. With a full slate, align centre locator line of the slate directly over the vertical blue chalk line. Continue to both ends, maintaining the 0.25" (6mm) or 0.5" (13mm) spacing, depending on slate type used, between slates. (See diagram above.)

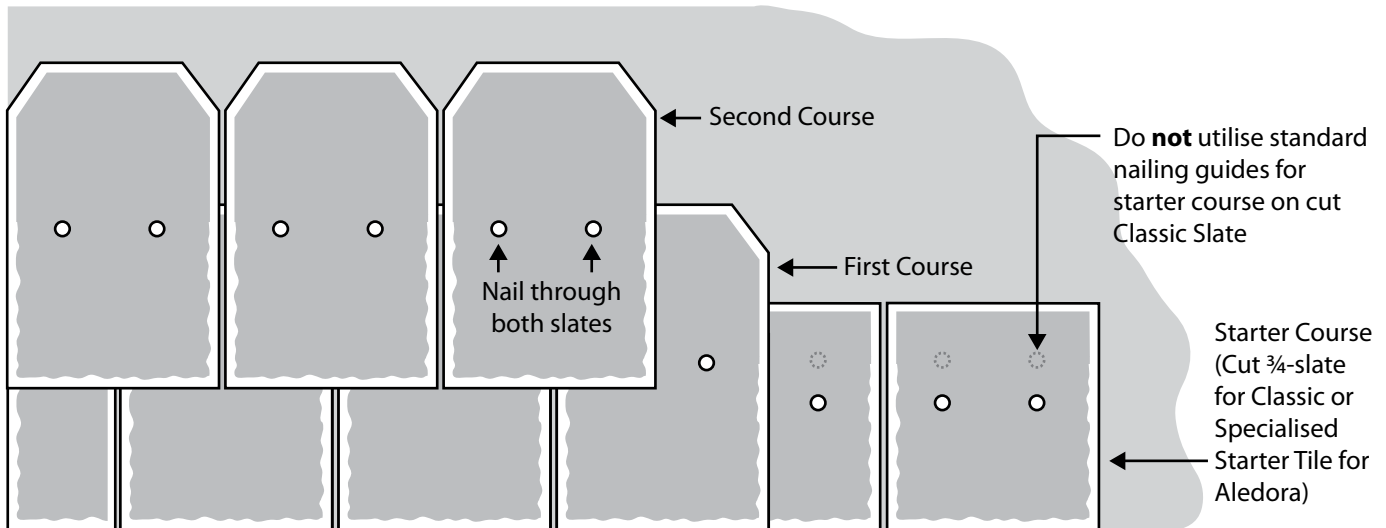

6. After installing the underlay or membrane and before installing the TapcoSlate, clean the surface of debris and dirt. Foreign particles shall be cleaned and removed from interlocking areas to ensure proper seating of the product and to prevent moisture intrusion and ice damming. All roof penetrations shall be properly flashed and secured into position with deck and underlay or membrane fasteners properly driven and not protruding prior to installing TapcoSlate roofing products.

- a) The eaves or starter slates will be used as the first row at the eave of the roof.
- c) To create the offset from course-to-course, use the centre mark provided on each slate and cut the slate lengthwise. This ensures that the nail holes are covered with the next course of slates and no through-joints are exposed to the deck.
- d) Strike the chalk lines horizontally, at the exposure level desired, to ensure that the slates are installed straight and uniform. Vertical chalk lines will help maintain consistency in the key-ways.
- e) Spacer tabs are provided on each Classic slate to ensure consistent spacing between slates. Aledora slates need to be spaced at 0.5" (13mm).
- f) There shall be no through-joints from the roof surface to the underlay or membrane.

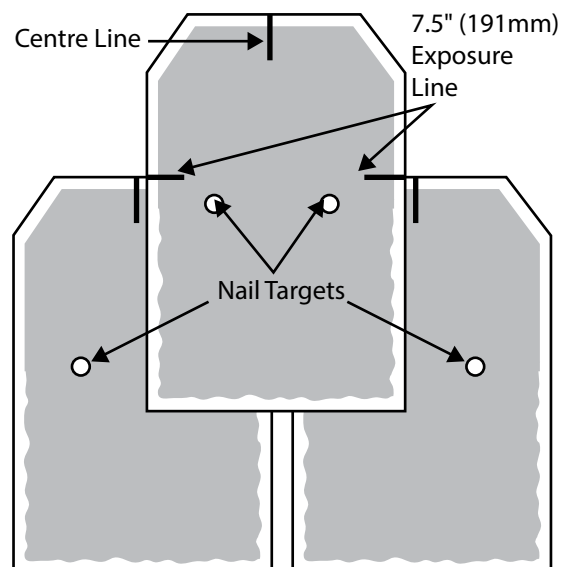


7. Each slate shall be fastened with a minimum of two galvanised, stainless steel or outdoor roofing fasteners (clout nails or screws).
 - a) It is required that the fasteners be placed within the two nailing targets on each slate. Flatten slate then fasten. Fastener must penetrate decking at least 23/32" (18mm).
 - b) Caution should be taken where the underside of the roof decking is exposed to view, such as in an overhanging eave, where the nails or screws should be long enough to penetrate the roof decking but not so long that they may be driven through the decking.
8. Continue the second course with a full standard slate set back from the course below, the finished edge facing the gable edge. Align the full roof slate between the centreline locators from the lower course. Next, adjust the roof slate up or down to align the desired exposure lines with the top edge of the lower course. (See diagram on page 8, and roof pitch table information on page 5 for which exposure line to use.)

Fully Boarded Roof

The following instructions are just a guide, and standard roofing procedures should be applied. Apart from the lightness and ease-of-use that TapcoSlate affords, there is very little difference between it and standard slate in fully-boarded roof application. The most cost-effective way to fix TapcoSlate to OSB is to first use a vapour impermeable roof membrane/underlay, along with, we recommend, either an air barrier on the warm side of the insulation for Cold Roof applications or an air and vapour control barrier membrane to the warm side of the insulation for Warm Roof applications (see the "Roofing Membrane/Underlay" section on page 6 for more details). Alternatively, a vapour permeable roof membrane/underlay can be used along with the application of counter battens on top of the membrane. The same vapour/air barriers are also recommended for Cold/Warm Roof applications using this counter batten method and a vapour permeable roof membrane/underlay.


The Different Roof Structures Using Vapour Impermeable and Vapour Permeable Membrane

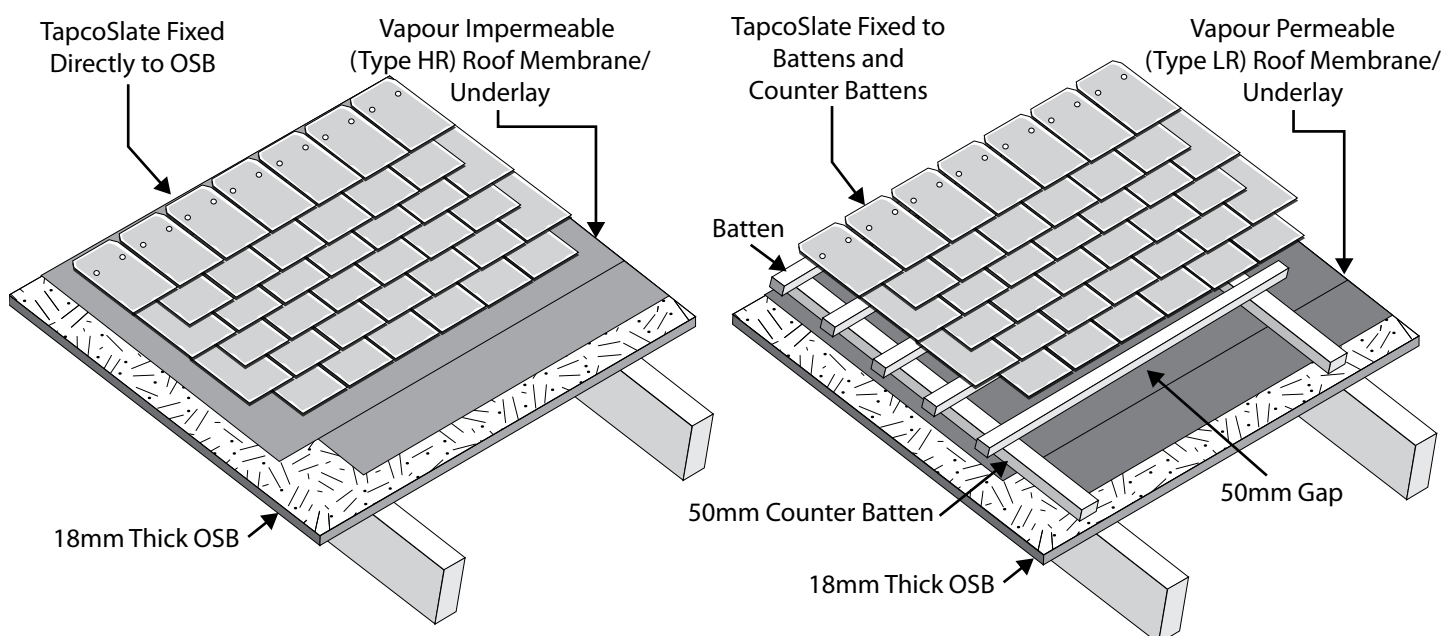

Being a laminar product, TapcoSlate repels water and does not absorb it, this means that water penetration is non-existent from the roof surface itself. However, vapour/air barriers minimise the risk of moisture accumulating on the underside of the slates/OSB as the most common source of moisture is generated inside the property itself. Using a vapour impermeable roof membrane/underlay reduces this risk even further.

The OSB sheeting should be a minimum 18mm thickness.

Layout of a Fully Boarded Roof Using Vapour Impermeable Membrane/Underlay

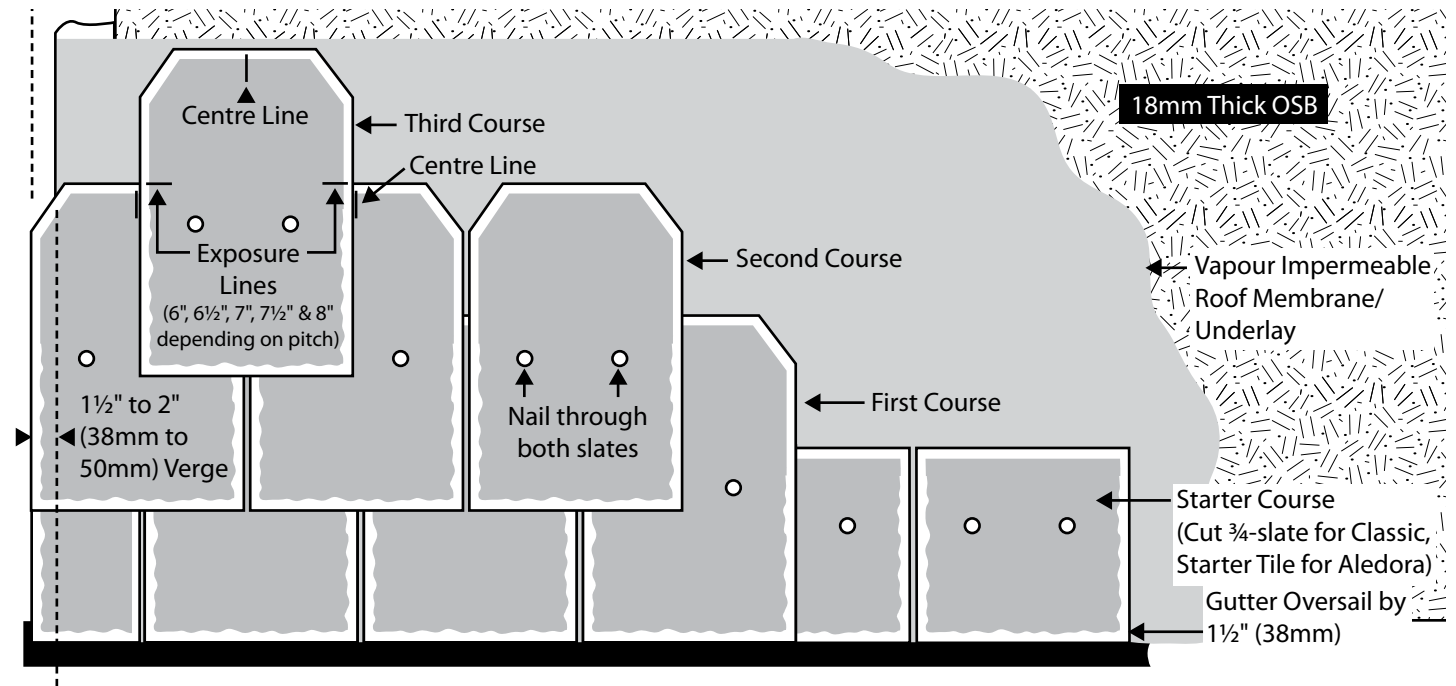


As can be seen by the above diagram, TapcoSlates can be nailed or screwed directly onto the OSB when using a vapour impermeable roof membrane/underlay. This is the most cost-effective method of fixing TapcoSlate onto a fully-boarded roof.


Felt and Batten Roof

The following instructions are just a guide, and standard roofing procedures should be applied. Apart from the lightness and ease-of-use that TapcoSlate affords, there is very little difference between it and standard slate in batten roof application. The most cost-effective way to fix TapcoSlate to battens is to first use a vapour impermeable roof membrane/underlay, along with, we recommend, an air and vapour control barrier membrane to the warm side of the insulation for Warm Roof applications (see the "Roofing Membrane/Underlay" section on page 6 for more details). No other barrier membrane is needed when using the vapour impermeable membrane in a Cold Roof situation. Alternatively, a vapour permeable roof membrane/underlay can be used along with the application of counter battens on top of the membrane. The same air and vapour control barrier membrane is also recommended for Warm Roof applications using this counter batten method and a vapour permeable roof membrane/underlay.

The Different Roof Structures Using Vapour Impermeable and Vapour Permeable Membrane

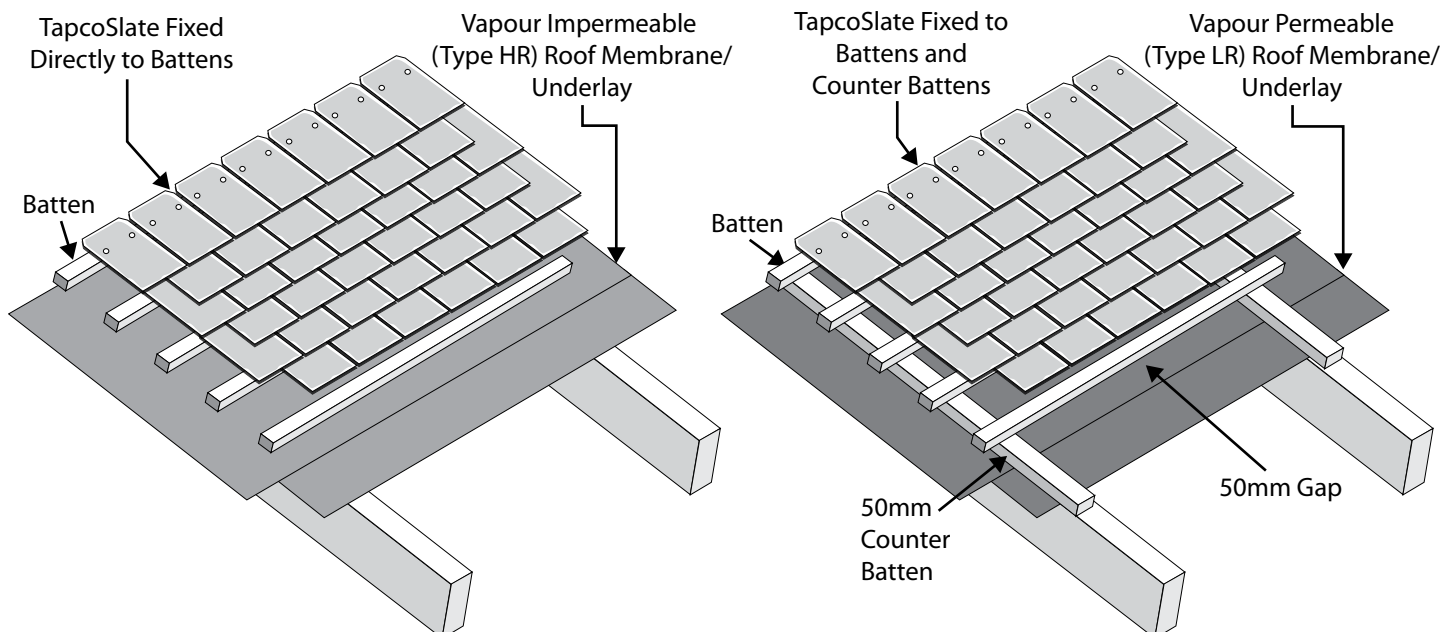


For felt and batten roofs, start by fixing battens – minimum size of 2" (50mm) by 1" (25mm) treated battens – over underlay to required gauge. The first course and eaves (starter) course should oversail the fascia by at least 1½" (38mm), so the first course batten should be placed approximately 7½" (190mm) centrally from the start of the roof (see diagram). A second batten should then be placed directly under the first course batten to accommodate the eaves or starter course (made from a cut ¾-slate for Classic or the specialised starter tile for Aledora).

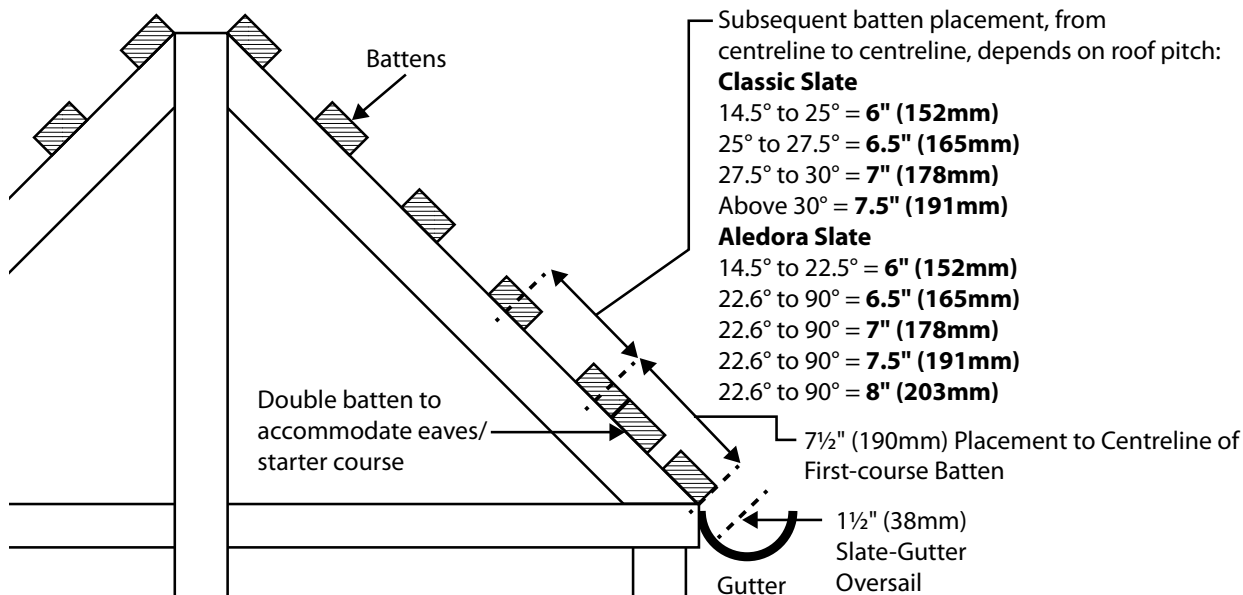


The distance from the first course batten to the second course batten, and beyond, is dependent on the roof pitch and subsequent exposure gauge settings. Please see the diagram of the TapcoSlate on page 4, and the Pitch, Gauge, and Coverage table on page 5. The diagram above also shows an approximate guide to subsequent batten placement.

The position of the top battens should then be established to ensure that the top course of slates will be covered by the ridge cap.

Fix eaves, or starter course using a ¾-cut slate for Classic Slate which can be easily cut to size from a full slate using a fine-toothed hand/circular saw or a sharp utility blade. Aledora has its own Starter Tile. As stated earlier, the first course and eaves (starter) course should oversail the fascia by at least 1½" (38mm). This ensures water disperses into the centre of the gutter. This must be taken into account when calculating the gauge and positioning the battens.

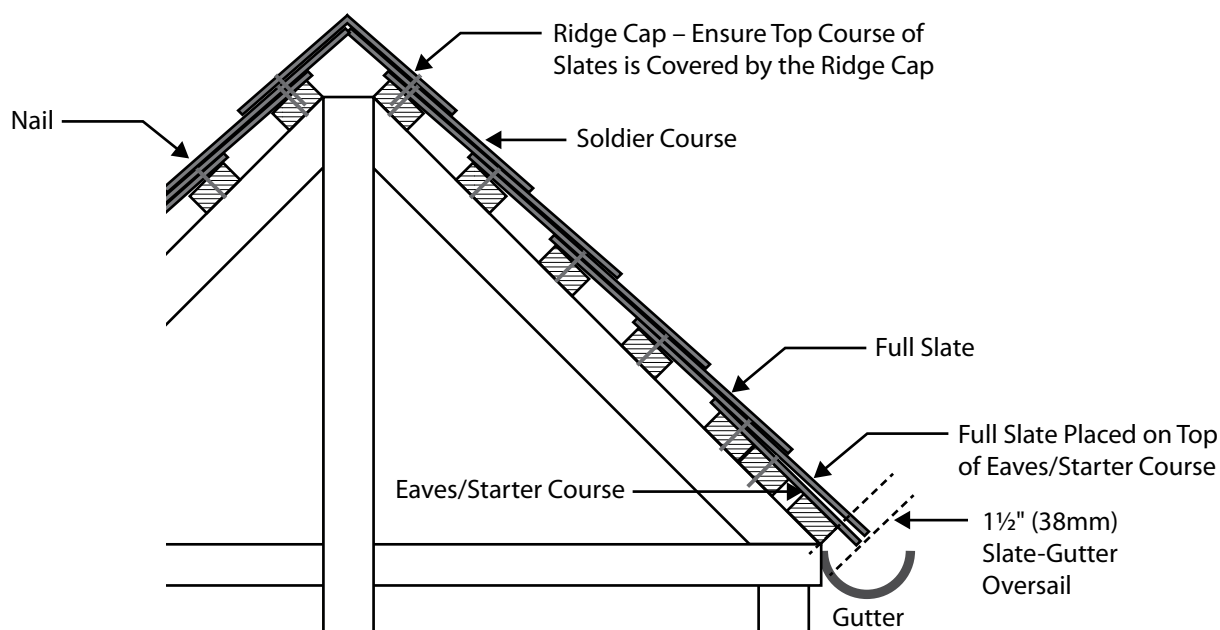


The required gauge and number of courses can then be calculated. The first course should sit on top of an eaves course. Double batten as shown in the diagram to accommodate the eaves slates.

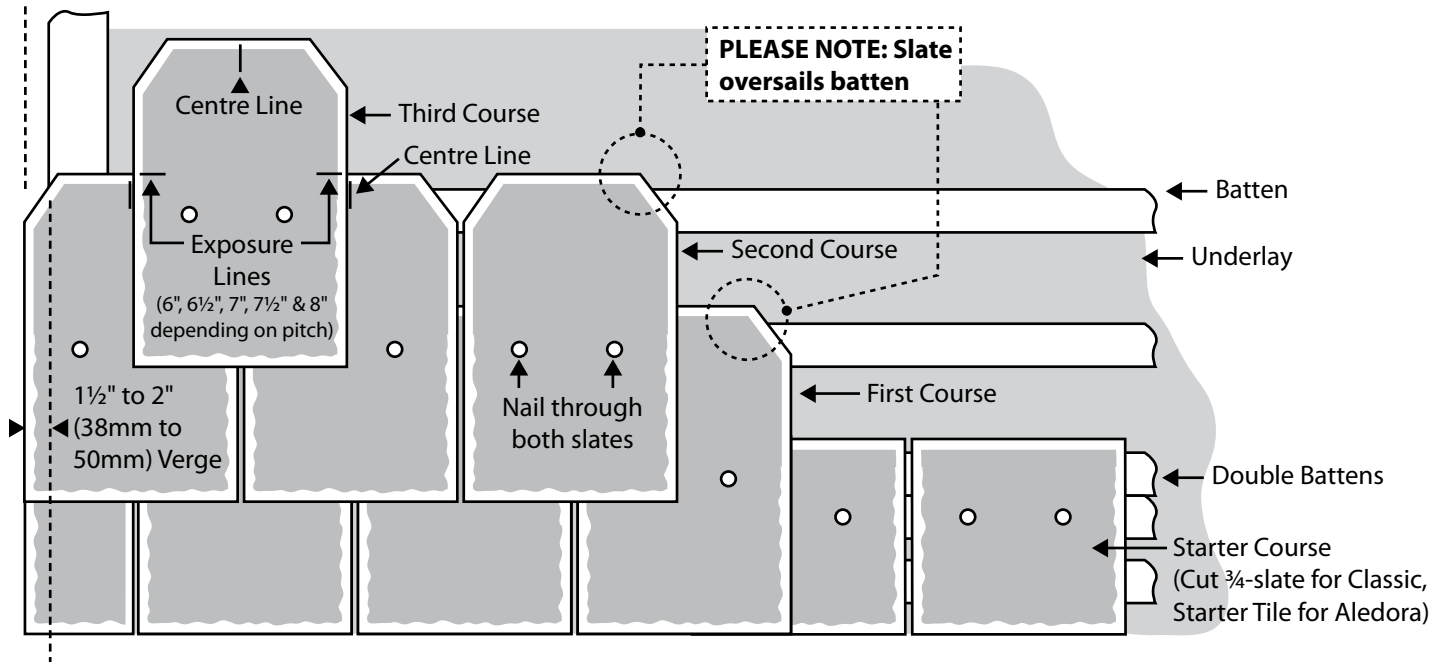

Verge slates should oversail the brickwork/barge board by 1 1/2" (38mm), and may need to be cut to size at either end.

Lay the first course of full slates over the eaves course and fix to the second batten. Ensure that the first course and eaves course are laid "broken bond" so that the joints do not line up and the weatherproofing integrity is maintained.


Lay subsequent courses "broken bond" as illustrated. It will be necessary to cut to start and finish every other course.

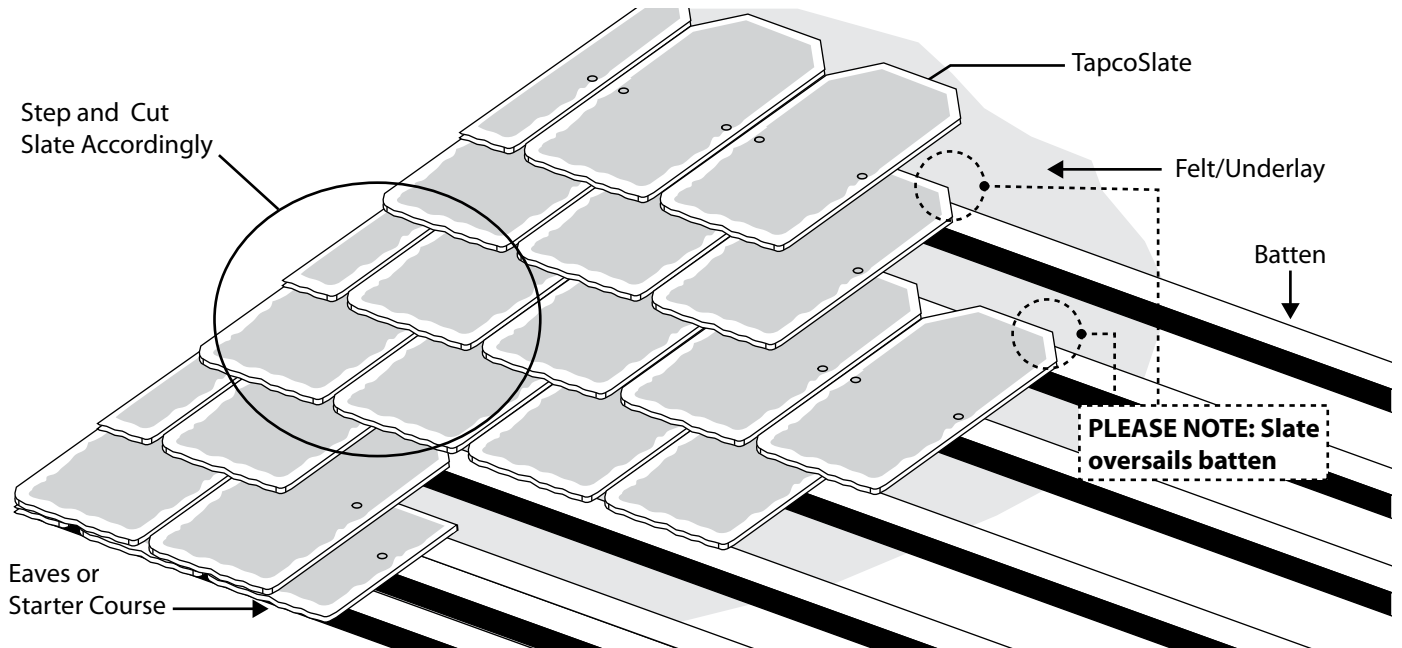


Fixing TapcoSlate Ridge/Hip Caps

Just like our slate tiles, our ridge and hip caps have an exposure guide embossed onto them. Caps on the ridge must be fitted at a maximum of 7.5" exposure, we recommend the minimum exposure of 6" for high-wind/driving rain exposed areas. Caps on the hips **must** be fitted at a 6" exposure. All caps should be nailed/screwed through the one below, similar to the tile layout, and must be secured in the indicated spaces provided using two fixings – once completed this gives four fixing points on all but the last end cap. Do not over-expose the caps. The minimum number of caps per linear meter is 5.5 (at a 7.5" exposure). The maximum number of caps per linear meter is 6 (at a 6" exposure).


Maximum Classic Ridge Cap Exposure (7.5")

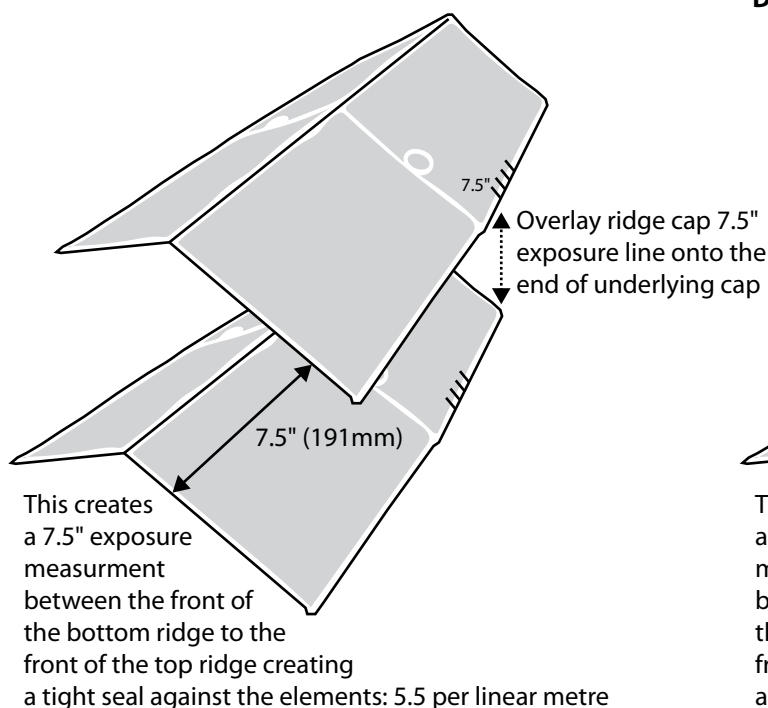

Minimum Classic Ridge Cap Exposure and Definitive Classic Hip Cap Exposure (6")

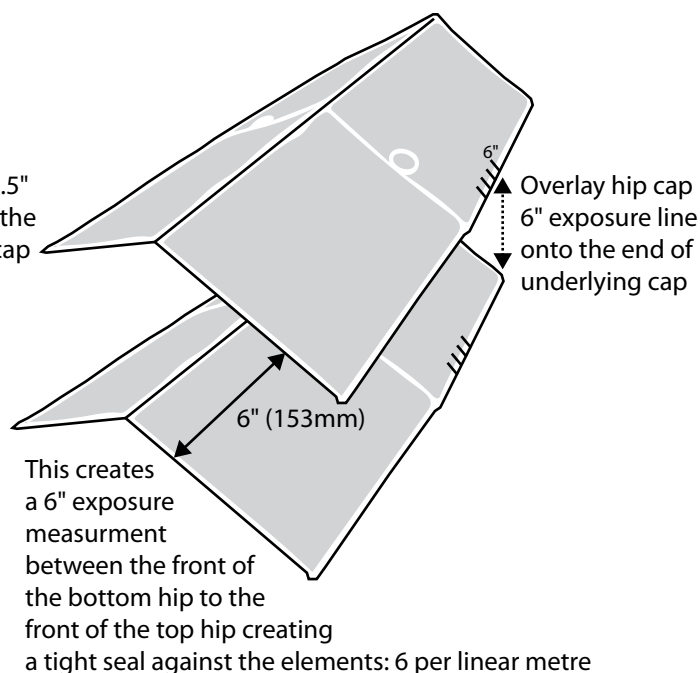


Ridge and Hip Cap Fixing

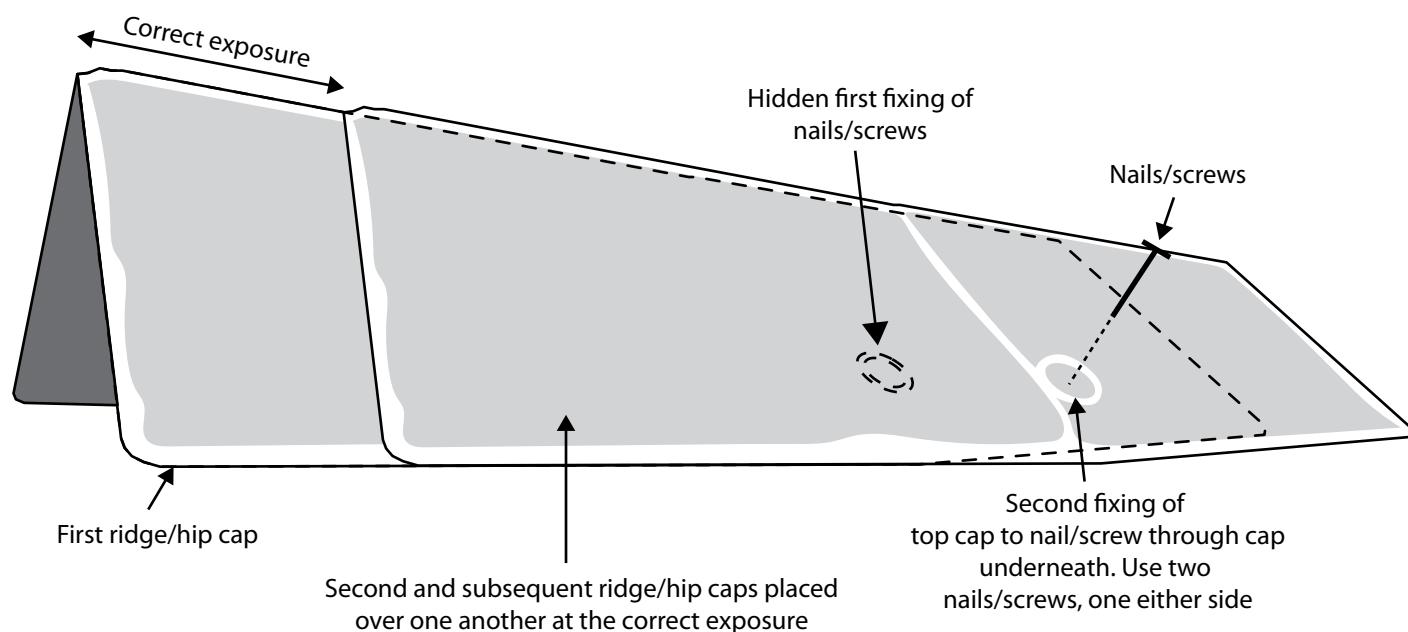

Ridge/Hip Cap Finishing


Tapco Roofing Products produces pre-formed TapcoSlate Classic* Angled Ridge-to-Hip Junctions and TapcoSlate Classic Ridge 90° End Caps for the following roof pitches:

Classic Angled Ridge-to-Hip Junction

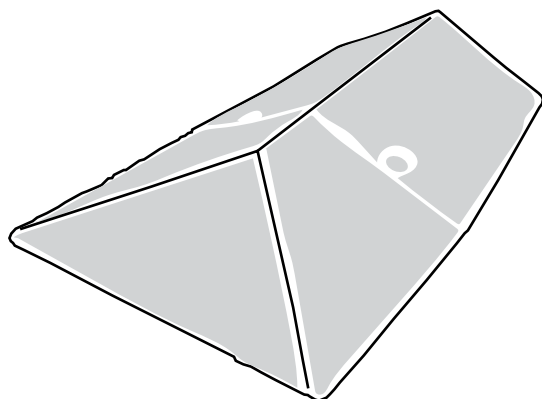

Available in:
14 to 17°
18 to 23°
24 to 30°
Roof Pitches

Classic Ridge 90° End Cap

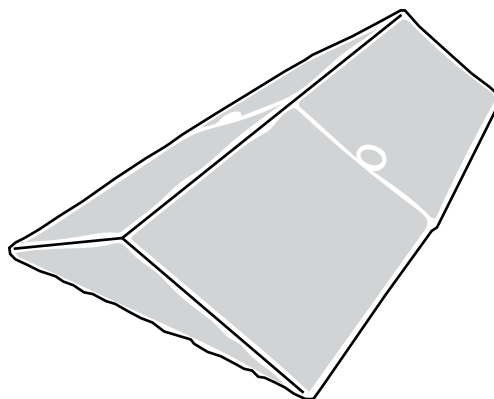


Available in:
25 to 29°
30 to 34°
35 to 40°
Roof Pitches


*Note: not yet available for TapcoSlate Aledora.

The TapcoSlate Classic Angled Ridge-to-Hip Junctions and TapcoSlate Classic Ridge 90° End Caps are fixed in place the same way as standard hip and ridge caps, two 3" (76mm) galvanised or stainless steel clout nails or outdoor Phillips Bugle screws. Care should be taken to store and transport these units safely. If a unit is to be used at both ends, the last unit can be cut in half and sculpted using a sharp craft knife to mimic the notched look of a cut slate: nails and screws in the top surface can be disguised by painting the heads in bitumen, or alternatively a colour-matched screw cap can be used.

TapcoSlate Classic Angled Ridge-to-Hip Junction (Also 3-Way for Edwardian Conservatories)

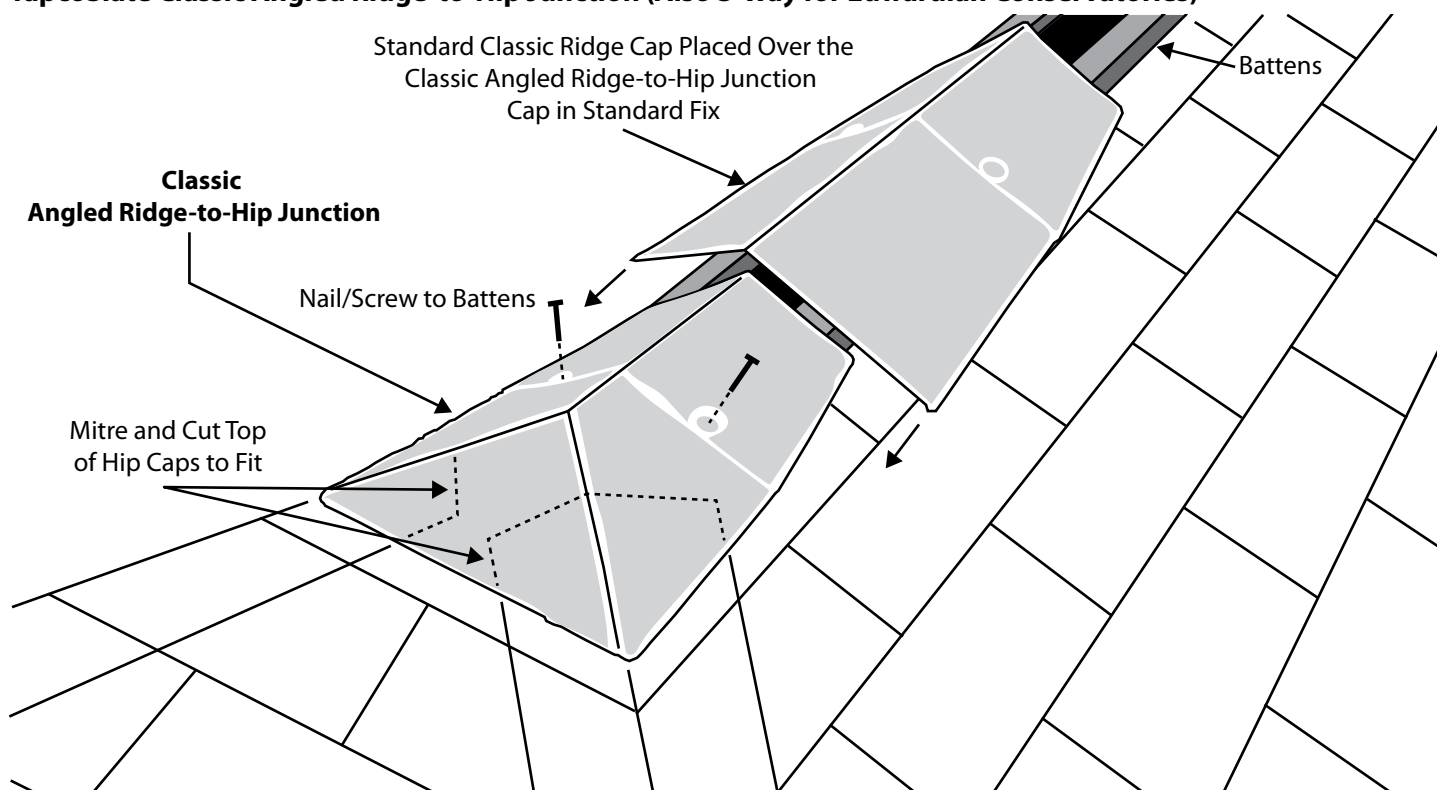


TapcoSlate Classic Ridge 90° End Cap

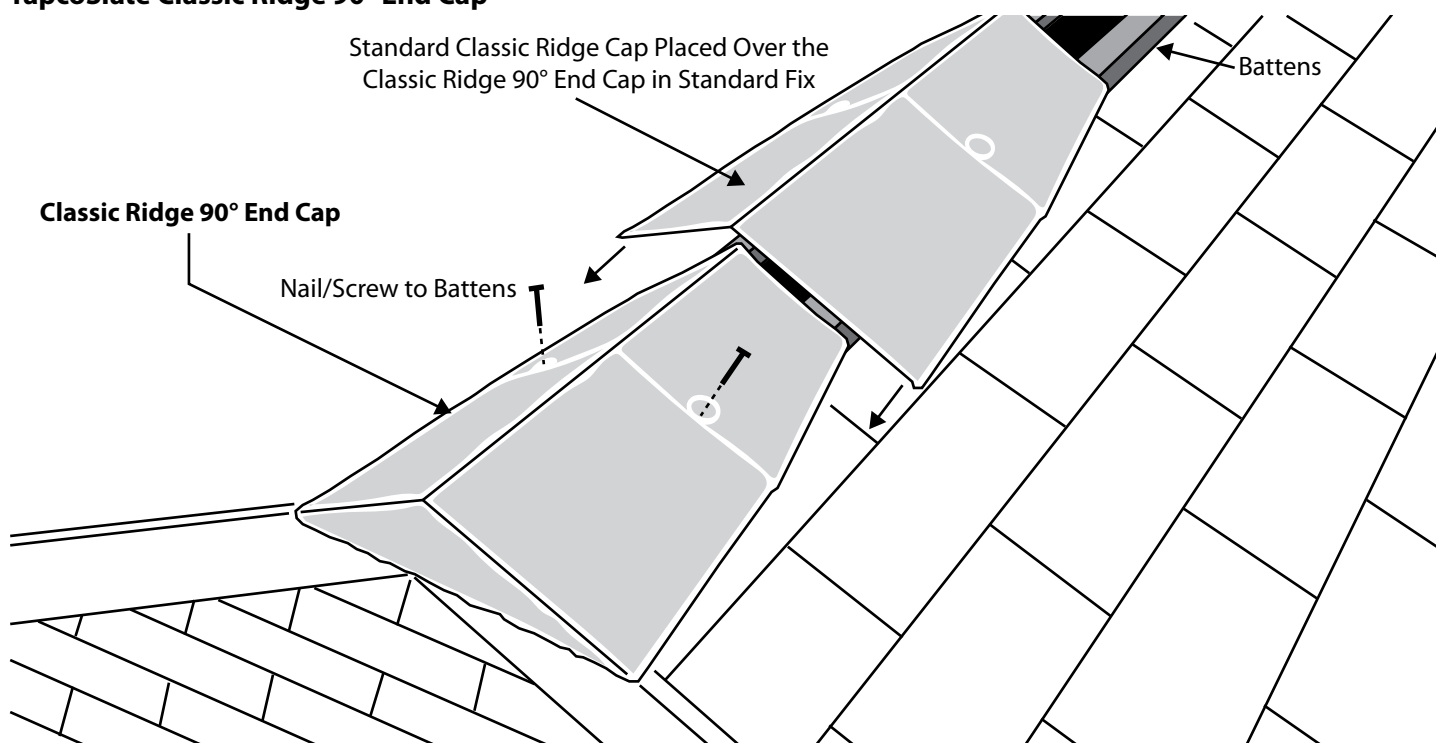

Alternate Ridge/Hip Cap Finishing


If you cannot use the pre-formed accessories mentioned due to pitch fitment or if you prefer to make your own the following is a guide on how to make similar finishes. Tapco Ridge Caps can be finished by cutting a standard TapcoSlate at the end of the ridge into a triangle or diamond shape of the right size to cover the end gap. The resulting material should then be nailed in place into the end-battens and/or truss. The material can be sealed by using a good quality silicon or bitumen sealant. Alternatively, the material can be joined to the Ridge Cap by using a strong epoxy glue (adhering to the manufacturers instructions). Nail heads should be disguised with coloured sealant/paint.

Standard Ridge Cap End Piece

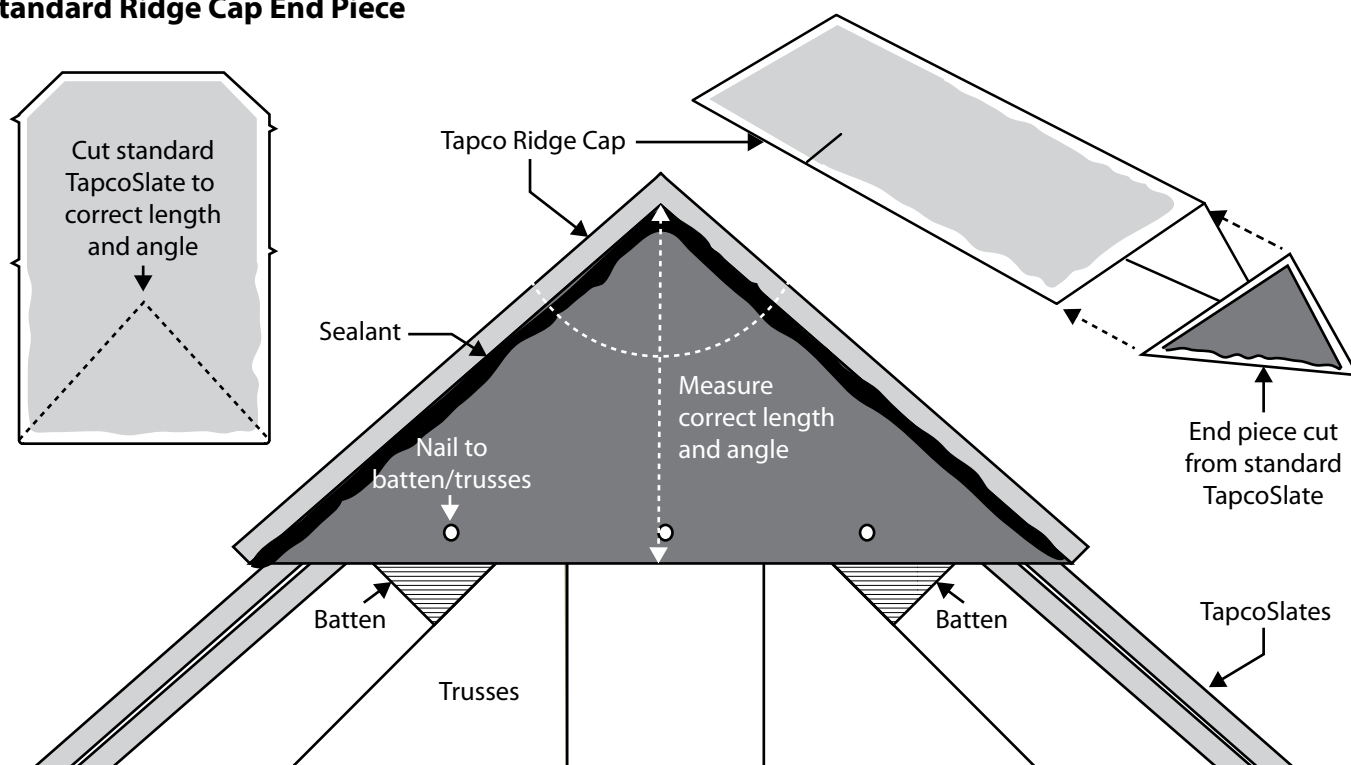


The same principle for finishing Tapco Ridge Caps can be applied to an angular finish roof by measuring the roof angle and cutting a Tapco Ridge Cap to suit. A similar measurement can be applied to a standard TapcoSlate to cut the right size and angle to cover the end hole in the Ridge Cap. Note that with an angular finish the material may have to be joined by using a strong epoxy glue (adhering to the manufacturer's instructions), unless there is enough batten/truss material to nail to.

Angled Ridge Cap End Piece – Ridge to Hip Joint (& Edwardian Conservatory)

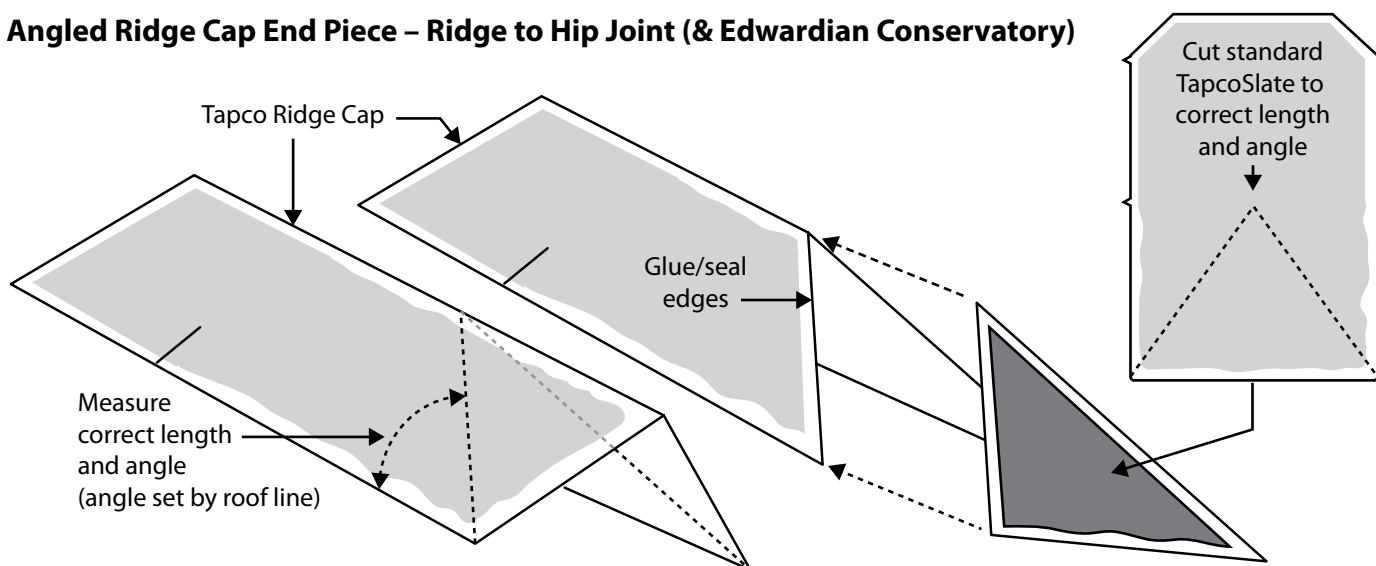

The 5-way ridge to hip intersection can be formed by setting chalk lines from the centre point of the three, flat triangular shapes created to the point (apex) of the roof. By placing TapcoSlate ridge caps under these lines and then striking the chalk line onto the caps, the Hip Caps can be cut to form the shapes similar to the above diagram. The Ridge Caps should be set as normal (no cutting necessary) and a cut and formed piece of TapcoSlate can be glued in place to fill the front edge. Please note, it is recommended to use a lead saddle at the ridge/hip joint to add another layer of weatherproofing (see page 17).

5-way Ridge to Hip Joint (Victorian Conservatory)

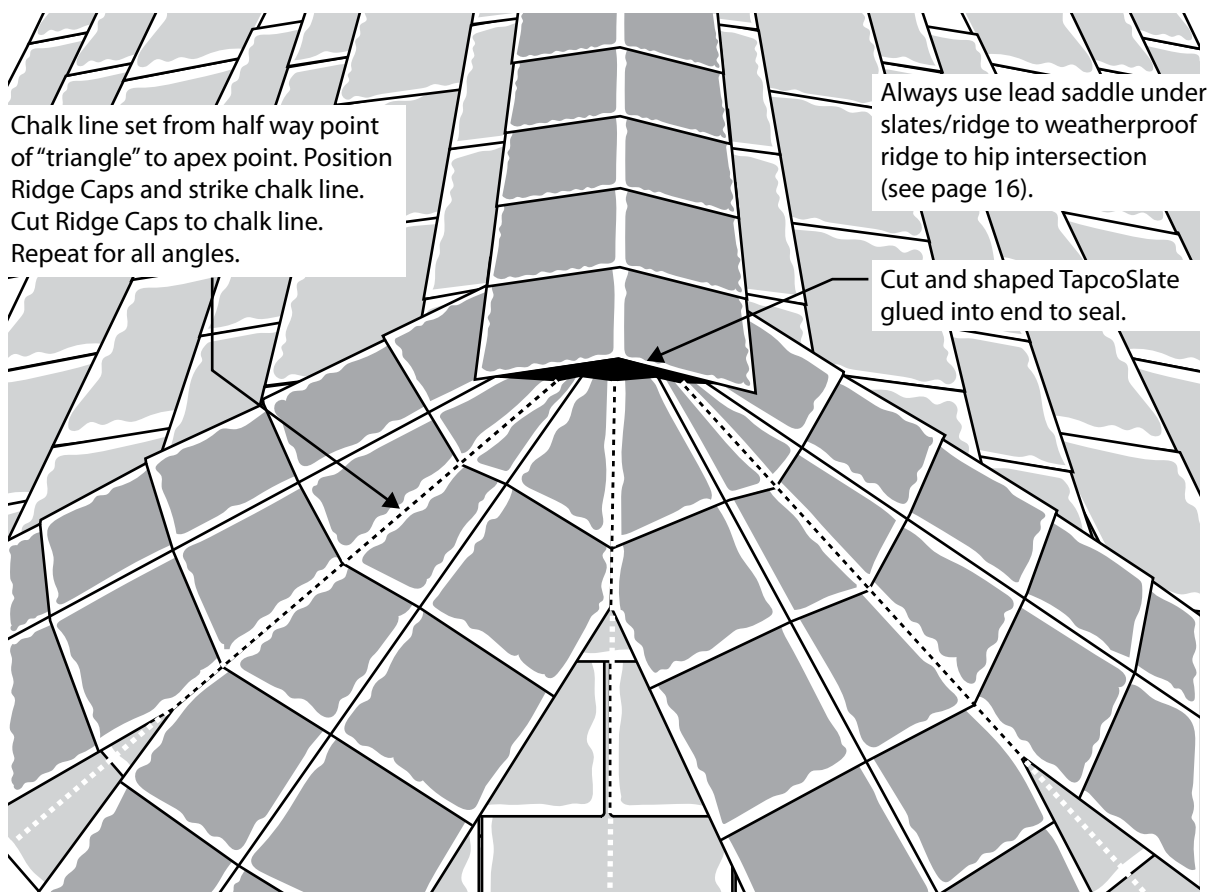


Weatherproofing the Ridge-to-Hip Intersection

When making your own ridge to hip intersections and/or ridge end caps it will be necessary to weatherproof this intersection (not needed when using TapcoSlate pre-formed accessories). A lead saddle should be fitted to cover the intersection between the ridge tile and the mitred hip tiles. TapcoSlate hip tiles cut easily without splintering or cracking to effect a tidy mitred joint.

This principal can be utilised for any sized or shaped intersection.

Lead Saddle Used to Weatherproof Ridge-to-Hip Intersection

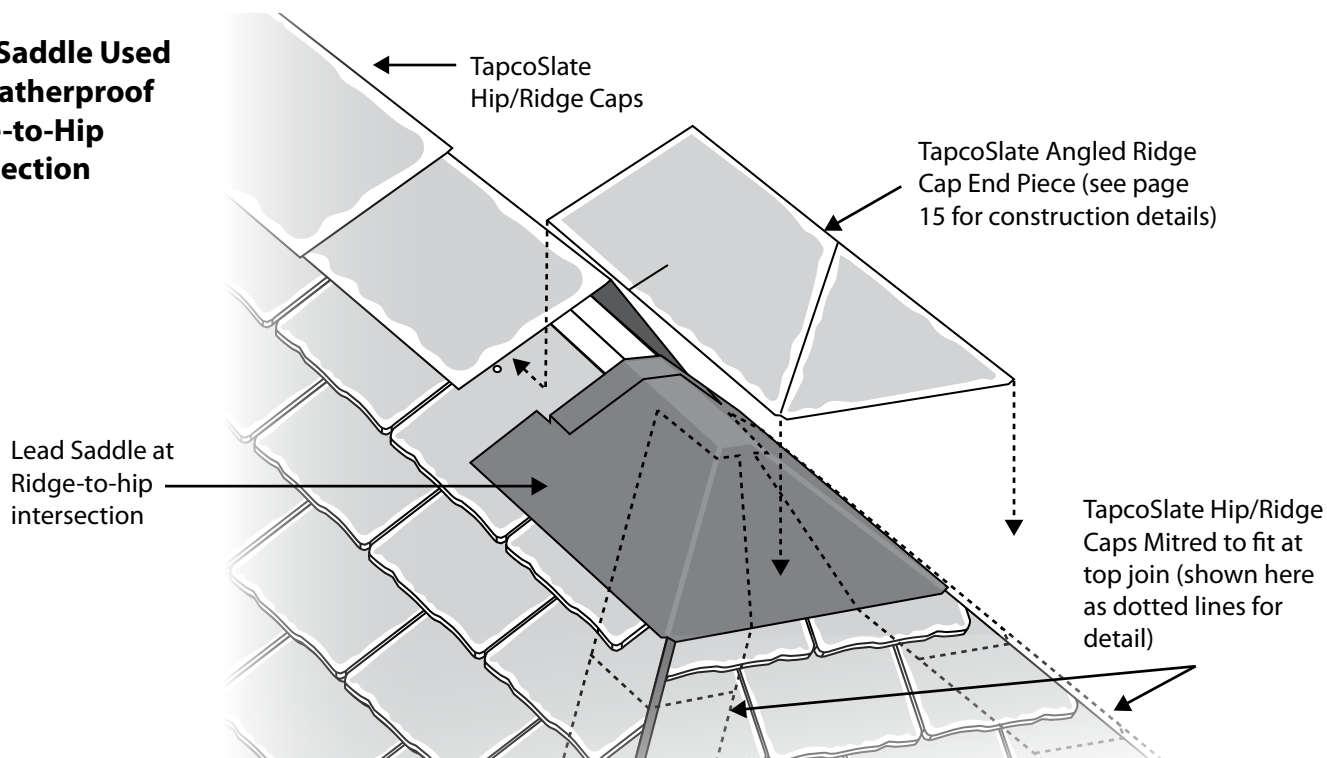


Valleys

Closed Valley Design

Closed valleys are formed by laying slates tight to the valley line and placing valley pieces under the slates. The length of the slate and the slope of the adjoining roof section determine the size of the valley. Valley material should extend 2" (51mm) above the top of the slate course that it will be applied to so that it may be fastened directly to the roof deck. Each valley piece should lap the piece below by at least 3" (76mm) and set in back of the butt edge of the slate above in order to be concealed. Each valley piece should be wide enough to extend 7" (178mm) from the centre of the valley to the roof surface. With a closed valley design, cut the slates in a straight line to fit no closer than 3/8" (10mm) against slate of adjoining roof slope.




Closed Valley Design

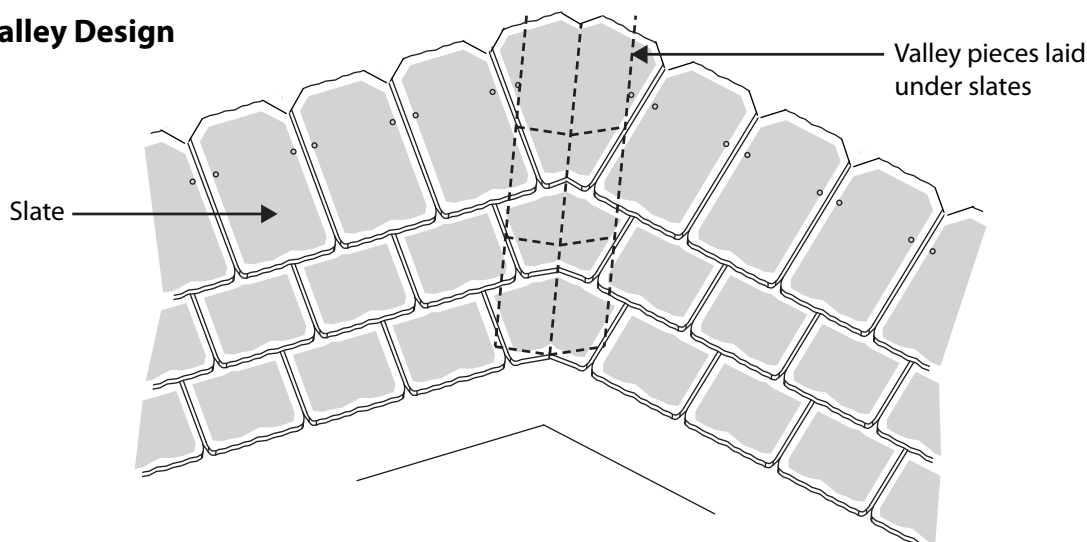

Open Valley Design

1. Install minimum 18" (457mm) wide "W" valley or "I" seam valley.
2. Fasten the valley every 2' (0.6m) using metal cleats.
3. Slate over valley by covering flashing by a minimum of 4" (102mm). Make sure not to drive fasteners from slate into the valley flashing.

Open Valley Design

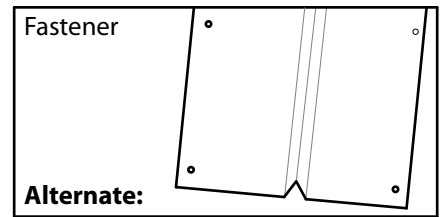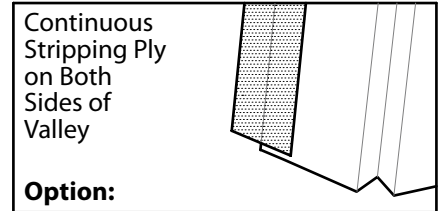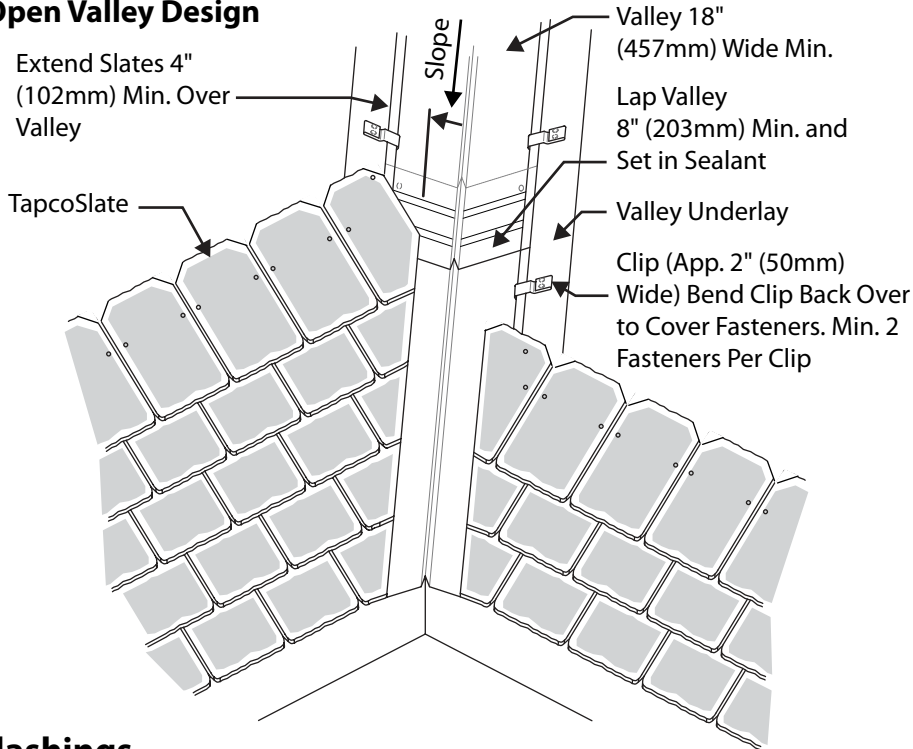

Flashings


Flashings should be used around all roof penetrations such as walls, chimneys, dormers, parapets, vent pipes, skylights, etc.

NOTE: When dissimilar metals are placed in contact with one another, galvanic corrosion will result which can cause electropositive metals to deteriorate. One way this can be avoided is by placing strips of sheet lead between the two metals. **When using lead insure that a coat of patination oil is applied.** Tapco does not warranty metal components and accessories.

Apron (Roof to Wall) Flashing

Apron flashing is used when a roof terminates to a wall causing a course to be cut and face nailed. It is installed over the slates and behind siding or counter/cap flashing or dressed into brickwork/stonework, etc.


Apron Flashing

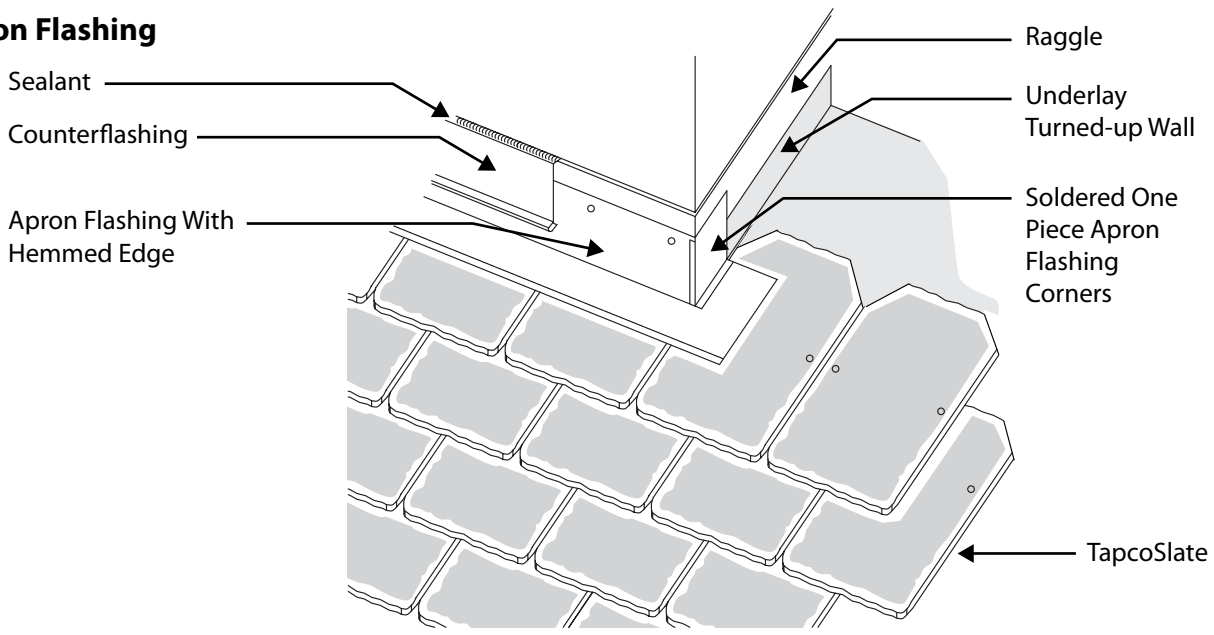

Step Flashings

Step flashings are used over or under the roof coverings and are turned up on the vertical surface. Step flashings should extend under the uppermost row of the roof slate the full depth of the roof slate or at least 4" (102mm) over the roof slate immediately below the flashing. The vertical leg of the flashing should be turned up a minimum of 4" (102mm) and extend 4" (102mm) on the roof slate with a $\frac{3}{4}$ " (19mm) hem. Flashings should have a minimum length of 9" (229mm) and must overlap a minimum of 2" (51mm).


Step Flashing

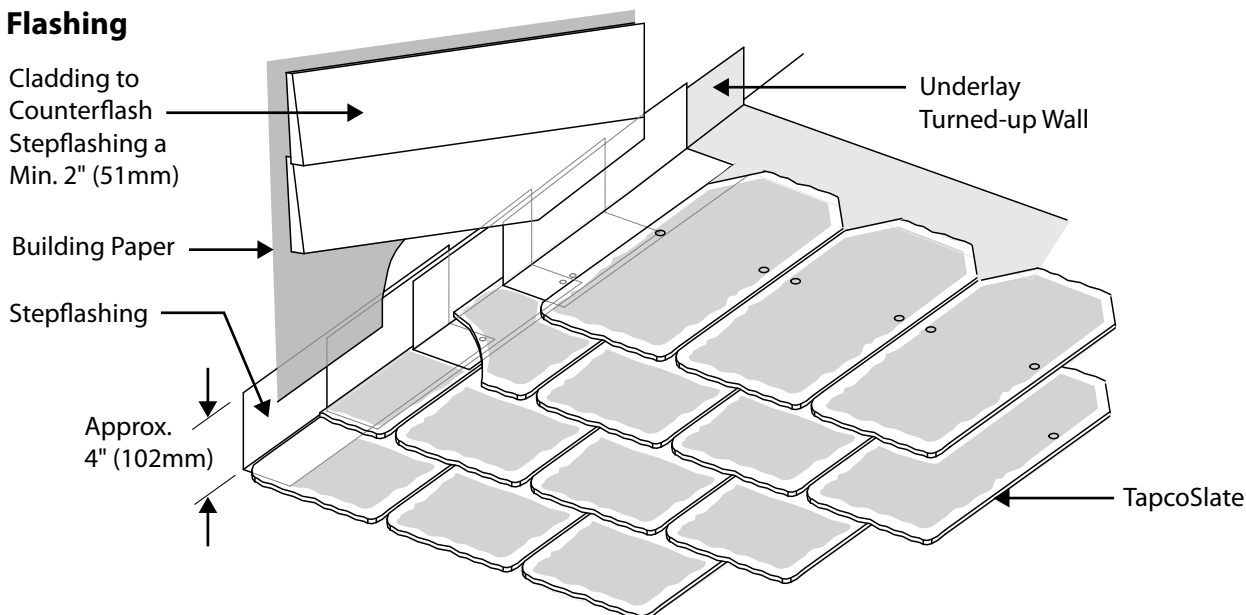

Counter Flashing

1. Cut a minimum 1" (25mm) deep reglet into the masonry material.
2. Custom bend the counter flashing to fit into the reglet.
3. Start by installing lowest piece first and work upwards for proper water runoff.
4. Fasten the counter using either expandable anchors or masonry screws.


Counter Flashing

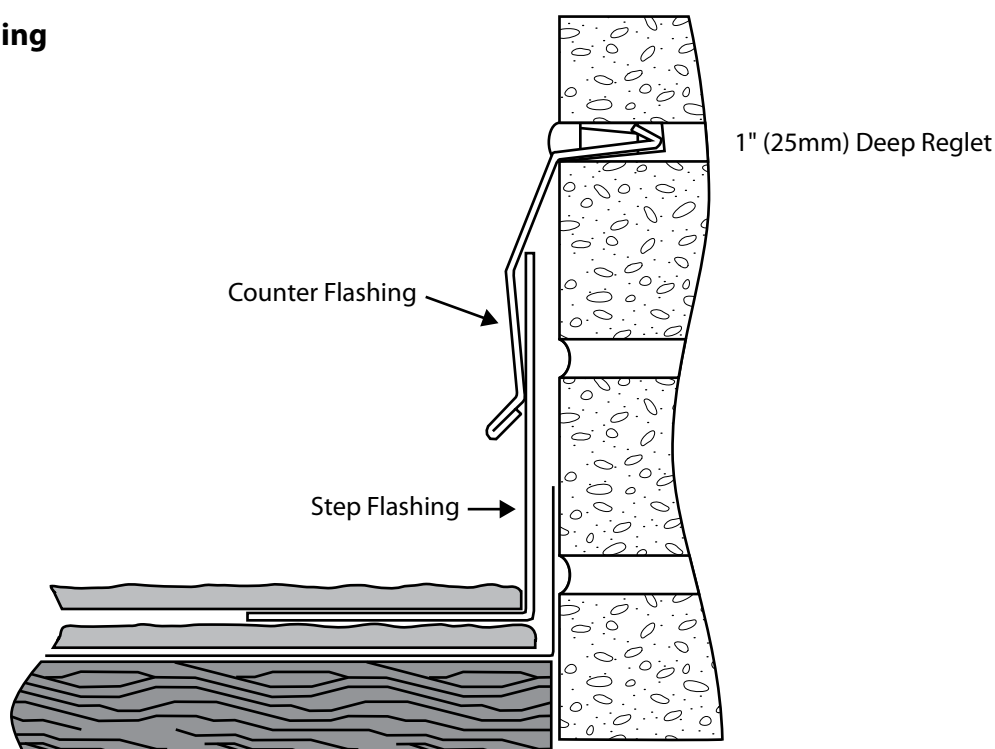

Vent Flashings


Normal type of roof vents or flashings can be used. Extended-life materials should always be used.

Soil Stack

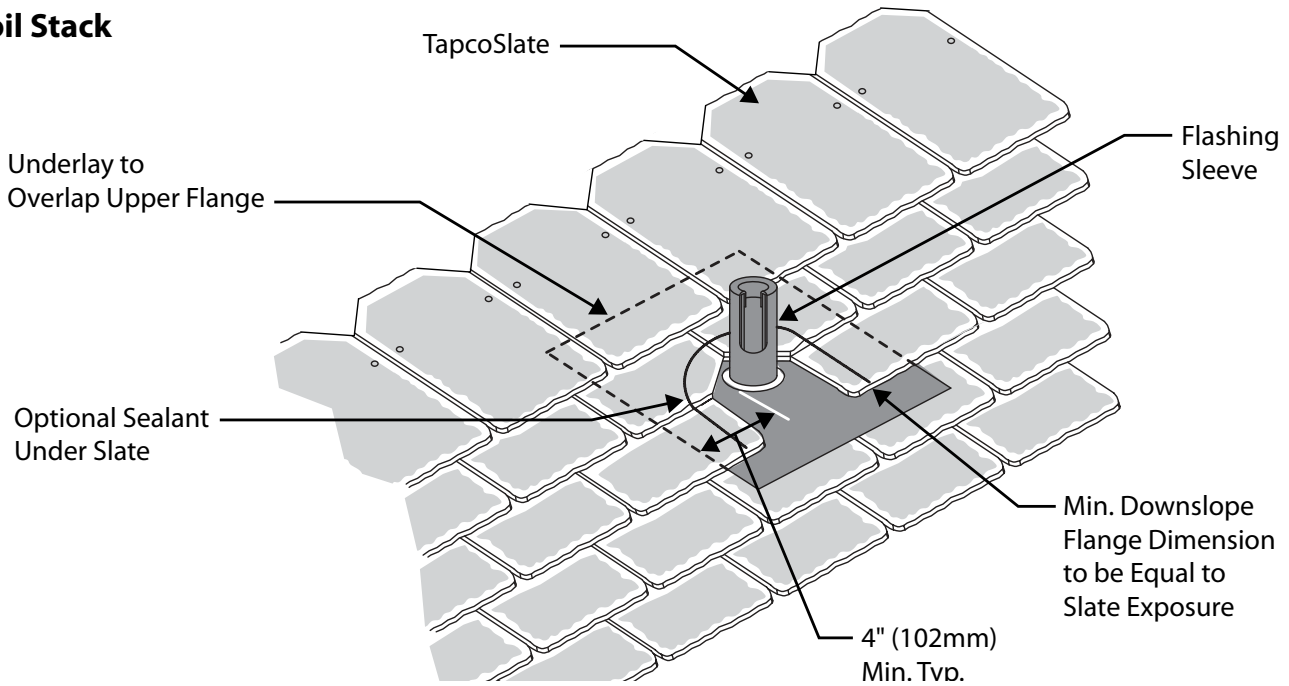

Pitch changes


TapcoSlates can be installed onto rolling roofs with a gradual pitch change. Some roof designs, however, have drastic pitch changes where the use of flashing is necessary.

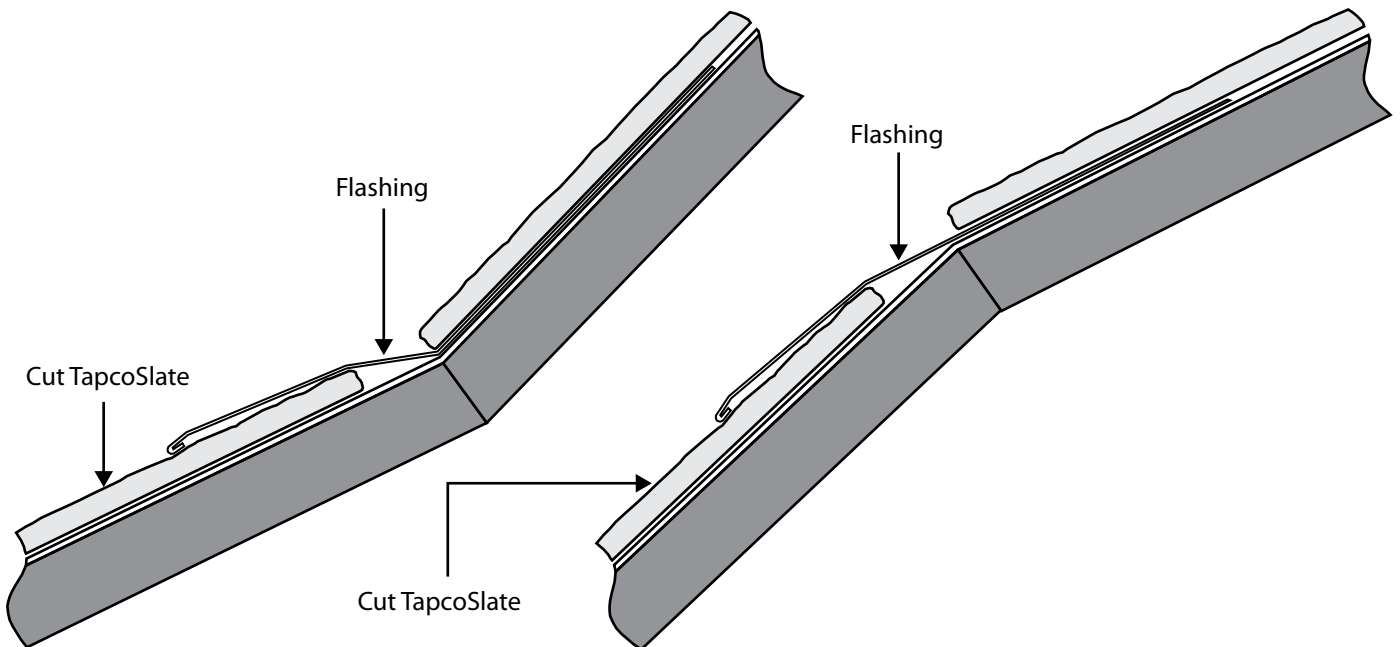


Chimney Saddles

With chimneys more than 2' (0.6m) wide it is recommended that a saddle be installed to divert water from the back of the chimney. With chimneys less than 2' (0.6m) may only require a simple pan flashing.

Pan Flashing View 1

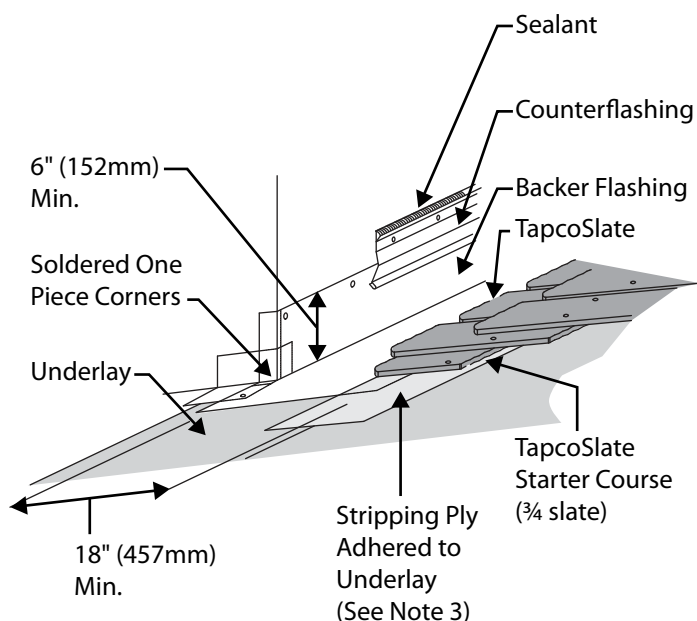

Pan Flashing View 2

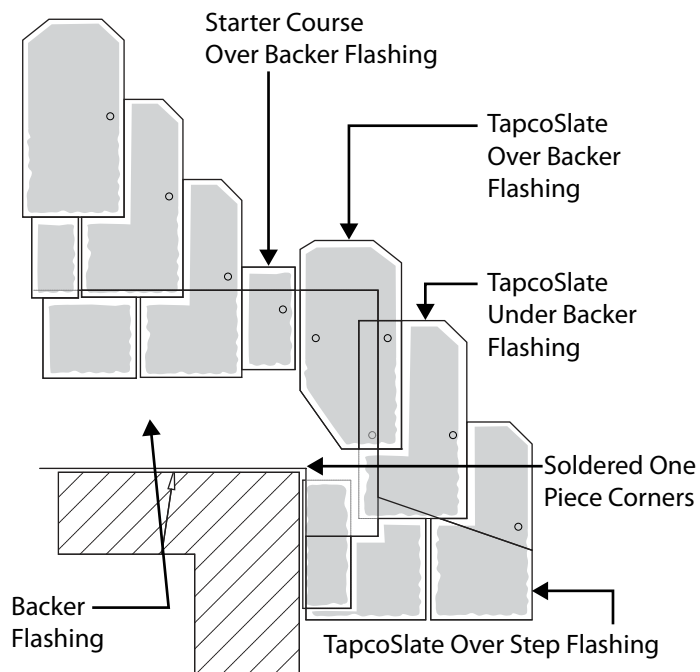


Hip & Ridge Detail on a Boarded Roof

When pre-formed hip & ridge slates are used, place nail at fastener guide targets. Fasten hip slates with 2 nails (one on each side). Maintain a 6" (152mm) exposure.

1. Hip & Ridge Slate installation requires the slate to be nailed or screwed in place.
 - a) Chalk a straight line by placing one piece of hip at the eave and one near the peak, hold the chalk line at the edge of the slate on the top and bottom pieces. This will help keep the hip straight in the event of a crooked hip.
 - b) Cover heads of fasteners with an adhesive sealant compatible with the roof slate in any case of exposure.
 - c) Preformed Ridge Slates require 6" (152mm) exposure and require 2" (51mm) length fasteners (3" (76mm) when using vent ridge).
 - d) Fastener deck penetration must be a minimum of $\frac{3}{4}$ " (19mm).
 - e) Ridge end closure can be effected by cutting a triangular section from a slate and nailing to the ridge batten, or in the case of a boarded roof, to a timber fillet.


Hip Installation on a Boarded Roof

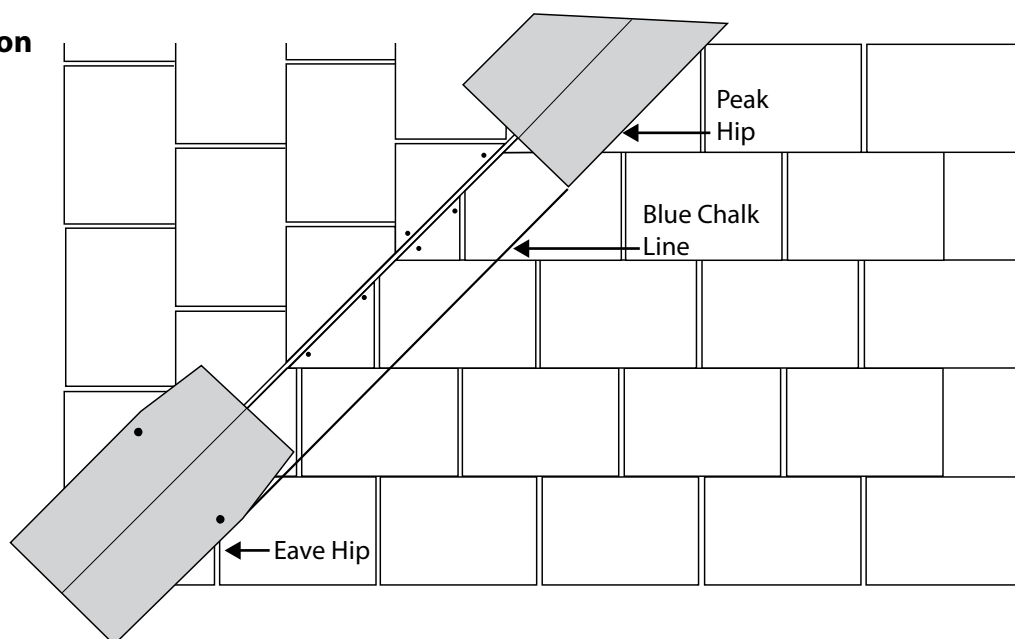

Hip & Ridge Detail on a Felt & Batten Roof


Felt & batten roofs need the addition of extra tiling battens to secure the hip tiles.

Hip Installation on a Battened Roof – Batten Layout

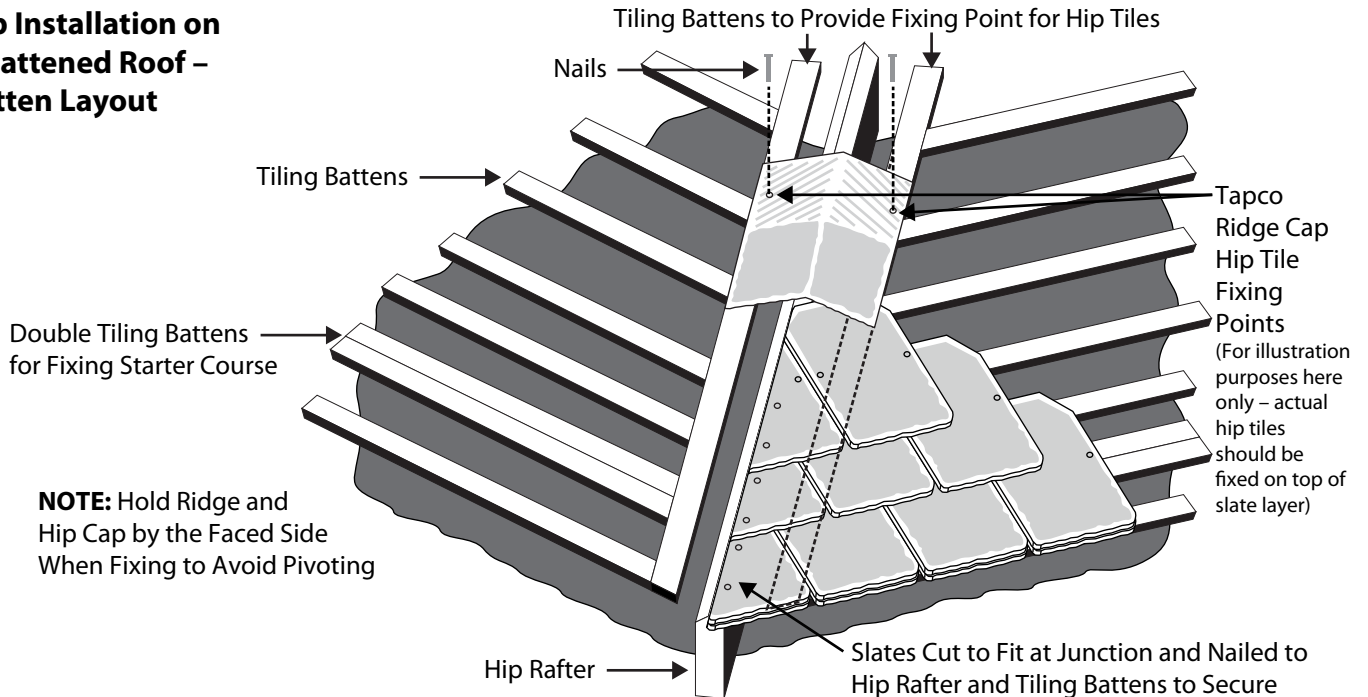

1. Cover the length of the hip with 24" (600mm) underlay from eave to ridge, overlapping the standard underlay on either side of the hip.
2. Position a hip tile in situ and mark the nailing points at the top and bottom of the hip.
3. Using these marks, secure a length of tiling batten either side of the hip to provide a fixing point for the hip tiles.
4. The slating battens should be fitted flush to these hip battens.
5. Cut slates to fit at junction.
6. Affix hip tiles using a minimum of 2" (51mm) nails or screws.
7. Finish at the eaves with a cut-to-size-and-shape TapcoSlate Classic hip tile or for Aledora a standard slate should be cut into two triangles and glued together (see diagram). Fill end with a shaped piece of standard TapcoSlate.

Hip Installation on a Battened Roof – Tile Layout

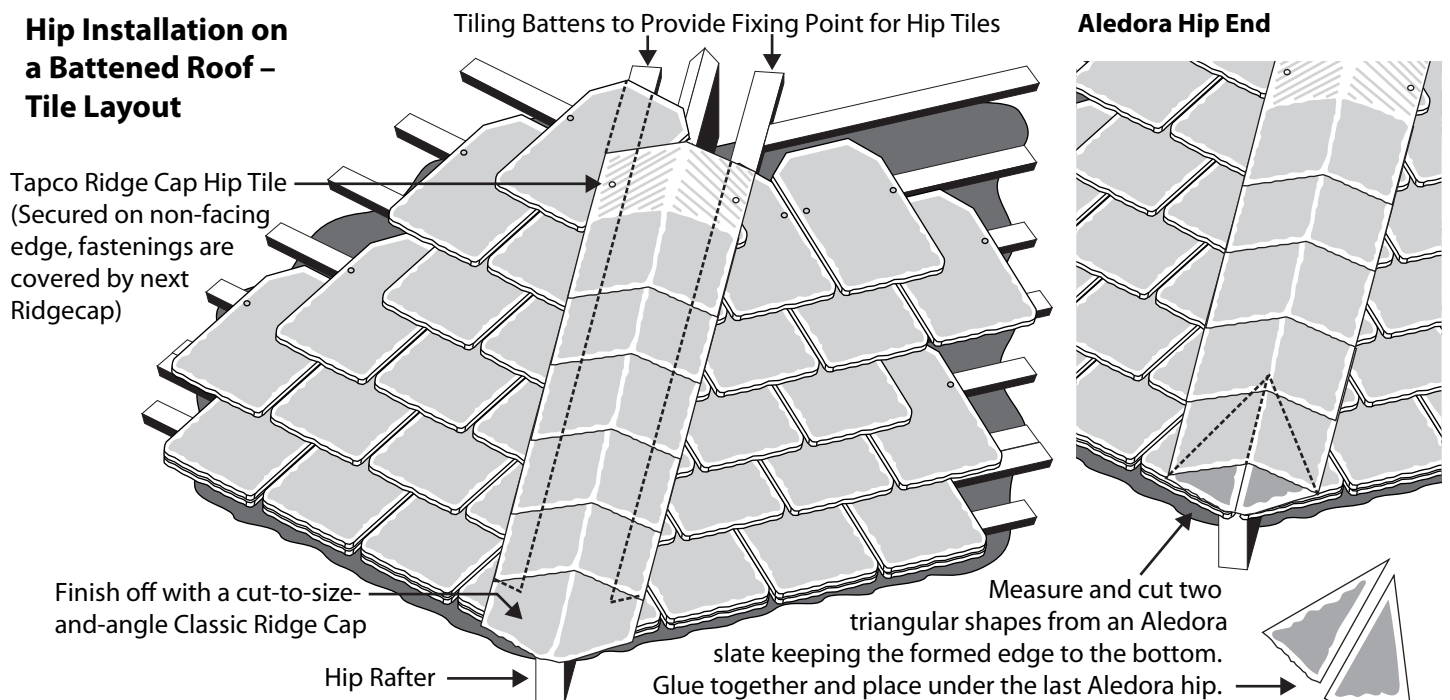

– Special Instructions –


Installation in Exceptionally High Wind Areas

TapcoSlates are tested for resistance to wind driven rain/wind uplift, as follows:

- Miami Dade TAS-100: (110 mph wind-driven rain). No water infiltration through sheathing. No slate cracked, split or lifted.

There are certain areas, particularly on west-facing coasts and exposed islands, where wind speeds can exceed this level, and in order to reduce the risk of uplift, the following installation instructions should be followed:

1. TapcoSlates should be fixed directly to a solid substrate, such as sarking board, OSB or weather-grade ply.
2. The maximum overlap – slates set at the 6" (152mm) gauge – should be used.
3. Standard copper roofing rivets should be installed: a hole is drilled in the overlapping or top slate, and a rivet is slid up between the gap in the two bottom slates (see diagram below). The rivet should be put in a position where it can be inserted through the hole and bent over. After a length of time the rivets will naturally blend in with the slate.

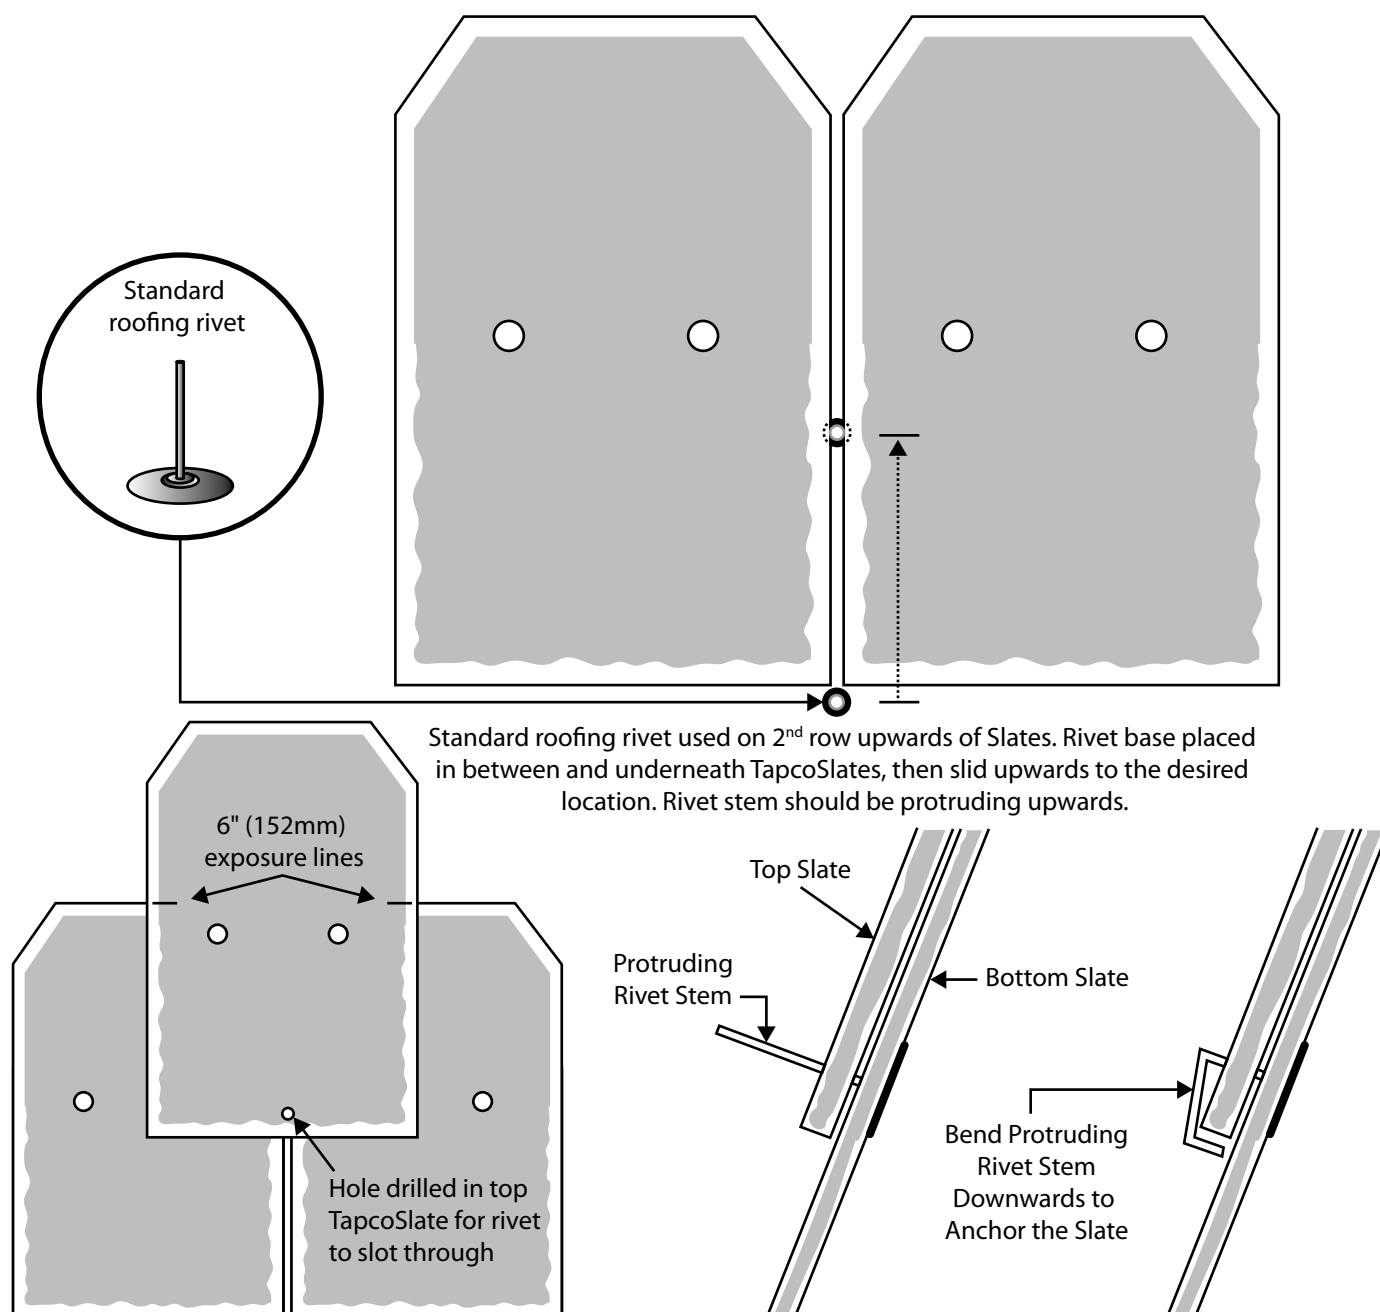

Turret Installation

Turrets and cones need custom cut slates which change depending on the radius and pitch. They can be quite difficult to install; time and care must be taken during installation.

1. Determine the taper by chalking lines originating at the peak, extending to eave spaced 11.5" to 5/8" (292mm to 16mm) apart for Classic and 12" to 5/8" (305mm to 16mm) apart for Aledora (the width of one slate).
2. Place the slate at the eave between the 2 lines, this will give you the proper taper for the first course.
3. Mark up from the top of your first slate your exposure. Repeat until you reach the top of the turret.
4. Each course will have a different taper as the pieces get smaller towards the top. You can now place a slate to each mark and determine the taper per course.
5. Be sure to pay attention to the size of the slates, If the slates get too small it may be necessary to use a larger slate and re-chalk lines at some point.
6. Make sure measurements are periodically taken from eave and peak to ensure straight courses.

Precautions


Roof slates may be slippery when wet or covered with frost. Fall protection equipment is required when working on a roof deck. The contractor may consider the use of toe boards. TapcoSlate roof slates should be stored in temperatures above 7°C and the ambient temperature of the product must be at a minimum of 7°C during installation in order to avoid webbing and/or cracking of the roof slates.

Do not leave debris under the roof slates while installing that will prevent the design of the roof slate from overlapping on the course below, thus allowing the potential for moisture build up from wind-driven rain and/or ice dams.

Use accessory products with a lifecycle as equally long-term as the roof slates.

Technical Bulletins should be reviewed and considered prior to the start of any project.

Turret Installation

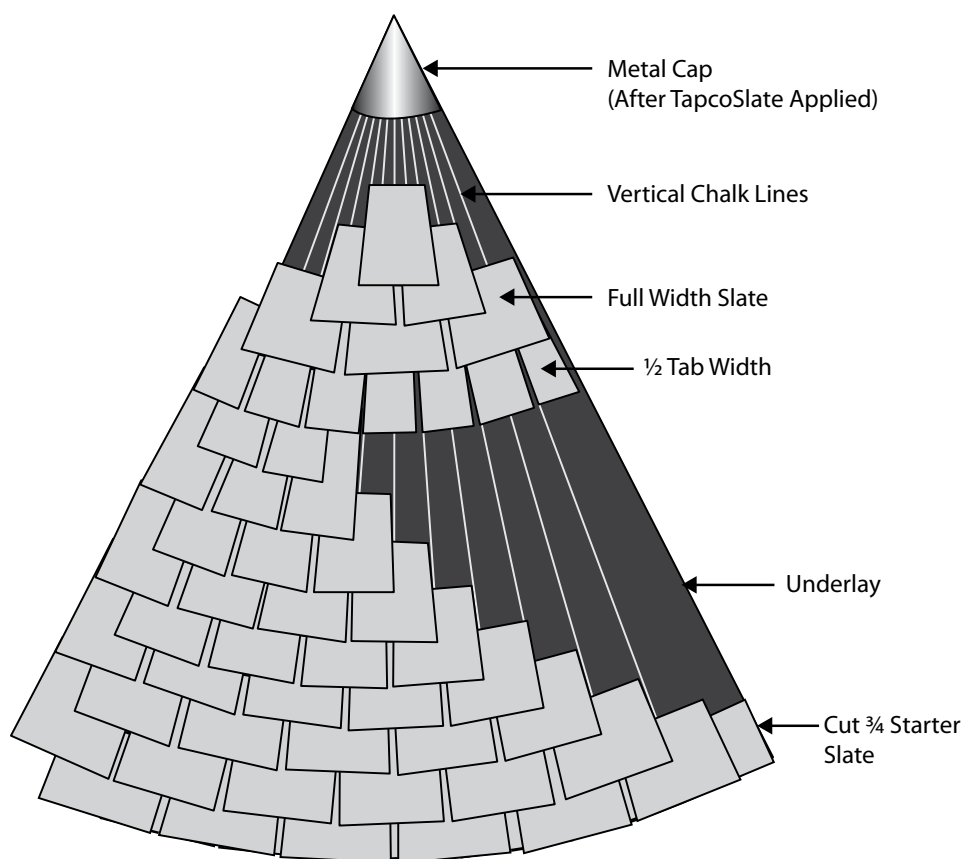

Removing/Re-fitting TapcoSlates

The removal and re-installation of individual slates can be achieved quite easily when the slates have been nailed into place, but more difficult if screws have been used to install the product.

Removal/Re-fitting: Nailed Install

Tools

The correct tools should be used for the removal and re-installation of the slates, we recommend a Vaughan SuperBar and/or a Roof Snake, a hammer and nails and a block of wood.






Vaughan SuperBar






Roof Snake

On both the SuperBar and the Roof Snake, the forked end is used to slip under the tile above the one being removed to lift up the nail and remove – the SuperBar's eye hole can be used to better effect to accomplish the nail removal as it will keep the tile above as flat as possible and avoid any distortion.

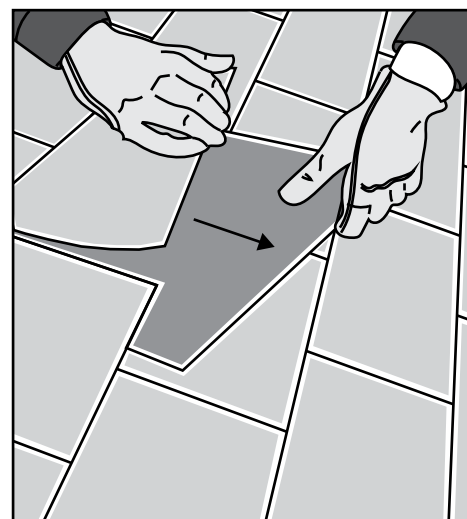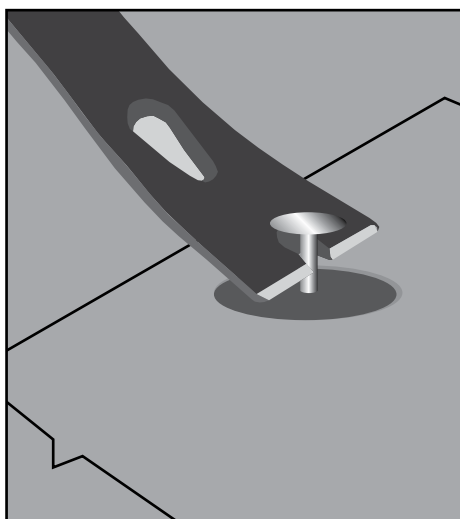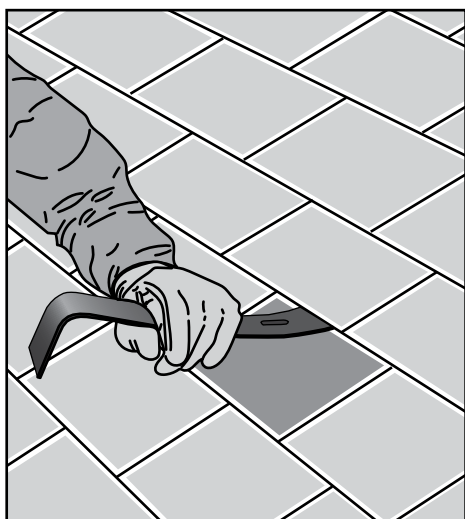

To replace the slate, it is handy to use a Roof Snake as it allows the installer to insert a new nail into the tool and use a hammer on the tool neck or a block of wood (which helps protect the slate surface) to drive the nail home. Alternatively, if not using a Roof Snake a second block of wood can be used in a similar way.

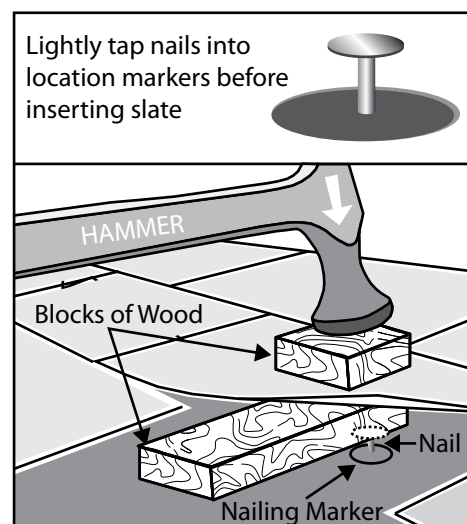
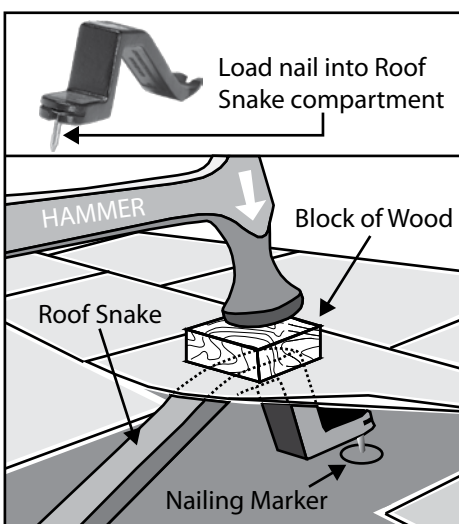
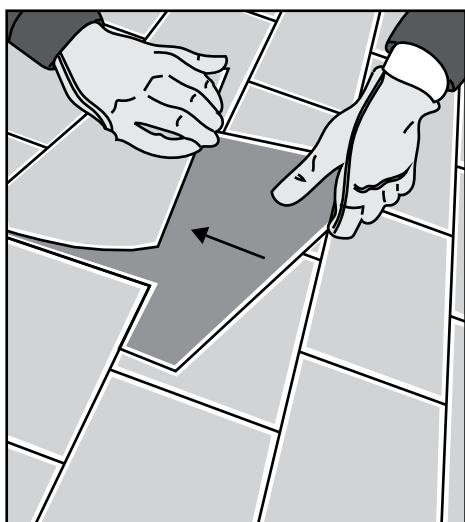


Removal/Re-fitting: Screwed Install

Tools

Hand screwdriver and/or powered screwdriver/drill.


To remove a TapcoSlate that has been fixed by screws, the only way to achieve this is to remove a certain amount of other slates by unscrewing from the top of the roof downwards to the affected slate that you wish to remove. This will also involve removing ridge caps in the affected area unless the slate screws are easily accessible by lifting the caps with a pry bar. Prior to removing the slates, it would be best to label/number them in order of removal using masking tape and a pen/pencil. Always carefully and systematically stack the slates in order of removal so that they can be placed back in the same place. Please note that over time there will be a certain amount of uniform weathering on the roof slates, and so a brand-new slate will never completely match the older ones at first until this too has weathered-in over a period of time.

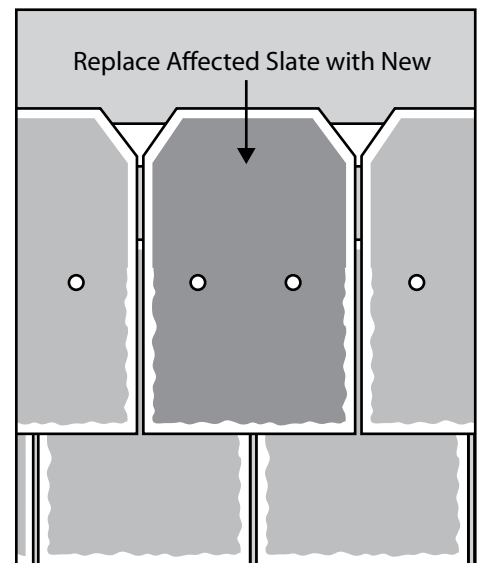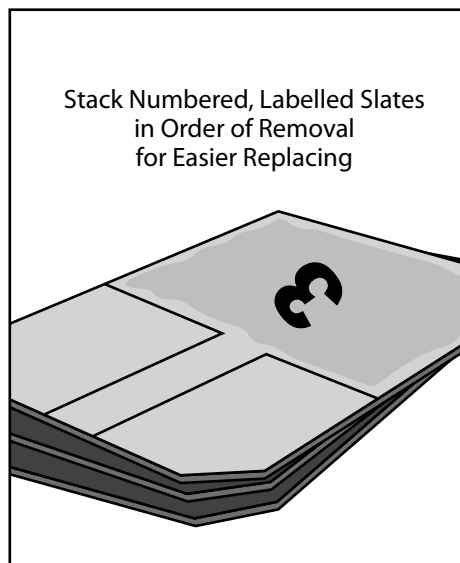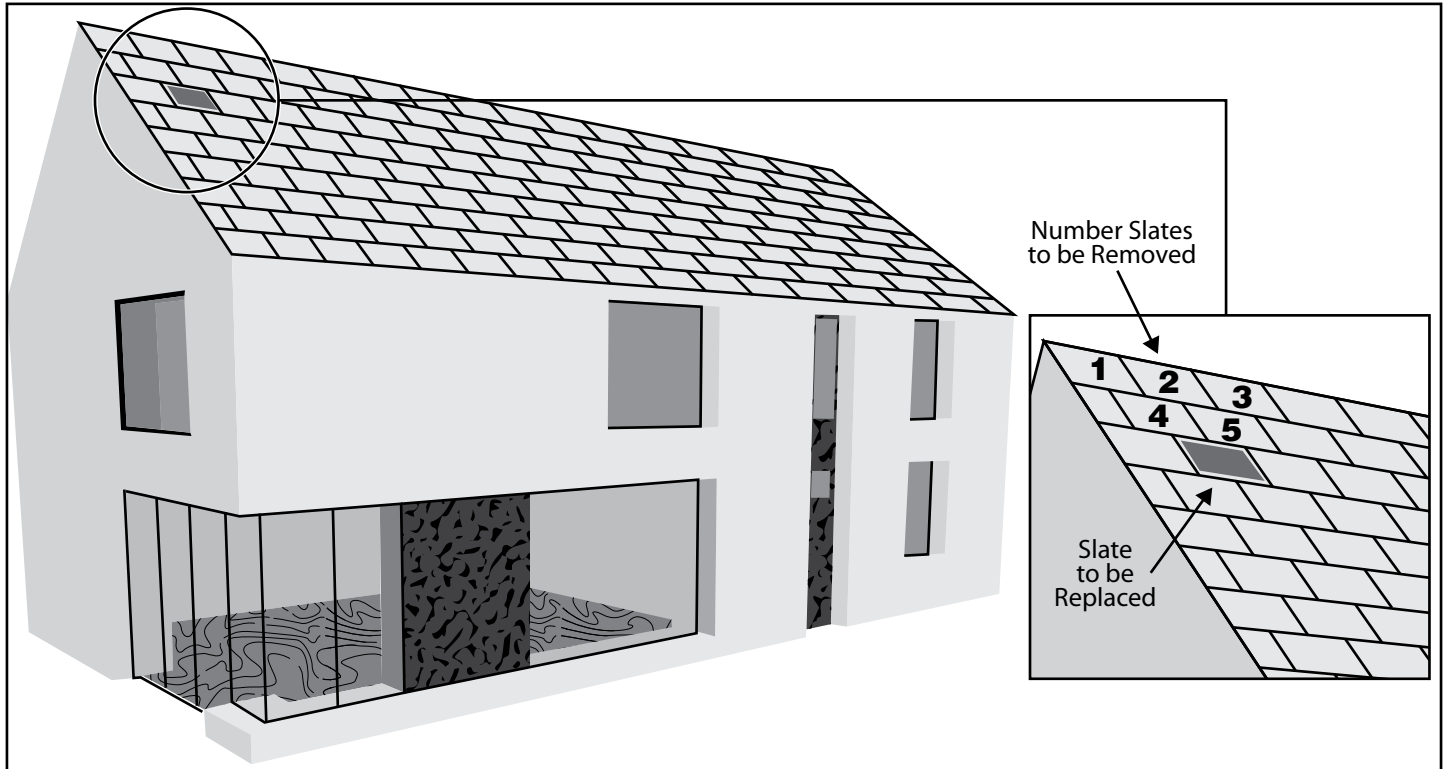

Replacement of the removed slates is the same process in reverse, replacing the carefully stacked and labelled slates in the order they were taken off, taking care not to over tighten the screws and replace any other slate tiles or ridge/hip that may have been damaged during the strip-down process.


COMPLEMENT YOUR TAPCOSLATE ROOF WITH THE FOLLOWING ACCESSORIES:

CONSERVATORY ROOF ACCESSORIES

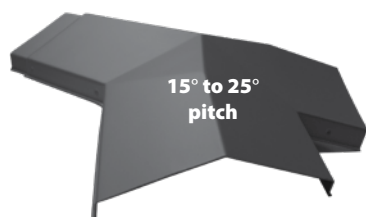

15° to 25°
pitch

**Edwardian Conservatory
3-way Hip to Ridge**

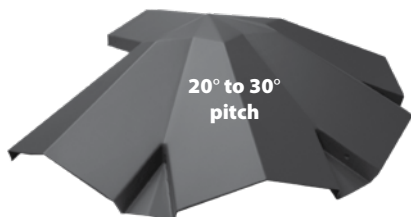

20° to 30°
pitch

**Victorian Conservatory
5-way Hip to Ridge**




**Edwardian Conservatory
Hip End Cap**



**Victorian Conservatory
Hip End Cap**




**Conservatory Ridge
90° End Cap**

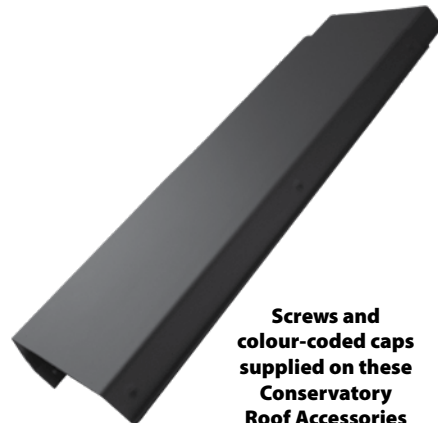


**Conservatory 0.5m
Ridge & Hip Cap**

Screws and
colour-coded caps
supplied on these
Conservatory
Roof Accessories


Please note, Conservatory Roof Accessories are a standalone ridge system and cannot be inter-used with other ridge/hip caps from our other accessory lines below

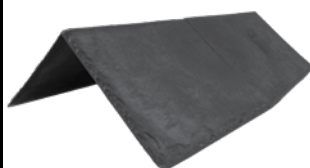


Classic Ridge & Hip Cap
Universal fit

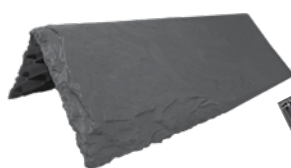


Aledora Ridge & Hip Cap
Universal fit

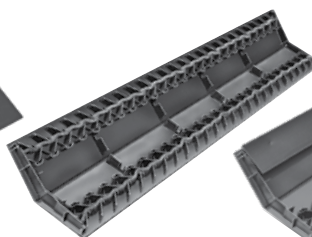


RidgeMaster Plus
Ridge ventilation system

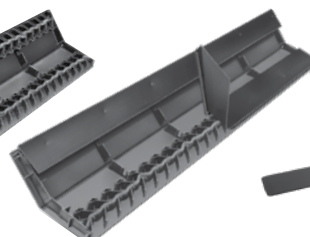


HipMaster
Hip ventilation system

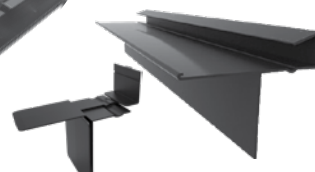

Dry Verge & Joints
for Classic and Aledora

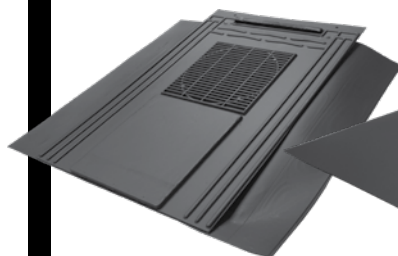

Inline Slate Vent
for Classic

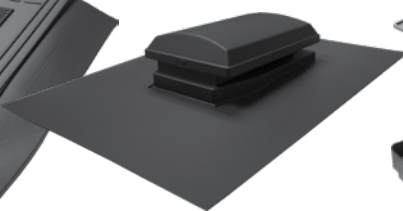

Cowl Vent
for Classic and Aledora



Pipe Adapters
for vents



Protect VP300
Vapour permiable underlay



Protect Wunderlay
Vapour impermeable underlay



Aledora Starter Tile
All colours available

30mm (tile fitment)
50mm (ridge fitment)
80mm (RidgeMaster fitment)



Outdoor Rapier Screws

30mm (tile fitment)
50mm (ridge fitment)
75mm (RidgeMaster fitment)



Clout Nails



**Classic Ridge-to-Hip
Junction**
14°-17°, 18°-24° & 24°-30° Pitches



**Classic Ridge 90°
End Cap**
25°-29°, 30°-34° & 35°-40° Pitches

 **TAPCOROOFINGPRODUCTS**

Unit 32, Tokenspire Business Park, Hull Road, Woodmansey, Beverley, East Yorkshire, HU17 0TB
Tel: +44 (0)1482 880478 | Fax: +44 (0)1482 880678 | international@tapcoint.com | www.tapcoroofingproducts.com