

SUNROOM 12 USING EXTENSION 4 (MK III)

INSTRUCTION TEXT IN RED APPLY TO EXTENSION ONLY

| SUN ROOM 8 EXTRA PARTS LIST (4'ext) | | | |
|-------------------------------------|--------------|-----|---------------------------|
| PART | SIZE | NO: | DESCRIPTION |
| FS2A | 65x30x4mm | 4 | Packer back bar |
| HBD | | 9 | Brackets |
| HBDT2 | | 3 | Bracket (cut) |
| HS1 | 1843mm | 1 | H uprights |
| HS2 | 1933mm | 1 | H uprights |
| HS3 | 70mm | 1 | H joiner back bar |
| IC1 | 593mm | 4 | Cladding clamp 10mm |
| IG1 | 1124mm | 4 | Glazing clamp 5mm |
| RL3A | 2530mm | 2 | Rail roof centre |
| RL8A | 1273mm | 1 | Rail back bar |
| RL9A | 2524mm | 1 | Rail roof centres |
| RL23 | 375mm | 2 | Roof tie |
| RL26 | 418mm | 1 | Roof tie |
| RLD9 | 630mm | 2 | Rail panel tie |
| RLD11A | 1264mm | 2 | Rail front top + bottom |
| SJB2A | 2600mm | 2 | Roof clamp base |
| SJT2 | 2638mm | 2 | Roof clamp top |
| XL71 | 2300 x 25 mm | 3 | Steel angle support |
| CLADDING | | | |
| CD9W | 595mm | 4 | Cladding 10mm |
| SAN36 | 1145 x 584mm | 2 | Glazing |
| TW144 | 2638 x 831mm | 2 | Twinwall roof 6mm |
| FIXINGS | | | |
| AA | 8mm | 60 | Self taps |
| AB1 | | 2 | Fixing brackets (plastic) |
| AD | | 8 | Plugs |
| N | 28mm | 36 | Studs |
| NC | | 72 | Nycaps |
| P | 35mm | 2 | Studs |
| U | 4.8 x 32 | 21 | Self taps roof |
| Y | 4.8 x 19 | 32 | Self taps |
| Silicon | | 2 | Sealer |

NOTE: Use soapy water (fairy liquid) when cleaning
NO ABRASIVES.

ASSEMBLY INSTRUCTION FOR SUN ROOM 12 (8+4)

READ IN CONJUNCTION WITH SUNROOM 8 ASSEMBLY INSTRUCTIONS



IMPORTANT INFORMATION

Please read carefully before starting assembly


To safe guard your own interest you are advised to check the contents of each pack Before assembly, taking care not to mix contents. Claims against the manufacturer will become invalid after the start of assembly. If you are not happy with your purchase WRITE OR FAX customer services within 10 days of receipt of goods requesting a pre-paid label. Refunds will not be made unless goods are returned unused/undamaged and complete. Any missing or damaged part will be charged for. Under no circumstances return goods without contacting customer services in writing. **Owing to the nature of this product carriage and handling charges are not refundable.** This does not affect your statutory rights. In the unlikely event of a missing part, it is essential you quote the hand written "packing reference no:" Found either end of the box or pack and contact Norfolk Greenhouses, Chiswick Ave, Mildenhall, Suffolk IP28 7AZ or Fax 01638 714715



RLD



HS

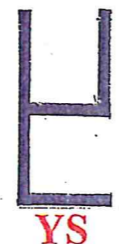

YS




YSC




US



SJB

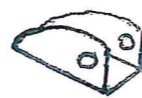

HBDT

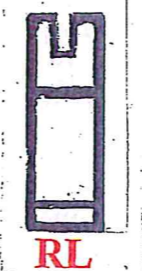

RL




HBD



IC




IG

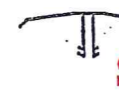

SJT





SET

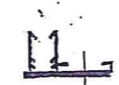

SEB

NOTE; Parts are easily identified by matching shape of section as shown on the parts list. If you take 1 of each part identify it by section drawing, measure its length and mark it with a pencil it makes it easier when building to pick up the desired piece

1. Firstly choose the position for your sunroom. If the wall is rough make up a frame using 3"x1" timber and fix back as shown, sealing the back with mastic and fixing it with rawl plugs and screws. (not supplied) If your wall has a smooth finish, just fix frame of sun room straight on to it. As shown.

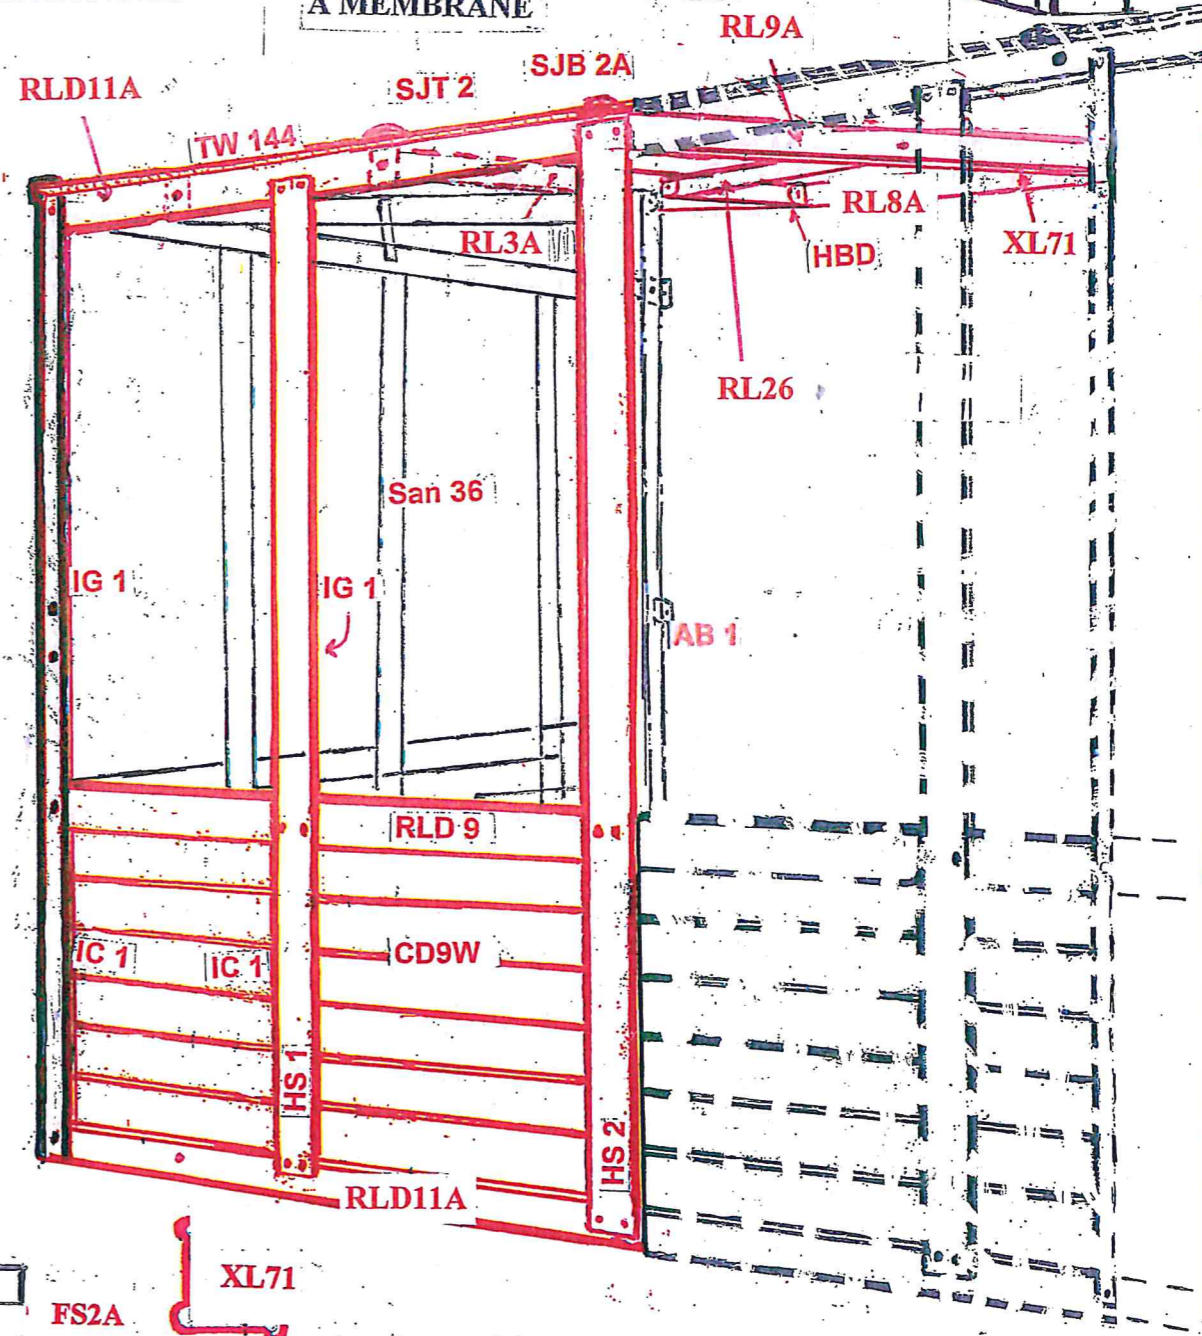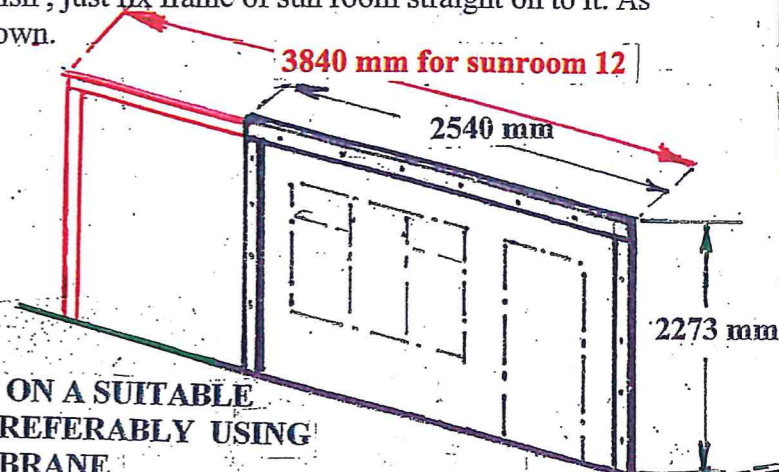

Our policy is of continuous improvement and we reserve the right to change specification without prior notice therefore the latest model is supplied.