


Fitted in 5 easy steps



Step 1

Insert the T228 fixing blocks into the four shallow holes (front and fourth from front) on the underside of the modular.

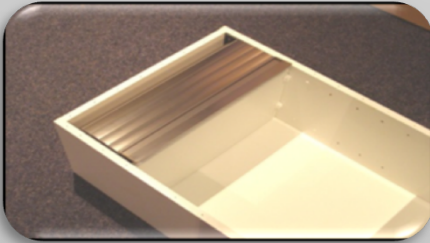

Step 2

Place the modular carefully into the cabinet and move it to the top edge of the cabinet. It is **ESSENTIAL** that the front edge of the modular is flush with the front edge of the carcass. Fix through the T228's with screws.



Step 3

Fix the left and right screw on tracks to the front face of the carcass gable. Use the 'lip' to locate it tight to the inside of the gable ensuring the 'lip' does not come above the modulars base shelf. If your cabinet has a base panel cut the profile so it fits just above the base panel.



Step 4

Lower the tambour $\frac{1}{4}$ - $\frac{1}{2}$ way and snap on the gable fascias. Fit the end caps onto the fascias.



Step 5

Screw on the base part of the top fascia piece ensuring the small lip is flush to the underside of your cabinet top. Finally, push the top fascia cover into the groove in the base part.

NOTE The modular is designed to fit a maximum height of 1450mm however it is possible to fit to a reduced height by cutting the left and right screw on tracks and also the snap on profiles to suit.

Always cut the profiles from the bottom edge, taking care not to damage.