

## HOW TO MAKE A 200Ltr BAG HOLDER

### Materials


- 1 x (1670mm x 940mm x 9mm) Stock Board
- 6 x (M8 – 40mm) Roofing Bolts
- 6 x M8 Flat Washers
- 2 x Tail Board Hooks
- 4 x (10mm x 40mm) Flat Head Bolts and Nuts

### Tools

- Drill and 10mm Bit
- 13mm Spanner
- Flat Screwdriver
- Tape Measure
- Saw


### Instructions

1. Bend the stock board round to form a cylinder, with the flat side on the inside, overlapping the ends by 60mm.

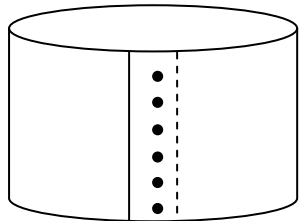

→ ← 60mm

2. Hold in place and drill 6 holes through, equal distance apart, along the centre of the overlap.
3. Bolt the ends together using 6 x roofing bolts and 12 M8 washers with the head of the bolt on the inside of the cylinder.
4. Bolt the 2 tail board hooks equally around the cylinder, 300mm from the top using the 4 x flat head bolts and nuts and 4 M8 washers.

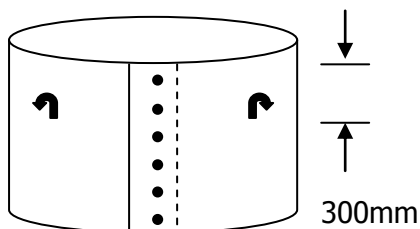

**AGRI.CYCLE**

