


TACHOGRAPH KIT PART NUMBER:	13810512
VEHICLE MANUFACTURER:	Nissan Renault
MODEL:	Cabstar Maxity
TRANSMISSION:	Manual
YEAR:	2006 on and 2007 on
ENGINE:	Diesel
VOLTAGE:	12v
V10-31-07-2018	
	<p><i>Whilst every effort is made to ensure the accuracy of the information given herein, Continental Automotive Trading UK Ltd cannot be held responsible for any errors or omissions. Ultimately, the installer must ensure compliance with the specific vehicle repair procedures laid down by the vehicle manufacturer; particularly with regard to battery disconnection/reconnection procedures. Failure to comply with the vehicle manufacturer's instructions may result in personal injury and/or component damage/memory loss.</i></p>


FITTING INSTRUCTIONS

As from 1st October 2012 According to Regulation (EU) No 1266/2009 (Annex1b) it is a legal requirement that an independent motion signal is connected to an activated DTCO, Therefore for this digital installation a DTCO Geoloc is required part number *A2C59514979-R


*Not included in the kit

For Nissan Cabstar up to 2007

Installation of KITAS

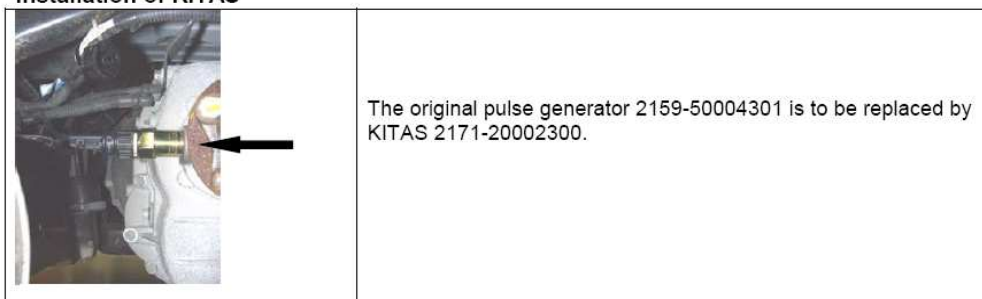

Control of the Instrument Cluster

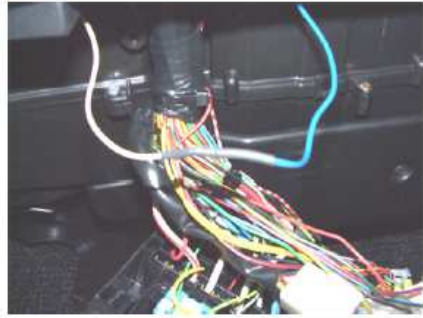

The instrument cluster is controlled via the DTCO 1381.
The cable white/yellow which is included in the electric switch box must be connected to the Pin for the speed signal output B 7 of the DTCO.

Installation of DTCO



After removing the shelf compartment, the recess must be adapted to the mounting frame

For Renault Maxity and Nissan Cabstar 2007 on

KITAS Installation



Remove the blanking plug which is located on the off side of the gearbox



Install the KITAS 2171-20002311

Some vehicles may have the sender cable and power harness installed

DTCO Installation



If the vehicle has been set for Tachograph then a power harness can be found in the radio compartment.

Installation of Geoloc

Installation instructions:

In order to prevent GPS sensitivity issues, the module needs to be installed in a position where the module has a clear view to the sky and satellites.

1. When installing the Geoloc module in a vehicle, make sure that there are as few obstructions as possible close to the unit since it has an internal GPS antenna. Any obstruction might block the 360 view to the horizon that is required for good operation. Ideally, nothing should block the antenna beyond 5 degrees above the horizon with the best location being on the windscreen.
2. The GPS receiver antenna (Patch-Antenna) is located underneath the type data plate. Therefore the data plate (antenna side of the module) should face upwards towards the sky (see image below).



Please Note: The Geoloc is equipped with a 120 Ohm Can Resistor. The CAN wiring to CAN1 or CAN2 must take this into account!



FITTING INSTRUCTIONS – TACHOGRAPH

GeoLoc to CAN2 of DTCO® 1381 Release 2.0a Plug Connections:

Cable Colour	Description	DTCO® Pin Connection
White	Ignition	A3
Black	Ground	A5
Red	Supply (9-36V)	A1

Geoloc - CTC II Programming

The source for the 2nd motion signal can be set in the path
PROGRAMMING/INSTALLATION DATA/IMS SIGNAL/SOURCE.

The following setting is for CAN2:
- CAN2 GEOLOG (external source e.g. GPS)

Fitting Kit 13810512 consists of:-

QUANTITY	PART DESCRIPTION	PART NUMBER
1	PLUG & HARNESS	1318-90100000
1	SENDER UNIT	2171-20002315
1	SENDER CABLE	21700421
1	DTCO MOUNTING SLEEVE	1324-90010500
1	DTCO REAR SEALING COVER	A2C1207140028
1	DTCO REAR SEALING COVER SCREW	A2C1474650028
1	DTCO WARNING LIGHT	A2C59511755
1	DTCO OPERATING INSTRUCTIONS	A2C1387330029

Also required.

A2C1648490020 12/24v 3.0 Universal DTCO*

A2C59514979-R Geoloc*

*Not included in kit