


NICK GRAY

Building Plastics


Unit 8,
Britannia Enterprise Park, Lichfield,
Staffordshire,
WS14 9UY

Tel: 01543 543007
Fax: 01543 415435
Email: sales@nick-gray.co.uk
Web: www.nick-gray.co.uk

Capex Snap Down Glazing Bar

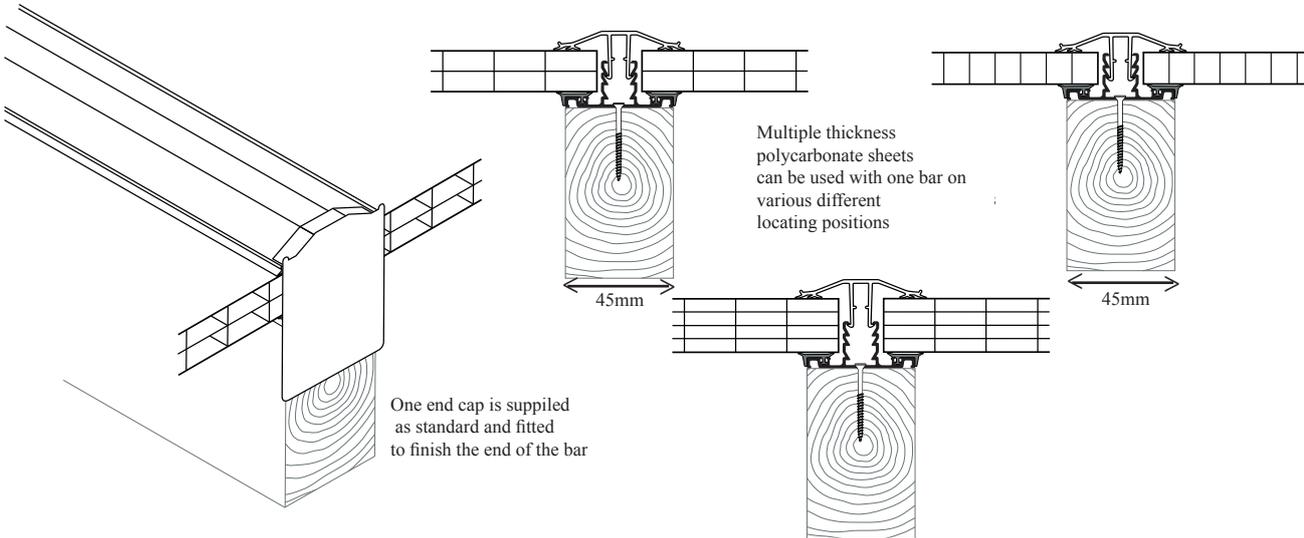

Fitting Instructions (see inside bar for more details)

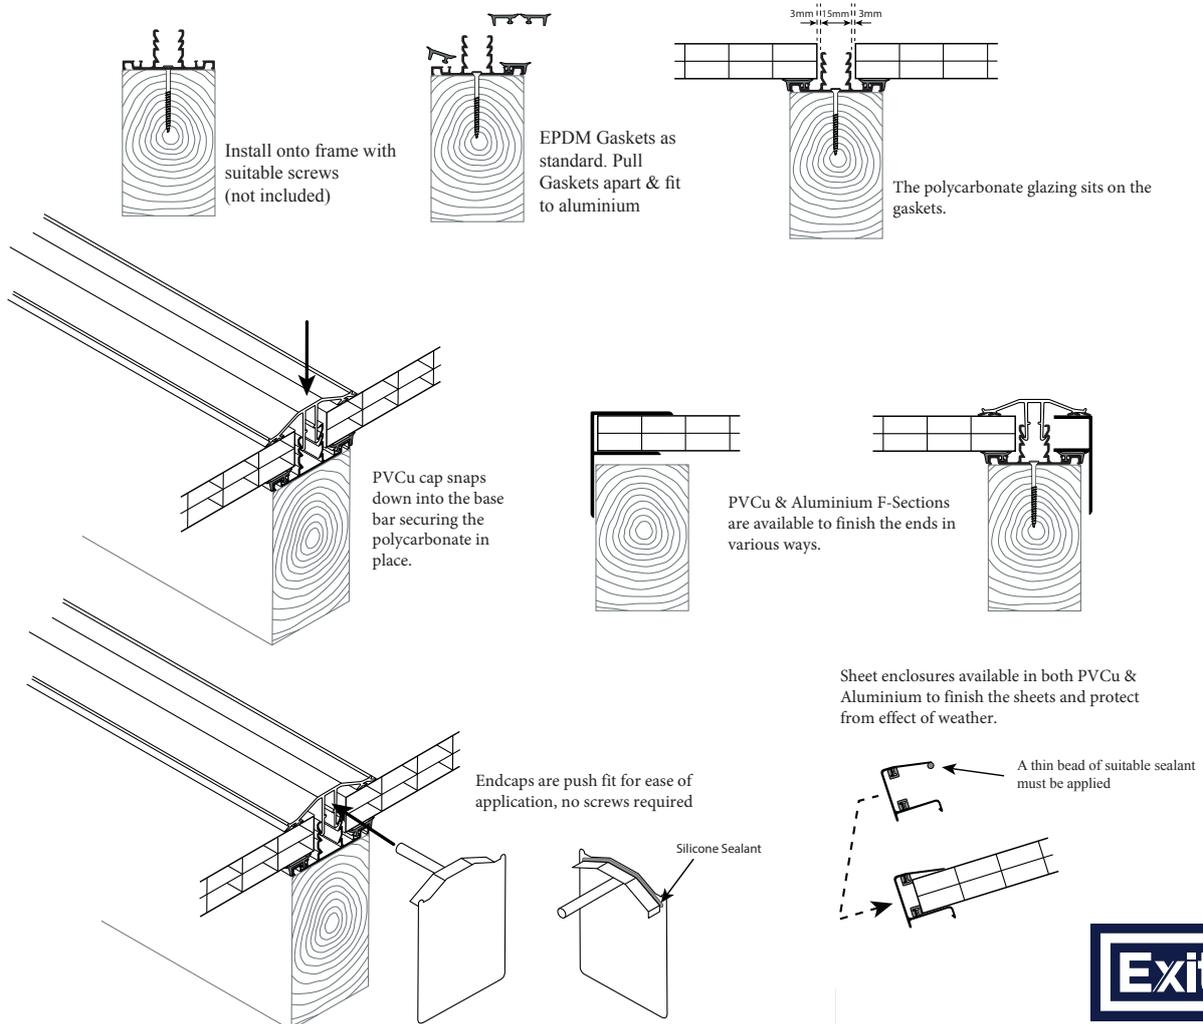

CAPEX SNAP DOWN 10-25 FITTING INSTRUCTIONS

- Measure and cut the polycarbonate sheet to length allowing an extension of approx 50mm to over hang the gutter.
- Cut the aluminium base section and uPVC top section to the same length as the polycarbonate sheet.
- Drill holes to suit a 5mm wood screw in the centre of the aluminium base between the toothed legs. The holes should be 100mm from each end and at no greater than 500mm intervals.
- Screw aluminium bases to rafters using wood screws.
- Lay polycarbonate sheets on rafters starting at one end.
- When all sheets are in position, remove the protective film and fit the uPVC top section by pushing the legs into the slots provided in the aluminium base. Push firmly home to ensure adequate seal.
- Fit end caps to uPVC top capping.
- Fit end-closure to polycarbonate sheet.

Optional: In exposed conditions, or where larger panels are used, Glazing Buttons are recommended at the eaves and on the purlins to prevent sheet lifting.

Note: For best results ensure pitch of roof is greater than 5°.

