


## **CORDED POLYESTER STRAPPING**

### **How to use Surefast Coded Polyester Strapping**




The strap must go under the pallet first by using the Surefast Pallet Lacer

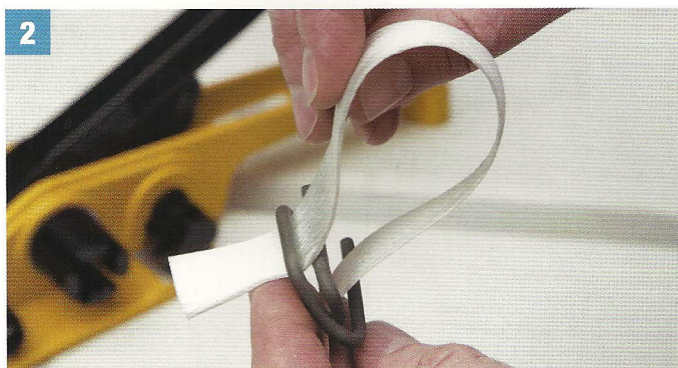

Feed the strap through the buckle as shown and pull the bottom strap with your right hand to make it hand tight leaving a 75mm tail



Make a new loop with the other end of the strap and lead it through the other side of the buckle, hook the loop over the other lug and pull tight

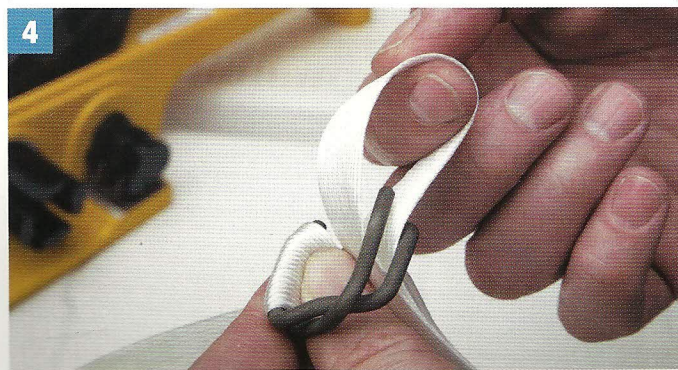

Place left hand on the bottom of the strap and pull the top strap with your right hand to make it hand tight

## **CORDED POLYESTER STRAPPING**

### **How to use Surefast Coded Polyester Strapping**



Squeeze the handle of the tensioner and place the tensioner on the bottom strap, whereby the bottom strap is set under the knife assembly and under the gripper foot



Make sure the tensioner is approximately 30cm/1 foot away from the buckle. Lead the top strap through the knife assembly



Tension the strap by rocking the handle back and forth



As tensioning begins, ensure that the lugs close firmly down on the strap



Upon completion squeeze the handle down again to cut the strap and move tensioner away to the right



Place polythene top cover on top of pallet and pallet wrap the entire pallet working from the bottom to the top