

AFTER



BEFORE



TRANSFORM YOUR STAIRCASE WITH GEORGE QUINN'S STAIR CLADDING SYSTEM



COMPONENTS AVAILABLE



Step
1000 x 290 x 17mm



Winder Step
1300 x 600 x 17 mm



Winder Step
1450 x 290 x 17 mm



Winder Step Extension
1300 x 240 x 17 mm



Riser
1000 x 210 x 15 mm
1300 x 210 x 15 mm
1450 x 210 x 15 mm



Single Bullnose
(Riser only)
1000 x 300 x 240 mm



Bullnose Step
(Top only)
1000 x 300 x 28 mm



String Cladding
2400 x 300 x 6 mm



String Capping
2400 x 45 x 10 mm

*All components are available in lacquered Walnut and White Oak.

*Painted risers are also available.

*Bullnose step top can be used left or right.

AFTER



BEFORE




GET A NEW LOOK FOR YOUR STAIRCASE

There isn't a more simple solution for stair refurbishment: steps and risers on top of existing stairs.


*Check the back cover for full guide!



BULLNOSE INSTALLATION

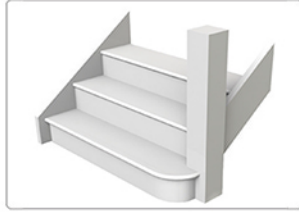


STEP 1
Remove old carpet, nails and debris and make sure the stairs are clean. Screwing the steps to the risers will minimise any squeaks.

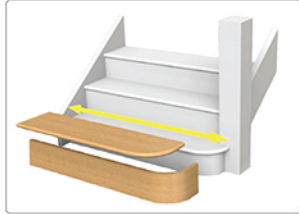


STEP 2
Use the 1000mm bullnose step and riser. Measure and cut to the required length (the step can be inverted to fit a left or right hand bullnose).



STEP 3
Screw a packing strip into place if required. Apply plenty of Polymer Adhesive to the packing strip and edge of the step. Press the riser firmly into place.

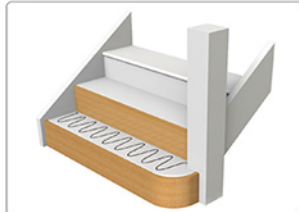

STEP 4
Fit the next riser in place. Apply plenty of Polymer Adhesive to the existing step, making sure you apply an even bead of adhesive to it.

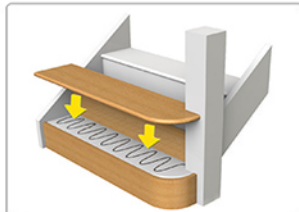

STEP 5
Cut the step to allow it to fit around the newel post. Press the step firmly into place.



STEP 6
The completed bullnose assembly should look like this.

GeorgeQuinn

STAIR COMPONENTS

STAIR CLADDING GUIDE


ADVANTAGES

1. Can be fitted on top of existing stairs.
2. Saves money on a new flight of stairs.
3. Prefinished components ensure a clean finish with no painting needed.
4. Painted risers available.
5. Available in White Oak and Walnut.
6. Completely transforms appearance with minimal effort.

TREAD AND RISER INSTALLATION




STEP 1
Follow the same preparation instructions as for the bullnose installation. Pack out the bottom of the riser level with the nose of the step above and screw into place. Repeat for each riser.

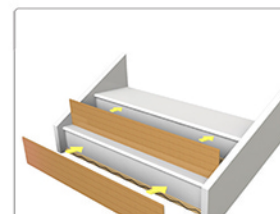


STEP 2
Always start at the bottom riser and work your way to the top, fitting both steps and risers. Measure the width and height of first riser and cut to size. Apply plenty of Polymer Adhesive to the packing strip and edge of the step. Press the riser firmly into place.




STEP 3
Apply plenty of the Polymer Adhesive to the existing step, making sure you apply an even bead of adhesive to it.

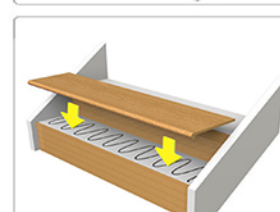

STEP 4
Measure the width of the step and cut to size. Press the step firmly into place. Continue the same method to the top of the stairs.

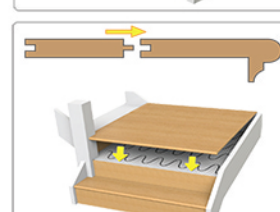

STEP 5
For landings, cut the step to the angle required and fix in place with Polymer Adhesive as before. If required, use a winder extension to fill the step.

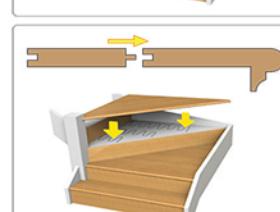

STEP 6
For winders, use the Winder step and winder extensions. Calculate the number of extensions needed to fill the step and glue the tongue and groove joints together.