

Classic Bezel Installation Guide

Safety

Aquavision recommends that installation be carried out by a qualified installer. Ensure that the latest local wiring and safety regulations are adhered to during installation. Your Aquavision will be powered by a 12V or 24V DC power supply. This must be positioned away from any water source. Observe the correct safety zones within the bathroom/wet zone. The Classic Bezel and optional back box must be earthed. The bezel is to be mounted on a vertical wall only and not on sloping walls or ceilings.

IF IN DOUBT REFER TO A QUALIFIED PERSON. THIS APPLIANCE AND THE BEZEL MUST BE EARTHED

Classic Bezel installation, cable feed & waterproofing

- 1. Once the position of the Aquavision has been defined, make a cut out according to the dimensions in the table below. Ensure the wall is now finished (tiled/painted etc.) Tiles must run right up to the edge of the cut out. Do not use raised edge tiles under the Bezel frame.
- 2. Fit the 2 mounting brackets supplied to the Bezel using the screws provided.
- 3. Apply a generous bead of clear silicone to the rear lip (polished edge) of the Bezel. This creates a waterproof seal between the mounting surface and Bezel (See FIG 2). *Failure to do this will prevent your Aquavision from being waterproofed.*

4. Hold the Bezel up to the hole cut in point 1 above, ensuring that the correct orientation is observed. (Bezels with arrows face upwards, Bezels without arrows are not orientation dependant)

- 5. Secure the Bezel using wood screws on the inside edge of the brackets. TheBezel should be tight to the wall sandwiching the silicone you applied in step 3. Ensure not to over tighten as this can cause the Bezel to warp. Once fitted, the Bezel should be able to withstand a pull force of 100Kg.
- 6. Wipe away any excess silicone.
- 7. Run all cables supplied and any additional input cables as shown in FIG 1. Ensure there is enough slack on the cables as this will make connecting the TV easier. Do not extend/shorten the power supply cable as this will invalidate your warranty and potentially damage the TV.
 - 8. The Bezel is now ready to accommodate the TV and Classic Glass components. The instructions for fitting these items are provided

TV aerial input (not supplied)


Audio & Video inputs (not supplied)


Integral power supply cable

Mains lead (supplied)

separately.

IMPORTANT: Failure to follow these instructions thoroughly will prevent the Aquavision TV from being properly waterproofed. Water damage to TV's due to incorrect installation are not covered under warranty.

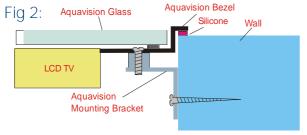

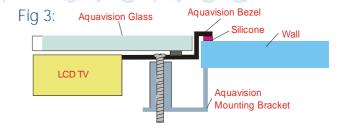

Screen Details	16"	22"	27"	32"	40/42"
Screen Size	15.6''	21.6''	27''	31.5"	40/42''
Overall size	371 × 516mm	412 x 575mm	492 x 722mm	571 × 854mm	692 x 1049mm
	14 5/8'' × 20 3/8''	16¼" x 22¾ "	19 ³ / ₈ " x 28½	22½'' × 33 ⁵ /8''	271/4 x 413/8"
Cut-Out Size	362 × 507mm	402 × 566mm	483 × 718mm	562 × 845mm	685 × 1043mm
	14¼'' × 20''	157/8'' × 22³/8''	191/8" × 28 ³ /8"	221/8" × 33 ³ /8"	27'' × 411/8''
Screen Depth	45mm	45mm	45mm	55mm	55mm
	I ⁷ / ₈ ''	17/ ₈ ''	17/ ₈ ''	21/8''	2 ¹ / ₈ ''
Optional Back Box	50mm	50mm	50mm	60mm	60mm
Depth	2''	2''	2''	2 ³/ ₈ "	2 ³/ ₈ "



HEAD OFFICE AND FACTORY

Aquavision
Unit 2 Grosvenor Business Park,
Horsfield Way, Stockport,
Cheshire, SK6 2SU,
United Kingdom
+44 [0]161 711 1900

AMERICAN OFFICE Aquavision, Inc. #197 5 Southside Drive, Suite 11

Clifton Park, NY 12065 America +1 800 524 1804



sales@aquavision.tv sales@aquavision.us

www.aquavision.tv www.aquavision.us