

CLEANING STATION ASSEMBLY INSTRUCTIONS PACE PART NUMBER 6021-0006 MANUAL NUMBER 5050-0285 REV. E

Packing Contents


PART NUMBER	DESCRIPTION	QUANITITY
1321-0428	Stand	1
1321-0229	Sponge Dish	1
4021-0007	Sponge	7
1317-0025	Pad,Rubber	4
1317-0026	Pad, Adhesive	1
1405-0633	Screw, 6-32 x 2.75" Lg.	1
1410-0093	Thumb Nut	1

- 1. Check the enclosed parts with the parts list to insure that you have all the required parts. Use the following instructions and illustrations for assembly of Cleaning Station.
- 2. Place the Stand with the bottom side up. Remove paper backing from the four Pads and install at bottom corners of Stand as shown. Refer to Figure 1.
- 3. The supplied Adhesive Pad has a protective paper backing on both surfaces. Remove the backing from one surface. Place the now exposed adhesive onto the bottom center of the Sponge Dish.
- 4. Remove the remaining paper backing from the Adhesive Pad. Place Sponge Dish on Stand in the orientation shown. The 2 holes in the sides of the dish must be over the sides of the Stand. Refer to Figure 2
- 5. Place the 7 sponges in the Sponge Dish as shown with the holes in the Sponge aligned with the 2 sponge Dish holes. Refer to Figure 3.
- 6. Install the 6-32 x 2.75 inch Screw through the holes in the sides of the Sponge Dish and the holes in the 7 Sponges. Refer to Figure 3.
- 7. Secure Screw in place using Thumb Nut. Refer to Figure 3.



PACE Incorporated 255 Air Tool Drive Southern Pines, North Carolina, 28387 Tel: (877) 882-PACE

Tel: (910) 695-7223 Fax: (910) 695-1594

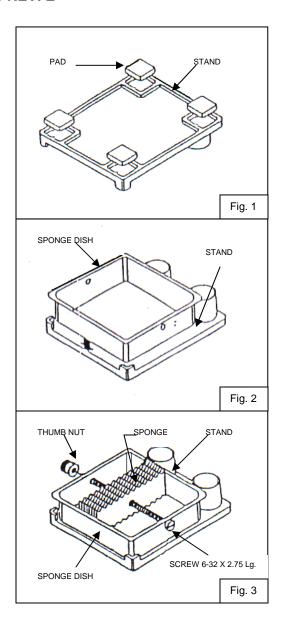

Pace Europe 11 Holdom Avenue Bletchley, Milton Keynes, United Kingdom, MK1 1QU Tel: 011 44 1908 277666

Fax: 011 44 1908 277777