



## Agrippa pillow fire alarm

The **Agrippa pillow fire alarm** uses 'listen and learn' technology to alert deaf or hard of hearing people if the fire alarm sounds while they are sleeping.

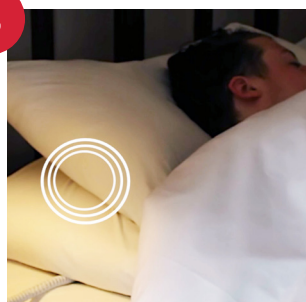
### How does it work?

**1**

The unit is placed on the bedside table and pillow pad is placed under the pillow.

**2**

Using 'listen and learn' technology, the device learns the sound of the building's fire alarm.

**3**

The Agrippa pillow fire alarm recognises the sound of the fire alarm and the pillow pad vibrates.

**4**

High intensity LEDs will flash and the screen will display "FIRE."

### Benefits

- Portable device - battery powered and wire-free
- 'Listens and learns' the sound of your fire alarm
- No installation
- Flashing red LED visual warning
- Time display with alarm clock function
- Uses standard AA batteries
- Visual warning of low battery
- Enables accommodation providers to meet requirements of the Equality Act

### Technical specification

- Battery operated (includes two C-cell batteries)
- 4 x AA batteries
- L-120mm x W-120mm x D-90mm
- Weight 380g

Watch how  
the Agrippa  
pillow fire  
alarm works on  
YouTube!