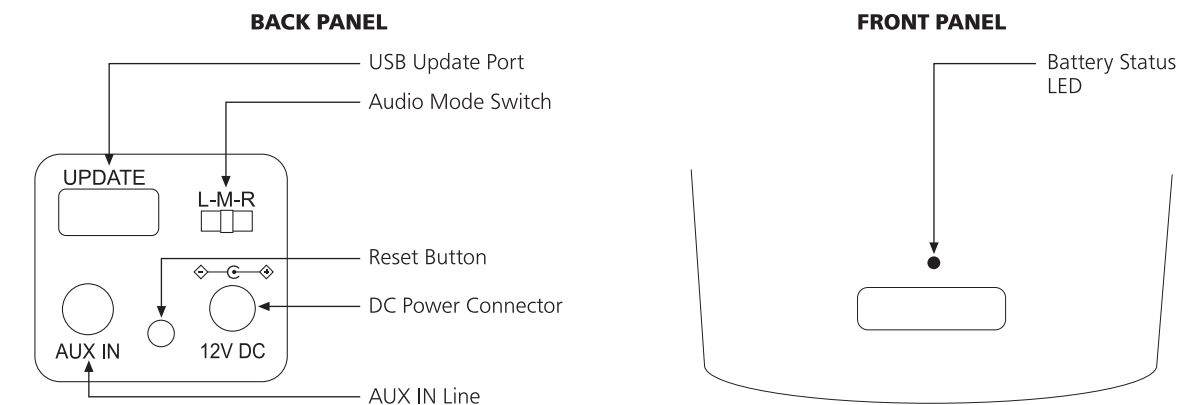
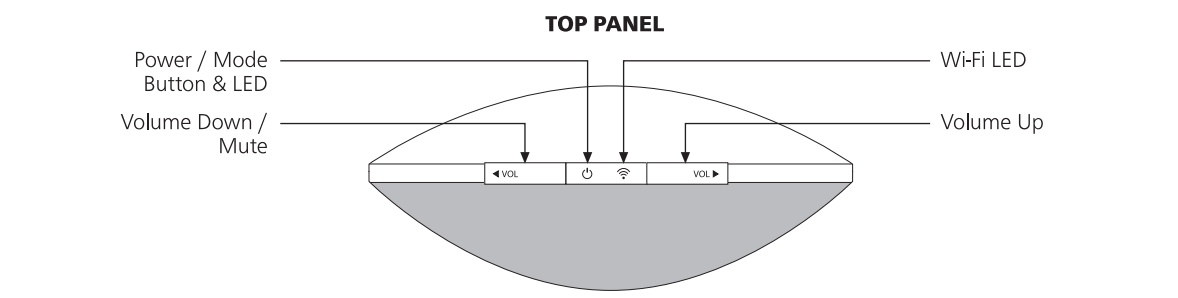


# Controls

For more information see [www.thesmartspeaker.com](http://www.thesmartspeaker.com)

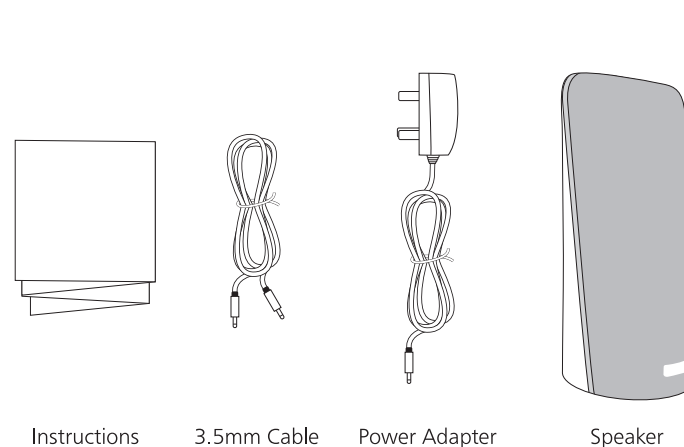


- Power/Mode Button:** Press this button briefly to turn the speaker on. Press and hold for 2 seconds to put it into Off Mode. When the power is on, a brief press of the Power/Mode Button & LED will change between the 3 Modes. **CONNECTED Mode** > **AUX IN Mode** > **WI-FI DIRECT Mode**. A Green LED signals **CONNECTED Mode**, No LED light signals **AUX IN Mode** and Solid Orange LED signals **WI-FI DIRECT Mode**.
- Volume Down/Mute Button:** Briefly press this button to lower the volume. Pressing this button for more than 2 seconds will mute the sound, the Power LED will flash whilst the sound is muted. When the sound is muted, press the Volume Down button for 2 seconds to restore the sound to its previous level. Pressing the Volume down button briefly whilst the sound is muted will restore the sound and reduce the volume.
- Volume Up Button:** Briefly pressing the button will increase the volume by one step. Holding the button down will continuously raise the volume. When the speaker is muted, pressing this button will restore sound and increase the volume.

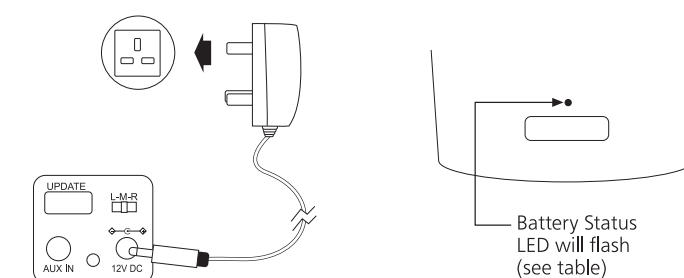
For more help and extended instructions please visit [www.thesmartspeaker.com](http://www.thesmartspeaker.com)

# Before You Start

Box contents and LED descriptions



## Charging your speaker



## Finally before you start

For Mac / PC / Android users please use Set Up Option 3.  
 For iOS device users you can use either Set Up Option 1, 2 or 3.  
 Android App – Our Android App is fully DLNA certified.  
 AirPlay works with the new iPad 3, iPad 2 and iPad 1, iPhone5, iPhone4S, iPhone4, iPhone3GS, iPod touch (5th, 4th, 3rd and 2nd generations) with iOS 4.2 and iTunes 10.1 (Mac and PC) or later. You may want to have your wireless router password handy (for setup options 2 & 3).  
 When you see the term "iOS device" it refers to any iPod, iPhone or iPad which is running Apple Operating System iOS 4.2 or later.

For more help and extended instructions please visit [www.thesmartspeaker.com](http://www.thesmartspeaker.com)

Top Panel LED Status	Description
Green	Connected to wireless network.
Red, flashing slowly	Either the signal strength is too low or the process to connect to the Wi-Fi network needs to be repeated.
Red, flashing quickly	Speaker is starting up. If the Speaker persists in this state, press the Reset Button.
Red & green, flashing alternately	This shows the unit is in Network Configuration Mode.
Brief orange	This confirms a reset action has been received and will be performed, it will only appear briefly.
Orange, flashing slowly	There is a problem with the firmware. To resolve the problem, press the Reset Button or perform a firmware upgrade. See "System Upgrade".
Solid orange	The speaker is in <b>WI-FI DIRECT Mode</b> , you can now transmit audio using AirPlay outside your home network. Brief press of the Power/Mode Button changes between AirPlay Mode > <b>AUX IN Mode</b> > <b>WI-FI DIRECT Mode</b> .
Off	If the Power/Mode Button & LED is on, but the Wi-Fi LED is off, the Speaker is in <b>AUX IN Mode</b> .

Battery Status LED	Description
Not Flashing & No Light	When Plugged In: the battery is fully charged. When Running On Battery: power is sufficient.
Blinking Slowly	When Plugged In: The Battery has a good charge level and is being charged until it is full.
Blinking Normal	When Plugged In: The battery is low, it is being charged.
Blinking Fast	When Running on Battery: The battery is low and needs to be charged.

# Connecting your speaker to your Wi-Fi network (use Option 1 or 2 with an iOS device. Use Option 3 for Mac / PC / Android set up)

Option 1 – Wi-Fi share with iOS 5 (note you need to be running iOS 5 or later for this to work)

- Make sure your iOS device is connected to the Wi-Fi network that you want to use to listen to your speaker. Your device needs to be unlocked and on the Home Screen.
- Switch on your speaker and connect your iOS device to your speaker via your USB sync cable (supplied with your iOS device, this also works with the lighting cable)
- BRIEFLY (do not hold down) the ◀VOL and VOL▶ buttons simultaneously on your speaker.
- You will now see a screen asking you to share Wi-Fi settings. A prompt will appear on the screen of your iOS device, press "Allow". If this does not happen and you are running iOS 5 or later, repeat step 3 again. You can do this a couple of times until you see the pop up box.
- Your speaker will now restart and the Wi-Fi LED will turn **GREEN** to indicate you are connected.
 

**45 Seconds**

Do not disconnect your speaker from your iOS device until the Wi-Fi LED turns **GREEN**. If it fails to do so, make sure you are in range of your wireless router and repeat steps 3 and 4. When you have connected to your router, the Wi-Fi LED will turn **GREEN** and you can disconnect the cable.
- You have finished setting up your speaker. Tap the AirPlay icon on your iOS device or select it in iTunes. Choose your speaker, and then press play. (See the "Using AirPlay" section for more details). **COMPLETED.**

**NOTE:** If you wish to change the name of your speaker, you will need to use setup option 2 or 3.

Option 2 - Using our "Connect" App for iOS Devices

- Download the Connect App from the App Store. Make sure your speaker is plugged into the mains and switched on. Wait for the Wi-Fi LED to flash slow **RED**. Connect your iOS device to the speaker using your USB sync cable and launch the App.
- Wait for the App to load, Tap on the large box to start SETUP. Once the speaker has rebooted tap on the first box and name your speaker. Once you are happy, tap "Done".
- Tap on the second box, scroll through the available wireless routers to select your own, then press "OK".
- Tap the third box, insert the router's password and press "Join". **NOTE** your password may be case sensitive. Once you have inserted your password you must disconnect your iOS device by removing the USB sync cable from the speaker.
- Your speaker will now restart and the Wi-Fi LED will turn **GREEN** to indicate you are connected. You are now ready to play your music. For information on how to use AirPlay, see the "Using AirPlay" section overleaf. **COMPLETED.**

For more help and extended instructions please visit [www.thesmartspeaker.com](http://www.thesmartspeaker.com)

## Using AirPlay

### Using AirPlay from iTunes

From iTunes click, iTunes > Preferences > Devices and tick the box for "Allow iTunes Control From Remote Speakers". Click "OK" and close this window.

Providing your speaker and iTunes are connected to the same network you should see in the top left hand corner of iTunes. Click on the and connect to your speaker.

**NOTE:** If you want to transmit to more than one speaker click "Multiple Speakers". You can then select which speaker(s) you want to use.

For more help and extended instructions please visit [www.thesmartspeaker.com](http://www.thesmartspeaker.com)

### Using AirPlay from your iPod Touch, iPhone or iPad

If you're running iOS 7 on your iPhone or iPad then Control Center has made it easy to locate the AirPlay icon. Just a simple swipe up from any screen (including the lock screen) allows you to access the AirPlay icon, play, pause, skip a song and change the volume.

Providing your speaker and iOS device are connected to the same network you should see in the bottom right hand corner.

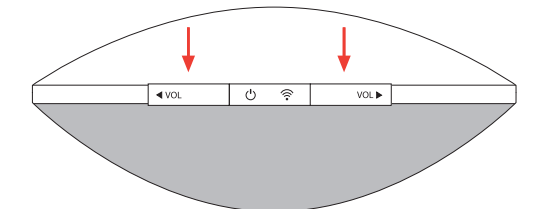
Tap on the , choose your speaker and press play.

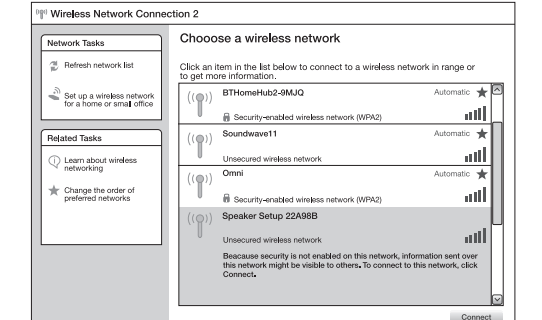
For more help and extended instructions please visit [www.thesmartspeaker.com](http://www.thesmartspeaker.com)

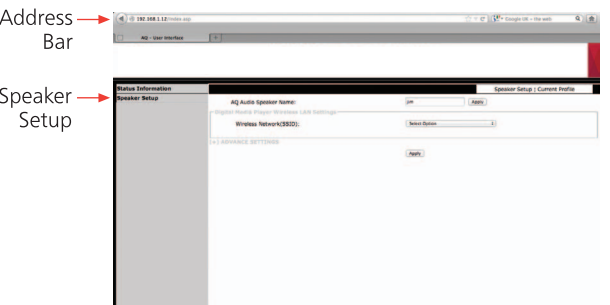
# Connect your speaker to your network (Mac/PC and Android)

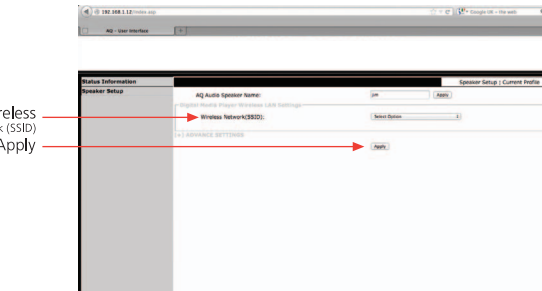
## Option 3 – Manual Wi-Fi wireless setup

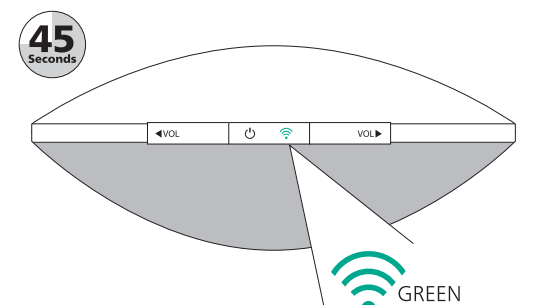
- First remove any network cable from your PC or Laptop. Switch on your speaker with a brief press of the **Power** button. Once the Wi-Fi LED is slowly flashing **RED**, simultaneously hold down both **Vol-** and **Vol+** for 5 seconds until the LED turns **ORANGE** then release.

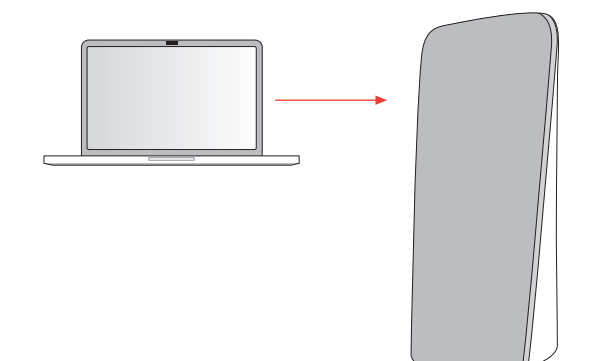

- Wait for the Wi-Fi LED to flash alternatively **RED** and **GREEN** to show your speaker is in configuration mode. On your Mac or PC, select the wireless network called "SmartSpeaker Setup XXXXXX".


- Open a web browser (Safari, Firefox etc) and enter **192.168.1.12** into the address bar (not the search box). Once the page loads, click "Speaker Setup" on the left hand side.


- You can change your speaker name here and click "Apply". Next, select the wireless network you want to connect to from the dropdown box titled "Wireless Network (SSID)" and enter your network password and click "Apply". Make sure to enter this password now, don't rely on your browser to auto-fill this correctly.


- A dialog box will appear asking if you are happy with all your entries. Click "OK" and your speaker will start the connection process. You can close the webpage now and wait for the Wi-Fi LED to turn **GREEN**.


- You have now finished setting up your speaker to your Network.

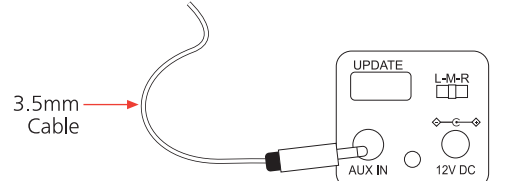


For more help and extended instructions please visit [www.thesmartspeaker.com](http://www.thesmartspeaker.com)

## Using your speaker outside your home network

### AUX IN Mode

If you wish to use your speaker whilst outside your home network you can use the 3.5mm line in cable provided. Simply connect the cable to your device and in turn to the AUX IN socket on the speaker.



Once connected a brief press of the Power/Mode button will change your speaker to AUX/IN Mode. You can then press play on your audio device to listen to your music. Another brief press on the Power/Mode button returns your speaker to AirPlay Mode.

### WI-FI DIRECT Mode

Once switched on, briefly press the power button ONCE to enter AUX IN Mode (see above). Another press will enter the speaker into **WI-FI DIRECT** Mode. Once in this mode the Wi-Fi LED will turn solid **ORANGE**. From your iOS device, select Settings > WiFi. Scroll through the available networks, you will see one called **WI-FI DIRECT** Mode. Connect to it then exit Settings. You will then be able to use AirPlay as usual from your Music App. Another brief press of the Power/Mode button will revert back to **CONNECTED** Mode. You can place a password on **WI-FI DIRECT** Mode to stop anyone interrupting your audio stream if you want. For details of how to do this see the full manual which can be downloaded on our website. NOTE: When in **WI-FI DIRECT** Mode, you can still send and receive text messages and phone calls but will not have access to the internet.

For more help and extended instructions please visit [www.thesmartspeaker.com](http://www.thesmartspeaker.com)

## Troubleshooting

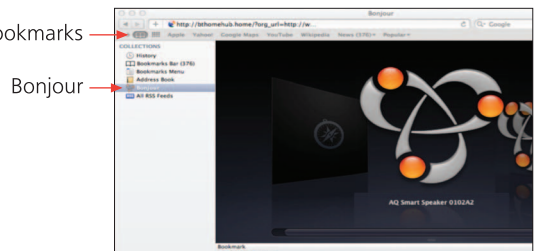
Problem	Solution
No Sound (when in <b>CONNECTED</b> Mode)	<ul style="list-style-type: none"> <li>The speaker may be out of range of the network, or not connected to a network. Check to make sure that the Wi-Fi LED is green.</li> <li>Try pressing the reset button on the back of the speaker.</li> <li>Make sure the volume control on the iOS device is not set too low or muted.</li> <li>Try selecting the internal speaker on your iOS device then re-selecting the speaker from the AirPlay device list.</li> <li>Try switching off the speaker and re-starting it.</li> </ul>
Sound is too quiet	<ul style="list-style-type: none"> <li>Try changing the volume on the speaker. iTunes will automatically reset this volume when it connects to the speaker.</li> <li>Sound Check may be switched on. This limits the volume output of your iOS device. Turn it off from Settings &gt; Music &gt; Sound Check.</li> </ul>
Speaker stops responding (pressing buttons doesn't do anything)	<ul style="list-style-type: none"> <li>Press the reset button on the back of the speaker to force it to restart. This will not lose your Wi-Fi settings.</li> </ul>
Wi-Fi LED is flashing red slowly	<ul style="list-style-type: none"> <li>The speaker is not connected to the network. Either the speaker is not in range of the network, or there is a problem with the configuration settings.</li> <li>If you have just applied the settings, you may need to press the reset button on the back of the speaker to finish applying the new settings.</li> <li>When using the Connect App to set up, ensure that you have pressed "Done" after you have entered the speaker name.</li> </ul>
No Sound (when using Aux In connection)	<ul style="list-style-type: none"> <li>Ensure that the speaker is in AUX IN Mode by pressing the POWER/MODE button once, this will turn the Wi-Fi LED off.</li> <li>Ensure the 3.5mm Cable is fully plugged into the socket.</li> <li>Check that the speaker has not been muted (The POWER/MODE button will flash when the speaker is muted).</li> </ul>
<b>WI-FI DIRECT</b> Mode	<ul style="list-style-type: none"> <li>If you set a password for <b>WI-FI DIRECT</b> Mode and forgot it, or spell it incorrectly, press the POWER/MODE button, VOLUME UP and VOLUME DOWN together for 10 seconds to carry out a System Restart of your speaker.</li> <li>If you want to remove your password, after your press apply you must RESTART your speaker by pressing the RESET button at the back of the speaker.</li> </ul>

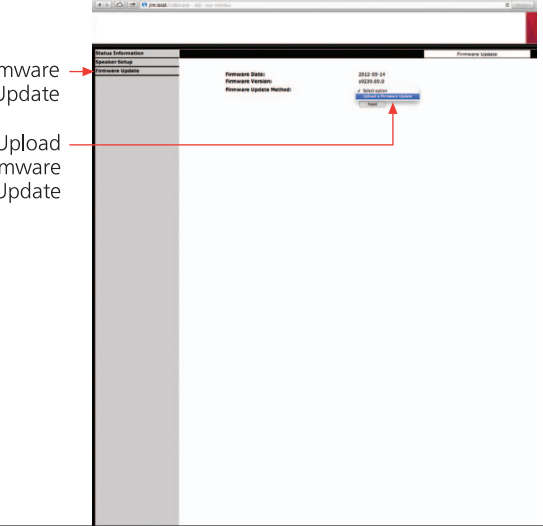
For more help and extended instructions please visit [www.thesmartspeaker.com](http://www.thesmartspeaker.com)

## System Upgrade

### Upgrading your speaker

- Before you begin, ensure you have the new firmware downloaded to your desktop from [www.thesmartspeaker.com](http://www.thesmartspeaker.com). Make sure your speaker is switched ON and connected to your wireless network.

  - Check that you have the latest version of Safari installed on your computer.
  - Open Safari and open the bookmarks sidebar. Under "Collections", choose "Bonjour". Under Bookmarks in the centre section, Double Click your speaker in the list. If you know the IP address of your speaker you can type this into any web browser.
- Choose "Firmware Update" from the menu on the left. Select "Upload a Firmware Update" from the "Firmware Update Method" dropdown box and click "Next" to continue.


- Click "Choose File" and select the firmware update file you have downloaded to your desktop. Click "Upload" to copy the file to the speaker.
- Click "OK" to start the installation process. Depending on the size of the file, this may take a few minutes. Do not attempt to restart the speaker or disconnect the power if the Power LED on the top of the speaker is still flashing.
- Depending on the update, your speaker may need to be set up to your router again using Options 1, 2 or 3 from the "Connect you speaker to your network" option list.
- Your speaker will now be upgraded to the new software. Please see [www.thesmartspeaker.com](http://www.thesmartspeaker.com) for a full list of extra features that this software will bring to your speaker.

For more help and extended instructions please visit [www.thesmartspeaker.com](http://www.thesmartspeaker.com)



## Start Guide

Available on




[www.thesmartspeaker.com](http://www.thesmartspeaker.com)