## **Zed-Up Lite**



Acrylic tray section 7.5mm deep 23mm lip Zed-up Lite is a popular literature stand, that is stylish and highly portable. Ideal for exhibitions and displays.

#### Features & benefits

- High tech styling
- Double-sided acrylic shelves
- Heavy duty lockable carry case included
- Collapsible
- Available in anodised silver
- 3 models to suit A3, A4 and A5 literature



NB A4 and A3 versions have 6 pockets, A5 version has 7 pockets

hardware specifications			
Assembled dimensions (mm):	A3 Zed-Up Lite 1420 (h) x 470 (w) x 370 (d)	A4 Zed-Up Lite 1460 (h) x 256 (w) x 370 (d)	A5 Zed-Up Lite 1300 (h) x 194 (w) x 284 (d)
Closed dimensions (mm):	110 (h) x 471 (w) x 400 (d)	110 (h) x 256 (w) x 400 (d)	120 (h) x 206 (w) x 284 (d)
Overall tray dimensions (mm):	320 (h) x 465 (w)	320 (h) x 255 (w)	235 (h) x 195 (w)
Acrylic tray section dimensions (mm):	305 (h) x 437 (w)	305 (h) x 220 (w)	218 (h) x 159 (w)
Weight (kg):	11kg (24.2lbs) approx	7.5 kg (16.5lbs) approx	6 kg (13.2lbs) approx


#### All dimensions shown are approx.

### **Assembly Instructions**

# Important: Ensure fingers are kept clear of folding mechanism when opening and closing the unit




Slide locking tab away from pivot arm at base of unit. Repeat for 2nd locking tab.

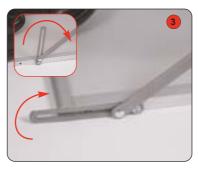

Whilst raising the unit note position of the pivot arms. To ensure correct assembly both pivot arms must rotate through 180 degrees.



Holding the top tray, gently raise the trays upwards. Place your foot on the base to aid stability.

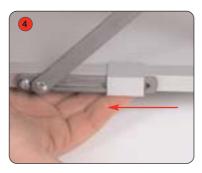

Slide locking tab over pivot arm at base of unit. Repeat for 2nd locking tab.



To close:

- 1, Slide the locking tabs away from the pivot arms at the base of unit.
- 2, Lift the top tray and gently lower into the closed position. (DO NOT DROP)