

T

e

m


c

a



n

a

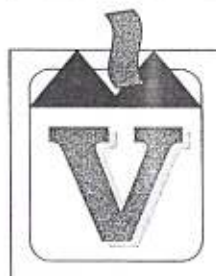

**Temcana 3C, 6C**

**Temcana 3CEM, 6CEM**

**Balanced Flue  
Convactor Heaters**

**User Instructions**

## **GENERAL**

These appliances have been tested and certificated for use on natural gas (G20 at a supply pressure of 20 mbar) and propane (G31 at a supply pressure of 37mbar) in GB and IE.

The heater is a balanced flued appliance with natural convection discharge. The burner and flue gases are sealed from the room. Because of this, the burner is lit by a pilot flame; this pilot is lit by a spark. The pilot is fitted with a safety device which cuts off the gas supply to both itself and the main burner should it go out for any reason.

The EM model is fitted with an electrically operated valve which permits the appliance to be remotely operated, e.g. by a time clock.

Any smells of fumes given off during initial use of the heater should disappear within a day or two. If not, seek expert advice.

If a shelf is to be fitted above the heater, it must be a minimum of 200 mm above the top of the heater.

The hem of any curtain fitted above the heater must finish at least 50 mm above the top of the heater cabinet.


DO NOT cover or obstruct the convected air outlet grille with clothes or other materials.

Whilst this appliance meets the required safety standards, additional guarding is recommended to give full protection to young children, the elderly or the infirm. Any guard fitted must conform to BS 8423:2002 – Fire guards for fires and heating appliances for domestic use.

Please now read the Operating Instructions and keep this booklet for future reference.

## **1. OPERATING INSTRUCTIONS**

- a) Ensure that the electrical supply to the heater is switched off.
- b) Ensure that the time switch (if fitted) is set to an ON period or that the alternative switching device is switched on.
- c) Open the access door at the right hand side of the heater
- d) Turn the control knob A to the pilot only position i.e. until the white star symbol is adjacent to the pointer on the control cover.
- e) Press down knob A firmly and, at the same time, push down igniter knob B and release.

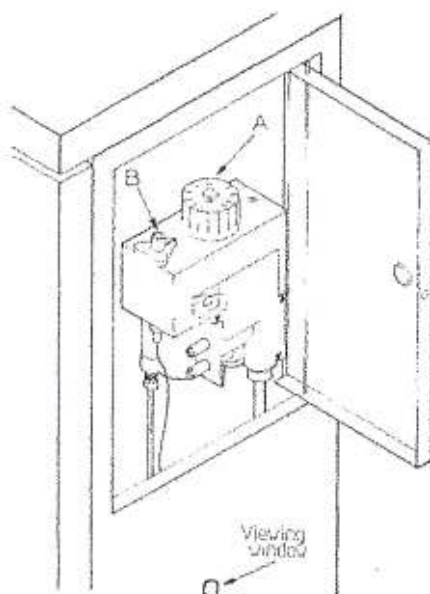

- f) Whilst continuing to hold in knob A, check to see if the pilot is alight by looking through the viewing window. If the pilot is not alight, repeat e) until it does light, remembering to keep knob A pressed firmly in.
- g) Once the pilot is alight, continue pressing knob A for a further 10 or 15 seconds.
- h) Release knob A and the pilot should remain alight. If it does not, repeat e), f), g), and h), but this time hold in knob A for a little longer.
- i) Switch on the electrical supply to the heater (EM models only).
- j) Turn control knob A to the desired thermostat setting.
- k) Close the access door.

## **2. TO TURN THE HEATER OFF**

### **a) For short periods**

- i) Turn the control knob A to the pilot only position as in 1)d) above.
- ii) On EM models, switch off the mains electrical supply to the heater.

### **b) For longer periods**

- i) Turn the heater off as in 2)a) above.
- ii) Turn the control knob A to the position i.e. until the solid white circle is adjacent to the pointer on the control cover; this will extinguish the pilot.

N.B. when control knob A is turned to the off position, a safety latch operates which prevents ignition of the pilot for approximately 2 minutes.

## **3. AFTER CARE**

- a) Keep the outside of the heater clean using a damp cloth, but only when the electrical supply has been switched off and the heater is cool (see 2)b) above).
- b) To ensure the continued efficient and safe operation of the heater, it is essential that regular annual servicing is carried out by a competent person.

### **ELECTRICAL SUPPLY (EM models only)**

230v 50Hz ~ to be fused 3A

**WARNING – THIS APPLIANCE MUST BE EARTHED**



**Vulcana Gas**

30 Bridge Road, Haywards Heath, West Sussex, RH16 1TX

Tel: 01444 415871 • Fax: 01444 441433

Email: [sales@vulcanagas.co.uk](mailto:sales@vulcanagas.co.uk) • Website: [www.vulcanagas.co.uk](http://www.vulcanagas.co.uk)