

Table Of Contents

1	Notice.....	1
1.1	Safety instructions.....	2
2	About this document.....	7
2.1	Legend.....	7
2.2	Online versions.....	8
2.2.1	DS-NET users manual.....	8
2.2.2	DS-NET-CPU users manual.....	8
2.2.3	DEWESoft™ tutorials.....	8
2.3	Glossary and abbreviations.....	8
3	Getting started.....	17
3.1	Software installation.....	17
3.1.1	Windows® 7.....	17
3.1.2	Windows basics.....	19
3.1.3	DEWESoft™ installation.....	20
3.1.4	test.commander installation.....	26
3.2	Licensing.....	28
3.2.1	DS NET licensing.....	28
3.2.2	test.commander.....	29
3.3	Ethernet connection.....	30
3.3.1	Ethernet explained.....	31
3.3.2	DS NET factory settings.....	32
3.3.3	Connection using DHCP.....	32
3.3.4	Direct Connection (no DHCP).....	33
3.3.5	Allowing access to network devices (firewall).....	36
3.4	DEWESoft™ configuration.....	40
4	DS NET plugin.....	43
4.1	Synchronisation.....	43
4.1.1	Synchronisation Glossary.....	43
4.1.2	Sync options.....	47
4.1.3	Overview.....	49
4.1.4	One PC and several DS NET systems.....	49
4.1.5	Several PCs and DS NET systems.....	55
4.2	Hardware setup.....	56
4.2.1	Sync mode.....	56
4.2.2	Advanced.....	59
4.2.3	Device lists.....	60
4.2.4	Identifying a device.....	61
4.2.5	IP settings.....	61
4.2.6	Scanning for devices.....	62
4.2.7	Closing Hardware setup.....	62
4.3	Channel setup.....	63
4.3.1	Status.....	63
4.3.2	Sample rate.....	64
4.3.3	Measure mode.....	65
4.3.4	Config mode.....	69
4.3.5	Setup explained.....	84
5	DS NET Modules.....	87
5.1	DS NET system: general description.....	87
5.1.1	DS NET portable line.....	87
5.1.2	DS NET rack Line.....	87
5.2	DS NET Modules: general information.....	87
5.2.1	Special modules.....	88
5.2.2	Measurement Modules.....	89
5.2.3	Optional connector adapters.....	91
5.2.4	Terminal connections.....	91
5.2.5	LED flash codes (for measurement modules).....	92
5.2.6	Sensor information.....	93

- 5.2.7 Power supply requirements.....95
- 5.3 DS GATE.....95
 - 5.3.1 DS-GATE connectors.....96
 - 5.3.2 LED flash codes (DS-GATE).....96
 - 5.3.3 Reading data.....97
 - 5.3.4 DS GATE: Specifications.....97
- 5.4 DS NET ACC2.....99
 - 5.4.1 ACC2: Voltage.....99
 - 5.4.2 ACC2: Current.....100
 - 5.4.3 ACC2: Potentiometer.....100
 - 5.4.4 ACC2: Resistance, Pt100, Pt1000.....100
 - 5.4.5 ACC2: Thermocouple.....100
 - 5.4.6 ACC2: Full and half-bridge transducers.....101
 - 5.4.7 ACC2: Strain gauge quarter bridge.....101
 - 5.4.8 ACC2: IEPE sensor.....102
 - 5.4.9 ACC2: Digital input and output.....102
 - 5.4.10 ACC2: Specifications.....102
- 5.5 DS NET CFB2.....105
 - 5.5.1 CFB2: LVDT full bridge.....105
 - 5.5.2 CFB2: Full and half bridge transducer.....106
 - 5.5.3 CFB2: Strain gauge quarter bridge.....106
 - 5.5.4 CFB2: Analogue output.....107
 - 5.5.5 CFB2: Digital input and output.....107
 - 5.5.6 CFB2: Specifications.....107
- 5.6 DS NET BR8.....110
 - 5.6.1 Full-bridge 6 wire.....110
 - 5.6.2 Full-bridge 4 wire.....110
 - 5.6.3 Half-bridge 5 wire.....111
 - 5.6.4 Half-bridge 3 wire.....111
 - 5.6.5 Quarter-bridge.....112
 - 5.6.6 BR8: Specifications.....112
- 5.7 DS NET BR4.....114
 - 5.7.1 DS NET BR4-D.....114
 - 5.7.2 DS NET BR4-L.....115
 - 5.7.3 BR4: Voltage.....116
 - 5.7.4 BR4: Current.....116
 - 5.7.5 BR4: Potentiometer.....117
 - 5.7.6 BR4: Resistance, Pt100, Pt1000.....117
 - 5.7.7 BR4: Thermocouple.....117
 - 5.7.8 BR4: Full bridge transducer.....118
 - 5.7.9 BR4: Strain-gauge half and quarter-bridges.....118
 - 5.7.10 BR4: Specifications.....119
- 5.8 DS NET V8.....121
 - 5.8.2 V8: Voltage.....121
 - 5.8.3 V8: Current.....122
 - 5.8.4 V8: Digital input and output.....123
 - 5.8.5 V8: Specifications.....123
- 5.9 DS NET V8-200.....124
 - 5.9.1 V8-200: Voltage.....125
 - 5.9.2 V8-200: Specifications.....126
- 5.10 DS NET V4.....127
 - 5.10.1 DS NET V4-B.....127
 - 5.10.2 V4: Voltage.....127
 - 5.10.3 V4: Specifications.....128
- 5.11 DS NET V4-HV.....129
 - 5.11.1 V4-HV: Voltage.....129
 - 5.11.2 V4-HV: Specifications.....130
- 5.12 DS NET TH8.....131
 - 5.12.1 DS NET TH8-C.....131
 - 5.12.2 TH8: Voltage.....131
 - 5.12.3 TH8: Thermocouple.....131

5.12.4 TH8: Specifications.....	132
5.13 DS NET TH4.....	133
5.13.1 TH4: Thermocouple.....	134
5.13.2 TH4: Specifications.....	134
5.14 DS NET DIO8.....	135
5.14.1 DIO8: Digital input and output.....	135
5.14.2 DIO8: Specifications.....	137
5.15 DS NET AO4.....	138
5.15.1 AO4: Digital input and output, plug 1.....	139
5.15.2 AO4: Analogue output, plug 2.....	140
5.15.3 AO4: Specifications.....	140
5.16 DS NET SUPPLY.....	142
5.17 DS NET WiFi.....	143
5.17.1 LED indicators.....	143
5.17.2 Reset button.....	143
5.17.3 WiFi: Specifications.....	144
5.17.4 Configuration.....	145
6 DS NET hardware.....	155
6.1 Skeletal structure.....	155
6.1.1 Physical Dimensions.....	156
6.1.2 Weight & Power Consumption.....	157
6.2 DIP Switches.....	157
6.2.1 DIP Switches - Revision 1.0.....	158
6.2.2 DIP Switches - Revision 2.0.....	158
6.2.3 Setting the address.....	158
6.2.4 Hot swap.....	160
6.2.5 Terminating resistances.....	160
6.3 Fixation of the rubber feet.....	161
6.4 Fixation of the right handle.....	161
6.5 Interconnecting 2 backplanes.....	162
6.6 Fixation of a module.....	162
6.7 Insert/remove a module.....	163
6.8 Adding a new module.....	163
6.9 Exchanging a module (hot-swap).....	163
6.10 Replacing a module.....	164
6.11 Exchanging a socket.....	164
7 Data Logger.....	165
7.1 Continuous Logging via DEWESoft™.....	165
7.1.1 Enable logging.....	165
7.1.2 Attach a USB stick.....	166
7.1.3 Logging.....	166
7.2 Logging controlled by digital input signal.....	167
7.2.1 Variables in test.commander.....	168
7.3 Working with the logged data.....	173
7.4 Troubleshooting.....	174
8 Service guide.....	177
8.1 Add-on update.....	177
8.2 Firmware update.....	177
8.2.1 Firmware update for modules (aka. slaves).....	178
8.2.2 Firmware update for DS-Gate.....	180
8.3 DEWESoft™ update.....	183
8.3.1 Release version.....	184
8.3.2 Beta versions.....	184
8.4 Dewesoft USB devices firmware upgrade.....	186
9 Advanced topics.....	187
9.1 Offline setup.....	187
9.1.1 Prepare the test.commander project.....	187
9.1.2 Assign the offline setup.....	188
9.2 Controlling digital outputs.....	190
9.2.1 DEWESoft™ control channels.....	190
9.2.2 Alarms inside DS-NET.....	192

- 9.3 Multiple DEWESoft™ instances.....196
 - 9.3.1 Noteworthy.....197
 - 9.3.2 System description.....197
 - 9.3.3 Preparation.....197
- 9.4 IRIG sync with Dewesoft USB devices.....202
 - 9.4.1 Prerequisites.....202
 - 9.4.2 Hardware setup.....203
- 10 Appendix.....205
 - 10.1 Documentation version history.....205

1 Notice

The information contained in this document is subject to change without notice.

	<p>CAUTION</p> <p>Dewesoft GmbH. shall not be liable for any errors contained in this document. Dewesoft MAKES NO WARRANTIES OF ANY KIND WITH REGARD TO THIS DOCUMENT, WHETHER EXPRESS OR IMPLIED. DEWESOFT SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Dewesoft shall not be liable for any direct, indirect, special, incidental, or consequential damages, whether based on contract, tort, or any other legal theory, in connection with the furnishing of this document or the use of the information in this document.</p>
---	--

Warranty Information:

A copy of the specific warranty terms applicable to your Dewesoft product and replacement parts can be obtained from your local sales and service office.

To find a local dealer for your country, please visit this link: <http://www.dewesoft.com/support> and select *Find dealers* on the left navigation bar.

Calibration

Every instrument needs to be calibrated at regular intervals. The standard norm across nearly every industry is annual calibration. Before your Dewesoft data acquisition system is delivered, it is calibrated. Detailed calibration reports for your Dewesoft system can be requested. We retain them for at least one year, after system delivery.

Support

Dewesoft has a team of people ready to assist you if you have any questions or any technical difficulties regarding the system. For any support please contact your local distributor first or Dewesoft directly.

Austria	Slovenia
Dewesoft GmbH Grazerstrasse 7 A-8062 Kumberg Austria / Europe Tel.: +43 3132 2252 Fax: +43 3132 2252-2 Web: http://www.dewesoft.com The telephone hotline is available Monday to Thursday between 09:00-12:00 (GMT +1:00) 13:00-17:00 (GMT +1:00) Friday: 09:00-13:00 (GMT +1:00)	Dewesoft d.o.o. Gabrsko 11a 1420 Trbovlje Slovenia / Europe Tel.: +386 356 25 300 Fax: +386 356 25 301 Web: http://www.dewesoft.com The telephone hotline is available Monday to Friday between 08:00 and 16:00 CET (GMT +1:00)

Service/repairs

The team of Dewesoft also performs any kinds of repairs to your system to assure a safe and proper operation in the future. For information regarding service and repairs please contact your local distributor first or Dewesoft directly.

Restricted Rights Legend:

Use Austrian law for duplication or disclosure.

Dewesoft GmbH
Grazerstrasse 7
A-8062 Kumberg
Austria / Europe

Printing History:

Version 3.3.7 Revision 839
Released 10. August 2010
Last changed: 7. October 2014 18:40

Copyright

Copyright © 2011 Dewesoft GmbH

This document contains information which is protected by copyright. All rights are reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

All trademarks and registered trademarks are acknowledged to be the property of their owners.

1.1 Safety instructions

Your safety is our primary concern! Please be safe!

Safety symbols in the manual

WARNING



Calls attention to a procedure, practice, or condition that could cause body injury or death.

CAUTION



Calls attention to a procedure, practice, or condition that could possibly cause damage to equipment or permanent loss of data.

General Safety Instructions

WARNING



The following general safety precautions must be observed during all phases of operation, service, and repair of this product. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the product. Dewesoft GmbH assumes no liability for the customer's failure to comply with these requirements.

- ⚠ The inputs must not, unless otherwise noted (CATx identification), be connected to the main circuit of category II, III and IV.
- ⚠ The power cord separates the system from the power supply. Do not block the power cord, since it has to be accessible for the users.
- ⚠ DO NOT use the system if equipment covers or shields are removed.
- ⚠ If you assume the system is damaged, get it examined by authorised personnel only.
- ⚠ Adverse environmental conditions are:
 - ⚠ Moisture or high humidity
 - ⚠ Dust, flammable gases, fumes or dissolver
 - ⚠ Thunderstorm or thunderstorm conditions (except assembly PNA)
 - ⚠ Electrostatic fields, et cetera.
- ⚠ The measurement category can be adjusted depending on module configuration.
- ⚠ Any other use than described above may damage your system and is attended with dangers like short-circuit, fire or electric shocks.
- ⚠ The whole system must not be changed, rebuilt or opened
- ⚠ DO NOT operate damaged equipment: Whenever it is possible that the safety protection features built into this product have been impaired, either through physical damage, excessive moisture, or any other reason, REMOVE POWER and do not use the product until safe operation can be verified by service-trained personnel. If necessary, return the product to Dewesoft sales and service office for service and repair to ensure that safety features are maintained.
- ⚠ DO NOT service or adjust alone. Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.
- ⚠ If you assume a more risk less use is not provided any more, the system has to be rendered inoperative and should be protected against inadvertent operation. It is assumed that a more risk less operation is not possible any more, if
 - ⚠ the system is damaged obviously or causes strange noises.
 - ⚠ the system does not work any more.
 - ⚠ the system has been exposed to long storage in adverse environmental.
 - ⚠ the system has been exposed to heavy shipment strain.
- ⚠ DO NOT touch any exposed connectors or components if they are live wired. The use of metal bare wires is not allowed. There is a risk of short cut and fire hazard!
- ⚠ Warranty void if damages caused by disregarding this manual. For consequential damages NO liability will be assumed!
- ⚠ Warranty void if damages to property or persons caused by improper use or disregarding the safety instructions.
- ⚠ Unauthorized changing or rebuilding the system is prohibited due to safety and permission reasons (CE).
- ⚠ Be careful with voltages >25 VAC or >35 VDC! These voltages are already high enough in order to get a perilous electric shock by touching the wiring.
- ⚠ The product heats during operation. Make sure there is adequate ventilation. Ventilation slots must not be covered!
- ⚠ Only fuses of the specified type and nominal current may be used. The use of patched fuses is prohibited.
- ⚠ Prevent using metal bare wires! Risk of short circuit and fire hazard!
- ⚠ DO NOT use the system before, during or shortly after a thunderstorm (risk of lightning and high energy over-voltage). An advanced range of application under certain conditions is allowed with therefore designed products only. For details please refer to the specifications.
- ⚠ Make sure that your hands, shoes, clothes, the floor, the system or measuring leads, integrated circuits and so on, are dry.
- ⚠ DO NOT use the system in rooms with flammable gases, fumes or dust or in adverse environmental conditions.
- ⚠ Avoid operation in the immediate vicinity of:
 - ⚠ high magnetic or electromagnetic fields
 - ⚠ transmitting antennas or high-frequency generators

-  for exact values please refer to enclosed specifications.
-  Use measurement leads or measurement accessories aligned to the specification of the system only. Fire hazard in case of overload!
-  Do not switch on the system after transporting it from a cold into a warm room and vice versa. The thereby created condensation may damage your system. Acclimatise the system unpowered to room temperature.
-  Do not disassemble the system! There is a high risk of getting a perilous electric shock. Capacitors still might be charged, even if the system has been removed from the power supply.
-  The electrical installations and equipments in industrial facilities must be observed by the security regulations and insurance institutions.
-  The use of the measuring system in schools and other training facilities must be observed by skilled personnel.
-  The measuring systems are not designed for use at humans and animals.
-  Please contact a professional if you have doubts about the method of operation, safety or the connection of the system.
-  Please be careful with the product. Shocks, hits and dropping it from already lower level may damage your system.
-  Please also consider the detailed technical reference manual as well as the security advices of the connected systems.

This product has left the factory in safety-related flawless and in proper condition.

In order to maintain this condition and guarantee safety use, the user has to consider the security advices and warnings in this manual.

EN 61326-3-1:2008

IEC 61326-1 applies to this part of IEC 61326 but is limited to systems and equipment for industrial applications intended to perform safety functions as defined in IEC 61508 with SIL 1-3.

The electromagnetic environments encompassed by this product family standard are industrial, both indoor and outdoor, as described for industrial locations in IEC 61000-6-2 or defined in 3.7 of IEC 61326-1.

Equipment and systems intended for use in other electromagnetic environments, for example, in the process industry or in environments with potentially explosive atmospheres, are excluded from the scope of this product family standard, IEC 61326-3-1.

Devices and systems according to IEC 61508 or IEC 61511 which are considered as “operationally well-tried”, are excluded from the scope of IEC 61326-3-1.

Fire-alarm and safety-alarm systems, intended for protection of buildings, are excluded from the scope of IEC 61326-3-1.

2 About this document

This is the Technical Reference Manual for DS-NET Version 3.3.7.

The manual is divided into several chapters. You will find:

-  A description of the system and the main combination and expansion options
-  The description of the connection variants and the pin assignments on the inputs and outputs
-  A comprehensive introduction to the configuration of the modules using the program `test.commander` and DEWESoft™
-  Comprehensive explanation of the module measurement technology and background information about working procedure
-  Technical data

The software that has been used must be:

-  DEWESoft™ Version 7.0.4 or higher
-  DEWESoft™ DS NET Plugin Version 4.3 or higher
-  DEWESoft™ DS NET Import Version 2.2 or higher
-  Firmware of the DS GATE module must be: Version V0.58 or higher

You will not find a description of the DS NET CPU and DS NET CAN modules. Those are described in the *DS-NET-CPU - Technical Reference Manual* (see 2.2.2 DS-NET-CPU users manual).

2.1 Legend

The following symbols and formats will be used throughout the document.

<p>IMPORTANT</p> 	<p>Gives you an important information about a subject. Please read carefully!</p>
<p>HINT</p> 	<p>Gives you a hint or provides additional information about a subject.</p>
<p>EXAMPLE</p> 	<p>Gives you an example to a specific subject.</p>

Example	Meaning	Description
Cancel	Button	a button that you can click
<i>File</i>	Menu Item	a menu item, will open a sub menu or a dialog
<i>Times New Roman</i>	List Item	an item in a list (or tree) that you can select
Events	Tab Sheet	a tab sheet that you can select
C:\Program Files\OpenOffice.org 3\readme.txt	File Path and Name	a file name or path
<i>Windows Key</i>	a term	any kind of term (maybe also compound)

Table 1: Layout formats used in the documentation

2.2 Online versions

2.2.1 DS-NET users manual

The most recent version of this manual can be downloaded from your homepage:

<http://www.dewesoft.com/support>

On the left side of this page select *User manuals* and then click the download link for the *DS NET users manual*.

2.2.2 DS-NET-CPU users manual

The *DS-NET-CPU - Technical Reference Manual* describes in detail the DS-NET-CPU module and also other special modules that can be used in combination with the DS-NET-CPU module (e.g. DS-NET-CAN module).

You can find the latest version of the *DS-NET-CPU - Technical Reference Manual* here:

<http://www.dewesoft.com/support>

On the left side of this page select *User manuals* and then click the download link for *DS NET CPU users manual*.

2.2.3 DEWESoft™ tutorials

The *DEWESoft™ tutorials* document, provides basics and additional information and examples for working with DEWESoft™ and certain parts of the program.

The latest version of the DEWESoft™ tutorials can be found here:

<http://www.dewesoft.com/download#Manuals>

On the left side of the page, select *Manuals and tutorials* and then click the download link of the *DEWESoft 7 tutorials* entry.

2.3 Glossary and abbreviations

This glossary includes explanations of some of the most important terms and abbreviations that are used in documentation.

Backplane

The part of the housing that serves as the back side for the modules and contains the socket (green PCB)



Illustration 1: Backplane with Socket

Bit

Bit, the basic unit of information storage, a single binary digit that is either *0* or *1*.
see also Baud (Bd)

Baud (Bd)

is synonymous to symbols per second per second. It is the unit of symbol rate, also known as baud rate or modulation rate; the number of distinct symbol changes.

A baud rate, by definition, means the number of times a signal in a communications channel changes state or varies.

EXAMPLE 1



A 2400 baud rate means that the channel can change states up to 2400 times per second.

This is often confused with the bit rate (expressed in bit/s), which is related, but may be different.
The number of bit per baud is determined by the modulation technique.

EXAMPLE 2



If we use a baud rate of 2400, and a phase modulation (which can transmit four bits per baud), this means that we can transfer 9600 bit/s.
 $2400 \text{ baud} \times 4 \text{ bits per baud} = 9600 \text{ bps}$

The baud rate (communication speed) between the DS GATE and the measurement modules can be configured via software.

CJC

Cold junction compensation.

Thermocouples measure the temperature difference between two points, not absolute temperature. To measure a single temperature one of the junctions - normally the cold junction - is maintained at a known reference temperature, and the other junction is at the temperature to be sensed.

Having a junction of known temperature, while useful for laboratory calibration, is not convenient for most measurement and control applications. Instead, they incorporate an artificial cold junction using a thermally sensitive device such as a thermistor or diode to measure the temperature of the input connections at the instrument, with special care being taken to minimize any temperature gradient between terminals. Hence, the voltage from a known cold junction can be simulated, and the appropriate correction applied. This is known as cold junction compensation.

For DS NET TH8 screw connector modules (5.12 DS NET TH8) you need a special connector TH8-CJC that has the CJC included.

The DS NET TH8-C modules have an integrated CJC.

For DS NET BR4 screw connector modules (see 5.7 DS NET BR4) you need a special connector BR4-CJC that has the CJC included.

DCF 77

DCF77 is a longwave time signal and standard-frequency radio station. Its primary and backup transmitter are located in Mainflingen, about 25 km south-east of Frankfurt am Main, Germany. The signal can be received in large parts of Europe, as far as 2000 km from Frankfurt.

DIP Switch

A DIP switch is a set of manual electric switches that are packaged in a group in a standard dual in-line package (DIP)

see 6.2 DIP Switches on page 157 for details

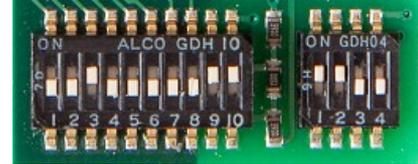


Illustration 2: DIP switches

Dewesoft

Dewesoft refers to the company.

DEWESoft™ refers to the software suite for data acquisition, data processing, data analysis and much more.

see www.dewesoft.com

DEWE-43

Dewesoft's hand-held USB measurement instrument (perfect for use with a laptop) can measure with sample rates up to 200kS/s per channel. It has 8 analogue inputs, 8 counter inputs, 24 digital inputs and 2 CAN ports. This hand-held instrument is most flexible to acquire signals like voltage, current, temperature, strain, vibration, pressure and more. Perfect to do recording, signal analysis, machine analysis, FFT and reporting.

The DEWE-43 can be hardware synchronised with DS-NET systems and is thus the perfect add-on if you have fast (up to 200kHz) and slow (up to 10kHz) signals.



Illustration 3: DEWE-43

DHCP

The Dynamic Host Configuration Protocol (DHCP) is an auto configuration protocol used on IP networks. Computers that are connected to IP networks must be configured before they can communicate with other computers on the network. DHCP allows a computer to be configured automatically, eliminating the need for intervention by a network administrator.

In the absence of DHCP, hosts may be manually configured with an IP address.

DS NET systems are configured to use DHCP per default (see 3.3.3 Connection using DHCP for details).

DS GATE

The Dewesoft gateway module is the most important part of a DS NET system, because it is responsible for all the communication between the DS NET modules and the host system. It can also be used to configure the modules.

see 5.3 DS GATE for details



GND

the electrical ground (aka. earth)

GPS

The Global Positioning System (GPS) is a space-based global navigation satellite system that provides reliable location and time information in all weather and at all times and anywhere on or near the Earth when and where there is an unobstructed line of sight to four or more GPS satellites.

Hex Key

aka. Allen key, Unbrako key, and Inbus key

A hex key is a tool of hexagonal cross-section used to drive bolts and screws that have a hexagonal socket in the head (internal-wrenching hexagon drive).



Host System

The DS NET system is usually connected to a host system that will regularly fetch the measurement data.

A typical host system is a Windows-PC that runs DEWESoft™, but I may as well be a Modbus client.

Moreover the DS NET system may be used standalone (without any host system) as a data logger.

Hz

The hertz (symbol: Hz) is the SI unit of frequency defined as the number of cycles per second of a periodic signal.

IP Address

Devices that are participating in the Ethernet must have a unique logical addresses: the IP (Internet Protocol) address.

see 3.3.1 Ethernet explained for details

IRIG-B

The Inter Range Instrumentation Group (IRIG) is the standards body of the Range Commanders Council (RCC). They publish a number of standards: e.g. IRIG timecodes The different timecodes defined in the Standard have alphabetic designations. A, B, D, E, G, and H.

IRIG-B has a Bit rate of 100 Hz.

LAN

A local area network (LAN) is a computer network covering a small physical area.

A LAN may use different communication technologies: e.g. Ethernet or wireless communication

LED

A light-emitting diode is a semiconductor light source.

It is used in all modules of the DS NET system to indicate the status of the modules.


PC

DS NET systems are typically connected to a Personal Computer which runs DEWESoft™ to fetch the measurement data.

See also: Host System

PCB

A printed circuit board, or PCB, is used to mechanically support and electrically connect electronic components using conductive pathways, tracks or signal traces etched from copper sheets laminated onto a non-conductive substrate.

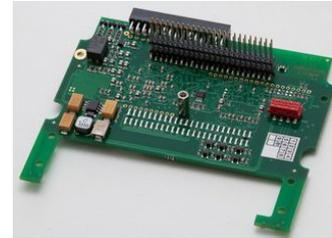

Portable Line

The portable line of the DS NET system has a robust housing that can accommodate up to 16 modules.


See also: Rack Line



Rack Line

The rack line of the DS NET system allows up to 12 DS NET modules to be used in a standard 19-inch rack.

See also: Portable Line

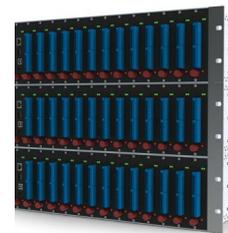

RTD

Resistance thermometers, also called resistance temperature detectors or resistive thermal devices (RTDs), are temperature sensors that exploit the predictable change in electrical resistance of some materials with changing temperature; e.g. Pt100 and Pt1000

RS-232

Recommended Standard 232: is a standard for serial communication. It is commonly used in computer serial ports.

DS GATE provides a RS-232 connector.

RS-485

RS-485 is a synonym for EIA-485 which is a standard defining the electrical characteristics of drivers and receivers. Digital communications networks implementing the EIA-485 standard can be used effectively over long distances and in electrically noisy environments. Multiple receivers may be connected to such a network in a linear, multi-drop configuration. These characteristics make such networks useful in industrial environments and similar applications.

DS NET uses RS-485 for the internal communication between the DS GATE and the DS NET modules.

3.1.1.2 Windows® 7: DEWESoft™ plugin registration

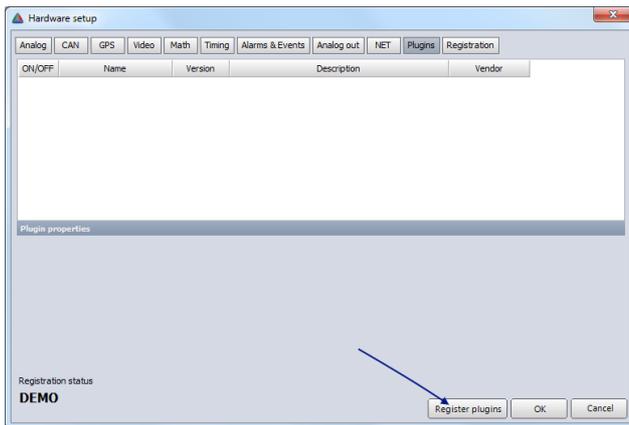


Illustration 8: Windows 7: Plugin Registration

Due to the User Access Control mechanism in Windows® 7 (and also Windows® Vista), DEWESoft™ cannot register the plugins automatically. Thus you must click the **Register plugins** button (see blue arrow in Illustration 8) once, whenever you add any plugins.

3.1.1.3 Windows® 7: Ethernet communication

When you make a direct connection from your DS-NET system to your PC, Windows® 7 may block the connection because it classifies the LAN connection as *Unidentified network*.

In this case, you must reconfigure windows to trust the connection. Detailed information about how to do this can be found here: <http://goo.gl/7MR6J>¹

The fastest way is to download the file

Set `Unidentified Networks Private.reg` (from the internet page mentioned above and to execute it). You will need Administrator rights to do this.



Illustration 9: Unidentified network

3.1.1.4 Windows® 7: test.commander

The program `test.commander` always needs to be executed with an user that has administrator rights on Windows® 7 – otherwise it will abort with an error message when you try to read the configuration of a connected DS NET system.

¹ this is a shortened URL, so that you need not type too much – the full version for this URL is: <http://www.sevenforums.com/tutorials/71408-unidentified-networks-set-private-public.html>

HINT

For newer versions the file name vary:

e.g. DEWESoft_FULL_7_0_4.exe, DEWESoft_FULL_7_1.exe, etc.

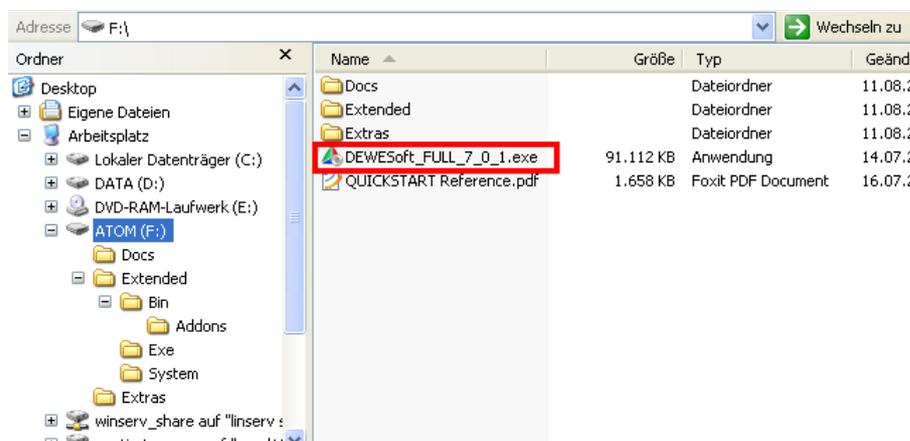


Illustration 16: Dewesoft installer file

3.1.3.1 Uninstall previous version

If you already have an older incompatible version of DEWESoft™ installed, the installer may show you this error dialog:

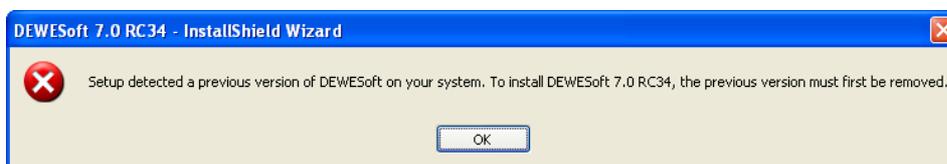


Illustration 17: Uninstall previous version message

DEWESoft™ can be uninstalled like any other windows program:

Go to **Start** – **Control Panel** - **Software**:

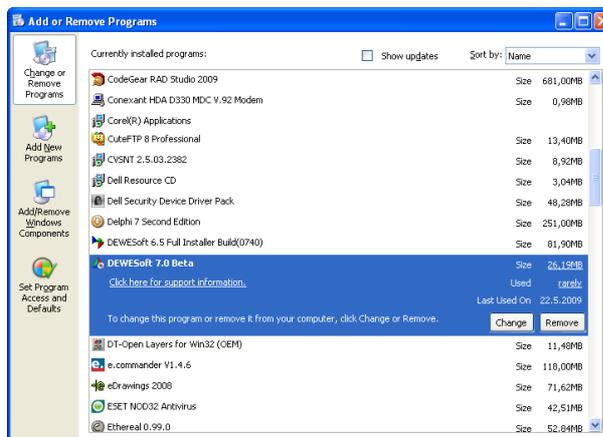


Illustration 18: Uninstall previous Dewesoft version

Click **Remove** and follow the instructions.

3.1.3.2 Installing new DEWESoft™ version

The first screen you see is the Welcome Screen:
click **Next >** to continue.

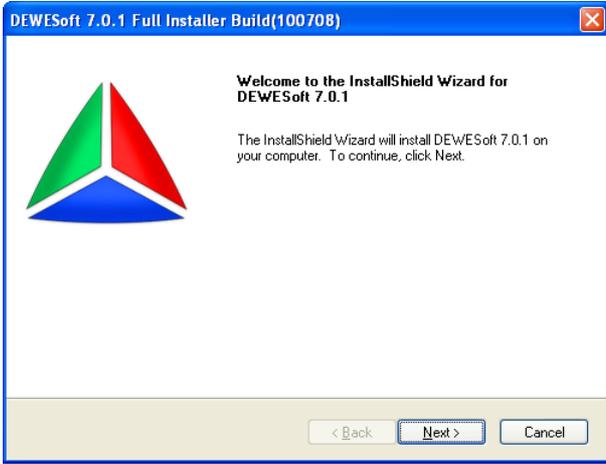


Illustration 19: Dewesoft Installer: Welcome Screen

In the *License Agreement* screen, read the license conditions carefully.

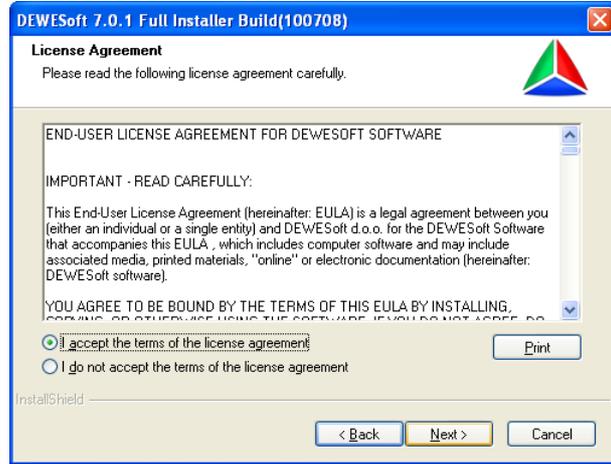


Illustration 20: Dewesoft Installer: License Agreement

If you agree, select the *I accept the terms of the license agreement* radio box and click **Next >** to continue.

In the *Setup Type* page, you must select the type of installation.

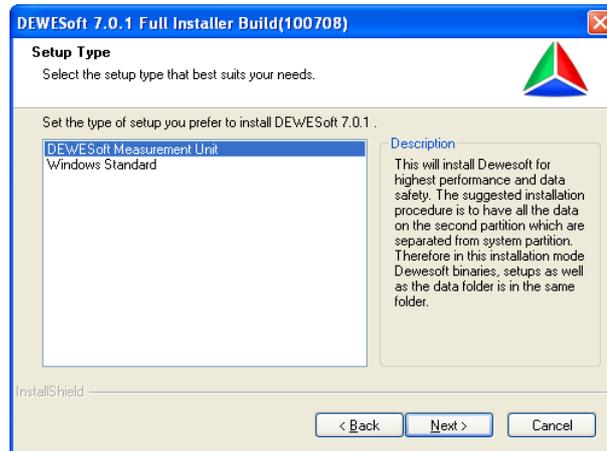


Illustration 21: Dewesoft Installer: Setup Type

The default and recommended setup type is *DEWESoft Measurement Unit*.

Note, that the path of the DEWESoft™ installation may vary depending on the setup type that you chose and on the number of hard-disk-partitions that are available on your system:

In Illustration 22, you can see that two hard-disk-partitions C: and D: exist (E: is a DVD drive)



Illustration 22: Two partitions

In Illustration 23, you can see that only one hard-disk-partition C: exist (D: is a DVD drive)



Illustration 23: One partition

Table 2: Hard-disk-partitions

DEWESoft measurement unit

The setup type *DEWESoft Measurement Unit* will install DEWESoft™ for highest performance and data safety.

If you have 2 or more hard-disk-partitions, then we recommend to have all the data on the second partition (or even second hard disk or array of disks) which are separated from the system partition. The System partition gets fragmented over time and then the writing performance dramatically drops

Therefore in this installation mode DEWESoft™ binaries, setups as well as the data folder will be installed in the same folder e.g. D:/Dewesoft7) on the second hard-drive-partition.

If you ever need to install a new operating system or need to reformat the system hard-drive-partition, the DEWESoft™ installation can remain: just the device drivers need to be reinstalled.

Directory name	Explanation	Default path
Bin	contains DEWESoft.exe	D:\DEWESoft7\Bin\V7_0
Addons	.dll files for plugins must be copied into this directory	D:\DEWESoft7\Bin\V7_0\Addons
Data	this is where DEWESoft™ will store your measurement data	D:\DEWESoft7\Data
Setups	this is where your DEWESoft™ setup files will be stored	D:\DEWESoft7\Setups
System	this is where DEWESoft™ project files are stored	D:\DEWESoft7\System\V7_0
Log	this is where DEWESoft™ will store log files	D:\DEWESoft7\System\V7_0\Logs

Table 3: DEWESoft™ directories (Measurement Unit Installation)

Windows standard

The setup type *Windows Standard* will install DEWESoft™ binaries in the Windows *program files* folder and setups and data files in the *My documents* folder.

This installation fully complies with Windows installation policies and is recommended for installing DEWESoft™ for viewing the data on corporate computers with strict IT policies.

Directory name	Default path
Bin	C:\Programme\DEWESoft7\Bin\V7_0
Addons	C:\Programme\DEWESoft7\Bin\V7_0\Addons
Data	user dependant directory: C:\Dokumente und Einstellungen\All Users\Dokumente\DEWESoft7\Data
Setups	user dependant directory: C:\Dokumente und Einstellungen\All Users\Dokumente\DEWESoft7\Setups
System	user dependant directory: C:\Dokumente und Einstellungen\All Users\Dokumente\DEWESoft7\System\V7_0
Log	user dependant directory: C:\Dokumente und Einstellungen\All Users\Dokumente\DEWESoft7\System\V7_0\Logs

Table 4: DEWESoft™ directories (Windows Standard Installation)

click **Next >** to continue.

The installer now let's you choose the *Destination Location* for the installation:

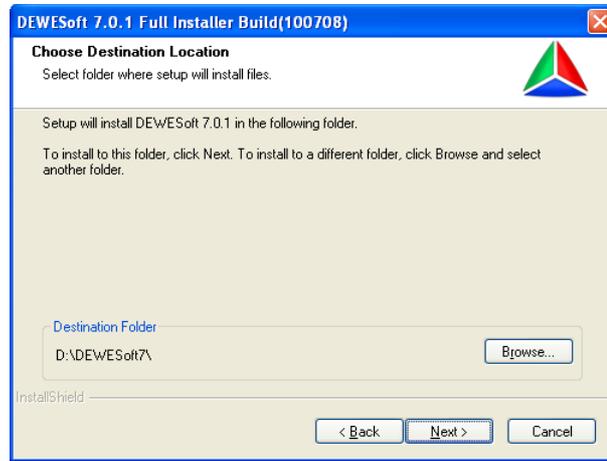


Illustration 24: Dewesoft Installer: Destination Location

Note that the path shown in the screen shot above is dependant on what setup type you have chosen.

IMPORTANT



Do not change the installation location!
This might cause problems with some plugins and features of DEWESoft™.

click **Next >** to continue.

You may get a warning concerning the Windows-Logo-Test (see Illustration 29). You can safely ignore this and continue the installation.



Illustration 29: Dewesoft Installer: Windows-Logo-Test warning

When the DEWESoft™ installation has completed successfully, you will see the final screen:

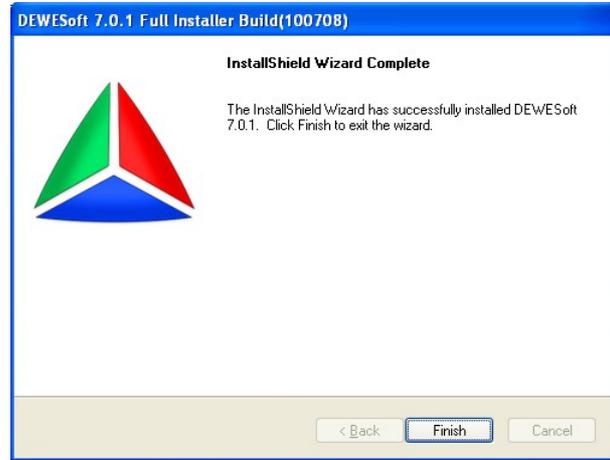


Illustration 30: Dewesoft Installer: Installation Complete

When you press **Finish** to complete the DEWESoft™ installation, you will see the following message:

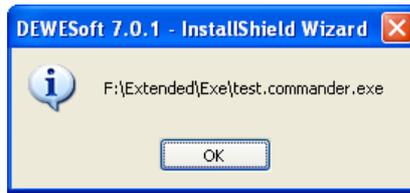


Illustration 31: Dewesoft Installer: test.commander message

Press **OK** to start the `test.commander` installation (see 3.1.4 `test.commander` installation).

3.1.4 test.commander installation

When the DEWESoft™ installation has finished the `test.commander` installation will start automatically.

HINT



If the installation of `test.commander` did not start automatically, or if you have aborted the `test.commander` installation you can always start it again by executing the `test.commander.exe` program in the folder `Extended\Exe\` on your USB stick.

When the installation starts, you should see the *Welcome Screen*.

Press **Next >** to continue.



Illustration 32: test.commander Installation: Welcome screen

Select the destination location where `test.commander` will be installed.

It is recommended not to change the default location.

Press **Next >** to continue.

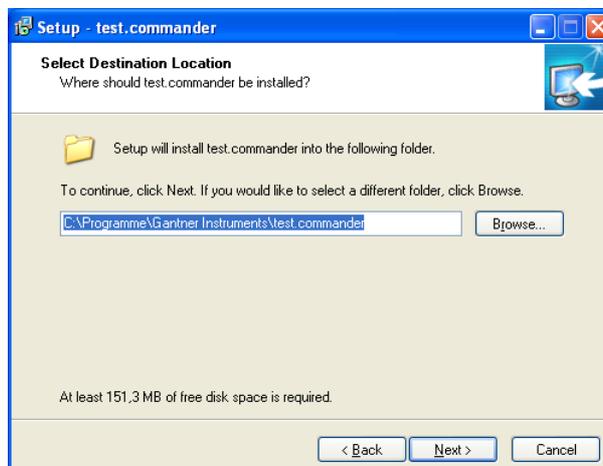


Illustration 33: test.commander Installation: Destination Location

Select the *Start Menu Folder*:

Press **Next >** to continue

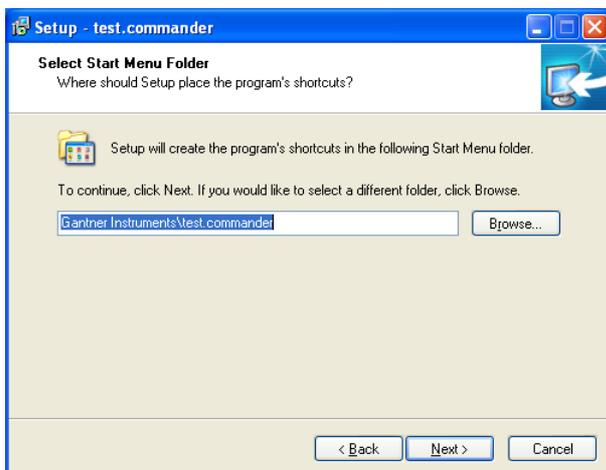


Illustration 34: test.commander Installation: Select Start Menu Folder

The last screen will show you a summary of the installation information:

Press **Install** to start the installation procedure.

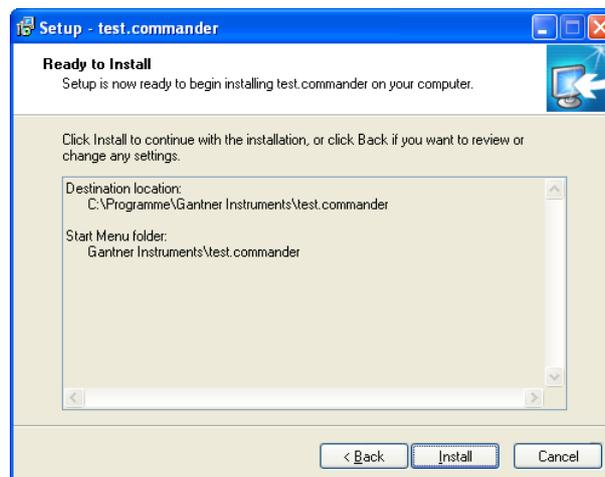


Illustration 35: test.commander Installation: Ready To Install

During the installation procedure you will notice that also the ICP100 program is installed:

Chapter 3.3.1 Ethernet explained provides an explanation of how Ethernet works. If you are already familiar with Ethernet, you can skip this chapter.

HINT

It is recommended to always have the DS NET system in the same subnet as your PC. If they are in different subnets some functions may not work e.g. the device cannot be found by `test.commander`'s scan function (note: it will still work, if you enter the IP address manually)

HINT

We recommend the use of industrial Ethernet switches. DS GATE uses auto negotiation and operate, if available, with 100 MBit/s and full duplex for the transmission

3.3.1 Ethernet explained

When devices are connected via Ethernet, every device must have valid TCP/IP settings.

Devices that are participating in the Ethernet must have a logical addresses: the IP address (e.g. `192.168.1.28`)

The IP address fulfills the functions of identifying the device and locating it on the network. It allows a device to communicate with other devices.

The IP address of each device must be unique and can be configured in one of the following 2 ways:

-  automatically: in this case a DHCP-server is running in the network and the devices will ask the DHCP-server for the TCP/IP settings (IP Address, subnet mask, gateway, ...) when they start up. The DHCP server will make sure that each device receives valid TCP/IP settings and a unique IP address.
e.g. this is used in company LANs
-  manually: in the absence of a DHCP server, the TCP/IP settings must be configured manually for each device.
e.g. this is used when you want to make a direct connection between 2 devices.

3.3.1.1 Subnets

A subnet-work (aka. subnet), is a logically visible, distinctly addressed part of a single Internet Protocol network. Subnetting breaks a network into smaller realms that may use existing address space more efficiently, and, when physically separated, may prevent excessive rates of Ethernet packet collision in a larger network

3.3.1.2 Anatomy of an IP address

In order to be able to send data across multiple networks, the address is divided into two parts:

-  *Network prefix*: A contiguous group of high-order bits that are common among all hosts within a network.
-  *Host identifier*: The remaining low-order bits of the address that are not designated in the subnet mask. This part specifies a particular device in the local network.

In TCP/IP notation you specify the IP address of the device and the subnet mask. From these settings the Network prefix and the Host identifier can be calculated:

EXAMPLE 3

Subnet mask: 255.255.255.0

IP address: **192.168.1.28**

Note, that the digits in bold of the IP address above identify the *Network prefix* (192.168.1) and the remaining digits remain for the *Host identifier* (28) relative to this network.

Examples of IP addresses within the same subnet:

192.168.1.1, **192.168.1.2**, ... up to **192.168.1.255**

Examples of IP addresses that are not in the same subnet:

10.10.0.28, 192.168.2.28, 74.125.77.104, ..

EXAMPLE 4Subnet mask: 255.255.0.0 (now the 3rd number is 0 instead of 255)IP address: **192.168.213.28**

Note, that the digits in bold of the IP address above identify the *Network prefix* (192.168) and the remaining digits remain for the *Host identifier* (213.28) relative to this network.

Examples of IP addresses within the same subnet:

192.168.1.1, **192.168.1.2**, ... up to **192.168.1.255****192.168.2.1**, **192.168.2.2**, ... up to **192.168.2.255****192.168.255.1**, **192.168.255.2**, ... up to **192.168.255.255**

Examples of IP addresses that are not in the same subnet:

10.10.0.28, 192.160.2.28, 74.125.77.104, ..

3.3.1.3 Port numbers

In order for the Ethernet communication to work, the following ports must be open for communication:

Protocol	Port number	Description
TCP	21	FTP communication (for reading and changing the DS-NET configuration)
TCP	8001	High speed port for measurement data transfer (see also 5.3.3.1 Block transfer on page 97)
TCP	8010	Transparent port UART0 (for slave configuration of modules in <code>test.commander</code>)
TCP	8011	Transparent port UART1 (for slave configuration of modules in <code>test.commander</code>)
UDP	8000	High speed port: UDP alternative to TCP port 8001
TCP	10000 ²	Data port (ASCII, Modbus): see also 5.3.3.2 Online values on page 97
UDP	1234	for optional usage of the program <code>e.con</code> (not used with DEWESoft™)
UDP	5565	Broadcast port/ASCII: used to find DS-NET devices in the network (see 4.2.6 Scanning for devices on page 62)

Table 5: DS-NET port numbers

3.3.2 DS NET factory settings

When DS GATE is delivered to you, DHCP is active and the static IP address is set to 192.168.1.28.

When you power up your DS NET system, it will try to get valid TCP/IP settings from a DHCP server in the network. If the DS GATE does not receive TCP/IP settings via DHCP after a few seconds, it will fall back to its static IP address (the default setting of the static IP address of the DS GATE is 192.168.1.28).

3.3.3 Connection using DHCP

When DS GATE is delivered to you, DHCP is active. To establish a connection:

-  make sure, that your DS NET device is powered off
-  connect your DS NET system with a standard Ethernet cable to the LAN that your PC, and the DHCP server, are also connected to
-  now power up the DS NET system. It will contact the DHCP server to obtain an IP address and will then be available under this IP address in your LAN

² This communication port can be changed e.g. you could use the default Modbus port 502

Then switch to the **Support** tab:
and click **Details...**

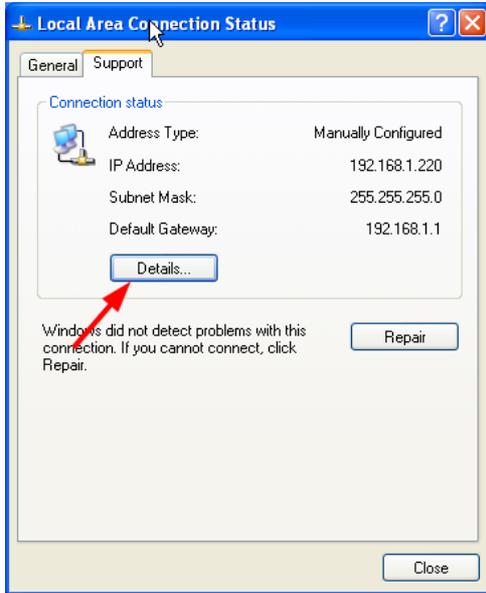


Illustration 51: Support tab-sheet

You can see the current *IP address* and *Subnet Mask* in the list of *Network Connection Details*:

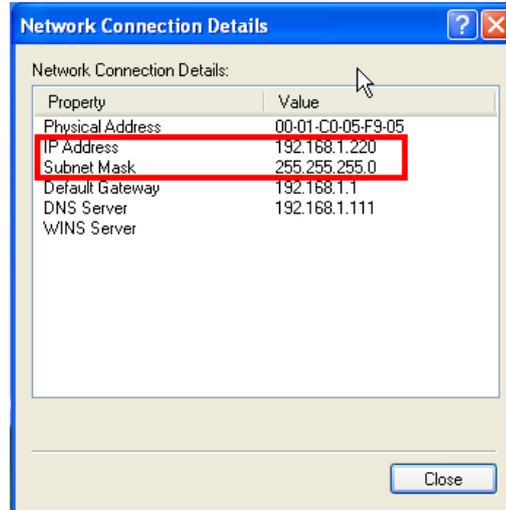


Illustration 52: Network Connection Details

HINT



If the connection already supports IP version 6, the list entries may be called *IPv4 IP Address* and *IPv4 Subnet Mask* respectively.

3.3.5 Allowing access to network devices (firewall)

Each PC should be protected by a firewall. A firewall will monitor the incoming and outgoing network connections of your PC.

Some firewalls may block the communication to the DS NET system. Thus, you have to explicitly allow this communication or disable the firewall.

This section will show you how to handle the default Windows firewall.

If you have any other firewall or security software installed on your PC, please make sure to also configure it correctly or deactivate it temporarily when required.

CAUTION



You should only disable the firewall if you are not connected to the Internet: e.g. when you have directly connected your DS NET system to your PC or if your company LAN is protected by another firewall.

CAUTION

You should only disable the firewall if you are not connected to the Internet: e.g. when you have directly connected your DS NET system to your PC or if your company LAN is protected by another firewall.

First open the Windows Control Panel (see 3.1.2.1 Opening windows control panel).

Click *Administrative Tools*:

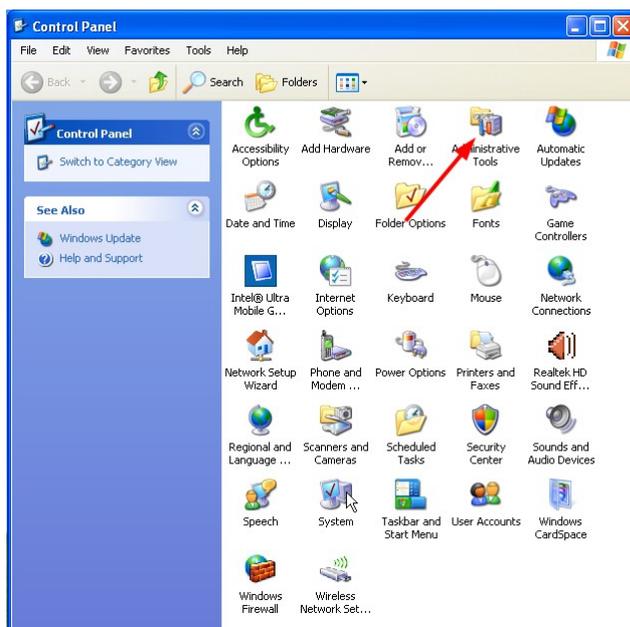


Illustration 58: Control Panel: Administrative Tools

Open *Services*:

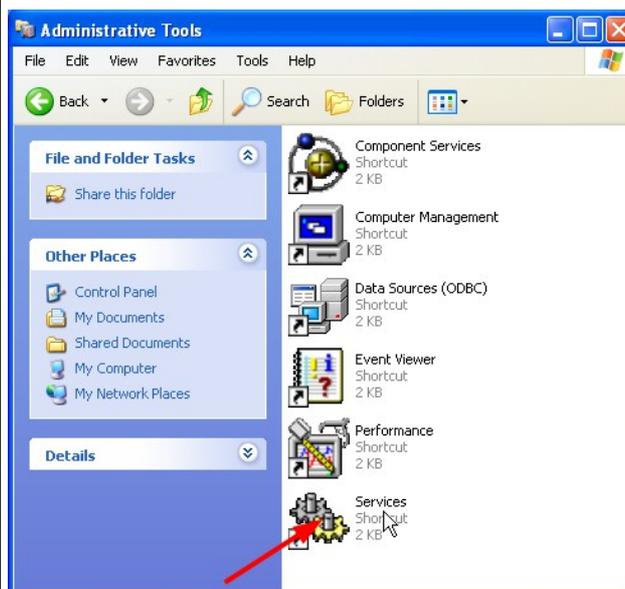


Illustration 59: Administrative Tools: Services

Now scroll down to the *Windows Firewall/Internet Connection Sharing (ICS)* entry:

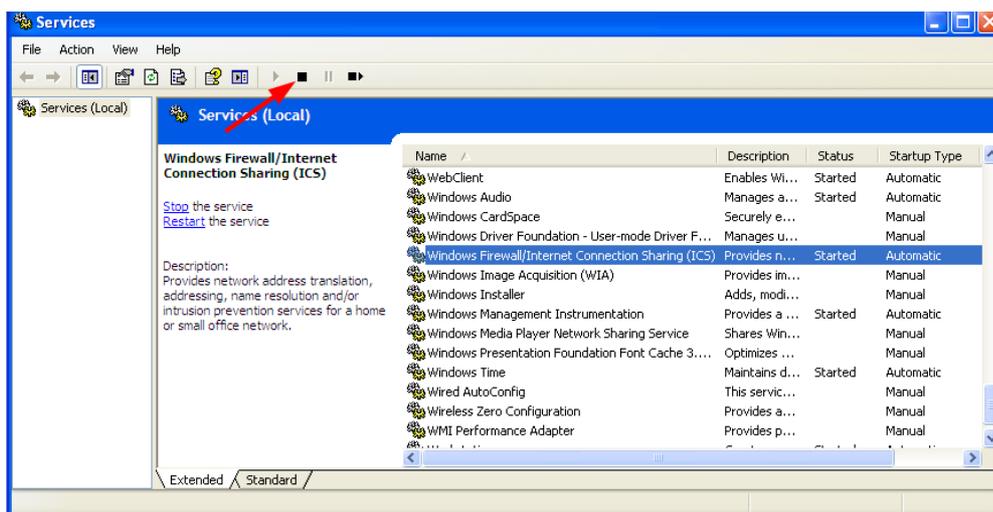


Illustration 60: Stop Windows Firewall Service

And press the **stop** button (red arrow in Illustration 60).

Illustration 71 below shows the sampled version of the signal in Illustration 70. The actual data consists only of the sampled points that you see. The lines in between the points are just interpolated.

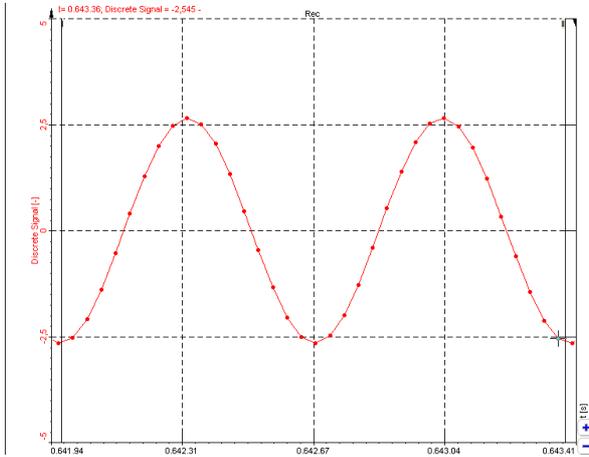


Illustration 71: Sampled (discrete) signal

Illustration 72 below shows another sampled version of the signal in Illustration 70. But in comparison to Illustration 71 we used a lower sample rate in this case. Because of the lower sample rate, we have fewer data points acquired and thus the interpolated signal does not resemble the original signal as good as Illustration 71 does.

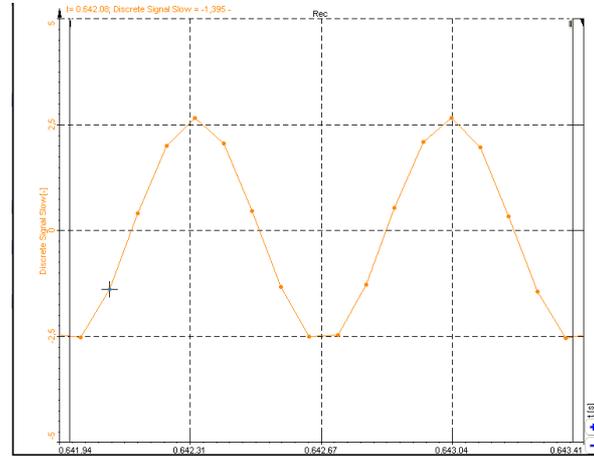


Illustration 72: Slower sampled (discrete) signal

The sampling rate (aka. sample rate, sampling frequency) defines the number of samples per second taken from the continuous signal to create the discrete signal. The unit for the sampling rate is hertz (Hz) . The inverse of the sampling frequency is the sampling period or sampling interval, which is the time between samples.

4.1.1.2 Clock

A clock signal is a particular type of signal that oscillates between a high and a low state and is utilized like a metronome to coordinate actions.

E.g. each DS-GATE has an internal clock. The sampling of the data-points is always correlated to this clock – so that the data-points of all channels (on all modules) refer to the same point in time³.

4.1.1.3 Masterclock

Masterclock is a DEWESoft™ term that refers to the main clock that is used to synchronize data and actions inside the DEWESoft™ software.

Clockmaster is another DEWESoft™ term that refers to the hardware device that provides the masterclock to DEWESoft™.

There are several possible source for the masterclock:

- 🚩 whenever you have activated an analogue device in DEWESoft™ it will be used as clockmaster
- 🚩 when you have no hardware devices activated at all, then the computer's clock will be used
- 🚩 when you have only DS-NET systems (no analogue devices) activated in hardware setup, then you can choose if any of the DS-NET systems is the clockmaster, or if the computer will be the clockmaster

³ Like all real-world devices also the clock generator of the DS-GATE is not ideal. It may have a jitter of about 21ns. But this is negligible related to the (much slower) sample rates.

Synchronous channels always have exactly one data point related to the masterclock and the time between 2 adjacent data points is always constant.

In the example below you can see 3 synchronous channels and that the data points of all the channels are perfectly aligned to each other.

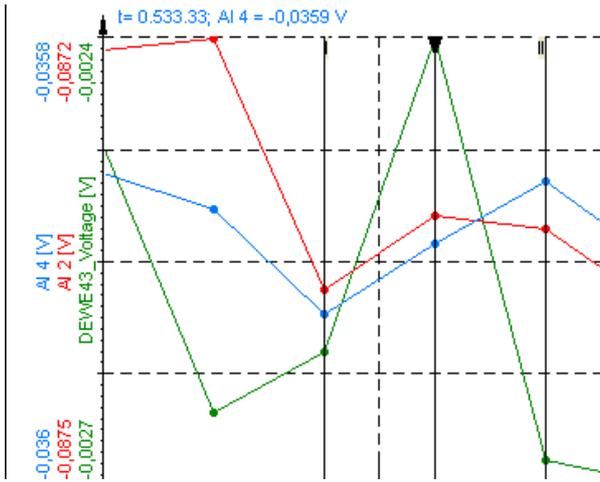


Illustration 74: Synchronous channels

Asynchronous channels may have data points at any instant of time and the time between 2 adjacent data points may vary.

In the example below you see the green signal which is a synchronous channels of a DEWE-43 (which is clock master) and 3 channels from 3 different DS-NET systems which are of course asynchronous. When you take a look at the black line denoted with 1 in Illustration 75 you can see that the asynchronous data points are not aligned to the green synchronous data points and also not aligned to each other.

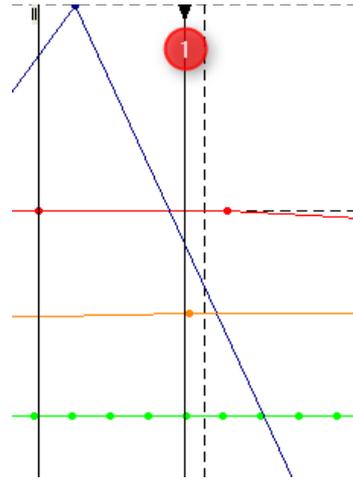


Illustration 75: Asynchronous channels

Sync channels are much easier to handle because of the fact that the time between all their data points is equal. This also makes some computations much easier (which means, that CPU power is much lower).

E.g. displaying sync channels in a recorder is easy, but displaying asynchronous channels in a recorder requires many more calculations and thus much more CPU power (because we need to calculate the right horizontal position for each data point).

Some functions in DEWESoft™ only work with synchronous channels: e.g. in the channel list of the FFT or scope screen only sync channels will show up – async channels cannot be used.

In the recorder screen you can also use async channels. The Illustration 77 shows the Recorder screen with the same channel setup as Illustration 76.

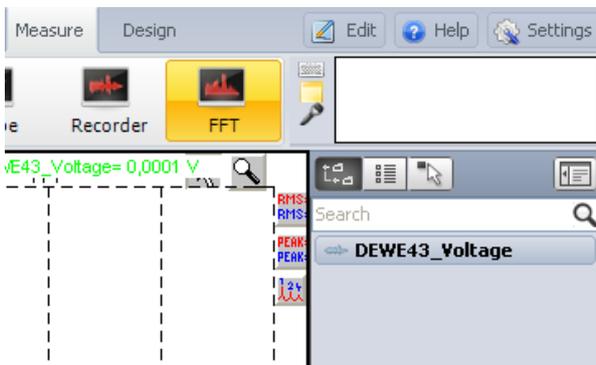


Illustration 76: FFT screen: only sync channels

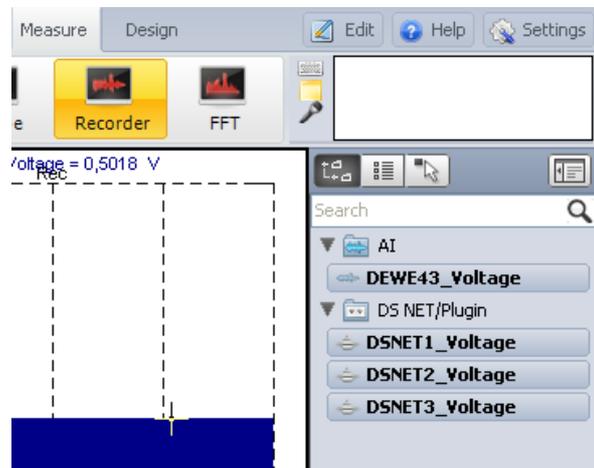


Illustration 77: Recorder screen: also async channels

After some time (depending on the relative clock drift of the 2 devices), you will see that the signals are not perfectly aligned any more...

...and the longer the measurement takes, the worse the offset will become.

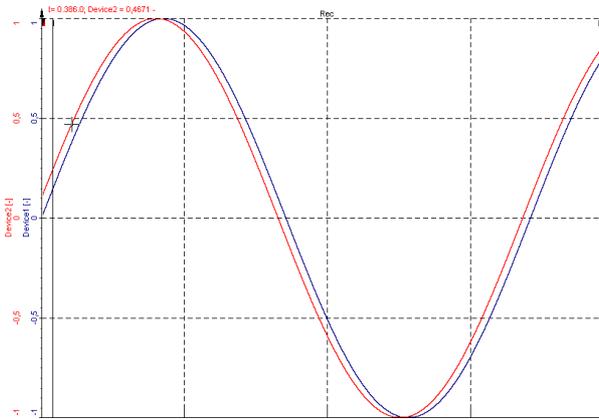


Illustration 79: No sync: small offset

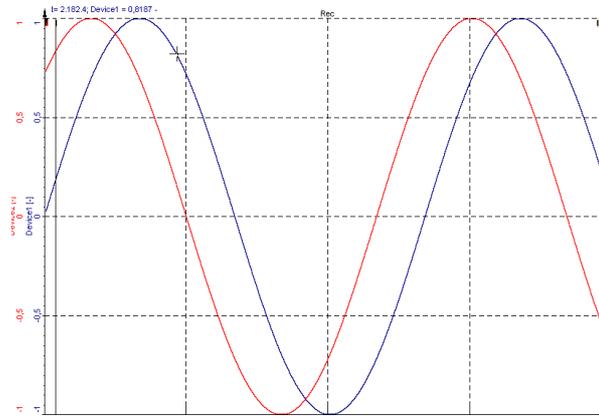


Illustration 80: No sync: big offset

Note: DS-NET channels will always be at least soft-synced (see 4.1.2.3 Software synchronisation).

4.1.2.2 Hardware synchronisation

The best way to synchronise the clocks of several DS-NET devices is to use some sort of hardware synchronisation (e.g. a synchronisation cable) that transmits a signal that can be used by the devices to synchronise their clocks to each other.

When using DS-NET systems with hardware sync cables the maximum jitter between channels of the synchronised measurement systems will be $\pm 2\mu\text{s}$.

Note that the hardware synchronisation function is not related in any way to the setting of the clockmaster.

4.1.4.1 Ethernet only

In this constellation the DS-NET devices and the measurement PC are connected to the Ethernet. No other cables or other options are used. The DS-NET plug-in will software synchronise the channels of the 2 systems (see 4.1.2.3 Software synchronisation on page 49):

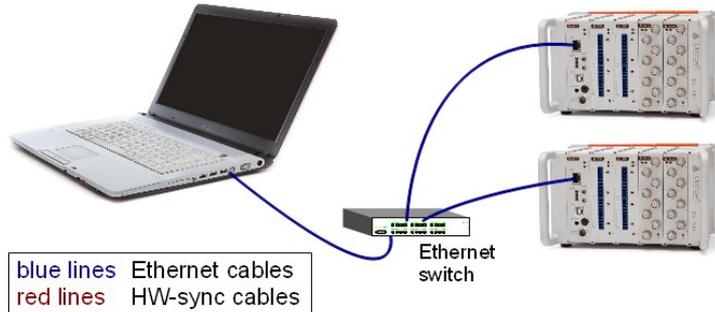


Illustration 82: Synchronisation: Ethernet only

4.1.4.2 SNTP

In this case you can configure each DS NET system to get the time information from an SNTP server via Ethernet:

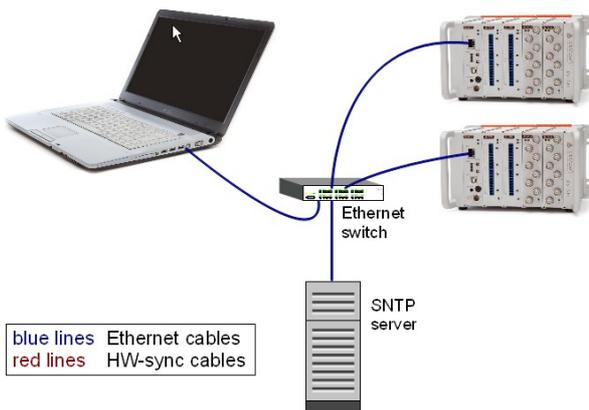


Illustration 83: Synchronisation: SNTP

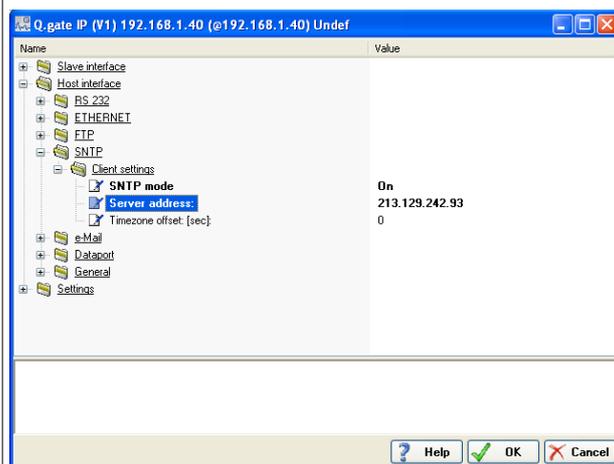


Illustration 84: test.commander: SNTP configuration

Also note, that you must have setup your *ETHERNET* settings right, so that DS NET can reach the destination SNTP server. Check if the value for your *Default Gateway Address* (see blue rectangle in Illustration 85) is okay.

If you specify a host name instead of the IP address for your SNTP server, then you also need to set a correct value for your DNS server (see red rectangle in Illustration 85).


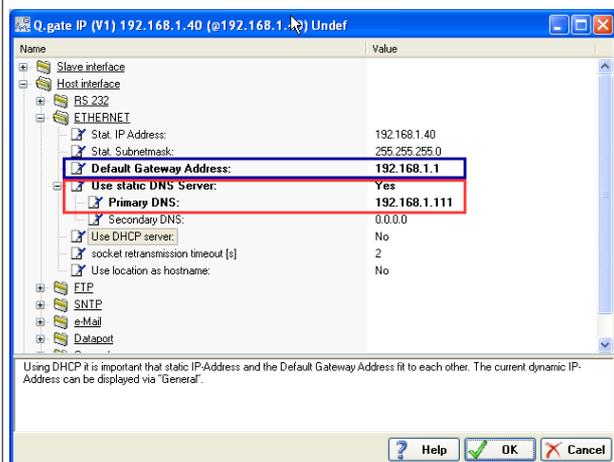


Illustration 85: test.commander: Ethernet settings

4.1.4.3 NMEA-0183

In this case you must connect your NMEA-0183 compatible device to the RS232 connector of the DS NET and configure the correct parameters (*Baudrate, Char Format*) for the serial communication. Please consult the manual of your NMEA-0183 device to get these parameters. You can activate this function in *Config mode*: see : GPS on page 75

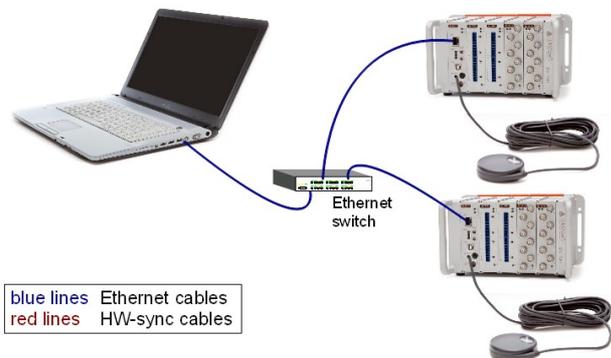

blue lines Ethernet cables
red lines HW-sync cables

Illustration 86: Synchronisation: NMEA-0183 via GPS



Illustration 87: NMEA-0183 configuration

NMEA-0183 devices:

-  **GPS**
 In order to use GPS signals, you must have unobstructed line of sight to four or more GPS satellites – so this will not work inside of buildings.
 Moreover, please note, that the GPS device might need about one minute until it has a valid time information that it can send.
-  **DCF 77**
 The DCF 77 radio signal can also be received inside of buildings in large parts of Europe, as far as 2000 km from Frankfurt (Germany).

With a setup like that shown in Illustration 86 you will get the NMEA jitter accuracy of $\leq 500\text{ms}$ between the systems. This can be very useful, when the DS NET devices are far away from each other and thus using hardware synchronisation cables is not possible.

If the systems are close to each other you can also combine this option with hardware synchronisation (see 4.1.4.4 Hardware synchronisation and 4.1.4.5 Synchronisation combinations).

4.1.4.4 Hardware synchronisation

In this case you must daisy chain your DS NET systems with special synchronisation cables (see Illustration 89). The cables have *Lemo 00B* connectors which fit into the *SYNC* connectors of the DS GATE (see Illustration 88).

These cables can be ordered as options to your DS NET systems:
 DS-NET-SYNC-CBL-05 (length 0.5m), DS-NET-SYNC-CBL-3 (length 3m).

The synchronisation signal between the DS-NET systems uses an RS-485 interface with a frequency of about 500 kHz and the maximum possible length of the cable is about 400 meters.



Illustration 88: HW-sync cable

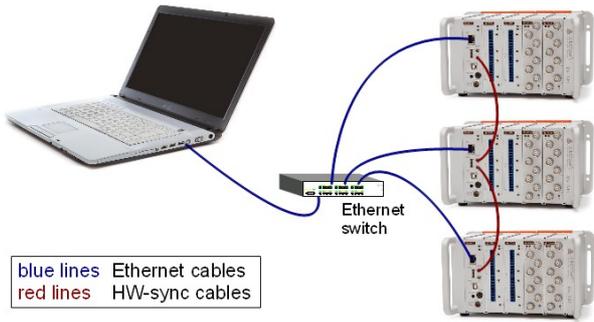


Illustration 89: Synchronisation: HW-sync

All slaves must be connected to the master with the synchronisation cables but the order is not important. If you take a look at Illustration 89: it does not matter which one of the systems is the master – you just have to make sure, that all units are connected.

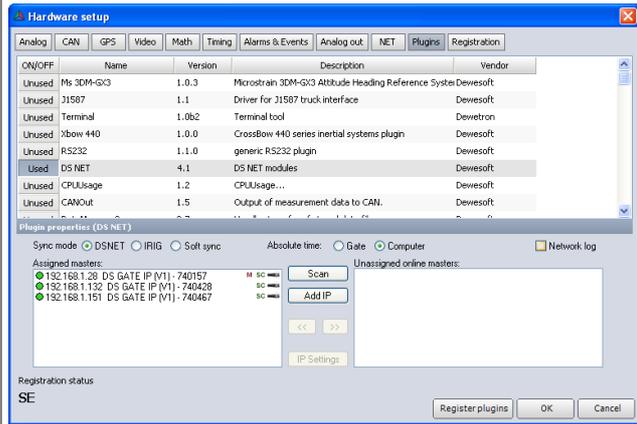


Illustration 90: DS NET plug-in: HW-synchronisation

In the example above we use 3 DS-NET systems that are connected via Sync-cable. Note, that the system (IP 192.168.1.28) marked with the red M (at the right side) in the in the list *Assigned masters* of the DS NET plugin (see 3 in Illustration 90) will be the master and all other systems will be slaves. see also 4.2.1 Sync mode on page 56

If we now take a look at the configuration of the 2 DS NET systems in test.commander, we can see that:

The master DS NET system has no *Input synchronisation protocol* set...

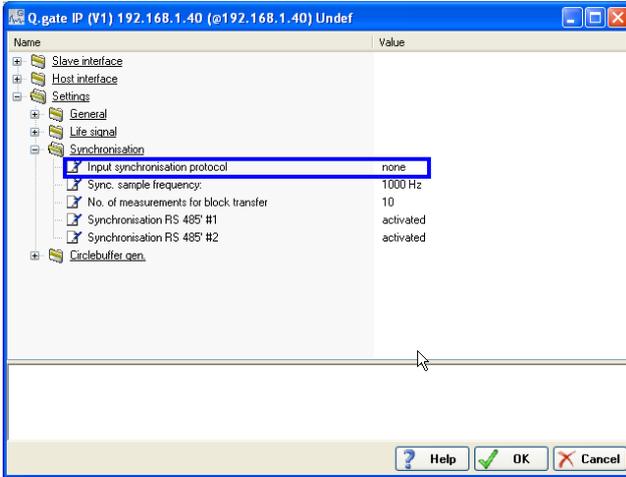


Illustration 91: test.commander: Synchronization settings of the master

...and the slaves have the *Input synchronisation protocol Q.sync over RS485* set

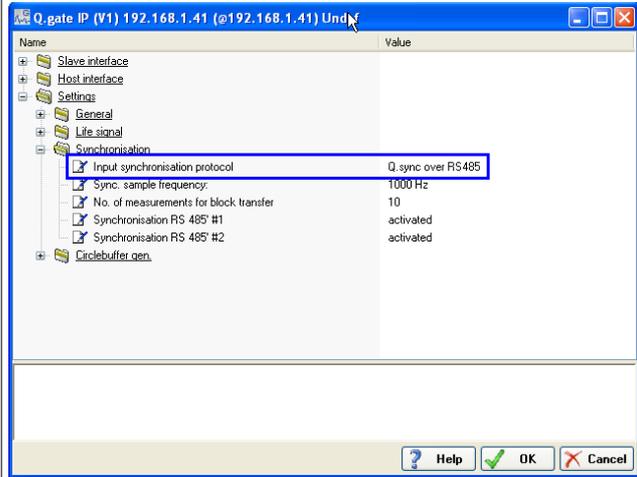


Illustration 92: test.commander: Synchronization settings of the slave(s)

external IRIG

You can also use an external IRIG clock for synchronisation with external devices.

In *Hardware setup* you need to select *Sync mode IRIG* (see also 4.2.1.2 Sync mode: IRIG 58).

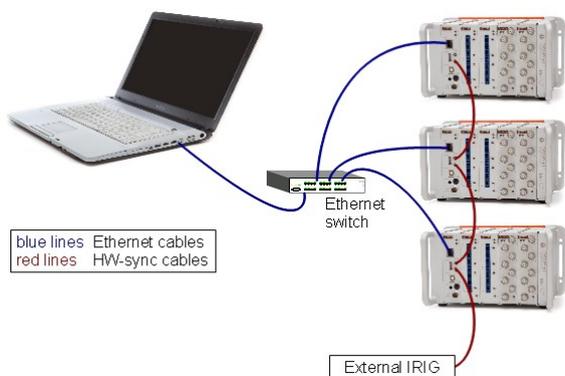


Illustration 93: External IRIG synchronisation

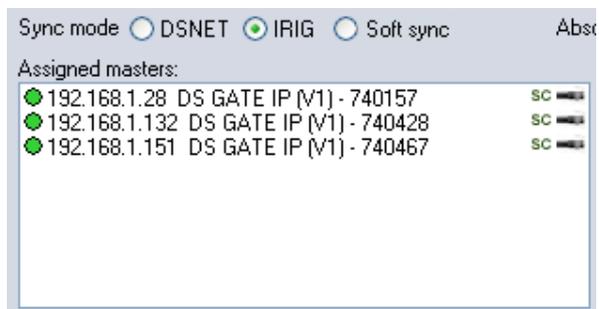


Illustration 94: External IRIG sync: HW Setup

4.1.4.5 Synchronisation combinations

You can setup any combinations of synchronisation methods, you like. DS NET will always choose the most accurate one, in this order:

- 🚩 HW-sync
- 🚩 GPS IRIG-B (no hardware available yet)
- 🚩 GPS NMEA
- 🚩 SNTP
- 🚩 Internal clock

EXAMPLE 5

Consider 2 DS NET systems A and B: for each of them we use GPS NMEA timing (via RS232), SNTP (via Ethernet) and synchronisation cables (via hardware cables).

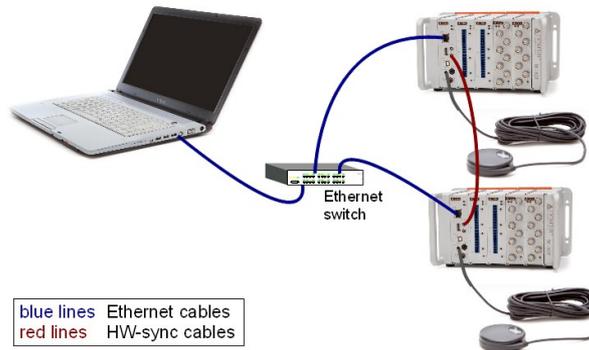


Illustration 95: Synchronisation: 2 GPS and HW-sync



Then we check the *HW-sync* (see 4.2.1 Sync mode) check-box of the DS-NET plug-in, so that system A will be the clock-master and system B will be the slave unit.

Since we use hardware synchronisation the relative jitter between the 2 DS NET systems will always be $\pm 2\mu\text{s}$.

Unit B will always receive the time-info via the synchronisation cables from unit A.

Unit A will use GPS to get the absolute time, if it is available. If GPS is not available yet (e.g. when you start your GPS up, it may take about a minute to find the satellites), but the SNTP server can be reached, SNTP will be used to get the absolute time. Later, when GPS also sends time-information, the GPS time will be used, because it is more accurate than SNTP.

If the hardware synchronisation cable between the 2 devices is manually destroyed during the measurement, both devices will fall back to GPS NMEA timing and you would still have at least the GPS NMEA accuracy.

But since this case is very unlikely, you would usually buy one GPS device and connect it to the master DS NET device.

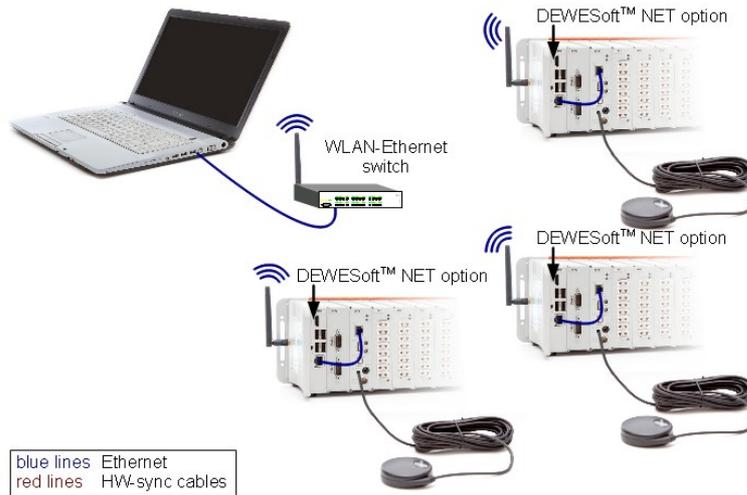


Illustration 97: DEWESoft™ NET Option

When you want to connect to several measurement PCs at the same time (e.g. to store the data in one file), then you need some sort of very exact synchronisation between the measurement PCs. This is very important, because since no clock is perfect the clocks of the measurement PCs would diverge over time and the data that you collect over the NET option would not be synchronous!

Please consult the DEWESoft™ online help for all *Timing* options.



Illustration 98: Hardware setup: Timing

4.2 Hardware setup

The basic hardware setup is described in 3.4 DEWESoft™ configuration. This chapter will cover the odds and ends.

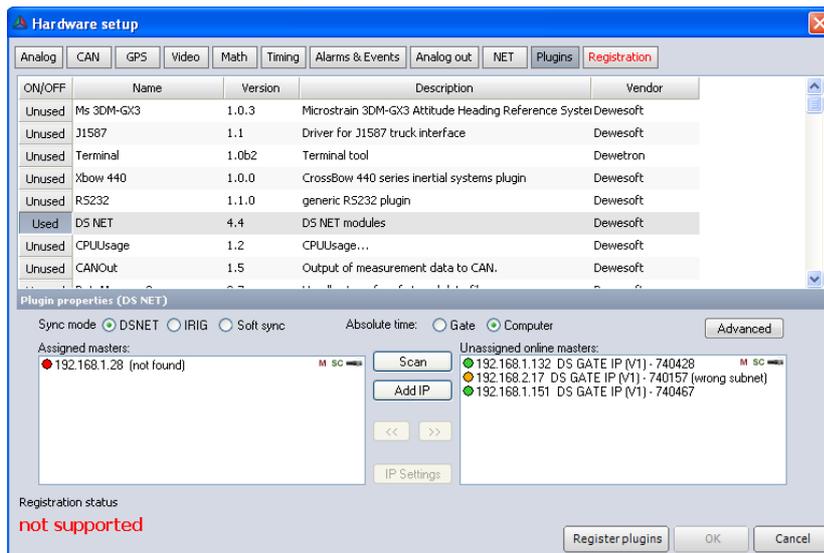


Illustration 99: DS NET plugin: Hardware setup

4.2.1 Sync mode

When it comes to synchronisation (see also 4.1 Synchronisation on page 43) there are several possible cases to consider:

When you are using an *Analog device* (in *Settings – Hardware Setup... – Analog – Analog device*), the clock of the analogue device will always be used as the master clock: no matter what you setup for the DS-NET systems.
 Note: In *Ch. setup* you can see an information label that will tell you if the DS-NET is currently running as clockmaster or asynchronous device (see ❶ Illustration 123 on page 66):

The image below shows a DS-NET which is currently running as clockmaster.



Illustration 100: DS-NET as Clockmaster

The image below shows a DS-NET which is currently running as asynchronous device.

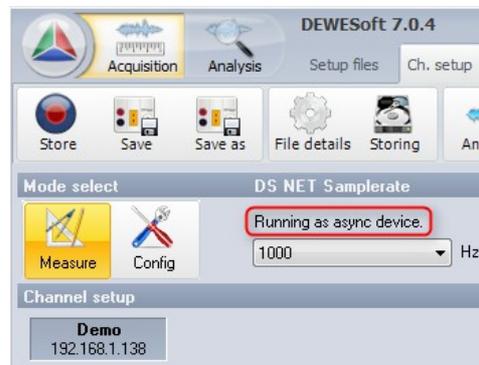


Illustration 101: DS-NET as async device

If no analogue device is used, then you have the *Sync mode* options *DSNET*, *IRIG* and *None* which will be explained in more detail in the following chapters.

When you right click an entry in the *Assigned masters* list, you see a pop-up menu with some more options regarding the synchronisation (depending on the *Sync mode* not all options may be enabled).

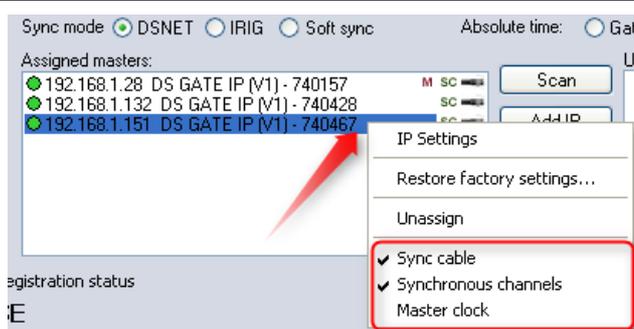


Illustration 102: Sync mode: pop-up

4.2.1.1 Sync mode: Soft sync

When you select sync mode *Soft sync*, then none of your DS-NET systems will be the clock master (see 4.1.1.3 Masterclock on page 44) and all channels will be asynchronous (see 4.1.1.5 Sync / Async channels on page 45). The DS-NET plugin will do the software synchronisation (see 4.1.2.3 Software synchronisation on page 49).

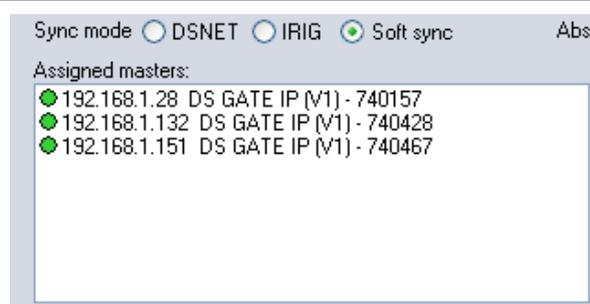


Illustration 103: Sync mode: Soft sync

4.2.1.2 Sync mode: IRIG

When you select sync mode *IRIG*, then you must connect an external IRIG source to one of your DS-NET systems and interconnect the DS-NET systems via HW-sync cables to each other. The external IRIG clock source will be the clockmaster (see 4.1.1.3 Masterclock on page 44) and the other systems are hardware synced to each other (see 4.1.2.2 Hardware synchronisation on page 48).

In this scenario you can only have one sample rate for all DS-NET systems.

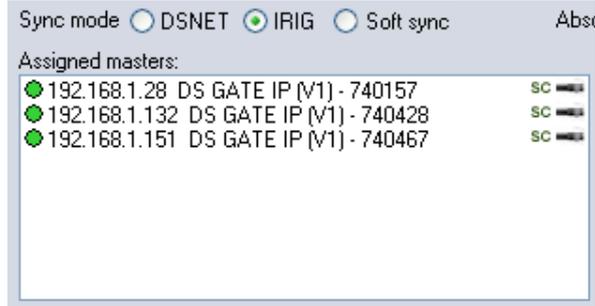


Illustration 104: Sync mode: IRIG

You can also deactivate the *Synchronous channels* check box (see Illustration 103) for some of the systems.

In the example below, the 3rd system is connected via hardware cable, but it uses asynchronous channels.

So you can have a sample rate different to the other 2 DS-NET systems, but since the sync cable is connected, the data will still be aligned to those of the synchronous systems.

Yet another option would be to deactivate the *Sync cable* check box (see Illustration 103) for some of the systems.

In the example below, the 3rd system is not connected via hardware cable and thus its channels are of course asynchronous and the DS-NET plugin will do the software synchronisation (see 4.1.2.3 Software synchronisation on page 49).

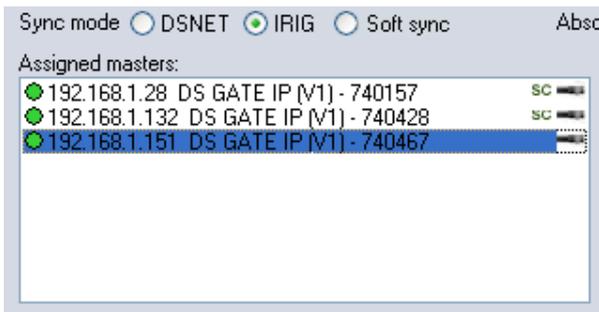


Illustration 105: IRIG: one asynchronous DS-NET

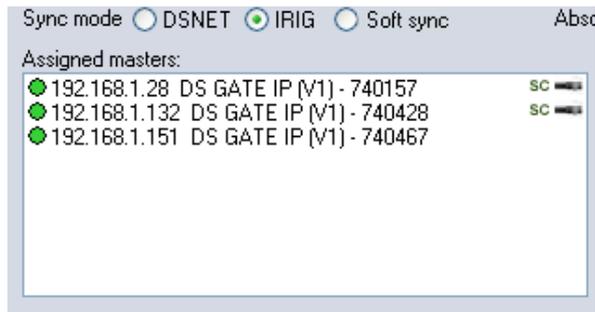


Illustration 106: IRIG: one system without HW-sync cable

4.2.1.3 Sync mode: DSNET

The sync mode DSNET is much like the sync mode IRIG with the difference that one of the DS-NET systems is the clockmaster (see 4.1.1.3 Masterclock on page 44).

You can select *Master clock* (see Illustration 103) for one of the DS-NET systems.

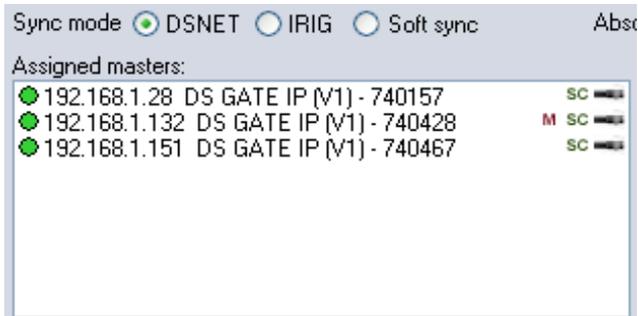


Illustration 107: Sync mode: DSNET

You can also deactivate the *Synchronous channels* check box (see Illustration 103) for some of the systems.

In the example below, the 3rd system is connected via hardware cable, but it uses asynchronous channels.

So you can have a sample rate different to the other 2 DS-NET systems, but since the sync cable is connected, the data will still be aligned to those of the synchronous systems.

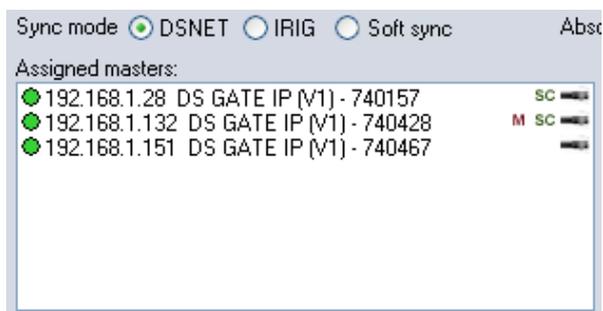


Illustration 108: DSNET: one asynchronous DS-NET

Yet another option would be to deactivate the *Sync cable* check box (see Illustration 103) for some of the systems.

In the example below, the 3rd system is not connected via hardware cable and thus its channels are of course asynchronous and the DS-NET plugin will do the software synchronisation (see 4.1.2.3 Software synchronisation on page 49).

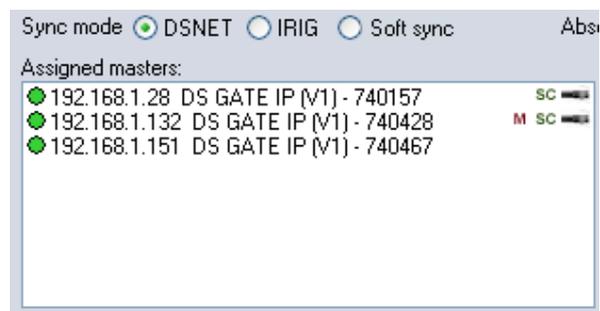


Illustration 109: DSNET: one system without HW-sync cable

4.2.2 Advanced

When you press the **Advanced** button in the hardware setup, the *Advanced Settings* dialogue (see Illustration 110) will show up.

- (1) *Wait for gates at load setup for N seconds*: see 4.2.2.1 Startup wait time
- (2) *Network Log*: see 4.2.2.2 Network Log
- (3) *Log level*: see 4.2.2.2 Network Log

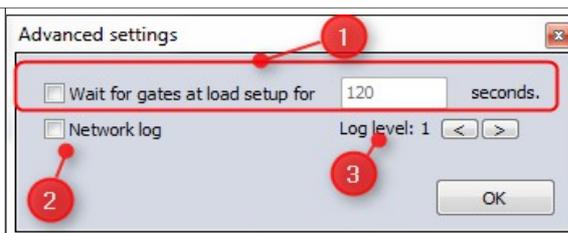


Illustration 110: Advanced Settings

4.2.2.1 Startup wait time

Usually when you load a setup, then the DS-NET plugin will try to find the DS-NET systems that are specified in hardware-setup. If the devices are not found for any reason, then the setup will be loaded anyway and the devices that have not been found will be marked erroneous.

When you activate the *Wait for gates at load setup for N seconds* check-box, then the DS-NET plugin will repeatedly try to find all DS-NET systems that are specified in hardware-setup: until either all systems are found or the specified number of seconds has expired.

EXAMPLE 7



Let's assume we have a PC that starts up very fast. DEWESoft™ is configured to start up automatically when Windows is started (i.e. it is in the *Autostart* folder) and start storing right away.
 If the DS-NET system is still booting while DEWESoft™ is already being started then the DS-NET plugin cannot find the DS-NET (because it is still booting) and the automatic storing will not work.
 In this case you can activate the *Wait for gates at load setup for N seconds* check-box, and specify a wait time, so that the DS-NET plugin will try longer to find the DS-NET system.

4.2.2.2 Network Log

If you activate the *Network Log* check-box, the DS-NET plugin will write log message about the network communication. The *Log level* will define how many details will be written to the log files.

Log level

Specifies how much data the DS-NET plugin will write to it's log files.

1. *Error Log*: **recommended default** - writes only minimal log messages (i.e. when an error occurs)
2. *Event Log*: writes more log messages than 1. *Error Log*.
3. *Network Log*: writes very detailed information about the network communication
 You should only activate this temporarily when you are explicitly told to do so by our support team, because it will write excessive log-files. This may be the helpful to analyse problems with your Ethernet connection.

4.2.3 Device lists

As you can see in Illustration 99 the hardware setup of the DS NET plugin uses two lists to manage DS NET devices:

- Assigned masters*: Only devices in this list will be used by DEWESoft™
- Unassigned online masters*: devices in this list will not show up in channel setup and cannot be used for measurement

To move a device from one list to the other, use the << and >> buttons or drag and drop the list entry.

The order of the assigned DS NET devices is important, since this order will also be used in the channel setup.

Each entry in the list consists of following parts:	192.168.1.33 [Front Engine] DS GATE IP (V1) 740157
a coloured circle, indicating the Ethernet status of the DS NET	● see table below for explanation
the IP address of the DS GATE module	192.168.1.33
the name of the DS-GATE (if it has been set) see also Renaming a DS-GATE page 67	Front Engine
designation of the model (device type)	DS GATE IP (V1)
the serial number of the DS GATE module	740157

4.3 Channel setup

The channel setup of the DS NET plugin has 2 modes: *measure mode* and *configuration mode*.

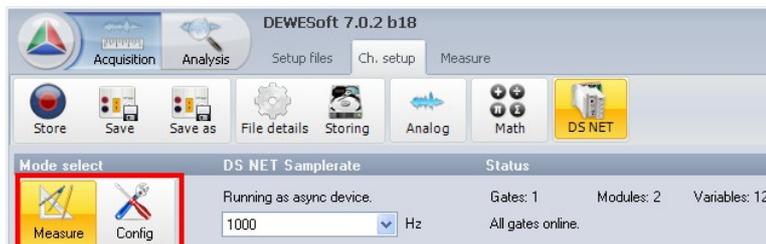


Illustration 115: DS NET plugin: Channel setup - Mode select

In *measure mode*, you can already see live measurement values, select channels, change some properties of the channels (name, colour) and set the scaling of channels. Most of these settings will be stored in the DEWESoft™ xml-setup file and will not be transferred to the DS NET system (so these changes are active almost instantaneously).

In *config mode*, you can change the measurement type, assign modules that are connected to the DS GATE, and set basic channel parameters. When you leave the *config mode* and switch back to *measure mode*, the changes will be transferred to the DS NET. This process may take up to several minutes, dependant on the number of modules of the DS.

4.3.1 Status

The *Status* message should always be 'All gates online' (see Illustration 115 above).

All other messages mean some kind of warning.

The warning below may occur when you have assigned DS-GATES in Hardware setup but these systems cannot be reached. Some possible reasons:

- ⚠ the systems may not be powered on
- ⚠ there could be some problem with the Ethernet connection (cables, switches, etc.)
- ⚠ maybe the IP addresses of these DS-GATES have been changed outside of this DEWESoft™ instance.

The following warning occurs if you have enabled USB logging (see 7 Data Logger on page 165) and you have selected a sample rate that is too high for USB logging.



Illustration 116: Warning: Fillrate too high



Illustration 117: Warning: Problem with gate(s)

Renaming a DS-GATE

Renaming DS-GATES is a really nice feature, when you have several DS-NETs. It makes it much easier to identify the device as only by the IP address.

Right-click on any of your DS-NET devices in channel setup and select **Rename** from the pop-up menu:

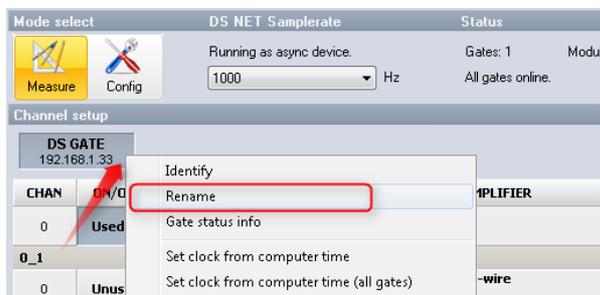


Illustration 125: Pop-up menu: Rename

In the *Rename* dialogue enter a meaningful name for the DS-GATE:

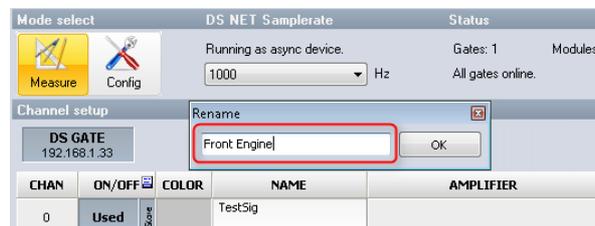


Illustration 126: Rename dialogue

Wait until the new name is written to the DS-GATE...

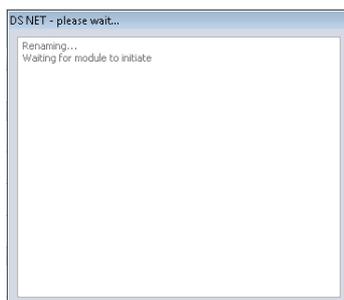


Illustration 127: Rename: Wait dialogue

and finally you can see that the DS-GATE is now identified by the new name.

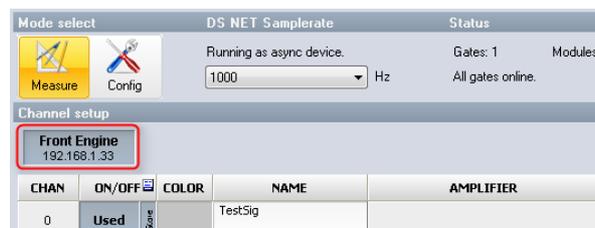


Illustration 128: Renamed DS-GATE

The name will also show up in the device lists of the hardware setup: see 4.2.3 Device lists on page 60.

4.3.3.2 Channel names

When you change a channel name in measure mode, the name will only be used only by DEWESoft™: i.e. the name will not be changed in the DS NET system automatically. But when you switch to the *config mode* after changing channel names, in the measure mode, the names will also be shown in *config mode*, and when you leave the *config mode*, all the configuration settings (including the new channel names) will be transferred to the DS NET system.

4.3.4.1 Module configuration screen

When the configuration has been read, you will see the module configuration screen:

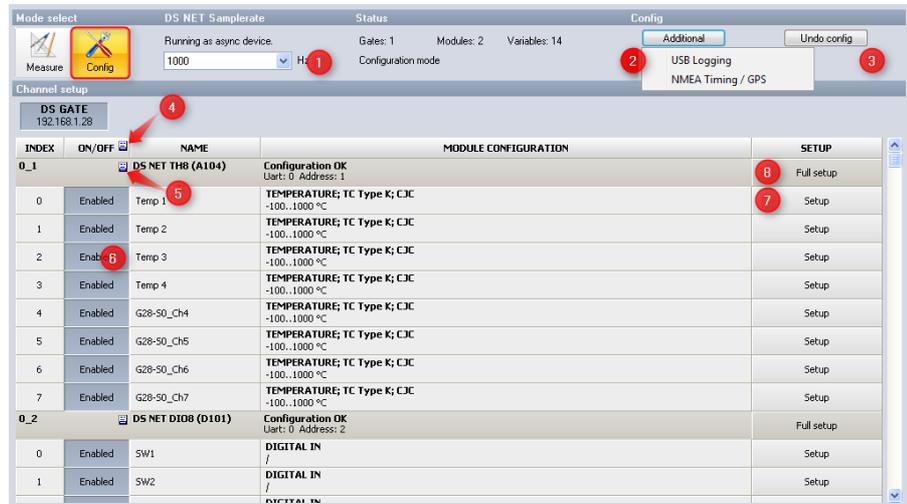


Illustration 135: DS NET plugin: Config Mode

- ❶ This drop-down allows you to change the sample rate: see 4.3.2 Sample rate on page 64
- ❷ When you press the **Additional** button, you see 2 more options:
 - USB logging**: Click this item to enable/disable USB logging (for all connected DS-NET systems): see also 7 Data Logger on page 165
 - GPS**: click this item to enable/disable NMEA timing (see 4.1.4.3 NMEA-0183 on page 51) and GPS (see GPS on page 75)
- ❸ When you press the **Undo config** button, all your configuration changes (that you have made since you have entered the *Config mode*) will be lost and the plugin will switch back to *Measure mode*.
Note: Resolved configuration issues (see 4.3.4.2 Resolving configuration issues on page 76) , cannot be undone.
- ❹ When you click on the header cell of the *ON/OFF* column, you can enable/disable all channels of the DS-NET system at once.
The number of enabled channels will also affect the maximum possible sample rate: see 4.3.2 Sample rate on page 64
- ❺ When you click on the module-header cell of the *ON/OFF* column, you can enable/disable all channels of the module at once.
see also Enabling/Disabling channels below
- ❻ When you click on the **Enabled/Disabled** button in the *ON/OFF* column of a channel, you can enable/disable this single channel.
The number of enabled channels will also affect the maximum possible sample rate: see 4.3.2 Sample rate on page 64
- ❼ When you click the **Setup** button of a single channel, a setup dialog for the channel will be opened. The dialog is different for each kind of measurement module: see Channel configuration setup below.
- ❽ When you press the **Full setup** button in the module-header of the *SETUP* column, the program *ICP100* will be opened, where you can do all required settings for the module. For the vast majority of measurement and configuration settings, this is not necessary – use the DEWESoft™ internal setup (see ❷ above).
However, if you have special requirements (e.g. calculations in the DS-NET module), then *ICP100* will give you access to all available options.

HINT

If your DS NET system has several similar modules (e.g. 4 TH8 modules), you can set up the first one and then copy and paste the settings to the other modules:

DS GATE 192.168.1.132		
ChIdx	NAME	MODULE CONFIGURATION
0_1	DS NET TH8 (A104)	Configuration OK Uart: 0 Address: 1
0	G28-50_Ch0	TEMPERATURE; TC_Type_K -270..1372 °C
1	G28-50_Ch1	TEMPERATURE; TC_Type_K; CJC -270..1372 °C

Illustration 136: Copy & paste module settings

Right click on the first module that you have already set up correctly and then select *Copy*. Now right click on a module that should receive these settings and select *Paste* from the pop up menu. This will copy all the module hardware properties and settings. If you want to copy the settings to all other modules of the same type, select *Paste to all*.

When you have setup all your channels and you switch back from *Config mode* to *Measure mode*, all the settings will be written to the DS NET system. This process may take up to several minutes, dependant on the number of modules of the DS NET system.

Enabling/Disabling channels

You can enable/disable channels in the *ON/OFF* column of the configuration mode (see Module configuration screen above). This will have following consequences:

-  disabled channels will not show up in Measure mode (see 4.3.3 Measure mode on page 65)
-  the number of enabled channels will affect the max. possible sample rate: see 4.3.2 Sample rate on page 64
-  all enabled channels will be stored in the USB datafiles (see 7 Data Logger on page 165)

Illustration 143 shows what happens in our example when we apply a voltage of about 1.5V to the module: The green channel named BR4 ±10V which has been setup with the module range -10V to +10V still gives us the correct value. But the red channel named BR4 ±100mV (which has been setup with the module range -100mV to +100mV) cannot handle this high signal, because it is out of its measurement range, so it can only display the highest possible value (+100mV in this example) and since the signal is out of range, an error LED of the module will be switched ON (see explanation below).

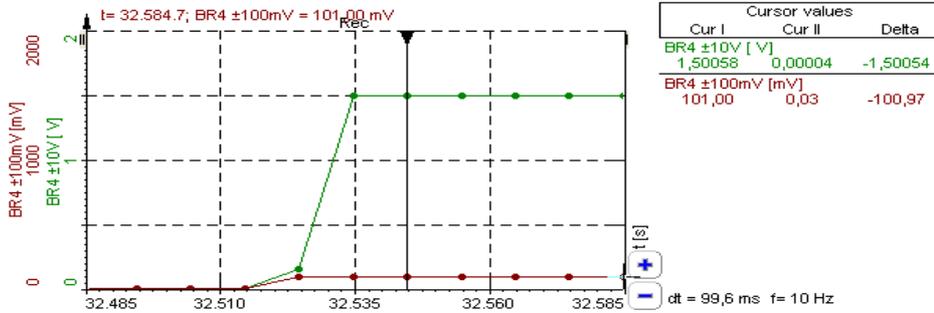


Illustration 143: BR4: 1.5V signal

Another important function that is related to these module range min/max values is the Range Error check function which is ON per default for all channels. This function is very useful to detect a broken sensor connection or an out-of-range condition.

Note: Even when you deactivate a channel (in Config Mode), the range error LED function for the channel is still enabled – this is because you could still use a deactivated channel inside the module for calculations. If you really want to disable this function, you can do so in ICP 100 when you click on the Range/Error column of the channel.

Typically each measurement module has 1 error LED per connector: e.g. the DS NET TH8 module has 2 (blue) 10-pin connectors and 2 (red) error LEDs: B, C (compare to Illustration 169: Module LEDs on page 92). If any of the channels of a connector has a range error, the corresponding (red) error LED will be switched ON.

For the BR4 example above (see Illustration 143), this means, that (if the 2 channels BR4 ±100mV and BR4 ±10V are connected to the first connector of the BR4 module), the error LED B (see Illustration 169: Module LEDs on page 92) will be ON, because the channel BR4 ±100mV is out of range.

Now let's elaborate on this example to see how the module range min/max values relate to the DEWESoft™ min/max values:

0_2		DS NET BR4 (A107)									
0	Used	Start	BR4 ±10V	VOLTAGE; Single ended	-10..10 V	-10	10	1,5014 V	Zero	Auto	Setup
1	Used	Start	BR4 ±100mV	VOLTAGE; Single ended	-100..100 mV	-100	100	OVL	Zero	Auto	Setup

Illustration 144: BR4 1.5V measure mode

When we do not change any settings, we can see that the DEWESoft™ min/max values (see 4.3.3.3 Channel setup no page 68) are the same as the module range min value/max value of the channel (see 3 in Channel configuration setup above).

The green channel BR4 ±10V has a DEWESoft™ min value of -10V and a DEWESoft™ max value of 10V and shows the correct voltage.

The red channel BR4 ±100mV has a DEWESoft™ min value of -100mV and a DEWESoft™ max value of +100mV and the signal is out of its DEWESoft™ measurement range. You can see this immediately in the setup screen, because the value-bar of this channel is red and instead of the signal value, you can see the red term OVL (for overflow).

Now, let's change the DEWESoft™ min/max values of the channels (click the Setup button in measure mode).

For the green channel BR4 ±10V we set DEWESoft™ min to 0V and max to 1.2V.

For the red channel BR4 ±100mV we set DEWESoft™ min to -200mV and max to 200mV.

In *Ch. Setup* (see Illustration 145) we can now see that the green channel $BR4 \pm 10V$ shows an overflow. And the the red channel $BR4 \pm 100mV$ doesn't.

0_2		DS NET BR4 (A107)						
0	Used	BR4 ±10V	VOLTAGE; Single ended -10..10 V	-	0	OVL	Zero	Auto Setup
1	Used	BR4 ±100mV	VOLTAGE; Single ended -100..100 mV	-	-200	101 mV	Zero	Auto Setup

Illustration 145: BR4 1.5V signal: measure mode range

When we switch to the DEWESoft™ Measurement screen (Illustration 146), we can see that the green channel $BR4 \pm 10V$ still shows the correct value (although it shows OVL in *Ch. Setup*) and the red channel $BR4 \pm 100mV$ still shows the max. range value of $+100mV$ (although we have set a DEWESoft™ range of $\pm 200mV$).

This clearly shows that the DEWESoft™ min/max value settings can neither increase nor decrease the maximum module range that we have setup in Config mode. It is just a convenience setting for a quick overflow check in the channel setup grid and nowhere else (also not in the measure screens: see Illustration 146).

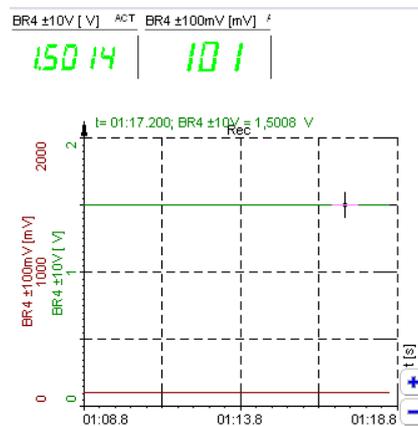


Illustration 146: BR4 1.5V signal: Measure screen

GPS

When you click on the **Additional** button (in config mode of the channel setup), you can enable/disable NMEA timing (see 4.1.4.3 NMEA-0183 on page 51) and GPS information:

INDEX	ON/OFF	NAME	Configuration
0_1		DS NET BR4 (A107)	Uart: 0 Address
0	Enabled	Pt1000	RESISTANCE; 2 -200..850 °C
1	Enabled	G33-50_Ch1x	BRIDGE; Full 4 -10000..10000
2	Enabled	TC_K_diff	CURRENT 0,004..0,02 A;
3	Enabled	BR4_Voltage	VOLTAGE; Sing -10..10 V

Illustration 147: GPS activation

To use this function you must connect your NMEA-0183 compatible device to the RS232 connector of the DS NET and configure the correct parameters (*Baudrate*, *Char Format*) for the serial communication. Please consult the manual of your NMEA-0183 device to get these parameters.

When GPS information is not available (e.g. you have a DCF77 receiver connected) or you only need NMEA timing, then you can deselect the check-boxes of all channels. Otherwise choose the GPS channels that you want to use.

When you switch back to *Measure mode*, you can see all selected channels in the channel list:

CHAN	ON/OFF	COLOR	NAME	AMPLIFIER	VALUES	ZERO	SETUP
0	Used		Latitude		-10 10	OVL	Zero Auto Setup
1	Used		Longitude		-10 10	OVL	Zero Auto Setup
2	Used		Heading		-10 10	OVL	Zero Auto Setup
3	Used	Green	Speed		0 10	Zero	Auto Setup
4	Used	Cyan	Altitude		-10 10	OVL	Zero Auto Setup
5	Used	Red	Num_of_satellites		8 10	Zero	Auto Setup

Illustration 148: GPS channels

Notes:

-  Speed is in m/s
-  Latitude/Longitude: when you export the data, the value is in minutes

4.3.4.2 Resolving configuration issues

There are cases where the modules have configuration issues, which will be described in this section.

If there are any configuration issues, you will see an **Auto resolve** button in the *Configuration Mode* of the DS NET plugin (Illustration 149). The quick way to fix all the issues is to simply click this button and let the plugin do all the work automatically: see the following paragraph Auto resolve, which will also cover the alternative way to resolve the issues step by step.

Auto resolve

If there are any configuration issues, you will see an **Auto resolve** button in the *Configuration Mode* of the DS NET plugin:

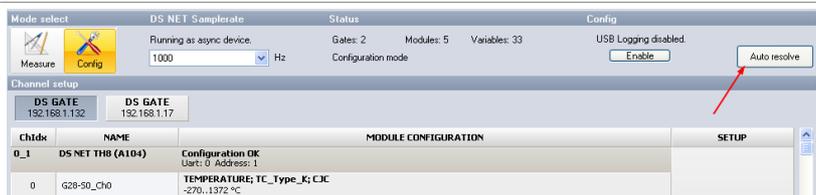


Illustration 149: DS NET plugin: Auto resolve

When you press **Auto resolve**, the DS NET plugin tries to resolve configuration issues automatically. A pop up dialog will be displayed until it has finished:

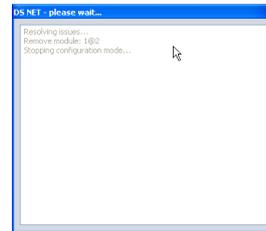


Illustration 150: DS NET plugin: Auto resolve in progress

Adding a new module

After you have extended your existing DS NET system (see 6.8 Adding a new module), you need to go to *Configuration Mode*:

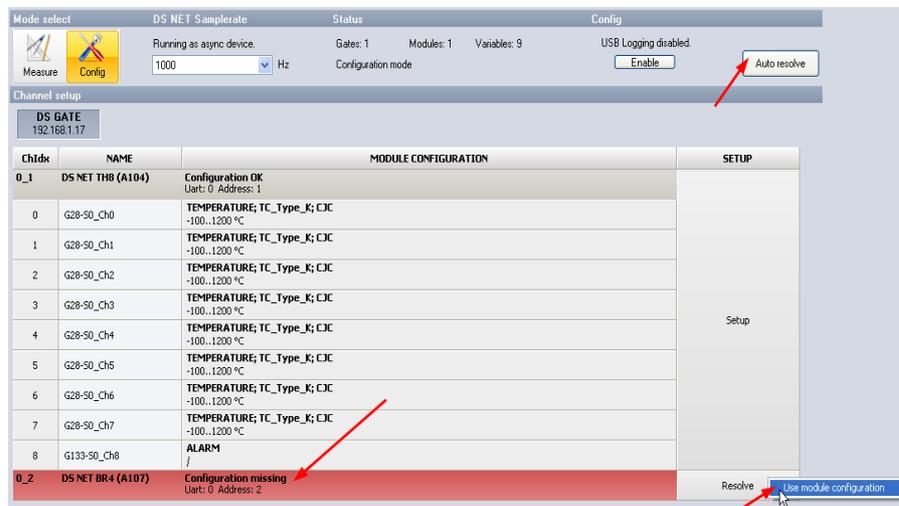


Illustration 151: DS NET plugin: Config Mode after adding a new module

You can see that:

- ⚠ the **Auto resolve** button (see paragraph Auto resolve above) is visible in this case
- ⚠ the new module (DS NET BR4) has been found, but that it does not have any configuration yet
- ⚠ the new module does not have a **Setup** button, but a **Resolve** button instead

When you click the **Resolve** button, a pop-up menu will appear and you can click **Use module configuration** to start resolving the configuration issue. When this step has succeeded, we need to restart the module:

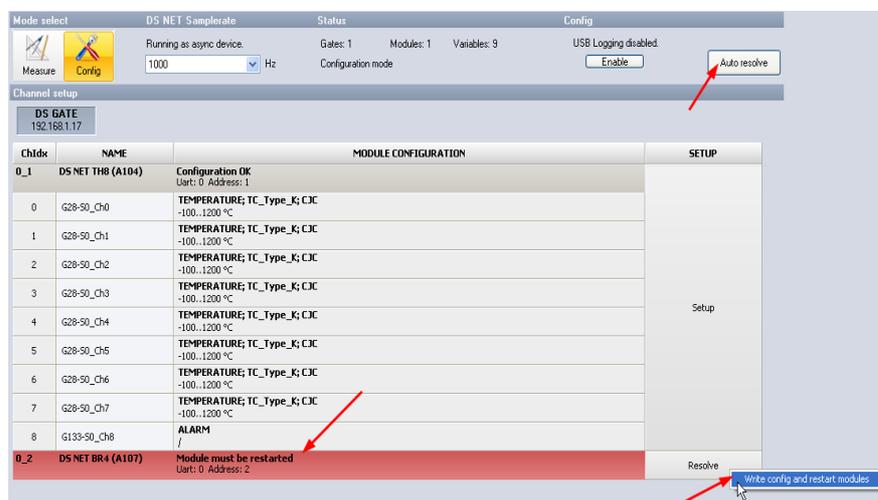


Illustration 152: DS NET plugin: Config Mode: restart new module

Click the **Resolve** button again and in the pop-up menu click **Write config and restart modules**.

Now the module is configured correctly, the resolve-buttons are gone and can be used for measurement.

Replacing a module

After you have physically replaced a module (see 6.10 Replacing a module), you will see that the configuration of the new module is now incompatible with the existing configuration:

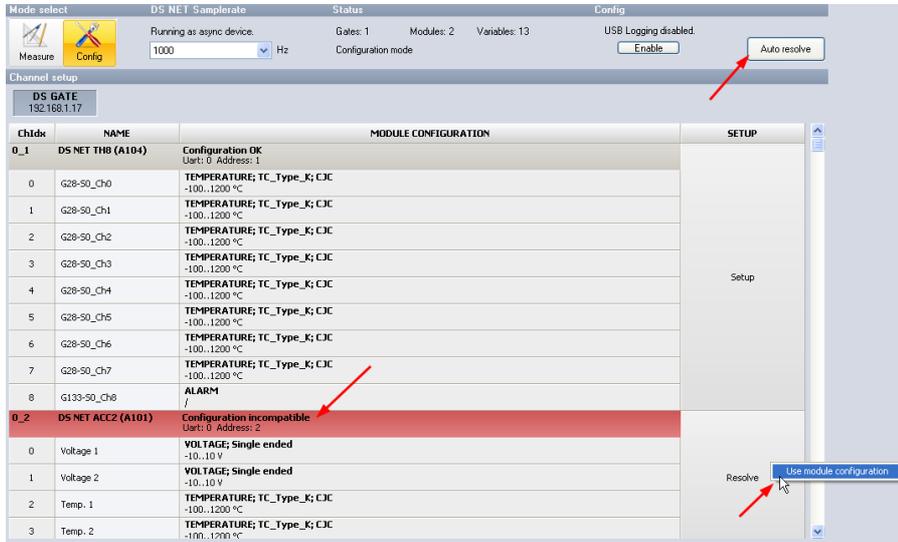


Illustration 153: DS NET plugin: Config Mode after replacing a module

In this example we have exchanged a DS NET TH8 with a DS NET ACC2 module.

You can see that:

- 🚩 the **Auto resolve** button (see paragraph Auto resolve above) is visible in this case
- 🚩 the new module (DS NET ACC2) has been found, but that its configuration is incompatible to the existing one
- 🚩 the new module does not have a **Setup** button, but a **Resolve** button instead

When you click the **Resolve** button, a pop-up menu will appear and you can click **Use module configuration** to start resolving the configuration issue. When this step has succeeded, we need to restart the module:

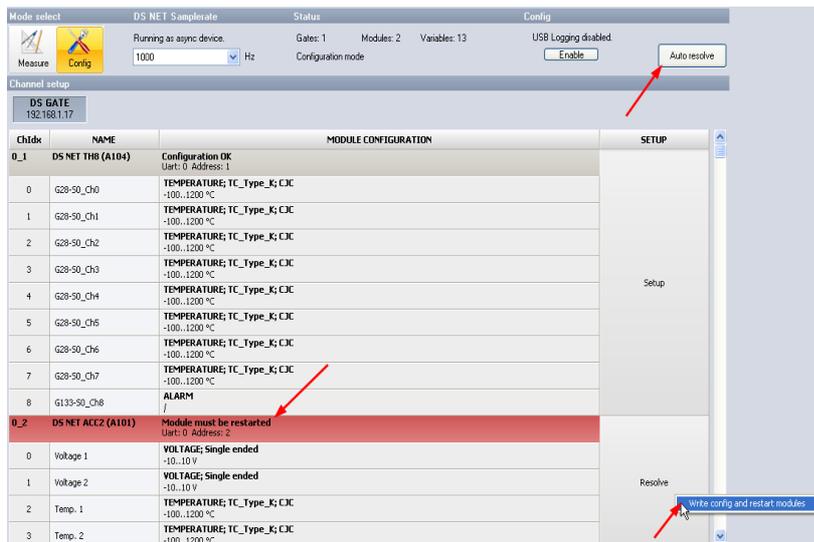


Illustration 154: DS NET plugin: restart module after replacing a module

Now the module is configured correctly, the resolve-buttons are gone and the new module can be used for measurement.

4.3.4.3 Analogue inputs

All module signals are defined as variables. Therefore, for the entry activate the tab **Variable Settings** in the configuration window.

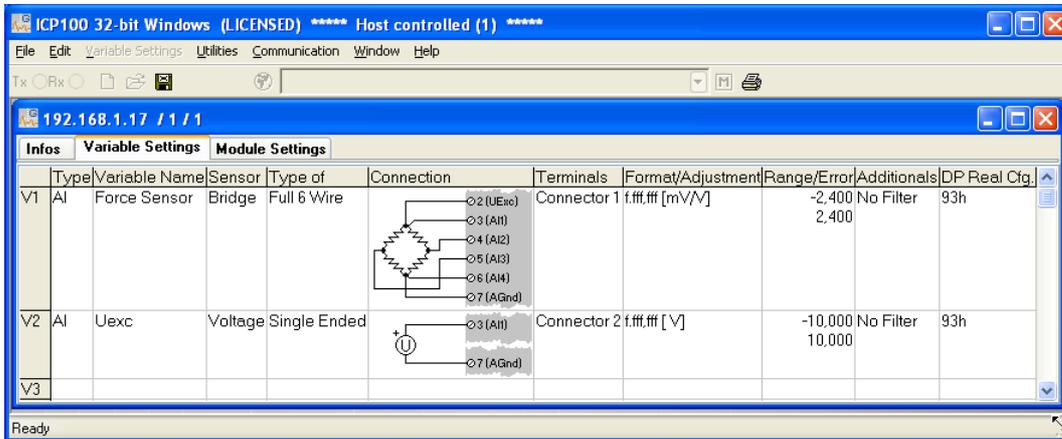


Illustration 157: DS NET plugin: analog inputs

4. Click in the *Type* column of the first row (V1 = Variable 1) or select the row (click on V1) and use **Variable Settings** – *Type*.
5. Select *Analog Input* and click on **OK**.
6. Click in the column *Variable Name* and enter a meaningful name for the connected sensor.
7. Click in the *Sensor* column and specify the type of sensor. Depending on the type of module you have various options available, e.g. *Bridge* for strain-gauge full and half-bridges, *Pt100*, *Resistance* for resistors or *Voltage* for voltage measurements and *IEPE* sensors.
8. Click in the *Type* column and specify the type of circuit or further information about the sensor type. Depending on the selected sensor type, you have various options available, e.g. *2-Wire* or *4-Wire* (circuit) for resistive transducers or *Full 4-Wire* or *Full 6-Wire* (circuit) for strain-gauge full bridges. The *Connection* column shows you the pin assignment to be used. Check that your sensor is connected correctly. When you create several channels, the physical outputs of the module will always be occupied from top to bottom automatically.
9. Click in the *Format/Adjustment* column to enter the scaling for the sensor. This is additional scaling performed on the module. Usually you can do the scaling in DEWESoft™ (see 4.3.3.3 Channel setup), but sometimes it may be useful to do the scaling at this level: e.g. for scaling an alarm output. Here you can also enter how many post decimal places (*Precision*) and how many places in total are to be output (*Field Length*). The field length is calculated including the decimal point, but without any commas displayed for the thousands. After you closed the dialog the number of transferred places and the unit are displayed in the *Format/Adjustment* column, e.g. *ff,fff.f [kN]* for an output in the unit *kN* with a total of seven characters including the decimal point and one post decimal place. If negative numbers occur, the display in this example is limited to *-9,999.9* (seven characters without the comma).
10. Click in the *Range/Error* column to limit the permissible value range (this may also change the measurement range: e.g. for voltage measurement of the ACC2 module: see 5.4.1 ACC2: Voltage on page 99) and to define the reaction in the case of an error (optional).
11. Optionally, you can specify filtering of the sensor signal in the *Additional* column.
12. When you are done, select **File - Save to file**.

4.3.4.4 Digital inputs/outputs


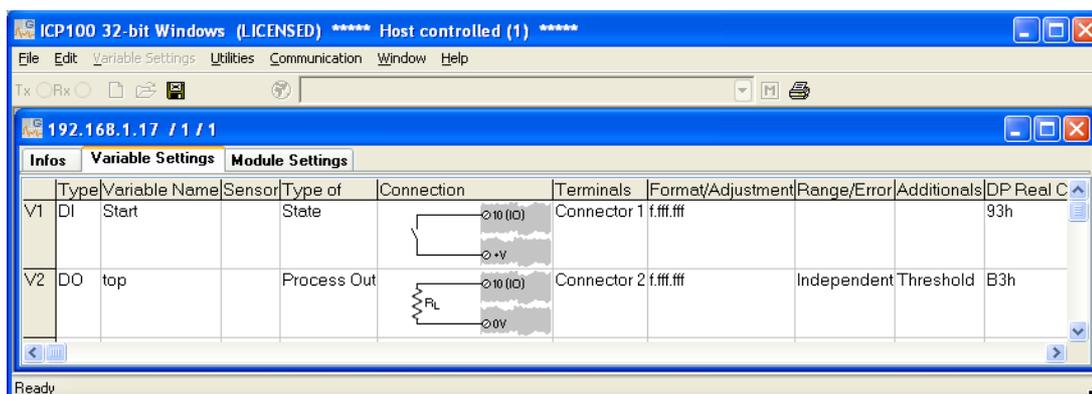


Illustration 158: DS NET plugin: Digital inputs/outputs

1. Click in the *Type* column of the first row (V1 = Variable 1) or select the row (click on *V1*) and use **Variable Settings** – **Type**.
2. Select *Digital Input* or *Digital Output* and click on **OK**.
The *Connection* column shows you the pin assignment to be used. Check that your sensor is connected correctly. When you create several channels, the physical outputs of the module will always be occupied from top to bottom automatically.
3. Click in the column *Variable Name* and enter a meaningful name for the connected sensor.
4. For a digital output click in the *Type* column and specify whether you want to use the output as *Status indicator (State)* or *Process Out*.
5. *Process output*: The output monitors a module signal and changes the output level under certain conditions. Click in the *Additional* column and specify the type of alarm monitoring.
You can specify up to four alarm conditions. When one of the conditions is satisfied, the alarm signal is triggered. At the right top of the graphical displays, select the thresholds for the alarm condition. Enter the values for the switching thresholds in the (scaled) unit of the selected signal. Use either fixed values (constants) or select other variables.
6. *Status indicator (State)*: The output can be set via a command from the DS GATE or from a Host application: e.g. in DEWESoft™ these channels can be used as *control channels*.
Note: make sure, that the *Data Direction* of the channel is set to *Input/Output* (click on the *Format/Adjustment* column and then on the button **Data Direction**).
7. Click in the *Format/Adjustment* column to specify the transfer format.
Since digital signals do not require any post decimal places, you can enter 0 for *Precision*. 1 is sufficient for the *Field Length*. With a digital input you can also specify a unit (optional).
For several inputs/outputs there is also the type *Set8* with which 8 inputs or outputs are transferred as a number (4-byte float format, single precision format).
When the dialog is closed, the number of transferred places and the unit in the *Format/Adjustment* column, e.g. \bar{x} , are displayed.
8. Click in the *Range/Error* column to define the reaction in the case of an error for the digital outputs (optional).
9. When you are done, select **File** - **Save to file**.

4.3.4.6 Defining computations

You can also do simple computations directly in the module.

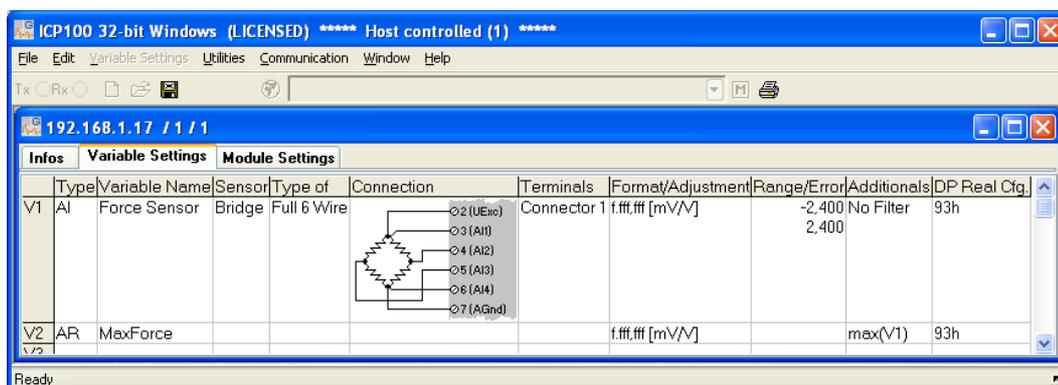

1. Click in the *Type* column of the row (V2 = Variable 2) or select the row (click on V2) and use **Variable Settings** – *Type*.
2. Select *Arithmetic* and click on **OK**.
3. Click in the column *Variable Name* and enter a meaningful name for the arithmetic formula.
4. Click in the *Additional*s column and specify the required computation.
In the upper dialog field you can enter a formula which uses the existing module variables (this is similar to what you would do on a traditional pocket calculator).
The bottom section contains buttons, that will insert the respective formula into the input field at the top, when clicked.
When you are done, click **OK**.
5. Click in the *Format/Adjustment* column to specify the transfer format.
Here you can enter how many post decimal places (*Precision*) and how many places in total are to be output (*Field Length*). The field length is calculated including the decimal point, but without any commas displayed for the thousands.
After you closed the dialog the number of transferred places and the unit are displayed in the *Format/Adjustment* column, e.g. *ff,fff.f [kN]* for an output in the unit *kN* with a total of seven characters including the decimal point and one post decimal place. If a negative numbers occur, the display in this example is limited to -9,999.9 (seven characters without the comma).
6. When you are done, select **File** - *Save to file*.

4.3.4.7 Specifying alarm monitoring

In order to monitor a limit and to output a level on a digital output when an alarm occurs, you can directly use the function of the digital output. You do not need to set up any alarm monitoring. The alarm monitoring is used to monitor signals in the module and to make the result available to the PC as a preconditioned signal. Checking the original signal in the PC or PLC can therefore be omitted.

1. Click in the *Type* column of the next free row (V2 = Variable 2) or select the row (click on V2) and use **Variable Settings** – *Type*.
2. Select *Alarm* and click on **OK**.
3. Click in the column *Variable Name* and enter a meaningful name for the alarm signal.
4. Click in the *Additional*s column and specify the type of alarm monitoring.
You can specify up to four alarm conditions. When one of the conditions is satisfied, the alarm signal is triggered.
At the right top of the graphical displays, select the thresholds for the alarm condition. Enter the values for the switching thresholds in the (scaled) unit of the selected signal. Use either fixed values (constants) or select other variables.

5. Click in the *Format/Adjustment* column to specify the transfer format.
Here you can enter how many post decimal places (*Precision*) and how many places in total are to be output (*Field Length*). The field length is calculated including the decimal point, but without any commas displayed for the thousands.
After you closed the dialog the number of transferred places and the unit are displayed in the *Format/Adjustment* column, e.g. *ff,fff.f [kN]* for an output in the unit *kN* with a total of seven characters including the decimal point and one post decimal place. If a negative numbers occur, the display in this example is limited to *-9,999.9* (seven characters without the comma).
Since the alarm signal, like digital signals, does not require any post decimal places, you can enter 0 for *Precision*. 1 is sufficient for the *Field Length*.
When the dialog is closed, the number of transferred places and the unit in the *Format/Adjustment* column, e.g. *f*, are displayed.
6. When you are done, select *File - Save to file*.

4.3.5 Setup explained

The most important thing to understand when working with DEWESoft™ and DS NET setup data, is that there are 2 locations where the setup data is stored:

- 🚩 DS NET stores it's setup data in the DS GATE module
This makes it possible to use the DS NET system standalone (e.g. as a data logger, see 7 Data Logger on page 165)
this data consists of everything that you can setup in *config mode* (see on page 69)
all these settings (and even more) can also be done in *test.commander*
- 🚩 DEWESoft™ stores it's setup data in an xml-file
(e.g. *default.d7s*) located in the DEWESoft™ *Setup* directory (see 3.1.3.2 Installing new DEWESoft™ version on page 22)
this setup includes all the settings of the *config mode* plus all the settings of the *measure mode* (see 4.3.3 Measure mode on page 65)

The best way to explain the subtleties of the interaction between these setups is to show some examples.

4.3.5.1 First use in DEWESoft™

When you use the DS NET system for the first time on a new DEWESoft™ installation, you have to activate the DS NET system in hardware setup (see 4.2 Hardware setup on page 56). When you then close the hardware setup, the DS NET plugin will read all available information of the DS NET system: e.g. the number of modules, the module types, the current sample rate, the channels for each module, and so on. That means, that all information that is shown and can be changed in the *config mode* (see on page 69) of the plugin is already available.

On the other hand, we don't have any information about the DEWESoft™ settings for this device, that means, that all the values shown in the *measure mode* (see 4.3.3 Measure mode on page 65) are still the default values: e.g. no *min/max* values, or *scaling* have been set (see 4.3.3.3 Channel setup on page 68).

4.3.5.2 Changing measure mode settings

When you now change any settings in the *measure mode* they will only affect DEWESoft™ (except for the sample rate).

EXAMPLE 9



When you enter a scaling factor (see 4.3.3.3 Channel setup on page 68) for the channel, the factor will be used immediately to scale the values that we get from the DS NET system, but the DS NET system has not been changed in any way – it still sends the same values as before, but DEWESoft™ is calculating and displaying the scaled value.

If you would now exit DEWESoft™ and restart it again, your scaling factor settings would be lost, so you should better save these settings:

4.3.5.3 Saving DEWESoft™ setup data

If you want to preserve your current settings in *measure mode*, you need to save your DEWESoft™ setup:



Illustration 160: Save channel setup

After you have saved your setup (and also after you load a setup), the DEWESoft™ window title, will show the name of the current setup (see red rectangle in Illustration 161)



Illustration 161: Current channel setup

After you have saved your the DEWESoft™ setup, you can close DEWESoft™, restart it, load the setup again and your settings will be restored.

4.3.5.4 Differing configurations

When you load a DEWESoft™ setup that also includes a DS NET configuration, the DS NET plugin will read the DS NET configuration from the DS NET and compare it with the settings, that are stored in the DEWESoft™.

If the 2 configurations do not match, you will be asked which of the setups you want to use:

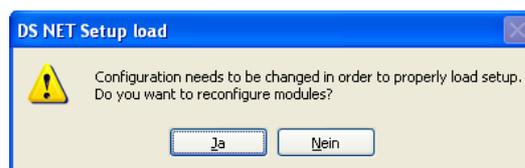


Illustration 162: Differing Configurations

If you press:

- ⚠ *Yes*: the current DEWESoft™ configuration which is stored on your PC will be written to the DS NET systems and the modules: This process may take up to several minutes, dependant on the number of modules of the DS NET system.
- ⚠ *No*: the configuration of the DS NET system will be used for the current DEWESoft™ setup. You may want to save the DEWESoft™ setup (see 4.3.5.3 Saving DEWESoft™ setup data) which now includes the matching setup from the DS NET system: Otherwise you will be asked the same question again next time you load this setup.

Either way, the 2 configurations will match afterwards.

4.3.5.5 Setup/System mismatch

When you try to load a setup for a different system than the one that is currently connected, you will see a warning message similar to this one:

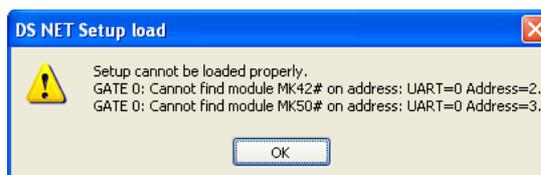


Illustration 163: Setup/System mismatch

For example, when you have a DS NET system that consists of 3 measurement modules and try to load a DEWESoft™ setup that has been created with a DS NET system that had 5 modules.

In this case you may experience unexpected results, so you should check all the channels and settings thoroughly.

4.3.5.6 Similar Systems

One special case is when you have 2 DS-NET systems with the same modules: e.g. we have

- ⚠ DS-NET A with only one BR-4 module – all channels configured for bridge measurement
- ⚠ DS-NET B has also one BR-4 module – all channels configured for resistance measurement

Now start DEWESoft™, activate DS-NET A in hardware setup (only DS-NET A, let's say DS-NET B is not even powered on) and save a channel setup.

Then we go to hardware setup and remove DS-NET A (maybe even power it off) and activate DS-NET B instead. When we now leave hardware setup DEWESoft™ detects that the serial number of the connected DS NET has changed and will show you this dialogue:

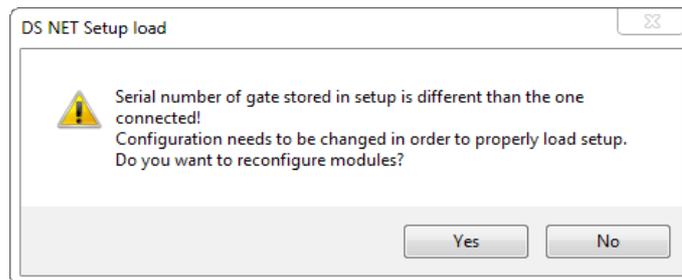


Illustration 164: Serial number changed dialogue

When you click **Yes**, the currently connected DS-NET B will be reconfigured according to the current channel setup: this means after this process both DS-NET systems will have the same configuration; i.e. both are setup for bridge measurement.

When you click **NO**, the currently connected DS-NET (system B) will not be reconfigured and the current channels setup is ignored. The configuration will be read from DS-NET B and you will still have the original configuration (DS-NET A is for bridge measurement, DS-NET B is for resistance measurement).

5.2.1 Special modules

These modules are not controlled by the DS GATE (in contrast to the measurement modules).

Name	Short description	Detailed information / page
DS GATE	controller unit of all measurement modules (power supply, communication, ...)	5.3 DS GATE / 95
DS SUPPLY	provides galvanically isolated DC sensor supply voltages	5.16 DS NET SUPPLY / 142
DS NET WLAN	provides WLAN access to the DS GATE	5.17 DS NET WiFi / 143
DS NET CPU	a full-featured, fanless mini PC (including SSD harddrive, LAN, WLAN, ...), that can run DEWESoft™	2.2.2 DS-NET-CPU users manual / 8
DS-NET-CAN2	provides 2 isolated CAN channels (for DS-NET CPU)	2.2.2 DS-NET-CPU users manual / 8

Table 8: DS NET: special modules

5.2.4.1 Back side connector

The inter-socket connector (the green 9 pole Phoenix connector in Illustration 168) has the following pin assignments:

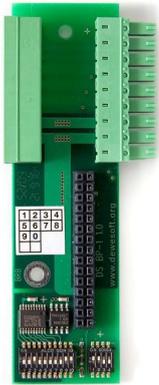
	Pin No.	Name	Notes
	1	Sync 1	only used for CFB-2
	2	Sync 2	only used for CFB-2
	3	RS-485 B2	B-line of UART 2
	4	RS-485 A2	A-line of UART 2
	5	RS-485 B1	B-line of UART 1
	6	RS-485 A1	A-line of UART 1
	7	Supply 0V	
	8	Supply +V	
	9	Ground	internally connected to Supply 0V

Illustration 168: Socket PCB

5.2.5 LED flash codes (for measurement modules)

Each measurement module has 3 LEDs (A, B, C). LED A is blue, LEDs B and C are red (see Illustration 169). Note, that the DS GATE module does not have LED C.

See also: 5.3.2 LED flash codes (DS-GATE) on page 96.

When the system has started up and everything is okay the blue LEDs (A) of the DS GATE and all modules should be on (and not flashing). Any other status indicates some kind of warning or error.

If any red LED (B or C) of analogue modules are on, this means that the module has detected a range error (see Module Range/Range Error on page 73). This function may be used to detect a broken sensor connection of thermocouple modules.

In the following paragraphs we will use these symbols to indicate the status of a LED:

Symbol	Description
	LED is ON for a long period of time
	LED is ON for a short period of time
	LED is OFF for a short period of time
	LED is OFF for a long period of time


Table 11: LED flash codes legend



Illustration 169: Module LEDs

5.2.5.1 SOS

SOS flashing sequence:

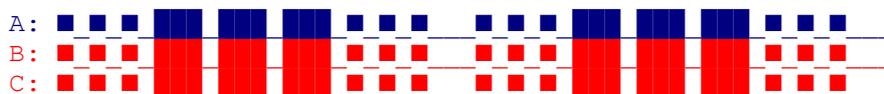

This means that the socket- and module configuration do not match.


This could be solved by:

-  enter the configuration mode of the DS NET plugin and check if there are configuration issues (see Auto resolve on page 76)
then leave the configuration mode (go back to measure mode) so that the new configuration is written to the module
-  downloading the new configuration via `test.commander`
-  correct the settings for hot-swapping: see also 6.2.4.2 Troubleshooting

5.2.5.2 Application download mode


This indicates that the module is running the operating system software.

This is usually only an intermediate state while downloading a new application. After the download has finished, the application will be started.

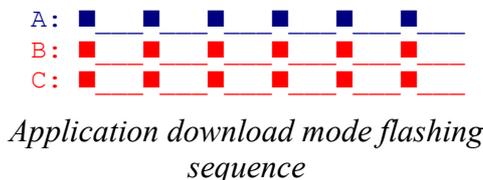


5.2.5.3 OS download mode

When an OS (or *FPGA*) download is in progress the module changes into this configuration mode. After the download succeeded a restart is required to get into the measurement mode again.

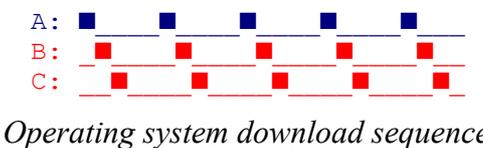

5.2.5.4 DSP communication lost


When the communication to the *DSP* has been lost.

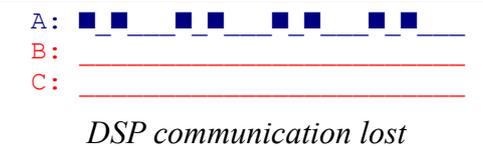

5.2.5.5 FPGA communication lost

When the communication to the *FPGA* has been lost.

One possible cause is that the *Baud* rates of the DS-GATE and the module do not match.

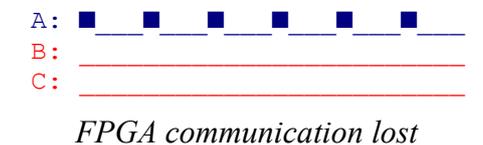

5.2.6 Sensor information

5.2.6.1 Connecting sensors with sensing leads

Resistive sensors require an excitation voltage to be able to provide their output signal. For sensor excitation a current is passed through the connecting lead, which however causes a loss of voltage due to the resistance of the connecting lead. Consequently, the sensor is then not supplied with the voltage set on the amplifier module, but rather with a slightly lower voltage. This leads in turn to a lower output signal and, depending on the cable resistance, losses in the single-figure percentage range can occur even with just a few meters.

Therefore, high quality amplifier modules for the excitation of resistive sensors use so-called sensing leads which can measure the loss of voltage, since only a very small current flows in them. This is because the inputs for the sensing leads have very high input resistances, i.e. usually over 10 MΩ compared to a sensor resistance of a few 100 Ω.

The amplifier module can therefore acquire the voltage arriving at the sensor error-free and increase its excitation voltage to compensate for the losses in the connecting cable. This is particularly the case when the temperature of the connecting cable changes. In this case the cable resistance changes and the sensor output signal would therefore also change if no sensing leads were used.

We therefore recommend the use of sensing leads. This is mainly necessary when several meters of cable are used, low measurement deviations are to be obtained or when the temperature of the cable may vary.

5.2.6.2 Current measurement with an external shunt

Current measurements are carried out by measuring the voltage drop across a resistance of known size (shunt resistance). In some modules this is a resistor of 50 Ω , with which you can measure currents up to 25 mA (the maximum shunt power dissipation is limited to 0.25 W). Other modules may require an external shunt connector (e.g. V8).

For higher currents an external shunt is always required which is looped into the line to be measured. The permissible power dissipation of the external shunt has to be suitable for the current to be measured and the voltages dropped across the resistor must not exceed the permissible input voltage on the analogue input. In this case configure the analogue input as a voltage input and setup the scaling, so that you divide the measured voltage by R_{ext} .

IMPORTANT



The error in the current measurement using an external shunt depends on the accuracy of the resistor used.

5.2.6.3 Measuring with thermocouples

Thermocouples consist of two *thermoelectric wires* which are formed from different materials, e.g. platinum and platinum/rhodium, and are joined together at one end, usually by welding. If this contact point and the other ends of the thermoelectric cables have different temperatures, a *thermoelectric voltage* is produced at the contact point. This voltage is essentially proportional to the temperature difference between the contact point and the ends of the cables.

Since thermocouples only measure a temperature difference (difference between the temperature at the contact point and the measured temperature at the terminal strip on the module), the terminal temperature must be known or the *transition* from the thermocouple cable or compensating cable to the copper cable must occur at a known temperature level. The first case is known as internal cold junction compensation (TC_{int}) and the second case as external cold junction compensation, TC_{ext} .

Some measurement modules have an integrated CJC (e.g. TH8-C, TH4), and for others you need an external connector adapter which has an integrated CJC: e.g. BR4-CJC (see page 91) is required for the BR4 module.

To acquire the temperature with internal cold junction compensation an additional temperature probe is used which measures the reference temperature. In this way, the temperature at the *transition point* is determined and the voltage produced by the thermocouple is corrected depending on the type of thermocouple.

To measure the temperature using external cold point compensation, a second thermocouple of the same type is needed which is connected in series with the first one. The polarity is chosen such that the thermoelectric voltages subtract (see Illustration 245: TH8 differential thermocouple measurement on page 132). The second thermocouple is located at a fixed reference temperature (usually 0 °C). Then, the module calculates the temperature at the measuring point based on the linearisation curve. However, the module requires the information of which reference temperature (cold junction temperature) is being used.

5.2.7 Power supply requirements

For the power supply an unregulated DC voltage between 10 and 30 Volts is required, which is connected to LEMO B1 connector on the DS GATE. Each module requires a power of approx. 2 W (for details see 6.1.2 Weight & Power Consumption on page 157) in addition to the power supplied for the connected transducers. The power required is almost constant over the complete voltage range.

IMPORTANT



When the modules are switched on, there is an increased current demand until the modules are operating in a stable manner: In the start-up phase up to 700 mA (10 ms) per module is needed depending on the supply voltage. After that, you should expect approx. 500 mA per module with a 10 V supply voltage (approx. 170 mA with a 30 V supply voltage).

You should therefore use power supplies which can deliver the required peak power when the voltage is switched on.

The modules have an internal self-healing (reversible) fuse for protection against over-voltages, over-currents and incorrect polarity.

5.3 DS GATE

The leftmost module (relative to the measurement modules) in a DS NET device is always a DS GATE module. It is also the most important, because it is responsible for the power supply, data handling, configuration and communication.

During measurement it will collect all the data from the other connected modules and host systems (e.g. DEWESoft™) can easily acquire the measurement data. The host system can be connected via Ethernet to the DS GATE module (note that there are also other interfaces available).

Depending on the operating mode of the modules, transmission rates of 1 kHz with up to 128 variables (transferred values with four-byte resolution, real variables) are possible over Ethernet.

DS GATE external connections:

- ▲ *NET*: to connect the DS GATE via Ethernet to your LAN or directly to your PC
- ▲ *SYNC*: see 4.2.1 Sync mode on page 56
- ▲ *MEM*: this connector can be used for slow data logging on a USB stick (see 7 Data Logger on page 165)
- ▲ *USB*: the USB connector is not supported at the moment
- ▲ *GND*: connection for a ground cable (banana plug)
- ▲ *RS 232*: for RS232 communication: see 5.3.1.2 RS232 connector below
- ▲ *10-30 V DC*: to connect the power supply: see 5.3.1.1 Power connector below



Illustration 170: DS-GATE

WARNING



It is mandatory to connect a ground cable to the *GND* connector of the DS GATE when you are working with high voltages: e.g. when you are working with the V8-200 module (see 5.9 DS NET V8-200 on page 124) .

5.3.1 DS-GATE connectors

5.3.1.1 Power connector

Via the *Lemo 1* connector you can use a supply voltage of 10-30 V_{DC}



Illustration 171: Power plug

5.3.1.2 RS232 connector

You can use a 3.5mm stereo jack plug to connect the DS-GATE via RS232 to a PC; e.g. for Modbus/ASCII communication, for time synchronisation (4.1.4.3 NMEA-0183 on page 51), for GPS position data (see GPS on page 75) or to reset the IP address.



Illustration 172: RS232 plug

5.3.2 LED flash codes (DS-GATE)

The DS-GATE module has 2 LEDs (A, B). LED A is blue, LEDs B is red (see Illustration 170 above).

See also: 5.2.5 LED flash codes (for measurement modules) on page 92

During start-up the LEDs A and B will be flashing. After some seconds, when the start-up phase has finished, only the blue LED A should be lit. Any other status may indicate some additional information, warning or error.

In the following paragraphs we will use these symbols to indicate the status of a LED:

Symbol	Description
	LED is ON for a long period of time
	LED is ON for a short period of time
	LED is OFF for a short period of time
	LED is OFF for a long period of time

Table 12: LED flash codes legend

5.3.2.1 Data connection active

When the blue LED A is blinking slowly, it means that a host-application is accessing the data. E.g. when DEWESoft™ is in *Measure mode*.



Data connection active

5.3.2.2 USB access

When the blue LED A is blinking fast, it means that the DS-GATE is reading from/writing to a connected USB device (see also 7 Data Logger on page 165).



USB active

5.3.2.3 Warning/Error indication

When the red LED B is flashing, a warning/error condition has occurred. Use the *Gate status info* feature (see 4.3.3.1 DS GATE pop-up menu on page 66) to get detailed information.



Warning/Error indication

5.3.2.4 Fatal Error

When LED B is constantly on, the DS-GATE has a fatal error. Try to restart the DS-NET system (power off, wait for 10seconds and power on again). If the problem persists, you must ship the DS-GATE to Dewesoft for repair.



5.3.3 Reading data

For host applications there are 2 different ways how to read data from the DS-GATE module:

- block transfer (high speed data): only one host application (e.g. to the DEWESoft™ DS-NET-plugin, to the Gantner LabVIEW™ driver, etc.) can read the high speed data at the same time
- online values (request/response): up to 10 host applications (e.g. DEWESoft™ Modbus plugin) can read the online values at the same time

For example, you could have one instance of DEWESoft™ running (the plugin uses the high speed block transfer) and at the same time access the online values from 3 different Modbus host applications (via TCP/IP).

5.3.3.1 Block transfer

In this case, blocks of data will be read from the DS-GATE and transferred to the host application. Since a complete block of data is read, the data transfer is quite fast: up to about 160 kS/s are possible.

Following facts apply:

- only one host application can read the high speed data at the same time
- access is only possible via TCP/IP (not RS232)
- the DS-NET plugin only uses block transfer

5.3.3.2 Online values

In this case, the host application (e.g. a Modbus client) requests the current online values and the DS-GATE will return the current values.

Following facts apply:

- the online values can be read at the same time by several host applications
- access via ASCII protocol or Modbus is possible (either via Ethernet or via the RS232 connector of the DS-GATE)

Note: the Modbus (and ASCII) protocols are request based. that means, the host application must poll for the data and will then get back the current data (an inherently asynchronous process). This process is of course much slower than the high-speed block transfer:

(e.g. 100Hz is already a relatively high sample rate for reading online values on a decent laptop with a low-channel-count DS-NET system).

5.3.4 DS GATE: Specifications

All declarations are valid after a warm up time of 45 minutes.

HOST INTERFACE ETHERNET	
Protocols	TCP/IP, UDP, PING, ASCII, Modbus TCP/IP
Services	DHCP, FTP-Server, FTP-Client, e-Mail-Send-Client (SMTP)
Baud rate	10/100Mbps
Data rate	max. 800 kByte/s
Number of simultaneous clients	10
HOST INTERFACE USB	
Version	USB 2.0
Data rate	typical 100 kByte/s

Devices	Data storage, formatted with FAT or FAT32 (recommended)
INTERNAL SLAVE INTERFACES RS485 (UARTS)	
Number of interfaces	2
Standard	RS485
Data format	8E1
Protocol	Local Bus
Baud rate	configurable up to 24Mbps
Connectable devices	max. 16 modules
Isolation voltage	500 V _{DC} ²³ isolation voltage: to power supply and to interface
OPERATING SYSTEM INDEPENDENT	
Standardised interface	Ethernet (FTP/Berkeley-Socket)
SYNCHRONISATION OF A MULTI TEST CONTROLLER SYSTEM	
Interface	RS485 standard
Mode	Master Slave principle, IRIG standard DCF77, AFNOR, etc. GPS NMEA over RS232 SNTP over Ethernet
POWER SUPPLY	
Power supply voltage	10 up to 30 V _{DC} , over voltage and overload protection
Power consumption	approximately 3W
ENVIRONMENTAL	
Operating temperature	-20°C up to +60°C
Storage temperature	-40°C up to +85°C
Relative humidity	5 % up to 95 % at 50°C, non condensing
Vibration	MIL-STD 810F 514.5, procedure I
Shock	MIL-STD 810F 516.5, procedure I
MECHANICAL	
Case	Aluminium
Dimensions (W x H x D)	approx. 31 x 125 x 120 mm (for details see: 6.1.1 Physical Dimensions on page 156)
Weight	approx. 400g (for details see: 6.1.1 Physical Dimensions on page 156)

EXAMPLE

10



External communication
 When the DS GATE module transfers data via Ethernet to the host system (e.g. a PC running DEWESoft™), the following number of variables can be transferred at the given sample rate:
 128 variables @ 1 kHz (block transfer – see 5.3.3.1 Block transfer on page 97)
 16 variables @ 10 kHz (block transfer – see 5.3.3.1 Block transfer on page 97)
 64 variables @ 300 Hz (online 5.3.3.2 Online values on page 97)

EXAMPLE

11



Internal Communication
 When the DS GATE module communicates to its connected DS NET modules, the following number of variables can be transferred (when the UART's data rate is 24MBaud):
 200 variables @ 1kHz
 20 variables @ 10kHz
 2 variables @ 100kHz

²³ 1kVDC peaks, 500VDC for some minutes, 250VDC permanent

5.4.2 ACC2: Current

A shunt resistance of 50 Ω is integrated for current measurement. This facilitates the measurement of currents up to 25 mA. For higher currents use a voltage measurement with an external shunt (see 5.2.6.2 Current measurement with an external shunt on page 94).

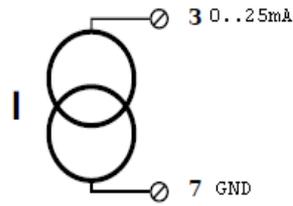


Illustration 178: ACC2 Current

IMPORTANT



The internal shunt will only be active when the DS-NET system is powered up and initialized. When the system is powered off (and during start-up, reboot, etc.) the internal shunt will not be connected and thus the circuit will not be closed.

5.4.3 ACC2: Potentiometer

Potentiometers with resistances between 1 kΩ and 10 kΩ are connected in a three-wire configuration.

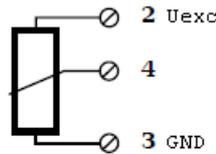


Illustration 179: ACC2 Potentiometer

5.4.4 ACC2: Resistance, Pt100, Pt1000

You can connect resistances and Pt100/1000 probes in two-wire or four-wire circuits. You specify the selected type of circuit during the module configuration.

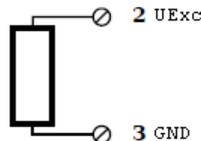


Illustration 180: ACC2 res. 2 wire

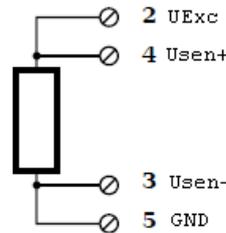


Illustration 181: ACC2 res. 4 wire

5.4.5 ACC2: Thermocouple

You can connect the following types of thermocouple: B, E, J, K, L, N, R, S, T and U.

See also 5.2.6.3 Measuring with thermocouples on page 94.

For connecting thermocouples you need a special connecting plug which contains the comparative measuring point (cold junction compensation) required for thermocouples.

The adapter can be obtained under the designation ACC2-CJC (see page 91).

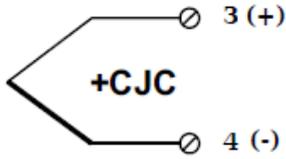


Illustration 182: ACC2 Thermocouple

The pin-numbers in the illustration refer to the pins of the CJC adapter (see ACC2-CJC on page 91) that the sensor is connected to (not the pins of the DS-NET module).

Alternatively, you can also use two thermocouples or a reference temperature source.

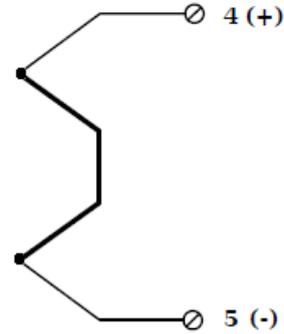


Illustration 183: ACC2 differential thermocouple measurement

5.4.6 ACC2: Full and half-bridge transducers

With (resistive) full bridges (strain-gauge full bridges) all connections are occupied. If the sensor has no sensing leads, you specify this during the module configuration; With half bridges the side drawn in dashes and connection 5 are omitted.

see also 5.2.6.1 Connecting sensors with sensing leads on page 93

The bridge excitation voltage is between 2.5 and 3 V (the actual value is not important since the module will measure the excitation voltage and correct the measured values).

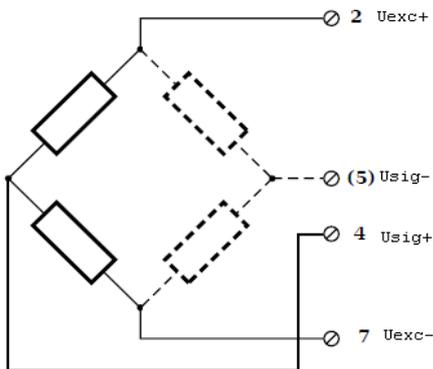


Illustration 184: ACC2: Full- and Halfbridge 4 wire

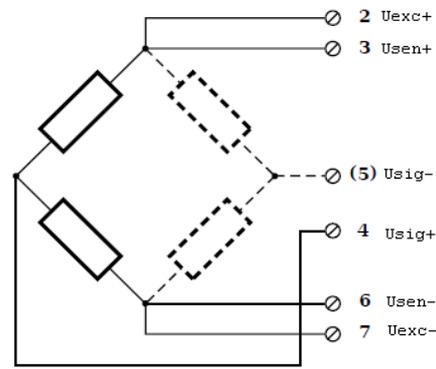


Illustration 185: ACC2: Full- and Halfbridge 6 wire

5.4.7 ACC2: Strain gauge quarter bridge

For the connection of strain gauge quarter bridges you need the same setup as for the Full 4 Wire bridge plus a special connection plug which contains the completion resistances. The plug can be obtained under the designation ACC2-120 with 120 Ω (see page 91) and ACC2-350 with 350 Ω (see page 91).

see also 5.2.6.1 Connecting sensors with sensing leads on page 93

The bridge excitation voltage is between 2.5 and 3 V (the actual value is not important since the module will measure the excitation voltage and correct the measured values).

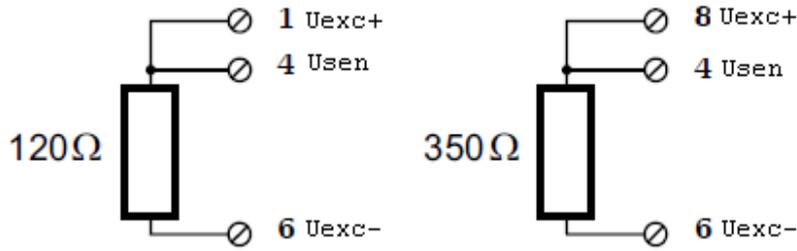


Illustration 186: ACC2 strain gauge quarter bridge

The pin-numbers in the illustration refer to the pins of the bridge completion connector (see ACC2-120 on page 91/ACC2-350 on page 91) that the sensor is connected to (not the pins of the DS-NET module).

5.4.8 ACC2: IEPE sensor

The sensor is supplied with 4 mA of current from the module (current supply).

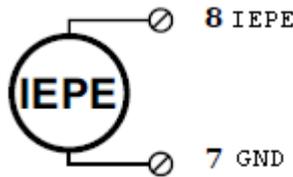


Illustration 187: ACC2 IEPE sensor

An optional screw-to-BNC adapter is available under the designation ACC2-BNC (see page 91).

5.4.9 ACC2: Digital input and output

On each connecting plug two contacts are available in each case for an input and an output.



Illustration 188: ACC2 digital input and output

Note: For the input you can connect the ground of your voltage to the GND connector of the DS-GATE module (see 5.3 DS GATE on page 95).

5.4.10 ACC2: Specifications

All declarations are valid after a warm up time of 45 minutes.

ANALOG INPUTS	
Number of channels	2

Accuracy	0.01 % typical 0.02 % in controlled environment ²⁴ 0.05 % in industrial area ²⁵		
Linearity error	0.01 % of the final value typical		
Repeatability	0.003 % typical (within 24 h)		
Isolation voltage	500 V _{DC} ²⁶ channel to channel to power supply to interface		
Sensor identification	TEDS class 1 and class 2 according to IEEE 1541.4		
VOLTAGE MEASUREMENT			
	Range	max. Deviation	Resolution
	±60 V	±12 mV	7.2 µV
	±10 V	±2 mV	1.2 µV
	±1 V	±0.2 mV	120 nV
	±100 mV	±20 µV	12 nV
Input resistance	>10 MΩ (@ range ±10 V = 1 MΩ; ±60 V = 3 MΩ)		
Noise voltage	50 µV _{pp}		range ±10 V
Long term drift	<1 µV/24 h		
Common mode voltage	100 V _{DC} permanent (input isolation)		
Max. over-voltage	30 V _{DC} permanent		
	On zero	On sensitivity	
Temperature influence	<1 µV/10 K	<0.05 %/10 K	
Signal-noise-ratio	> 90 dB @ 1 kHz	> 120 dB @ 1 Hz	
CURRENT MEASUREMENT			
(internal shunt 50 Ω)	Range	max. Deviation	Resolution
	0...25 mA	±5 µA	3.0 nA
Long term drift	<0.1 µA/24 h		
Common mode voltage	100 V _{DC} permanent (input isolation)		
Temperature influence	On zero	On sensitivity	
	<0.1 µA / 10 K	<0.03 % / 10 K	
RESISTANCE / RTD MEASUREMENT			
	Range	max. Deviation	Resolution
Resistance, 2-wire	100 kΩ	±100 Ω	12 mΩ
Resistance, 2- and 4-wire	4 kΩ	±1 Ω	0.5 mΩ
Resistance, 2- and 4-wire	400 Ω	±0.1 Ω	48 µΩ
Pt100, 2- and 4-wire	-200 up to +850°C	±0.25°C	0.2 m°C
Pt1000, 2- and 4-wire	-200 up to +850°C	±1°C	0.2 m°C
Linearity error	<0.05% of final value at range 100 kΩ		
BRIDGE MEASUREMENT			
Accuracy class	0.05		
Bridge Type	full bridge, half bridge, 5-/6-wire connection, quarter bridge with completion terminal		
Sensor resistance	>100 Ω		
Supply	2.5 V – 3 V		
Measurement range	±2.5 mV/V	±50 mV/V	±500 mV/V
Temperature influence	On zero	On sensitivity	
	<10 µV/V/10 K	<0.05 %/10 K	
THERMOCOUPLE MEASUREMENT			
	Whole range	-100°C...upper limit	
Type B	better than ±5°C	better than ±2.5°C	
Type E, J, K, L, T, U	better than ±1°C	better than ±0.5°C	
Type N	better than ±2°C	better than ±1°C	
Type R, S	better than ±3°C	better than ±1.5°C	
Input resistance	> 10 MΩ		
Common mode voltage	100 V _{DC} permanent input isolation		
Temperature influence	On zero	On sensitivity	
	<1 µV/10 K	<0.02%/10 K	
IEPE SENSOR MEASUREMENT			
	Range	max. Deviation	Resolution

24 according EN 61326: 1997, appendix B
 25 according EN 61326: 1997, appendix A
 26 1kVDC peaks, 500VDC for some minutes, 250VDC permanent

	±10 V	±10 mV	1.2 µV
Supply	Constant current 4 mA		
Minimum input frequency	2 Hz		
Limit frequency	10 kHz		
Temperature influence	On zero		On sensitivity
	<10 µV/10 K		<0.05%/10 K
ANALOG/DIGITAL CONVERSION			
Resolution	24 bit		
Sample rate	10 kHz		
	thermocouple measurement 8Hz		
Conversion method	Sigma-Delta (group delay time 380 µs)		
Antialiasing filter	20kHz, 5 th order		
Digital filter	IIR, low pass, high pass, 4 th order		
	1 Hz up to 10kHz in steps, 1, 2, 5, automated sample reduction for lower frequencies		
DIGITAL IN/OUTPUTS			
Number	2 (1 digital I/O per channel)		
Response time	0.2 ms		
Input	state, tare, reset		
Input voltage	max. 30 V _{DC}		
Input current	max. 0.5 mA		
Upper threshold	>10 V (high)		
Lower threshold	<2.0 V (low)		
Output	state, alarm		
Contact	open drain p-channel MOSFET		
Load	30 V _{DC} / 100 mA (ohmic load)		
POWER SUPPLY			
Power supply	10 up to 30 V _{DC} , over voltage and overload protection (for details see: 5.2.7 Power supply requirements on page 95)		
Power consumption	approx. 2 W		
Influence of the voltage	<0.001 %/V		
ENVIRONMENTAL			
Operating temperature	-20°C up to +60°C		
Storage temperature	-40°C up to +85°C		
Relative humidity	5 % up to 95 % at 50°C, non condensing		
Vibration	MIL-STD 810F 514.5, procedure I		
Shock	MIL-STD 810F 516.5, procedure I		
MECHANICAL			
Case	Aluminium		
Dimensions (W x H x D)	approx. 31 x 125 x 120 mm		
	for details see: 6.1.1 Physical Dimensions on page 156		
Weight	approx. 400g for standard measurement modules		
	for details see: 6.1.1 Physical Dimensions on page 156		
CONNECTION			
Standard	2x10 pin screw terminal		
Option	BNC is possible with optional adapter: ACC2-BNC (only for IEPE measurement)		

Table 13: ACC2 Specifications

5.5.2 CFB2: Full and half bridge transducer

With (resistive) full bridges (strain-gauge full bridges) all connections are occupied. If the sensor has no sensing leads, you specify this during the module configuration; With half bridges the side drawn in dashes and connection 10 are omitted.

see also 5.2.6.1 Connecting sensors with sensing leads on page 93

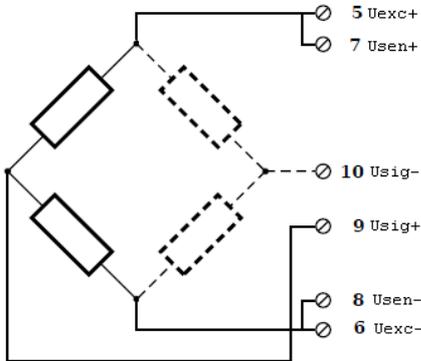


Illustration 192: CFB2: Fullbridge (4-wire) and Halfbridge (3-wire)

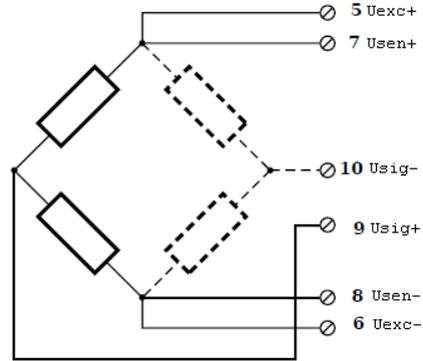


Illustration 193: CFB2: Fullbridge (6-wire) and Halfbridge (5-wire)

5.5.3 CFB2: Strain gauge quarter bridge

For the connection of strain gauge quarter bridges you need the same setup as for the *Half 3 Wire* bridge plus a special connection plug (adapter) which contains the completion resistances. The adapter can be obtained under the designation CFB2-120 with 120 Ω (see page 91) and CFB2-350 with 350 Ω (see page 91).

see also 5.2.6.1 Connecting sensors with sensing leads on page 93

Sensor type	resistive full and half bridge (5/6 wire), quarter bridge with completion terminal (3 wire)	resistive full and half bridge (5/6 wire), quarter bridge with completion terminal (3 wire)	resistive full and half bridge (5/6 wire), quarter bridge with completion terminal (3 wire) inductive full and half bridges, LVDT and RVDT sensors	
Permitted sensor cable length	<300 m	<300 m	<100 m	
Sensor connection	with or without sense leads for compensation of cable influences full bridge 4 or 6 wire half bridge 3 or 5 wire quarter bridge 3 wire in combination with completion terminal 120 Ω or 350 Ω			
Sensor excitation (selectable)	DC: 5 VDC	CF: 5 Veff	DC: 2.5 VDC	CF: 2.5 Veff
Permitted sensor resistance	>300 Ω	>300 Ω	>100 Ω	>100 Ω
Measuring range	±1.25 mV/V	±1.25 mV/V	±2.5 mV/V	±2.5 mV/V
	±2.5 mV/V	±2.5 mV/V	±5 mV/V	±5 mV/V
	±25 mV/V	±25 mV/V	±50 mV/V	±50 mV/V
	±50 mV/V	±50 mV/V	±100 mV/V	±100 mV/V
	±100 mV/V	±100 mV/V	±200 mV/V	±200 mV/V
	±250 mV/V	±250 mV/V	±500 mV/V	±500 mV/V
	±500 mV/V	±500 mV/V	±1000 mV/V	±1000 mV/V
Temperature influence on zero (range 2.5 mV/V)	<1 μV / 10 K	<1 μV / 10 K	<1 μV / 10 K	<1 μV / 10 K
Temperature influence on sensitivity (measuring value)	0.05 % / 10 K	0.05 % / 10 K	0.05 % / 10 K	0.05 % / 10 K
Long term drift	<1 μV/V / 48 h	<0.5 μV/V / 48 h	<1 μV/V / 48 h	<0.5 μV/V / 48 h
	<2.5 μV / V/8000h	<1.25 μV / V/8000h	<2.5 μV / V/8000h	<1.25 μV / V/8000h
Linearity Error	0.02 % f.s.			
Noise voltage at 10 Hz	< 0.3 μV/V			
Noise voltage at 100 Hz	< 1 μV/V			
ANALOG/DIGITAL CONVERSION				
Resolution	24 bit			
Sample rate	10 kHz			
Conversion method	Sigma-Delta (group delay time 3.8 ms)			
Antialiasing filter	DC: 1 kHz 5 th order	4.8 kHz CF: 1 kHz 5 th order	600 Hz CF: 100 Hz, 5 th order	
Digital filter	IIR, low pass, high pass, band pass, 4 th order, 1Hz up to 1kHz in steps 1, 2, 5			
Averaging	configurable or automated according the selected data rate			
ANALOGUE OUTPUTS				
Number	2 voltage outputs			
Accuracy	0.02 %			
DAC resolution	16 bit			
Sample rate	10 kHz			
Output voltage	±10 VDC			
Perm. load resistance	>2kΩ			
	on zero		on sensitivity	
Temperature influence	<1 mV/10 K		<0.05 %/10 K	
Noise voltage in the range of	<10 mV at 1 kHz		<2 mV at 10 Hz	
Long term drift	<1 mV/48h			
DIGITAL IN/OUTPUTS				
Number	4 configurable I/Os			
Input	state, tare, reset			
Input voltage	max. 30 V _{DC}			
Input current	max. 0.5 mA			
Upper threshold	>10 V (high)			
Lower threshold	<2.0 V (low)			
Output	state, alarm, limit switch			
Contact	open drain p-channel MOSFET			
Load	30 V _{DC} / 100 mA (ohmic load)			
POWER SUPPLY				
Power supply	10 up to 30 V _{DC} , over voltage and overload protection (for details see: 5.2.7 Power supply requirements on page 95)			
Power consumption	approx. 2.5 W			
Influence of the voltage	<0.001 %/V			

ENVIRONMENTAL	
Operating temperature	-20°C up to +60°C
Storage temperature	-40°C up to +85°C
Relative humidity	5 % up to 95 % at 50°C, non condensing
Vibration	MIL-STD 810F 514.5, procedure I
Shock	MIL-STD 810F 516.5, procedure I
MECHANICAL	
Case	Aluminium
Dimensions (W x H x D)	approx. 31 x 125 x 120 mm for details see: 6.1.1 Physical Dimensions on page 156
Weight	approx. 400g for standard measurement modules for details see: 6.1.1 Physical Dimensions on page 156
CONNECTION	
Standard	2x10 pin screw terminal

Table 14: CFB2 Specifications

5.6 DS NET BR8

The DS NET BR8 module has 8 electrically isolated analogue inputs for bridge measurement. It has 8 DSUB9 connectors and has double the width of the other measurement modules.

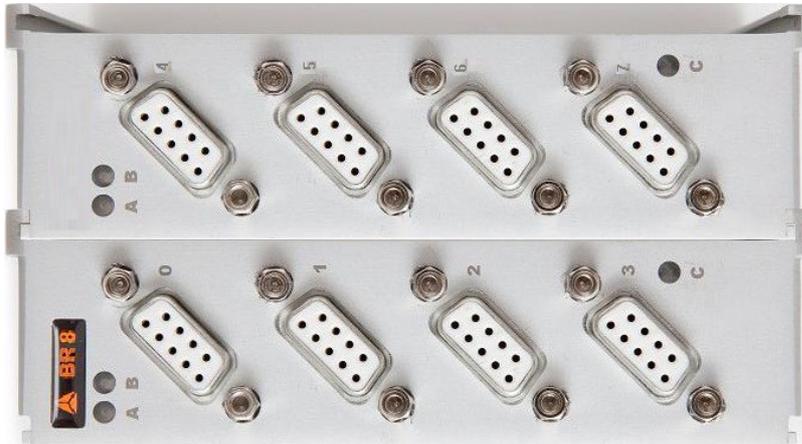


Illustration 197: BR8

Illustration 198 shows the pin connection of the D-SUB connectors:

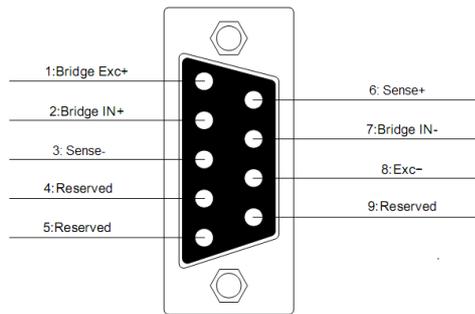


Illustration 198: BR8: pinout

5.6.1 Full-bridge 6 wire

I

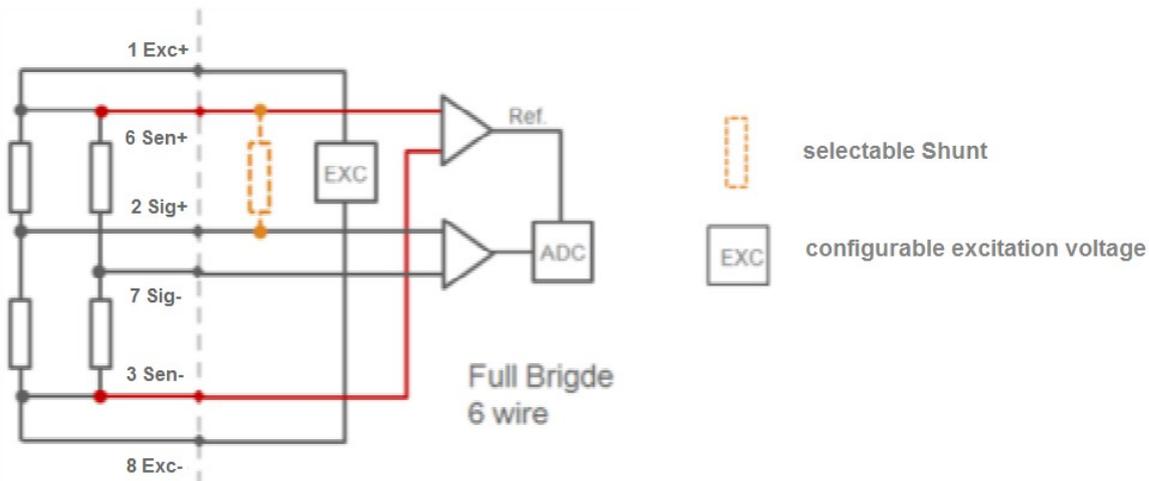


Illustration 199: BR8 Full-bridge 6 wire

5.6.2 Full-bridge 4 wire

I

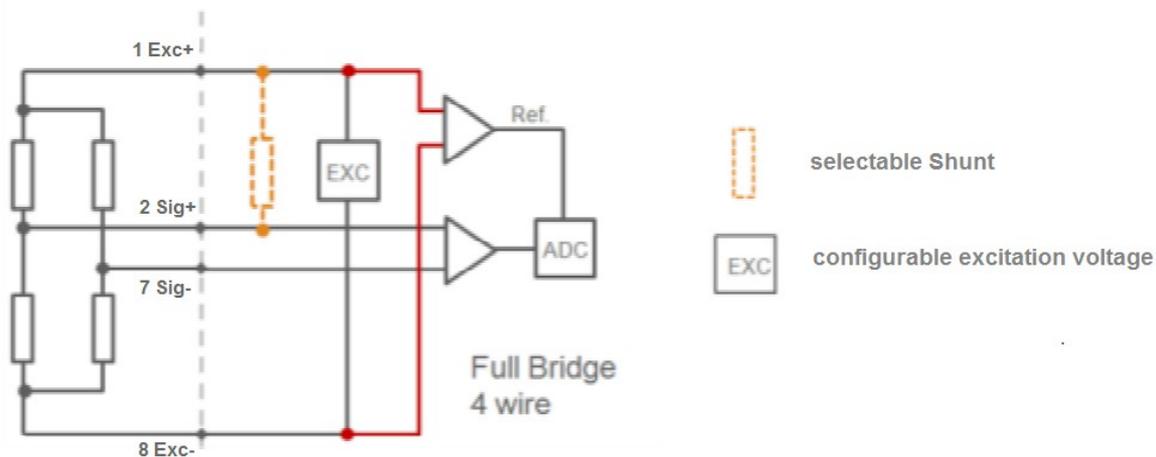


Illustration 200: BR8 Full-bridge 4 wire

5.6.3 Half-bridge 5 wire

I

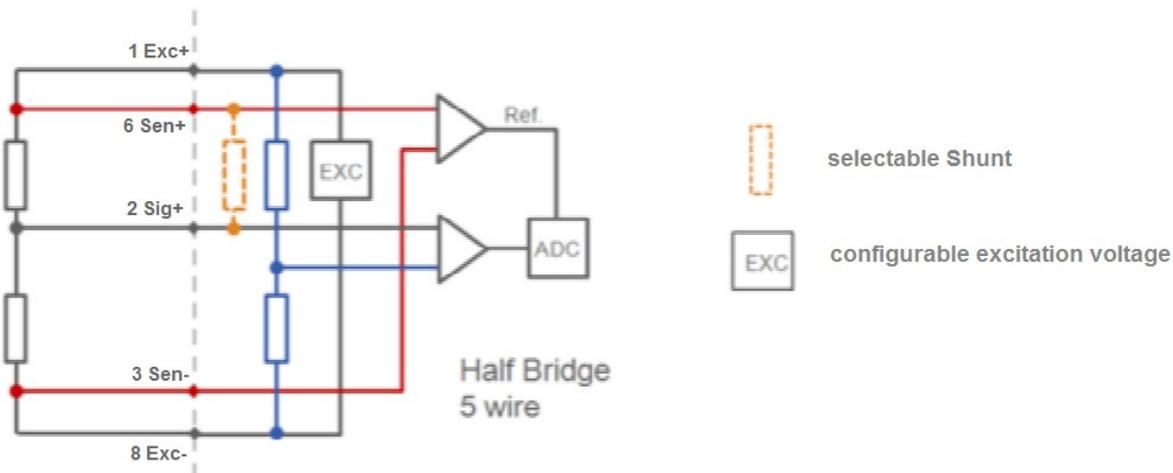


Illustration 201: BR8 Half-bridge 5 wire

5.6.4 Half-bridge 3 wire

I

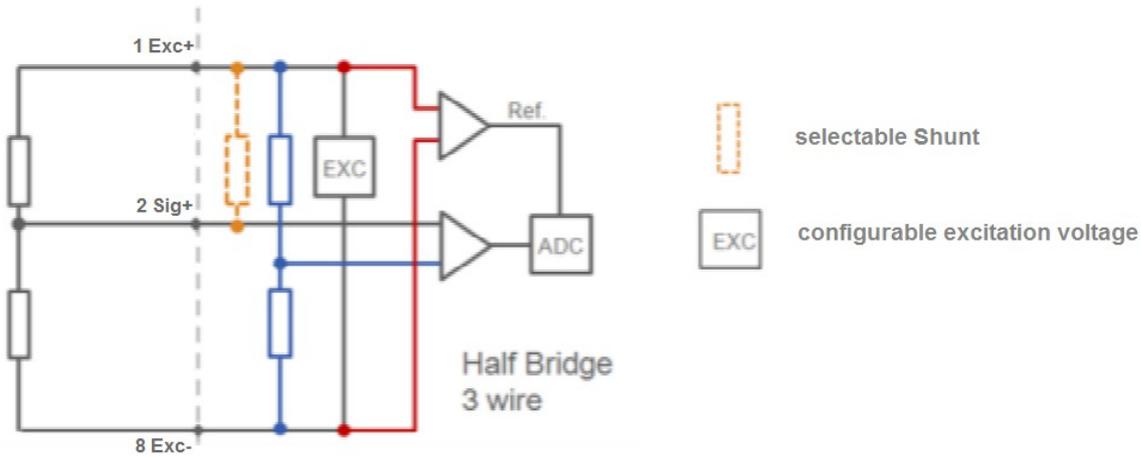


Illustration 202: BR8 Half-bridge 3 wire

5.6.5 Quarter-bridge

I

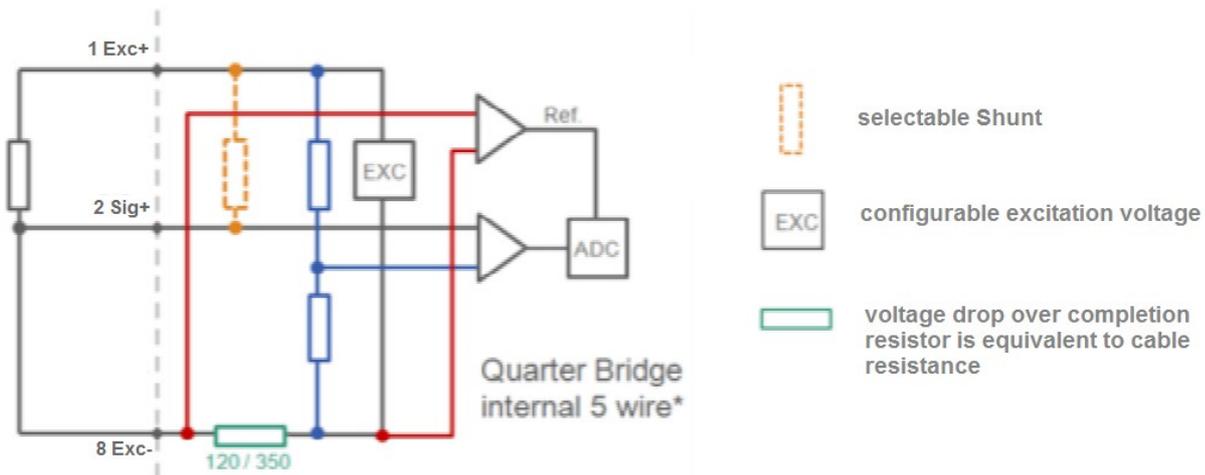


Illustration 203: BR8 Quarter-bridge

5.6.6 BR8: Specifications

All declarations are valid after a warm up time of 45 minutes.

ANALOG INPUTS	
Number of channels	8
Accuracy	0.02 % typical 0.05 % in controlled environment ³⁰ 0.1 % in industrial area ³¹
Repeatability	0.01 % typical (within 24 h)
Input resistance	>10 MΩ
Isolation voltage	500 V _{DC} ³² channel to channel to power supply to interface
BRIDGE MEASUREMENT	
Bridge type	resistive full bridge (4/6 wire), resistive half bridge (3/5 wire), resistive quarter bridge 120 Ω and 350 Ω (3 wire incl. cable compensation)

³⁰ according EN 61326: 1997, appendix B

³¹ according EN 61326: 1997, appendix A

³² 1kVDC peaks, 500VDC for some minutes, 250VDC permanent

DEWESoft™		
Permitted sensor cable length	<300 m full and half bridge <100 m quarter bridge	
Sensor excitation	2 V _{DC} and 4 V _{DC} selectable	
Permitted sensor resistance	full bridge >300 Ω half bridge >200 Ω quarter bridge >100 Ω	
Measurement range	±1 mV/V, ±5 mV/V	
	On zero	On sensitivity
Temperature influence	<0.2 μV/V/10 K	<0.05 %/10 K
Long term drift	<0.2 μV/V / 24 h , <2 μV/V / 8000h	
Linearity Error	<0.02 % of the final value typical	
Noise voltage @ 10 Hz	<0.3 μV/V	
	<1 μV/10 K	<0.02%/10 K
ANALOG/DIGITAL CONVERSION		
Resolution	24 bit	
Sample rate	10 kHz	
Conversion method	Sigma-Delta (group delay time 600μs)	
Antialiasing filter	1kHz, 3 rd order	
Digital filter	IIR, low pass, high pass, band pass, 4 th order 1 Hz up to 1kHz in steps, 1, 2, 5	
Averaging	configurable or automated according the selected data rate	
POWER SUPPLY		
Power supply	10 up to 30 V _{DC} , over voltage and overload protection (for details see: 5.2.7 Power supply requirements on page 95)	
Power consumption	approx. 2.5 W	
Influence of the voltage	<0.001 %/V	
ENVIRONMENTAL		
Operating temperature	-20°C up to +60°C	
Storage temperature	-40°C up to +85°C	
Relative humidity	5 % up to 95 % at 50°C, non condensing	
Vibration	MIL-STD 810F 514.5, procedure I	
Shock	MIL-STD 810F 516.5, procedure I	
MECHANICAL		
Case	Aluminium	
Dimensions (W x H x D)	approx. 62 x 125 x 120 mm for details see: 6.1.1 Physical Dimensions on page 156	
Weight	approx. 800g for details see: 6.1.1 Physical Dimensions on page 156	
CONNECTION		
Standard	8x DSUB9	

Table 15: BR8 specifications

5.7 DS NET BR4

The DS NET BR4 module has four electrically isolated analogue inputs.

The pin assignment of the two blue 10-pin connectors is identical. On the left of these blue 10-pin connectors, you can see numbers identifying the connector (1/2) and the pin-numbers (1-10). If several connections are possible (e.g. to measure 2 voltage channels on one of the blue 10-pin connectors), you will find the associated pin-numbers comma-separated in the circuit diagram.

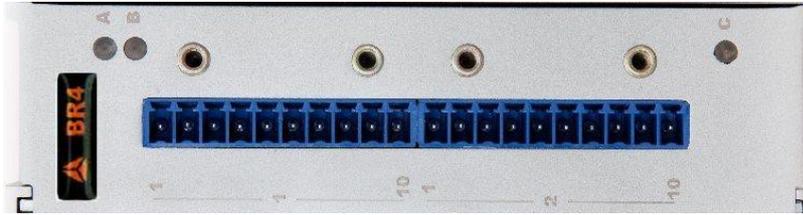


Illustration 204: BR4

5.7.1 DS NET BR4-D

The BR4 module is optionally also available with D-SUB connectors:



Illustration 205: BR4-D (option)

With the DSUB connectors we have more pins available (compared to the standard 10-pin screw connectors) and so these modules can provide an additional sensor power supply voltage for the sensors on pins 4 and 5. The standard BR4 module with screw connectors has less pins and does not have this sensor power supply voltage.

Illustration 206 shows the pin connection of the D-SUB connectors:

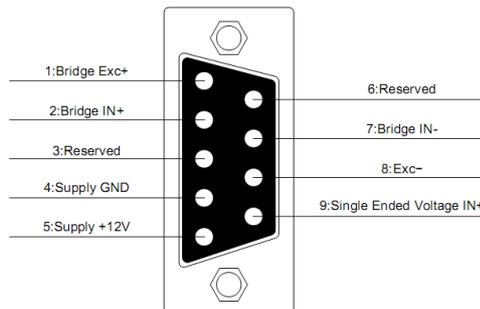


Illustration 206: BR4 D: pinout

HINT



The supply voltages of the D-SUB connectors (on pins 4 and 5) are not galvanically isolated from each other.
 Also note, that this supply voltage is always guaranteed to be $\leq 12V_{DC}$.³³
 The maximum current per BR4-D module is approximately 100mA.

³³ This is depending on the supply voltage. If you need exactly 12 V, make sure that the supply voltage is ≥ 15 V.

The following table shows the relation between the screw connectors and the D-SUB connectors:

10-pin screw connector	D-SUB connector / pin	10-pin screw connector	D-SUB connector / pin
1/1	0/1	2/1	2/1
1/2	0/9	2/2	2/9
1/3	0/2	2/3	2/2
1/4	0/7	2/4	2/7
1/5	0/8	2/5	2/8
1/6	1/1	2/6	3/1
1/7	1/9	2/7	3/9
1/8	1/2	2/8	3/2
1/9	1/7	2/9	3/7
1/10	1/8	2/10	3/8

Table 16: BR4-D: relation of pins between screw connector and D-SUB connector

For the BR4-D module, you can also use an optional DSUB-BNC adapter (see page 91).

5.7.2 DS NET BR4-L

The BR4 module is optionally also available with 10 pin LEMO connectors.

With the LEMO connectors we have more pins available (compared to the standard 10-pin screw connectors) and so these modules can provide an additional sensor power supply voltage for the sensors on pins 9 and 10.

The standard BR4 module with screw connectors has less pins and does not have this sensor power supply voltage.

Illustration 206 shows the pin connection of the 10 pin LEMO connectors:

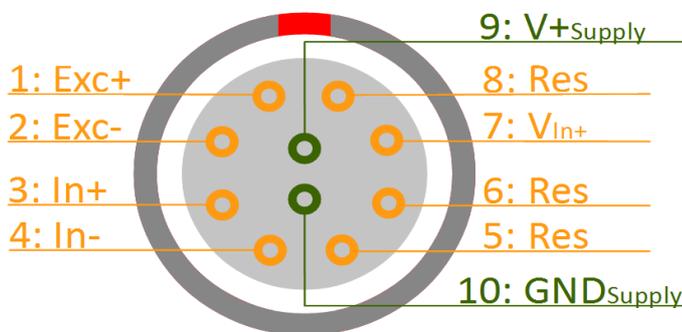


Illustration 207: BR4-L pinout

HINT



The supply voltages of the LEMO connectors (on pins 9 and 10) are not galvanically isolated from each other. This is the supply voltage that you connect to the DS NET GATE. The maximum current per BR4-L module is approximately 200mA.

For connecting thermocouples you need a special connecting plug which contains the comparative measuring point (cold junction compensation) required for thermocouples.

The plug can be obtained under the designation BR4-CJC (see page 91).

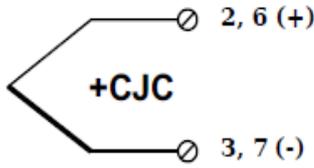


Illustration 220: BR4 Thermocouple

The pin-numbers in the illustration refer to the pins of the CJC adapter (see BR4-CJC on page 91) that the sensor is connected to (not the pins of the DS-NET module).

Alternatively, you can also use two thermocouples or a reference temperature source.

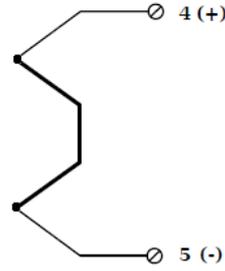


Illustration 221: ACC2 differential thermocouple measurement

5.7.8 BR4: Full bridge transducer

With (resistive) full bridges (strain-gauge full bridges) four connections are occupied. If the sensor has sensing leads, connect these with the excitation terminals (1 and 5 or 6 and 10). see also 5.2.6.1 Connecting sensors with sensing leads on page 93

The bridge excitation voltage is between 2.5 and 3 V (the actual value is not important since the module will measure the excitation voltage and correct the measured values).

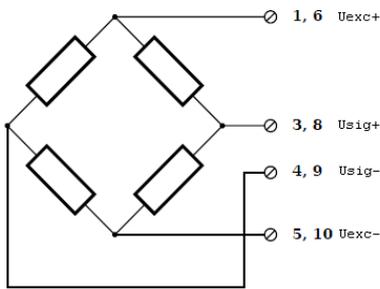


Illustration 222: BR4 full bridge

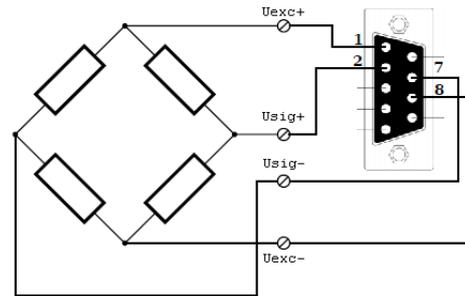


Illustration 223: BR4-D full bridge

The shield of the cable should be connected to the housing of the module (i.e. to the screw-holes to the right of the blue 10-pin connectors, or to the screws of the D-SUB9 connector in case of a BR4-D).

5.7.9 BR4: Strain-gauge half and quarter-bridges

For the connection of strain-gauge half and quarter-bridges you need a special connecting plug which contains the completion resistances. For the BR-4 module, the plug can be obtained under the designation BR4-120 for 120 Ω (see page 91) and BR4-350 for 350 Ω (see page 91).

For the BR-4-D module, the bridge completion adapters can be obtained under the designations: BR4-D-120 for 120 Ω (see page 91) or BR4-D-350 for 350 Ω (see page 91).

see also 5.2.6.1 Connecting sensors with sensing leads on page 93

The bridge excitation voltage is between 2.5 and 3 V (the actual value is not important since the module will measure the excitation voltage and correct the measured values).

	±1 V	±0.2 mV	120 nV
	±100 mV	±20 µV	12 nV
Input resistance	>10 MΩ (@ range ±10 V = 1 MΩ)		
Noise voltage	<50 µV _{pp}		range ±10 V
Long term drift	<1 µV/24 h		
Common mode voltage	100 V _{DC} permanent (input isolation)		
	On zero	On sensitivity	
Temperature influence	<1 µV/10 K	<0,05 %/10 K	
Signal-noise-ratio	>90 dB @ 1 kHz	>120 dB @ 1 Hz	
CURRENT MEASUREMENT			
(internal shunt 50 Ω)	Range	max. Deviation	Resolution
	0...25 mA	±5 µA	3.0 nA
Long term drift	<0.1 µA/24 h		
Common mode voltage	100 V _{DC} permanent (input isolation)		
	On zero	On sensitivity	
Temperature influence	<0.1 µA / 10 K	<0.03 % / 10 K	
RESISTANCE / RTD MEASUREMENT			
	Range	max. Deviation	Resolution
Resistance, 2-wire	100 kΩ	±100 Ω	12 mΩ
Resistance, 2- and 4-wire	4 kΩ	±1 Ω	0.5 mΩ
Resistance, 2- and 4-wire	400 Ω	±0.1 Ω	48 µΩ
Pt100, 2- and 4-wire	-200 up to +850°C	±0.25°C	0.2 m°C
Pt1000, 2- and 4-wire	-200 up to +850°C	±1°C	0.2 m°C
Linearity error	<0.05% of final value at range 100 kΩ		
BRIDGE MEASUREMENT			
Accuracy class	0.05		
Bridge Type	full bridge, 4-wire connection, half and quarter bridge with completion terminal		
Sensor resistance	>100 Ω		
Supply	2.5 V – 3 V		
Sensor power supply voltage	only available for BR-4-D: ≤ 12V		
Measurement range	±2.5 mV/V, ±50 mV/V, ±500 mV/V		
	On zero	On sensitivity	
Temperature influence	<10 µV/V/10 K	<0.05 %/10 K	
Long term drift	<0.1 µV/V/24 h		
THERMOCOUPLE MEASUREMENT			
	WHOLE RANGE	-100°C...UPPER LIMIT	
Type B	better than ±5°C	better than ±2.5°C	
Type E, J, K, L, T, U	better than ±1°C	better than ±0.5°C	
Type N	better than ±2°C	better than ±1°C	
Type R, S	better than ±3°C	better than ±1.5°C	
Input resistance	> 10 MΩ		
Common mode voltage	100 V _{DC} permanent (input isolation)		
	On zero	On sensitivity	
Temperature influence	<1 µV/10 K	<0.02%/10 K	
ANALOG/DIGITAL CONVERSION			
Resolution	24 bit		
Sample rate	10 kHz thermocouple measurement 8Hz		
Conversion method	Sigma-Delta		
Antialiasing filter	20kHz, 5 th order		
Digital filter	IIR, low pass, high pass, 4 th order 1 Hz up to 10kHz in steps, 1, 2, 5, automated sample reduction for lower frequencies		
POWER SUPPLY			
Power supply	10 up to 30 V _{DC} , over voltage and overload protection (for details see: 5.2.7 Power supply requirements on page 95)		
Power consumption	approx. 2.5 W		
Influence of the voltage	<0.001 %/V		
ENVIRONMENTAL			

Operating temperature	-20°C up to +60°C
Storage temperature	-40°C up to +85°C
Relative humidity	5 % up to 95 % at 50°C, non condensing
Vibration	MIL-STD 810F 514.5, procedure I
Shock	MIL-STD 810F 516.5, procedure I
MECHANICAL	
Case	Aluminium
Dimensions (W x H x D)	approx. 31 x 125 x 120 mm for details see: 6.1.1 Physical Dimensions on page 156
Weight	approx. 400g/ 450g for BR4-D for details see: 6.1.1 Physical Dimensions on page 156
CONNECTION	
Standard	2x10 pin screw terminal
Option	4x DSUB 9 pin connectors (module type BR4-D) BNC (only for voltage measurement) with optional adapter DSUB-BNC (see DSUB-BNC on page 91)

Table 17: BR4 specifications

5.8 DS NET V8

The DS NET V8 module has eight electrically isolated analogue inputs and two digital inputs and outputs.

The pin assignment of the two blue 10-pin connectors is identical. On the left of these blue 10-pin connectors, you can see numbers identifying the connector (1/2) and the pin-numbers (1-10). If several connections are possible (e.g. to measure 2 voltage channels on one of the blue 10-pin connectors), you will find the associated pin-numbers comma-separated in the circuit diagram.



Illustration 228: V8

5.8.1.1 DS NET V8-B

The V8 module is optionally available with BNC connectors:



Illustration 229: V8-B (option)

5.8.2 V8: Voltage

You can measure voltages of up to 10 V.

IMPORTANT



Voltages which exceed the permissible limits produce incorrect measurement data, because the inputs are protected against over voltages and limit the input voltage.

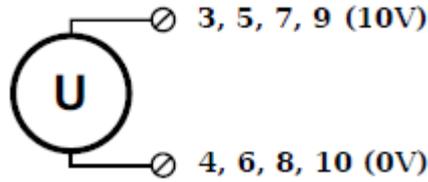


Illustration 230: V8 Voltage

5.8.3 V8: Current

For current measurement you need the connection plug V8-SHUNT (see page 91) containing the 100 Ω shunt resistances. This facilitates the measurement of currents of up to 25 mA.

For the V8-B module, no shunt adapter is available (see also 5.2.6.2 Current measurement with an external shunt on page 94).

When you use the SHUNT adapter, make sure to select *Measurement Current* in the channel configuration setup of the module (see Channel configuration setup on page 72), so that the module will automatically calculate the correct scaling. Also note, that the default *Min value* is 4 mA, so that you can easily detect if the sensor connection breaks (see also: Module Range/Range Error on page 73): in that case the current would drop to 0mA, and since this is lower than the allowed minimum the corresponding error LED of the module will become active.

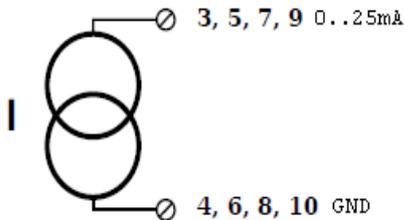


Illustration 231: V8 Current

The pin-numbers in the illustration refer to the pins of the SHUNT adapter (see V8-SHUNT on page 91) that the sensor is connected to (not the pins of the DS-NET module).

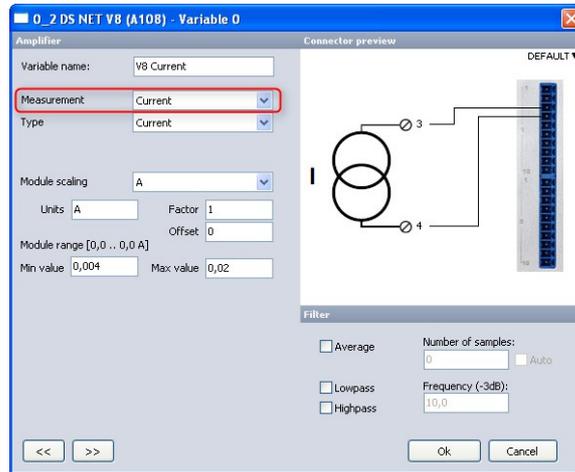


Illustration 232: V8 Channel Setup For Current Measurement

Input current	max. 0.5 mA
Upper threshold	>10 V (high)
Lower threshold	<2 V (low)
Output	state, alarm
Contact	open drain p-channel MOSFET
Load	30 V _{DC} /100 mA (ohmic load)
POWER SUPPLY	
Power supply	10 up to 30 V _{DC} , over voltage and overload protection (for details see: 5.2.7 Power supply requirements on page 95)
Power consumption	approx. 2 W
Influence of the voltage	<0.001 %/V
ENVIRONMENTAL	
Operating temperature	-20°C up to +60°C
Storage temperature	-40°C up to +85°C
Relative humidity	5 % up to 95 % at 50°C, non condensing
Vibration	MIL-STD 810F 514.5, procedure I
Shock	MIL-STD 810F 516.5, procedure I
MECHANICAL	
Case	Aluminium
Dimensions (W x H x D)	approx. 31 x 125 x 120 mm for details see: 6.1.1 Physical Dimensions on page 156
Weight	approx. 400g / 500g for V8-B for details see: 6.1.1 Physical Dimensions on page 156
CONNECTION	
Standard	2x10 pin screw terminal
Option	8 BNC connectors (module type V8-B) – no digital IOs

Table 18: V8 Specifications

5.9 DS NET V8-200

The DS NET V8-200 module has eight electrically isolated analogue inputs.

The pin assignment of the two blue 10-pin connectors is identical. On the left of these blue 10-pin connectors, you can see numbers identifying the connector (1/2) and the pin-numbers (1-10). If several connections are possible (e.g. to measure 2 voltage channels on one of the blue 10-pin connectors), you will find the associated pin-numbers comma-separated in the circuit diagram.

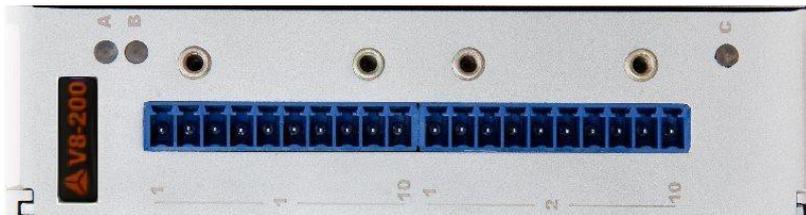


Illustration 234: V8-200

WARNING



High-Voltage module, danger of personal injury with improper use! Handling by skilled staff only! System must be connected to protective ground when signals higher than 47V are connected! Connect only touch-protected BNC leads to modules with BNC-connectors! During installation, the terminal must not be connected to the supply, or the fundamental safety rules for live working must be observed.

5.9.1 V8-200: Voltage

You can measure voltages of up to 200 V.

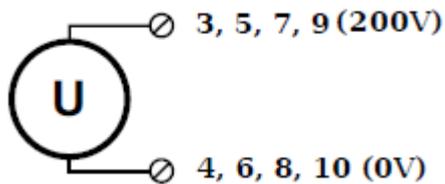


Illustration 235: V8-200 Voltage

IMPORTANT



Voltages which exceed the permissible limits produce incorrect measurement data, because the inputs are protected against over voltages and limit the input voltage.

5.9.2 V8-200: Specifications

All declarations are valid after a warm up time of 45 minutes.

ANALOG INPUTS			
Number of channels	8		
Accuracy	0.01 % typical 0.02 % in controlled environment ⁴⁰ 0.05 % in industrial area ⁴¹		
Linearity error	0.01 % of the final value typical		
Repeatability	0.003 % typical (within 24 h)		
Isolation voltage	500 V _{DC} ⁴² channel to channel to power supply to interface		
VOLTAGE MEASUREMENT			
	Range	max. Deviation	Resolution
	±200 V	±40 mV	800 µV
Input resistance	>10 MΩ		
Long term drift	<20 µV/24 h		
Common mode voltage	500 V _{DC} permanent (input isolation)		
	On zero	On sensitivity	
Temperature influence	<1 mV/10 K	<0.05 %/10 K	
Signal-noise-ratio	> 100 dB @ 100 Hz	> 120 dB @ 1 Hz	
ANALOG/DIGITAL CONVERSION			
Resolution	24 bit		
Sample rate	10 kHz at 8 active channels each		
Conversion method	Sigma-Delta		
Antialiasing Filter	Low pass 3rd order per channel (-3 dB at 4 kHz)		
Digital filter	IIR, low pass, high pass, 4 th order 1 Hz up to 10kHz in steps, 1, 2, 5, automated sample reduction for lower frequencies		
POWER SUPPLY			
Power supply	10 up to 30 V _{DC} , over voltage and overload protection (for details see: 5.2.7 Power supply requirements on page 95)		
Power consumption	approx. 2 W		
Influence of the voltage	<0.001 %/V		
ENVIRONMENTAL			
Operating temperature	-20°C up to +60°C		
Storage temperature	-40°C up to +85°C		
Relative humidity	5 % up to 95 % at 50°C, non condensing		
Vibration	MIL-STD 810F 514.5, procedure I		
Shock	MIL-STD 810F 516.5, procedure I		
MECHANICAL			
Case	Aluminium		
Dimensions (W x H x D)	approx. 31 x 125 x 120 mm for details see: 6.1.1 Physical Dimensions on page 156		
Weight	approx. 400g for details see: 6.1.1 Physical Dimensions on page 156		
CONNECTION			
Standard	2x10 pin screw terminal		

Table 19: V8-200 Specifications

⁴⁰ according EN 61326: 1997, appendix B

⁴¹ according EN 61326: 1997, appendix A

⁴² 1kVDC peaks, 500VDC for some minutes, 250VDC permanent

5.10.3 V4: Specifications

All declarations are valid after a warm up time of 45 minutes.

ANALOG INPUTS			
Number of channels	4		
Accuracy	0.01 % typical 0.02 % in controlled environment ⁴³ 0.05 % in industrial area ⁴⁴		
Linearity error	0.01 % of the final value typical		
Repeatability	0.003 % typical (within 24 h)		
Isolation voltage	1200 V _{DC} ⁴⁵ permanent, channel to channel to power supply to interface		
VOLTAGE MEASUREMENT			
	Range	max. Deviation	Resolution
	±10 V	±2 mV	1.2 μV
	±1.25 V	±0.2 mV	120 nV
	±100 mV	±20 μV	12 nV
Input resistance	>10 MΩ		
Long term drift	<1 μV/24 h; 2.5 μV/8000h		
	On zero	On sensitivity	
Temperature influence	<50 μV/10 K	<0.05 %/10 K	
Signal-noise-ratio	> 100 dB @ 100 Hz		
Common mode voltage	250 V _{DC} permanent (input isolation)		
Max. over-voltage	100 V _{DC} permanent		
ANALOG/DIGITAL CONVERSION			
Resolution	24 bit		
Sample rate	10kHz each channel		
Conversion method	Sigma-Delta		
Antialiasing Filter	2 kHz, 5 th order		
Digital filter	IIR, low pass, high pass, band pass, 4 th order 1 Hz up to 1kHz in steps, 1, 2, 5		
Averaging	configurable or automated according to the selected data rate		
POWER SUPPLY			
Power supply	10 up to 30 V _{DC} , over voltage and overload protection (for details see: 5.2.7 Power supply requirements on page 95)		
Power consumption	approx. 2 W		
Influence of the voltage	<0.001 %/V		
ENVIRONMENTAL			
Operating temperature	-20°C up to +60°C		
Storage temperature	-40°C up to +85°C		
Relative humidity	5 % up to 95 % at 50°C, non condensing		
Vibration	MIL-STD 810F 514.5, procedure I		
Shock	MIL-STD 810F 516.5, procedure I		
MECHANICAL			
Case	Aluminium		
Dimensions (W x H x D)	approx. 31 x 125 x 120 mm for details see: 6.1.1 Physical Dimensions on page 156		
Weight	approx. 400g/500g V4-B for details see: 6.1.1 Physical Dimensions on page 156		
CONNECTION			
Standard	2x10 pin screw terminal		
Option	4 BNC connectors (module type V4-B)		

Table 20: V4 Specifications

⁴³ according EN 61326: 1997, appendix B

⁴⁴ according EN 61326: 1997, appendix A

⁴⁵ 5kV peak

5.11 DS NET V4-HV

The DS NET V4-HV module has four electrically isolated analogue inputs and is suitable for high voltage measurements.

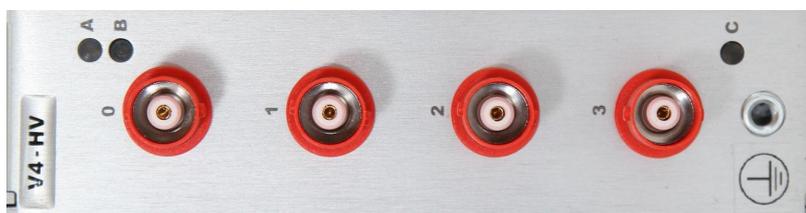


Illustration 239: V4-HV

WARNING



High-Voltage module, danger of personal injury with improper use! Handling by skilled staff only! System must be connected to protective ground when signals higher than 47V are connected! Connect only touch-protected BNC leads to modules with BNC-connectors! During installation, the terminal must not be connected to the supply, or the fundamental safety rules for live working must be observed.

5.11.1 V4-HV: Voltage

The V4-HV module can measure voltages of up to 1000 V.

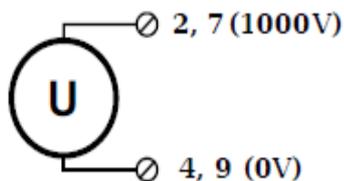


Illustration 240: V4-HV Voltage

5.11.2 V4-HV: Specifications

All declarations are valid after a warm up time of 45 minutes.

ANALOG INPUTS			
Number of channels	4		
Accuracy	0.01 % typical 0.02 % in controlled environment ⁴⁶ 0.05 % in industrial area ⁴⁷		
Linearity error	0.01 % of the final value typical		
Repeatability	0.003 % typical (within 24 h)		
Isolation voltage	1200 V _{DC} ⁴⁸ permanent, channel to channel to power supply to interface		
Max. over-voltage	1000 V _{DC} permanent		
VOLTAGE MEASUREMENT			
	Range	max. Deviation	Resolution
	±1000 V	±300 mV	6 mV
	±400 V	±100 mV	2 mV
	±120 V	±30 mV	600 μV
	±40 V	±10 mV	200 μV
Input resistance	>10 MΩ		
Long term drift	<1mV/24 h; <2.5 mV/8000h		
	On zero	On sensitivity	
Temperature influence	<5 mV/10 K	<0.05 %/10 K	
Signal-noise-ratio	> 100 dB @ 100 Hz		
Common mode voltage	1.2kV _{DC} permanent (input isolation)		
ANALOG/DIGITAL CONVERSION			
Resolution	24 bit		
Sample rate	10kHz each channel (50kHz internally)		
Conversion method	Sigma-Delta		
Antialiasing Filter	20 kHz, 5 th order per channel		
Digital filter	IIR, low pass, high pass, band pass, 4 th order 1 Hz up to 10Hz in steps, 1, 2, 5		
Averaging	configurable or automated according to the selected data rate		
POWER SUPPLY			
Power supply	10 up to 30 V _{DC} , over voltage and overload protection (for details see: 5.2.7 Power supply requirements on page 95)		
Power consumption	approx. 2 W		
Influence of the voltage	<0.001 %/V		
ENVIRONMENTAL			
Operating temperature	-20°C up to +60°C		
Storage temperature	-40°C up to +85°C		
Relative humidity	5 % up to 95 % at 50°C, non condensing		
Vibration	MIL-STD 810F 514.5, procedure I		
Shock	MIL-STD 810F 516.5, procedure I		
MECHANICAL			
Case	Aluminium		
Dimensions (W x H x D)	approx. 31 x 125 x 120 mm for details see: 6.1.1 Physical Dimensions on page 156		
Weight	approx. 600g for details see: 6.1.1 Physical Dimensions on page 156		
CONNECTION			
Standard	4 BNC connectors		

Table 21: V4-HV Specifications

⁴⁶ according EN 61326: 1997, appendix B

⁴⁷ according EN 61326: 1997, appendix A

⁴⁸ 5kV peak

For connecting thermocouples you need a special connecting plug which contains the comparative measuring point (cold junction compensation) required for thermocouples.

The plug can be obtained under the designation TH8-CJC (see page 91).

These connectors are not needed for the TH8-C module, because it has an internal CJC.

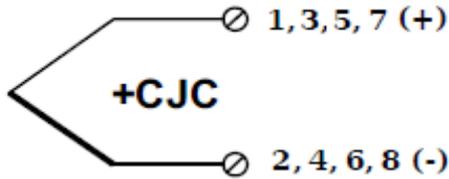


Illustration 244: TH8 Thermocouple

The pin-numbers in the illustration refer to the pins of the CJC adapter (see TH8-CJC on page 91) that the sensor is connected to (not the pins of the DS-NET module).

Alternatively, you can also use two thermocouples or a reference temperature source.

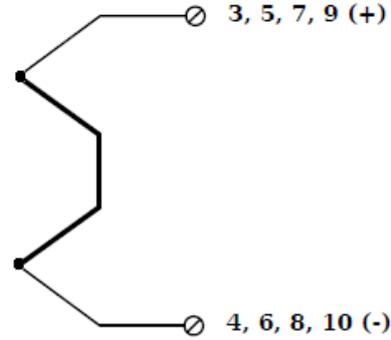


Illustration 245: TH8 differential thermocouple measurement

5.12.4 TH8: Specifications

All declarations are valid after a warm up time of 45 minutes.

ANALOG INPUTS			
Number of channels	8		
Accuracy	0.01 % typical 0.02 % in controlled environment ⁴⁹ 0.05 % in industrial area ⁵⁰		
Linearity error	0.01 % of the final value typical		
Repeatability	0.003 % typical (within 24 h)		
Isolation voltage	500 V _{DC} ⁵¹ channel to channel to power supply to interface		
Common mode voltage	100 V _{DC} permanent (input isolation)		
Max. over-voltage	15 V _{DC} permanent		
VOLTAGE MEASUREMENT			
	Range	max. Deviation	Resolution
	±80 mV	±10 µV	320 nV
Long term drift	<1 µV/24 h		
	On zero	On sensitivity	
Temperature influence	<1 µV/10 K	<0.005 %/10 K	
Signal-noise-ratio	100 dB @ 100 Hz		
THERMOCOUPLE MEASUREMENT			
Type B	better than ±5°C ⁵²		
Type E, J, K, L, T, U	better than ±1°C ⁵²		
Type N	better than ±2°C ⁵²		
Type R, S	better than ±3°C ⁵²		
Long term drift	<0.025 °C/24 h		
	On zero	On sensitivity	
Temperature influence (Type K)	<0.025 K/10 K	<0.005 %/10 K	
Uncertainty cold junction compensation	0.3 K		
ANALOG/DIGITAL CONVERSION			
Resolution	24 bit		
Sample rate	100 Hz at 8 active channels		

49 according EN 61326: 1997, appendix B
 50 according EN 61326: 1997, appendix A
 51 1kVDC peaks, 500VDC for some minutes, 250VDC permanent
 52 with activated mains rejection 50Hz resp. 60 Hz

	with activated mains rejection about 8Hz
Conversion method	Sigma-Delta
Antialiasing filter	low pass 3rd order per channel (-3 dB @ 20 Hz)
Digital filter	variable digital low pass filter 1 st order sliding averaging for precision measurements (n = 10) in addition optional filter for mains rejection 50 Hz/60 Hz
POWER SUPPLY	
Power supply	10 up to 30 V _{DC} , over voltage and overload protection (for details see: 5.2.7 Power supply requirements on page 95)
Power consumption	approx. 2 W
Influence of the voltage	<0.001 %/V
ENVIRONMENTAL	
Operating temperature	-20°C up to +60°C
Storage temperature	-40°C up to +85°C
Relative humidity	5 % up to 95 % at 50°C, non condensing
Vibration	MIL-STD 810F 514.5, procedure I
Shock	MIL-STD 810F 516.5, procedure I
MECHANICAL	
Case	Aluminium
Dimensions (W x H x D)	approx. 31 x 125 x 120 mm for details see: 6.1.1 Physical Dimensions on page 156
Weight	approx. 400g/500g for TH8-C for details see: 6.1.1 Physical Dimensions on page 156
CONNECTION	
Standard	2x10 pin screw terminal
Option	8x thermocouple connector (TH8-C)

Table 22: TH8 specifications

5.13 DS NET TH4

The DS NET TH4 module has 4 electrically isolated analogue inputs for high speed thermocouple measurement with high isolation voltage.



Illustration 246: TH4

WARNING



High-Voltage module, danger of personal injury with improper use! Handling by skilled staff only! System must be connected to protective ground when signals higher than 47V are connected! Connect only touch-protected BNC leads to modules with BNC-connectors! Thermocouple connectors are not touch protected. During installation, the terminal must not be connected to the supply, or the fundamental safety rules for live working must be observed.

5.13.1 TH4: Thermocouple

You can connect the following types of thermocouple: B, E, J, K, L, N, R, S, T and U. This module has an internal cold-junction-compensation – no external adapter is needed.

See also 5.2.6.3 Measuring with thermocouples on page 94.

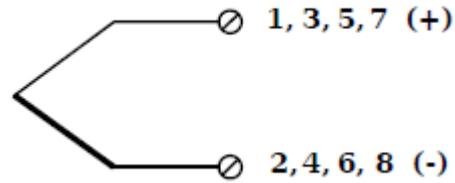


Illustration 247: TH4 Thermocouple

5.13.2 TH4: Specifications

All declarations are valid after a warm up time of 45 minutes.

ANALOG INPUTS	
Number of channels	4
Accuracy	0.01 % typical 0.02 % in controlled environment ⁵³ 0.05 % in industrial area ⁵⁴
Linearity error	0.01 % of the final value typical
Repeatability	0.003 % typical (within 24 h)
Input resistance	>10 MΩ
Isolation voltage	1.2kV _{DC} ⁵⁵ permanent, channel to channel to power supply to interface
THERMOCOUPLE MEASUREMENT	
Type	whole range including cold junction compensation
Type B	better than ±5°C
Type E, J, K, L, T, U	better than ±1°C
Type N	better than ±2°C
Type R, S	better than ±3°C
Long term drift	<0.025 K/24 h; <0.075°C/8000h
Temperature influence (Type K)	On zero <0.025 °C/10 K On sensitivity <0.005 %/10 K
Uncertainty cold junction compensation	<0.5 °C
Common mode voltage	100V _{DC} permanent (input isolation)
ANALOG/DIGITAL CONVERSION	
Resolution	24 bit
Sample rate	10kHz each channel
Conversion method	Sigma-Delta
Antialiasing filter	1kHz, 2 th order
Digital filter	IIR, low pass, high pass, band pass, 4 th order, 1 Hz up to 100 Hz in steps 1, 2, 5
Averaging	configurable or automated according to the selected data rate in addition optional filter for mains rejection 50 Hz/60 Hz
POWER SUPPLY	
Power supply	10 up to 30 V _{DC} , over voltage and overload protection (for details see: 5.2.7 Power supply requirements on page 95)
Power consumption	approx. 2 W
Influence of the voltage	<0.001 %/V
ENVIRONMENTAL	
Operating temperature	-20°C up to +60°C
Storage temperature	-40°C up to +85°C
Relative humidity	5 % up to 95 % at 50°C, non condensing
Vibration	MIL-STD 810F 514.5, procedure I
Shock	MIL-STD 810F 516.5, procedure I

⁵³ according EN 61326: 1997, appendix B

⁵⁴ according EN 61326: 1997, appendix A

⁵⁵ 5kV peak

MECHANICAL	
Case	Aluminium
Dimensions (W x H x D)	approx. 31 x 125 x 120 mm for details see: 6.1.1 Physical Dimensions on page 156
Weight	approx. 400g for standard measurement modules for details see: 6.1.1 Physical Dimensions on page 156
CONNECTION	
Standard	Spring Terminal

Table 23: TH4 specifications

5.14 DS NET DIO8

The DS NET DIO8 module has eight digital inputs and eight digital outputs.

The pin assignment of the two blue 10-pin connectors is identical. On the left of these blue 10-pin connectors, you can see numbers identifying the connector (1/2) and the pin-numbers (1-10). If several connections are possible (e.g. to measure 2 voltage channels on one of the blue 10-pin connectors), you will find the associated pin-numbers comma-separated in the circuit diagram.



Illustration 248: DIO8

5.14.1 DIO8: Digital input and output

On each connecting plug contacts for four inputs and four outputs are available. Since the inputs and outputs of this module are electrically isolated from the power supply voltage, you must also connect the ground (0 V , GND) for the inputs and a supply voltage ($+V$) for the outputs. Note that the supply voltage of the outputs must be between 10 V and 30 V .

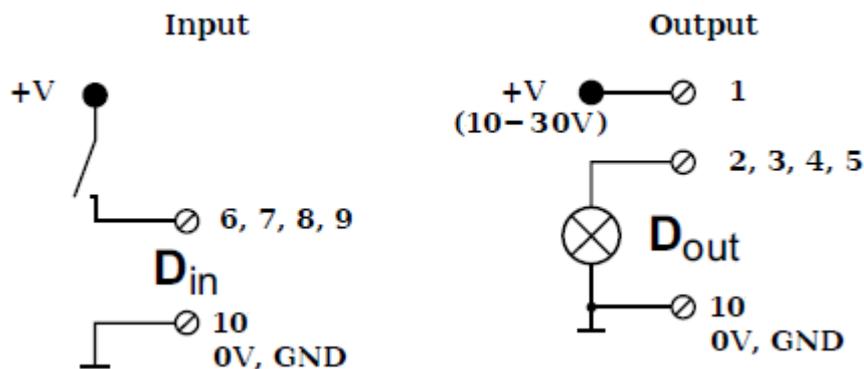


Illustration 249: DIO8 digital input and output

The digital input is active (high level) when the applied signal voltage lies above the (programmable) threshold:

PWM MEASUREMENT	
Input frequency	1 Hz up to 1 MHz
Resolution	21 ns
Configuration of the measurement type	Counter for duty cycle, frequency
COUNTER	
Counter	32 bit
Counter frequency	1 MHz
For/backward counter	Specification like counter but with an additional input for the direction of counting
Quadrature counter	Specification like counter. For the recognition of the direction the phasing of both inputs is being used.
Quadrature counter with zero reference and reset/enable	Specification like Quadrature counter but with an additional input for the „0“ reference recognition and an additional input to activate the counter functionality individually
TIME MEASUREMENT	
Function	Measuring of time between two edges, measuring of high time, low time and high/low relation
Time range	1 μ s up to 32 s
Resolution	21 ns
DIGITAL OUTPUTS	
Number	8
Contact	open drain p-channel MOSFET (short circuit proof)
Load (per channel)	30 V _{DC} /500 mA (ohmic Load)
FUNCTION STATE	
Reaction time	10 μ s
8-fold Bit-Set	Specification such as a simple state output but 8 outputs can be set with only one variable in BCD coding. This functionality covers all 8 outputs even if they are used by other functionalities such as frequency or PWM output. In case of a conflict the Bit-Set has the lower priority.
FREQUENCY OUTPUT	
Frequency range	0.1 Hz up to 10 kHz
Accuracy	0.01 %
PWM OUTPUT	
Frequency range	0.1 Hz up to 10 kHz
Resolution	21 ns
With a DIO8 eight channels for digital output are available. Those will accept all mentioned signals as it is required. The functionalities <i>frequency output</i> and <i>PWM</i> output can be used 4 times in maximum.	
POWER SUPPLY	
Power supply	10 up to 30 V _{DC} , over voltage and overload protection (for details see: 5.2.7 Power supply requirements on page 95)
Power consumption	approx. 2 W
Influence of the voltage	<0.001 %/V
ENVIRONMENTAL	
Operating temperature	-20°C up to +60°C
Storage temperature	-40°C up to +85°C
Relative humidity	5 % up to 95 % at 50°C, non condensing
Vibration	MIL-STD 810F 514.5, procedure I
Shock	MIL-STD 810F 516.5, procedure I
MECHANICAL	
Case	Aluminium
Dimensions (W x H x D)	approx. 31 x 125 x 120 mm for details see: 6.1.1 Physical Dimensions on page 156
Weight	approx. 400g for standard measurement modules for details see: 6.1.1 Physical Dimensions on page 156
CONNECTION	
Standard	2x10 pin screw connectors

Table 26: DIO8 specifications

5.15 DS NET AO4

The DS NET AO4 module has four electrically isolated analogue outputs, four digital inputs and four digital outputs. The assignment of both connector strips is not identical. The plug number is specified in this chapter.

The connection terminals have numbers for identifying the connections. If several connections are possible, you will find the associated ones in each case at the same place in the circuit diagrams, for example the figures quoted in the second place belong in each case to one possible connection method.

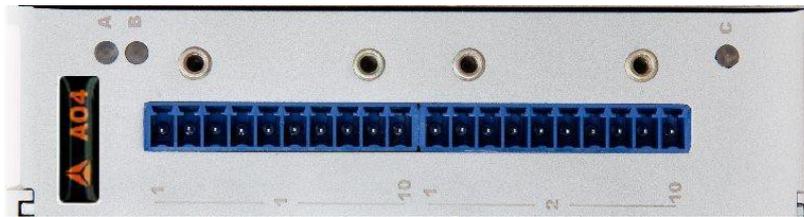


Illustration 255: AO4

5.15.1 AO4: Digital input and output, plug 1

On the first blue 10-pin connector there are contacts for 4 inputs and 4 outputs available. Since the inputs and outputs of this module are electrically isolated from the power supply voltage, you must also connect the ground ($0V$, GND) for the inputs and a supply voltage ($+V$) for the outputs.

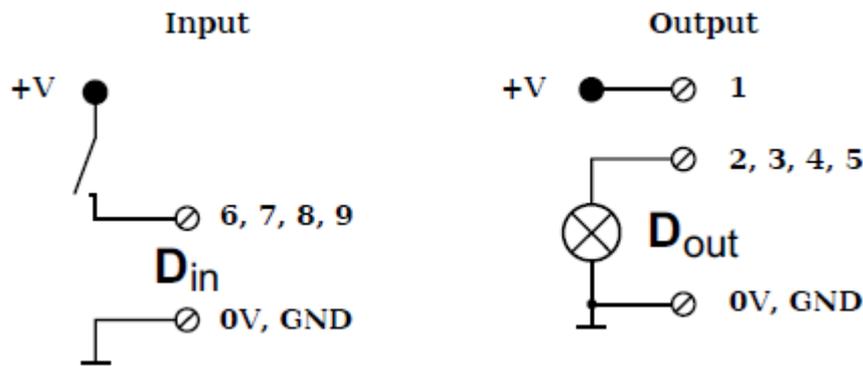


Illustration 256: AO4 digital input and output

The digital input is active (high level) when the applied signal voltage lies above the threshold ($1 \dots 30 V_{DC}$).

Possible combinations of contact assignments for the inputs are shown in the following table:

6	7	8	9
Status	Status	Status	Status
Status	Status	2 channel signal ⁵⁹	
2 channel signal ⁵⁹		2 channel signal ⁵⁹	
4 channel signal ⁶⁰			

Table 27: AO4 possible contact assignments

⁵⁹ e.g. counter with additional input for direction of counting or two signals with a 90° phase shift of frequency measurement with direction sensing (torque transducer)

⁶⁰ e.g. counter with additional input for direction, zero reference signal and reset/enable for reference zero

5.15.2 AO4: Analogue output, plug 2

The analogue outputs on plug 2 supply voltage or current. Selection is made via software.

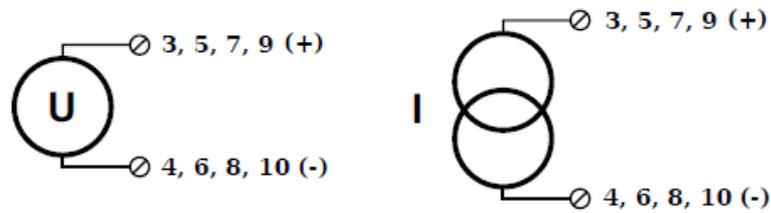


Illustration 257: AO4 analogue output

5.15.3 AO4: Specifications

All declarations are valid after a warm up time of 45 minutes.

ANALOG OUTPUTS		
Number	4	
Accuracy	0.02 %	
Output type	configurable voltage or current output	
Isolation voltage	500 V _{DC} ⁶¹ channel/channel against power supply and interface	
VOLTAGE		
Output voltage	±10 V _{DC}	
Acceptable load resistance	>2 kΩ	
Long term drift	<1 mV/48 h	
	On zero	On sensitivity
Temperature influence	<2 mV/10 K	<0.05 %/10 K
Noise voltage	<10 mV @ 1000 Hz	<2 mV @ 10 Hz
CURRENT		
Output current	4...20 mA	
Acceptable load	<400 Ω	
Long term drift	<2 μA/48 h	
	On zero	On sensitivity
Temperature influence	<4 μA/10 K	<0.05 %/10 K
Noise current	<20 μA @ 1000 Hz	<4 μA @ 10 Hz
DIGITAL/ANALOG CONVERSION		
Resolution	16 bit	
Sample rate	10 kHz per channel	
Settling time	3 μs	
DIGITAL INPUTS		
Number	4	
Input voltage	max. 30 V _{DC}	
Input current	max. 2 mA	
Threshold	Signal voltage „0“: -3...5 V _{DC} (EN61131-2, Type1) Signal voltage „1“: 11... 30 V _{DC} (EN61131-2, Type1)	
DIGITAL OUTPUTS		
Number	4	
Contact	open drain p-channel MOSFET (short circuit proof)	
Load	30 V _{DC} /500 mA (ohmic Load)	
FUNCTION DIGITAL INPUTS		
STATE		
Reaction time	10 μs	
FREQUENCY MEASUREMENT		
Method	Chronos Optimized by combination of time measurement and pulse counting Recognition of the direction of rotation (0°, 90°)	

⁶¹ 1kVDC peaks, 500VDC for some minutes, 250VDC permanent

Frequency range	1 Hz up to 1 MHz
Time base	0.001 up to 1 s
Counter frequency (reference)	48 MHz
Resolution	0.002 %
Frequency measurement with recognition of the direction of rotation	specification like frequency measurement. For the recognition of the direction of rotation the phasing of both inputs is being used.
PWM MEASUREMENT	
Input frequency	1 Hz up to 1 MHz
Resolution	21 ns
Configuration of the measurement type	Counter for duty cycle, frequency
COUNTER	
Counter	32 bit
Counter frequency	1 MHz
For/backward counter	specification like counter but with an additional input for the direction of counting
Quadrature counter	specification like counter. For the recognition of the direction the phasing of both inputs is being used
Quadrature counter with zero reference and reset/enable	specification like quadrature counter but with an additional input for the „0“ reference recognition and an additional input to activate the counter functionality individually.
FUNCTION DIGITAL OUTPUTS	
STATE	
Reaction time	100 μ s
FREQUENCY OUTPUT	
Frequency range	0.1 Hz up to 10 kHz
Accuracy	0.01 %
PWM OUTPUT	
Input frequency	0.1 Hz up to 10 kHz
Resolution	21 ns
POWER SUPPLY	
Power supply	10 up to 30 V _{DC} , over voltage and overload protection (for details see: 5.2.7 Power supply requirements on page 95)
Power consumption	approx. 2 W
Influence of the voltage	<0.001 %/V
ENVIRONMENTAL	
Operating temperature	-20°C up to +60°C
Storage temperature	-40°C up to +85°C
Relative humidity	5 % up to 95 % at 50°C, non condensing
Vibration	MIL-STD 810F 514.5, procedure I
Shock	MIL-STD 810F 516.5, procedure I
MECHANICAL	
Case	Aluminium
Dimensions (W x H x D)	approx. 31 x 125 x 120 mm for details see: 6.1.1 Physical Dimensions on page 156
Weight	approx. 400g for standard measurement modules for details see: 6.1.1 Physical Dimensions on page 156
CONNECTION	
Standard	2x10 pin screw connectors

Table 28: AO4 specifications

5.16 DS NET SUPPLY

The DS NET SUPPLY module offers 4 galvanically isolated DC sensor supply voltages. Each supply voltage is galvanically isolated with 1.5kV from the other voltages and each one can provide a maximum power of 5 W.

HINT



The voltages on the 2nd connector are connected in parallel to the corresponding voltage on the first connector. i.e. the +5V on the 1st connector and the +5V on the 2nd connector provide a maximum of 5W, since they come from the same DC/DC converter.

It is possible to connect voltages on the same connector together to create any possible sensor supply voltage combination (e.g. 17V, 20V, ..).

Supported Voltages:

- +5V
- +12V
- +15V
- +24V

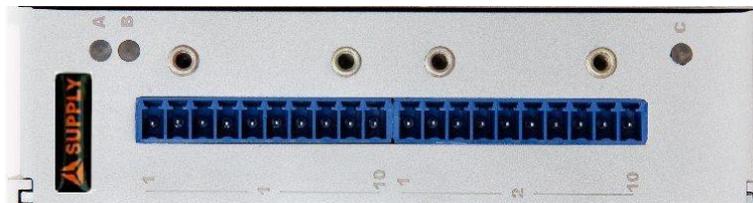


Illustration 258: DS NET SUPPLY

IMPORTANT



Note, that the DS NET SUPPLY module is not a measurement module, and will not communicate with the DS GATE. Thus, the following facts apply:

- you do not need to configure any of the sockets DIP-switches (all DIP-switches can remain down) – this module also has no relevance related to termination (6.2.5 Terminating resistances)
- you must make sure, that the power supply of the DS NET system, is strong enough for the whole system
- the position relative to the DS GATE or to the other modules does not matter
- this module is not available for the rack line
- this module will not show up in DEWESoft™ or test.commander
- the LEDs have no meaning and are not even connected

Connector 1		Connector 2	
Pin #	Connection	Pin #	Connection
1	NC	1	NC
2	+5V	2	+5V
3	GND (5V)	3	GND (5V)
4	+12V	4	+12V
5	GND (12V)	5	GND (12V)
6	+15V	6	+15V
7	GND (15V)	7	GND (15V)
8	+24V	8	+24V
9	GND (24V)	9	GND (24V)
10	NC	10	NC

Table 29: DS NET SUPPLY pin assignment

5.17 DS NET WiFi

The DS NET WiFi module allows you to have wireless secure connections up to 150Mbps.

It is not possible (nor logical) to have a DS NET WiFi module and a DS NET CPU module in one system (since the DS NET CPU module also has WiFi).

<p>The WiFi module is integrated in the left handle. It must be connected with a short LAN-cable (connection labelled <i>to gate</i>) to the DS-GATE module (connection labelled <i>NET</i>).</p>	<p>At the side of the WiFi module, there are the following items:</p> <ul style="list-style-type: none"> ❶ LED indicators: Link, Activity, Power ❷ Reset button
 <p style="text-align: center;"><i>Illustration 259: DS NET WiFi system</i></p>	 <p style="text-align: center;"><i>Illustration 260: DS NET WiFi side-view</i></p>

5.17.1 LED indicators

You find the LED indicators of the DS NET WiFi module at the left side of your DS NET system: see ❶ in Illustration 260 above.

LED name	LED Status	Description
Power	on	The device is on and ready.
	off	The device is off.
Activity	on	The device is on and ready.
	off	The device is off.
	flashing	The device is transmitting or receiving data.
Link	on	The device is connected to an Ethernet network.
	off	The device is off or there is no Ethernet connection.

Table 30: DS NET WiFi LED indicators

5.17.2 Reset button

The *Reset* button (see ❷ in Illustration 260 above) can restore device to factory default settings by press this button for more than 10s.

In the *Add Profile* dialogue enter the settings for the WLAN network. In our example (see also Table 33):

-  Profile Name: *Default*
-  Security Mode: *WPA2-PSK*
-  WPA Algorithms: *AES*
-  Pass Phrase: *dewesoft*

When you are done, press the **Apply** button.

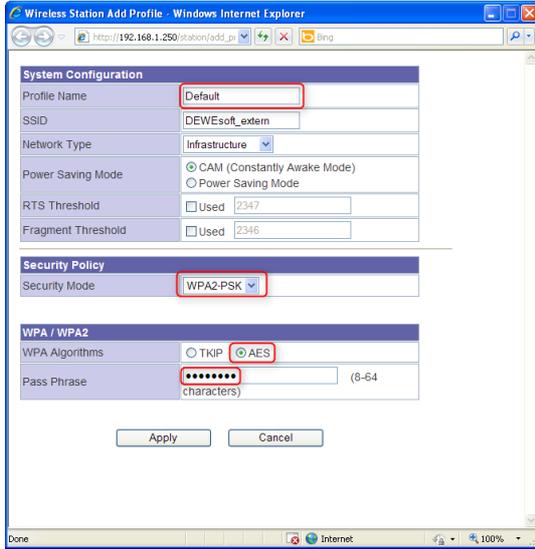


Illustration 268: Add Profile

Now click on the *Profile* menu entry (2). You should see the new profile called *Default* that we have just created:

- 3 Click the radio-button to select the profile
- 4 Finally click the **Activate** button

Whenever the WiFi module is powered on, it will automatically activate this profile and connect to our WLAN network.

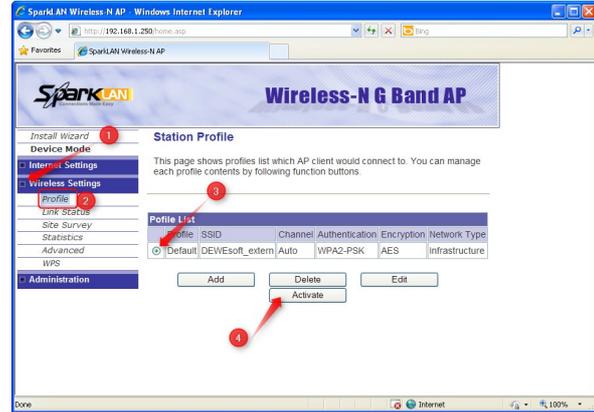


Illustration 269: Activate Profile

When we now go back to *Site Survey* (2), we can see that the device has an active connection to the DEWESoft_extern WLAN network (3 see the blue symbol near the radio button).

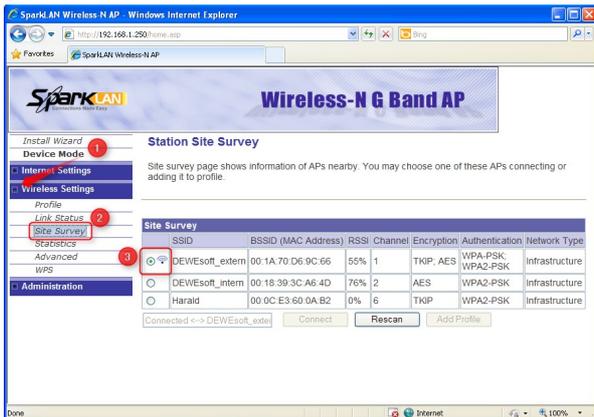


Illustration 270: WLAN connection active

The last step for the WiFi configuration is to change the IP address of the WiFi module.

Open the Internet Settings menu and click on the LAN menu entry. You can see the current IP Address of the device.

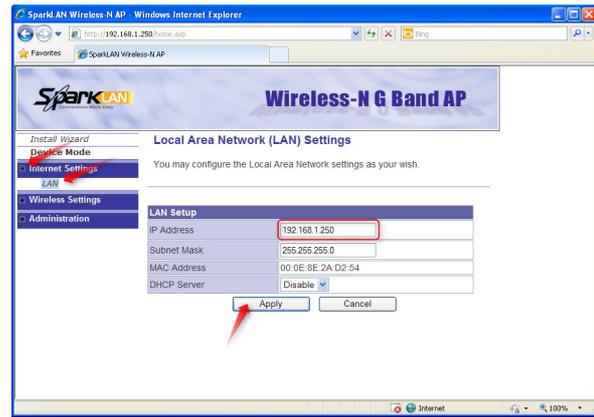


Illustration 271: WiFi module LAN settings

Now you can see that the device already has the new IP address (10.10.10.28) and that the indicator has changed its colour from green to orange, because the device is now in another sub-net (10.0.0.x) than the PC (192.168.1.x).

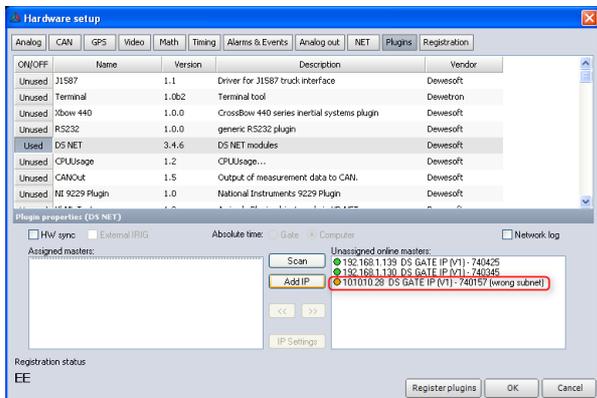


Illustration 277: WLAN IP of the DS-GATE

The next step is to setup the WiFi module. You can disconnect the LAN cable from the DS-GATE and connect it to the WiFi module, so that the WiFi module is now directly connected to the Ethernet connector of your PC.

Note: In this example we will use Firefox 4 instead of Internet explorer (like we did in 5.17.4.1 Connection to a WLAN).

Open the Firefox browser and enter the IP address of the WiFi module. Then enter the login credentials for the WiFi module.

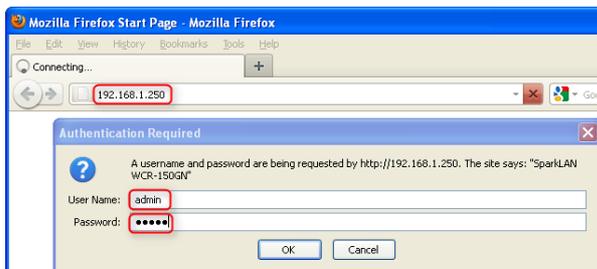


Illustration 278: WiFi login (Firefox)

First we change the *Device Mode* to *Access Point*:

- ❶ click on the *Device Mode* menu item in the menu on the left
- ❷ Make sure, that *Access Point* is selected. If not, click the radio button.
- ❸ Then click the **Apply** button

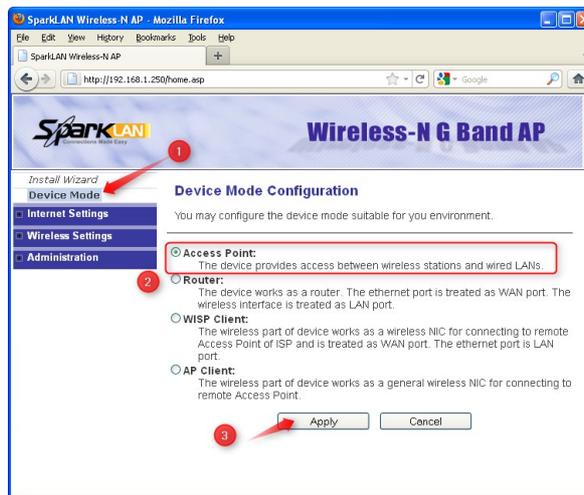


Illustration 279: Device mode: Access Point

Now we change the *Basic* settings:

- 1 you may need to click on the little square to open the *Wireless Settings* menu
- 2 Then click the *Basic* menu item
- 3 Now enter the *Network Name(SSID)* that we want to use: DSNET_WLAN in this example
- 4 Finally click the *Apply* button
- 5 Also make sure that you see the Turn OFF button (which means, that the WLAN function is currently turned on)

Let's add some security and encryption to our wireless network:

- 1 click the *Security* menu item
- 2 Select the *Security Mode: WPA2-PSK*
- 3 Select the *WPA Algorithms: AES*
- 4 Enter a *Pass Phrase: dewesoft* (in this example)
- 5 Finally click the *Apply* button



Illustration 280: Access Point: Basic settings



Illustration 281: Access Point: Security settings

The last step of the WiFi setup are the LAN settings:

- 1 you may need to click on the little square to open the *Internet Settings* menu
- 2 Then click the *LAN* menu item
- 3 Now enter the LAN settings:
IP Address: 10.10.10.1
set DHCP Server to Enable
Start IP Address: 10.10.10.50
End IP Address: 10.10.10.200
Primary DNS Server: 10.10.10.1
Default Gateway: 10.10.10.1
- 4 Finally click the *Apply* button

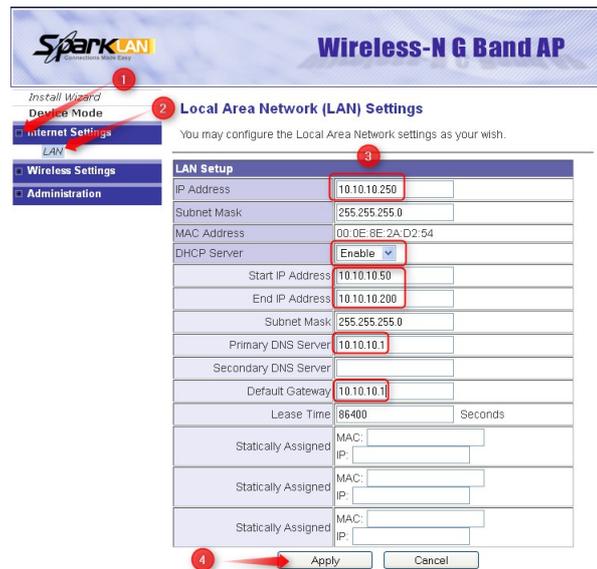


Illustration 282: Access Point: LAN settings

Since we have enabled security for your wireless network, you must enter the network key that we have chosen: dewesoft
Note: for some strange reason (that is completely beyond the knowledge of the author), you must enter the network key twice.
Press the **Connect** button to continue.

The PC is now connected to the DSNET_WLAN wireless network:

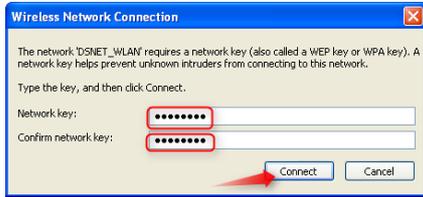


Illustration 286: Enter the Network Key

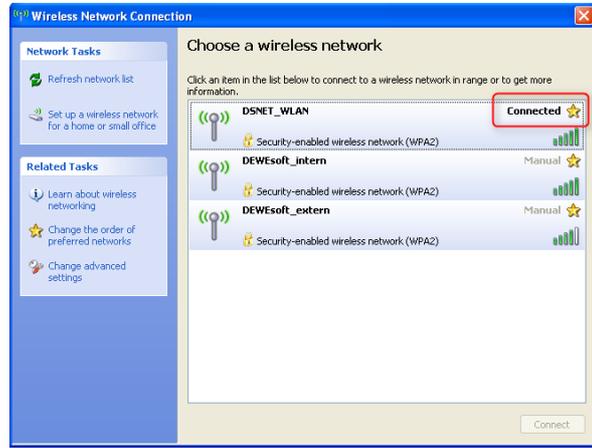


Illustration 287: Wireless network is connected

Now you can start DEWESoft™ and will see the DS-NET device in the list, and since the PC is in the same subnet as the DS-NET, the indicators colour is green:

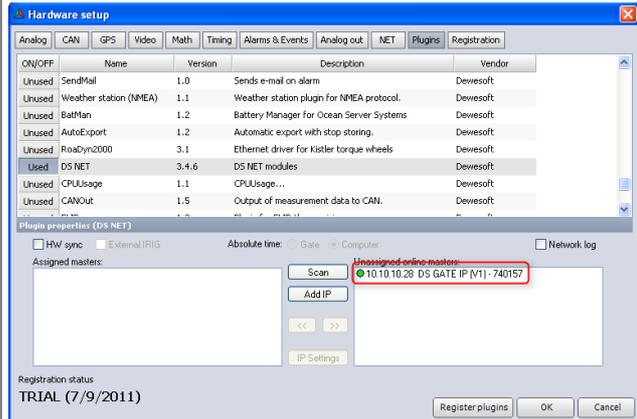


Illustration 288: Hardware setup

6 DS NET hardware

This chapter contains the description of the connection variants and pin assignments.

The DS NET system (portable line or 19 inch rack line) comes completely built according to your initial order. The modular nature of the DS NET system makes it very flexible and it is really easy to change your existing configuration (add, replace or even remove modules).



Illustration 289: DS NET assembly

6.1 Skeletal structure

The skeletal structure of the DS NET system consists of:

- ▲ the left handle
- ▲ the left backplane: note that his backplane does not have internal screws (compared to the standard backplanes)
- ▲ a variable number of standard backplanes (note that you can have a maximum of 16 measurement modules)
- ▲ and the right handle

All these parts are connected via hex screws – you will need a 2.5 mm hex key.



Illustration 290: DS NET Skeletal Structure

6.1.1 Physical Dimensions

Every DS-NET system consists of a left handle, a number of modules and a right handle. The left handle comes in 3 flavours: a standard handle, a WiFi handle and a CPU handle (see also 5.2.1 Special modules on page 88).

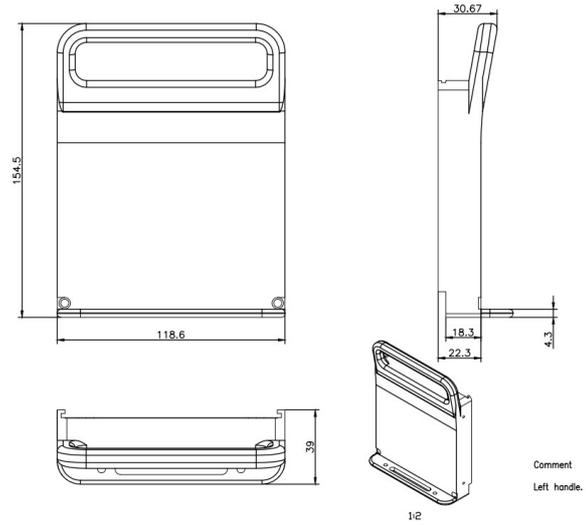


Illustration 291: Left handle: Standard

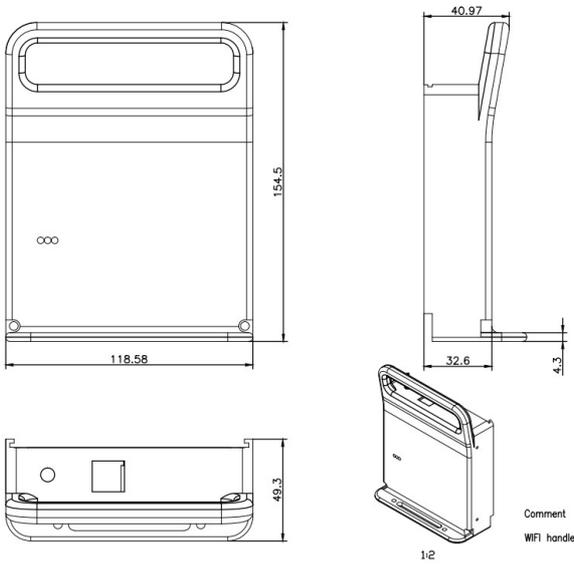


Illustration 292: Left handle: WiFi

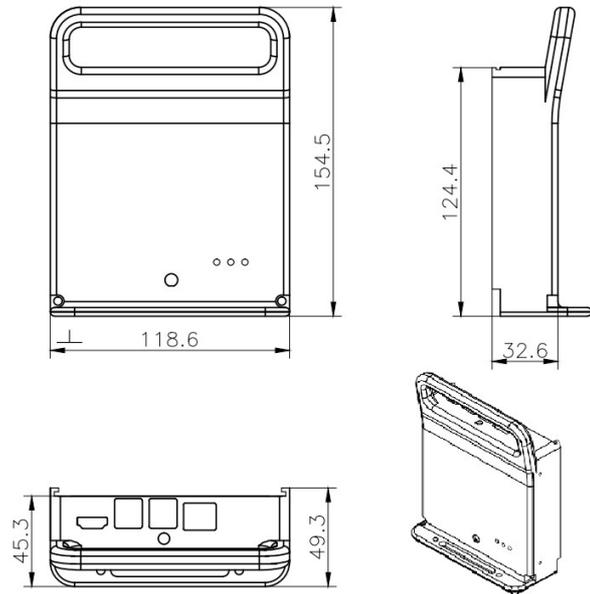


Illustration 293: Left handle: CPU

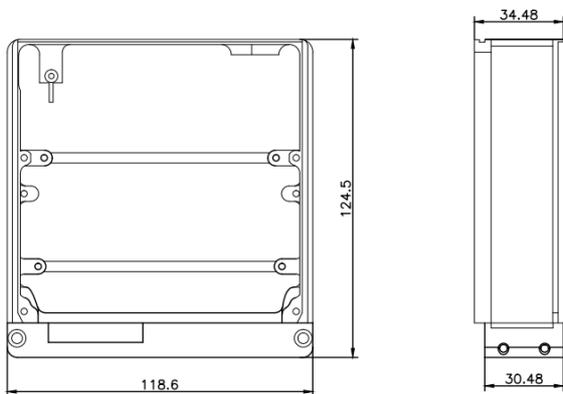


Illustration 294: Standard module handle

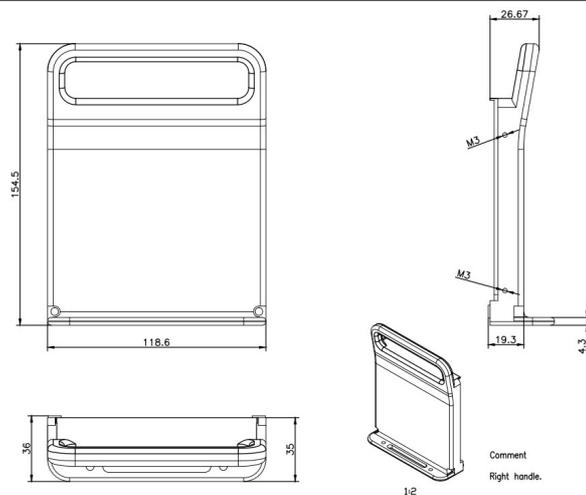


Illustration 295: Right handle

6.1.2 Weight & Power Consumption

Item	Approx. weight [g]	Approx. power consumption [W]
Left Handle Standard	250	-
Left Handle: DS NET WiFi	400	≤5
Left Handle: CPU	500	≤8
DS GATE	400	3
DS-CAN2	400	2 (+ max. 16 W sensor supply)
Standard measurement modules DS NET ACC2, DS NET V8, DS NET V8-200, DS NET V4, DS NET TH8, DS NET TH4, DS NET DIO8, DS NET AO4	400	2
DS NET CFB2	400	2.5
DS NET BR8	800	2.5
DS NET BR4	400	2.5
DS NET BR4-D	450	2.5
DS NET V8-B	500	2
DS NET V4-B	500	2
DS NET V4-HV	600	2
DS NET TH8-C	500	2
DS NET SUPPLY	450	≤20
Right Handle	250	-

6.2 DIP Switches

This chapter describes in detail the meaning of the DIP switches of the sockets.

Note: there are 2 revisions of sockets available:

-  Revision 1.0: has one 10 pin and one 4 pin DIP switch: see 6.2.1 DIP Switches - Revision 1.0 on page 158
-  Revision 2.0: has one 8 pin and one 6 pin DIP switch: see 6.2.2 DIP Switches - Revision 2.0 on page 158

HINT



You can mix sockets of both revisions in one system.

6.2.1 DIP Switches - Revision 1.0

The 10 pin DIP switch (on the left of Illustration 296) is used for addressing, the hot swap function and for the bus termination.

Pin	Description
1..6	module address ⁶² : see 6.2.3 Setting the address
7	unassigned
8	hot swap function: see 6.2.4 Hot swap
9,10	termination: see 6.2.5 Terminating resistances

Table 35: 10 pin DIP switch

The 4 pin DIP switch (on the right of Illustration 296) is used for the selection of the UART:

Pin	Description
1,2	First UART
3,4	Second UART

Table 36: 4 pin DIP switch

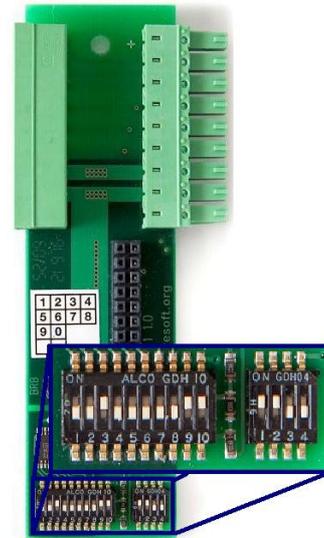


Illustration 296: Socket Rev. 1.0

6.2.2 DIP Switches - Revision 2.0

The 8 pin DIP switch (on the bottom of Illustration 297) is used for addressing, the hot swap function and for the bus termination.

Pin	Description
1..6	module address ⁶² : see 6.2.3 Setting the address
7	unassigned
8	hot swap function: see 6.2.4 Hot swap

Table 37: 8 pin DIP switch

The 6 pin DIP switch (on the top of Illustration 297) is used for the selection of the UART:

Pin	Description
1,2	First UART
3,4	Second UART
5, 6	termination: see 6.2.5 Terminating resistances

Table 38: 6 pin DIP switch

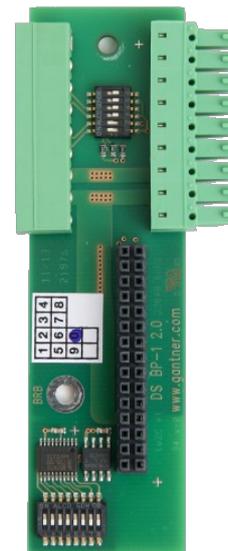


Illustration 297: Socket Rev. 2.0

6.2.3 Setting the address

The address is set in binary form with the first six switches, where the first switch is the LSB (least significant bit).

The address 0 corresponds to no configuration (the first 6 DIP switches down), i.e. an inserted module retains the address assigned via software.

With new modules fresh from the factory you always have to assign an address, either via the DIP switches or via software. Otherwise several modules use the same address (default: 1) and are therefore not capable of measuring within a data bus.

62 since you can only connect up to 8 modules to each of the 2 UARTs, DS NET actually only uses 4 of the 6 address DIP switches

6.2.4 Hot swap

If hot swap is enabled, then you can replace a module during measurement with a new module of the same type (e.g. a DS NET TH8 module can be replaced with another DS NET TH8 module, but not with a DS NET ACC2 module).

6.2.4.1 Behind the scenes

The module configuration is stored in the module and also in the backplane. Thus we must decide, what should happen when you attach a new module to an existing backplane:

- 🚩 hot swap activated: the configuration from the backplane (which is the same as the configuration from the last module that was attached to this backplane), will be transferred to the new module
Thus, after swapping the modules, the new one will have the very same settings as the old one and you did not have to run any configuration software!
- 🚩 hot swap deactivated: in this case, the configuration of the module will be transferred to the backplane.

HINT



Whenever you leave the configuration mode in DEWESoft™ or *test.commander*, the current configuration (including any changes) is automatically transferred to the backplane and the module, so that they are always in sync..

6.2.4.2 Troubleshooting

If hot swap is activated and the module blinks SOS (see 5.2.5.1 SOS) after swapping, it could have the following reasons:

Module has been replaced

This can happen, if you did not adhere to the procedure described in 6.10 Replacing a module when you replaced the module (e.g. if you replaced a TH8 module with an ACC2 module).

In this case, follow these steps to fix the problem:

- 🚩 Unscrew the module (see 6.6 Fixation of a module) and remove it: see 6.7 Insert/remove a module
- 🚩 Deactivate hot-swapping: DIP switch 8 of the socket must be ON (see 6.2.4 Hot swap)
- 🚩 Reattach the module (see 6.7 Insert/remove a module):
Now the module configuration will be written to the socket.
Wait until the modules LEDs stop to flash and then:
- 🚩 Optionally (RECOMMENDED): If you want to switch on hot-swapping (see 6.2.4 Hot swap) for this socket:
 - 🚩 Remove the module again: see 6.7 Insert/remove a module
 - 🚩 Activate hot-swapping: DIP switch 8 of the socket must be OFF (see 6.2.4 Hot swap)
 - 🚩 Reattach the module (see 6.7 Insert/remove a module)
- 🚩 Fix the module (see 6.6 Fixation of a module for details)

6.2.5 Terminating resistances

The terminating resistances must be activated on the last socket of each UART-interface-line (and only there), because the end of the line must be terminated with resistors. Otherwise reflections occur on the line and may lead to disturbances, or even to the loss of data transmission.

In the backplane of the DS GATE, the terminating resistances must not be activated, because the DS GATE has its own resistances which are always activated.

IMPORTANT

The terminating resistances must be activated at the end points and only at the end points of the interface line.
If resistances are also activated in between, the signal is weakened and interference or even failure of the data transmission occurs for the modules located after the additional resistances.

6.3 Fixation of the rubber feet

Each DS NET system has 4 rubber feet: 2 of them attached to each of the handles. For the screw connection you need a Torx T10 screw driver.:



Illustration 298: Rubber Feet

6.4 Fixation of the right handle

To attach/detach the right handle of the DS NET system, open the two hex screws at the bottom of the handle with a 2.5 mm hex key:



Illustration 299: Remove right handle

HINT

Since the right handle is entangled with the last module, you can only completely remove the right handle after you have removed the last module.

6.5 Interconnecting 2 backplanes

Before you add the new backplane, you must deactivate the terminating resistances of the module that is currently the last one (this is the one on the very right side – farthest away from the DS GATE): see 6.2.5 Terminating resistances.

Inside the threaded hole of the backplane, there is a screw for connecting it to the next module.

HINT



If there is no screw inside the hole, then the backplane can only be connected to the left handle and not to another backplane.

Use a 2.5 mm hex key to screw the new backplane to the most left backplane of the DS NET system:

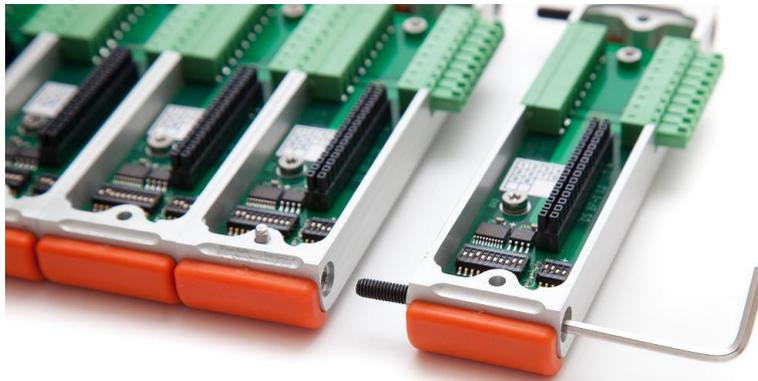


Illustration 300: Interconnecting 2 backplanes

Make sure that you have correctly set the DIP switches of the new socket (see 6.2 DIP Switches), especially the terminating resistances (see 6.2.5 Terminating resistances).

6.6 Fixation of a module

The module is connected to the backplane via 2 screws (use a Torx T10 screwdriver) that can be accessed from the backplanes bottom side:



Illustration 301: Module-Backplane screw connection

6.7 Insert/remove a module

Before you insert a module check that the DIP switches are set correctly (see 6.2 DIP Switches).

Before you remove a module you must unscrew the backplane Torx screws (see 6.6 Fixation of a module): for the last module (the module at the very right of the system, that is farthest away from the DS GATE), you may also need to loosen the rubber feet (see 6.3 Fixation of the rubber feet).

Each module can be inserted/removed individually.



Illustration 302: DS NET: insert/remove module

6.8 Adding a new module

Check list for adding a new module to an existing DS NET system:

- ⚠ Remove the rubber feet from the right handle: see 6.3 Fixation of the rubber feet for details
- ⚠ Remove the last module: see 6.6 Fixation of a module and 6.7 Insert/remove a module for details
- ⚠ Remove the right handle: see 6.4 Fixation of the right handle for details
- ⚠ Now attach the new backplane including the new socket to the last backplane of the existing system (this is backplane on the right, which is farthest away from the DS GATE): see 6.5 Interconnecting 2 backplanes
- ⚠ Make sure that the DIP switches are set correctly see 6.2 DIP Switches - especially note:
 - ⚠ the terminating resistances of the socket that has been the last module before must be deactivated
 - ⚠ the terminating resistances of the new socket (which is now the last one) must be activated
 - ⚠ take care to use the correct hot-swap settings: see 6.2 DIP Switches
- ⚠ Reattach the right handle: see 6.4 Fixation of the right handle for details
- ⚠ Insert and fix all modules from left to right: see 6.6 Fixation of a module and 6.7 Insert/remove a module for details
- ⚠ Fix the new module: see 6.6 Fixation of a module for details
- ⚠ Reattach the rubber feet: see 6.3 Fixation of the rubber feet for details

After you have physically connected the new module, you must also adapt the configuration in the DS NET plugin: see 4.3.4.2 Resolving configuration issues.

6.9 Exchanging a module (hot-swap)

Exchanging a module means, that you want to replace an existing module with a new module of the same type (e.g. replace a broken DS NET TH8 module with a new module of type DS NET TH8) and want to keep all the settings that have been used before: see also 6.2.4 Hot swap.

If you want to replace an existing module with a module of another type (e.g. replace a DS NET TH8 module with a module of type DS NET ACC2), see 6.10 Replacing a module.

HINT



If you want to exchange the last module (this is backplane on the right, which is farthest away from the DS GATE), you may also need to remove the rubber feet of the right handle first: see 6.3 Fixation of the rubber feet for details

Check list for exchanging a module of a DS NET system:

- ⚠ Unscrew the old module (see 6.6 Fixation of a module) and remove it: see 6.7 Insert/remove a module
- ⚠ Make sure, that hot swap is activated: DIP switch 8 of the socket must be DOWN (see 6.2.4 Hot swap)
- ⚠ Insert the new module (see 6.7 Insert/remove a module) and fix it (6.6 Fixation of a module for details)

The new module should now read the configuration from the socket and start up right away. If you have any problems, see 6.2.4.2 Troubleshooting.

6.10 Replacing a module

Replacing a module means, that you want to replace an existing module with a new module of another type (e.g. replace a DS NET TH8 module with a module of type DS NET ACC2).

If you only want to exchange a module (e.g. replace a broken DS NET TH8 module with a new module of type DS NET TH8), and keep all the settings of the original module: see 6.9 Exchanging a module (hot-swap).

Check list for replacing a module of a DS NET system:

- ⚠ Unscrew the old module (see 6.6 Fixation of a module) and remove it: see 6.7 Insert/remove a module
- ⚠ Make sure, that hot swap is deactivated: DIP switch 8 of the socket must be UP (see 6.2.4 Hot swap)
- ⚠ Insert the new module (see 6.7 Insert/remove a module)
 - ⚠ Optionally: switch on hot-swapping (see 6.2.4 Hot swap)
- ⚠ Fix the new module (6.6 Fixation of a module for details)

The settings of the new module that you have inserted will be transferred to the backplane.

After you have physically replaced the new module, you must also adapt the configuration in the DS NET plugin: see 4.3.4.2 Resolving configuration issues.

6.11 Exchanging a socket

If you ever need to exchange a socket with a new one (and keep the settings of the current module), follow these steps:

- ⚠ Deactivate hot swap in the new socket: push DIP switch 8 up (ON)
see also 6.2.4 Hot swap
- ⚠ Power off the DS NET system
- ⚠ Unscrew (see 6.6 Fixation of a module) and remove (see 6.7 Insert/remove a module) the module which is currently attached to the backplane that you want to replace, so that you can access the socket.
You will also have to remove all modules and backplanes right of the module in question, so that you can physically disconnect the socket from the socket to the right.
- ⚠ Unscrew the 2 Torx screws that connect the socket to the backplane (use a Torx T10 screwdriver), replace the old socket with the new one and fix the screws again.
- ⚠ Now you can reassemble the DS NET system (and attach the original module to the new socket)
- ⚠ Switch on the power supply: since hot swap is deactivated the configuration of the the module is automatically transferred to the new socket (flashing LEDs)
- ⚠ Wait until the loading process has finished (until the LEDs no longer flash)
- ⚠ Switch off the power supply
- ⚠ Remove the module again and reactivate hot swap: push DIP switch 8 downwards (OFF)
see also 6.2.4 Hot swap
- ⚠ Insert the module again (see 6.7 Insert/remove a module) and fix the screws (see 6.6 Fixation of a module).

The backplane has been replaced and hot swap is active again.

7 Data Logger

Your DS NET system can be used as a standalone data logger (no PC required – just power up the DS-NET and log to the USB stick) to store the measurement data continuously on a USB stick with a data rate of up to 20kS/s.

Even better, it supports double-buffering, so that you can view the online data in DEWESoft™ and at the same time log the data to a USB stick. This can be used for redundant data acquisition: e.g. even if the LAN connection to DEWESoft™ is lost during measurement, you will not lose any data – it will be stored on the USB stick.

All enabled channels (see Enabling/Disabling channels on page 71) will be stored in the datafiles on your USB stick.



Illustration 303: DS NET as data logger

7.1 Continuous Logging via DEWESoft™

7.1.1 Enable logging

To enable continuous data logging, go to the *Configuration Mode* (see 4.3 Channel setup on page 63) of the DS NET plugin and simply click the **Enable** button:

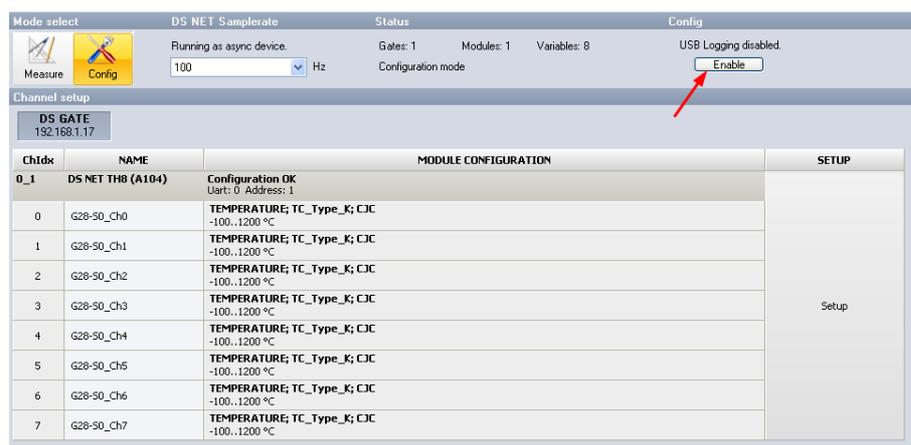


Illustration 304: DS NET plugin: Enable USB logging

Then select the size of your log files:

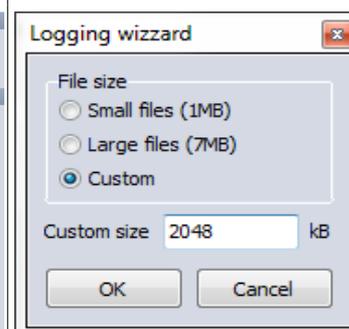


Illustration 305: DS NET plugin: USB Logging - File Size
Note: this dialogue is only available in the DS NET plugin version 4.4 or higher.

When you leave the *Configuration Mode* the changes will be stored in the DS GATE: That's all you have to do.

When the logging function is enabled, you will notice that there are 2 new channels (*LA_SaveEvent_#1* and *LA_SaveCtrl_#1*) in the *Channel setup*:

CHAN	ON/OFF	COLOR	NAME	AMPLIFIER	VALUES	ZERO	SETUP
0	Unused		LA_SaveEvent_#1		0.54741	Zero	Setup
1	Unused		LA_SaveCtrl_#1		OVL	Zero	Setup
0_1 DS NET TH8 (A104)							
0	Used		G28-S0_Ch0	TEMPERATURE; TC_Type_K; CJC	24.868 °C	Zero	Setup
1	Used		G28-S0_Ch1	TEMPERATURE; TC_Type_K; CJC	25.043 °C	Zero	Setup
2	Used		G28-S0_Ch2	TEMPERATURE; TC_Type_K; CJC	24.855 °C	Zero	Setup
3	Used		G28-S0_Ch3	TEMPERATURE; TC_Type_K; CJC	25.008 °C	Zero	Setup
4	Unused		G28-S0_Ch4	TEMPERATURE; TC_Type_K; CJC	OVL	Zero	Setup
5	Unused		G28-S0_Ch5	TEMPERATURE; TC_Type_K; CJC	OVL	Zero	Setup
6	Unused		G28-S0_Ch6	TEMPERATURE; TC_Type_K; CJC	OVL	Zero	Setup
7	Unused		G28-S0_Ch7	TEMPERATURE; TC_Type_K; CJC	OVL	Zero	Setup

Illustration 306: DS NET plugin: Logger control channels

These 2 channels control the data logging function and make sure, that the data from the internal buffer is written to the USB stick correctly. Since these channels do not have any meaning for your measurement, you can set them to **Unused** (the logging will still work, but these 2 internal control channels do not show up in the channel selection of the measure mode).

When the logging function is enabled and you have not attached a USB stick to the DS GATE, the red error-LED of the DS GATE will start to blink after some time, to warn you that it could not write the measurement data to a USB device.

7.1.2 Attach a USB stick

Attach a USB stick to the MEM USB connector of the DS GATE. When you attach the USB stick (and the logging function is enabled), the DS GATE will read the file-system of the USB stick: the blue LED of the DS GATE will flash fast: while it is accessing the file system of the USB stick (see 5.3.2.2 USB access on page 96).



Illustration 307: USB stick attached

HINT



Make sure, that the physical connection of the USB stick is okay. Some USB sticks with short front connectors may not be suitable.

IMPORTANT



The files system of the USB stick must be FAT32.

7.1.3 Logging

When logging is enabled and the USB stick is attached, the DS GATE will periodically write the measurement data to the USB stick. While the data is written to the USB stick, the blue LED of the DS GATE will flash fast. You should not remove the stick while data is written.

The time, how often a file is written to the USB stick is dependant on the sample rate and the number of channels that you have configured.

7.1.3.1 Redundancy in data acquisition

You can connect both, the USB stick and your measurement PC (via Ethernet), to the DS NET system in parallel. The data will still be logged to the USB stick while you can use DEWESoft™ to analyse the very same data at the same time. This feature is also known as *double-buffering* and requires DS GATE firmware V0.55 (or higher) and DS NET plugin V3.3.1 (or higher).

So, even if your Ethernet connection is lost during the measurement, your data is not, since it will be logged to the USB stick.

7.2 Logging controlled by digital input signal

This example shows how you can start/stop logging via a digital input pulse.

Prerequisite is that USB Logging has been enabled in the DS NET plugin (see 7.1.1 Enable logging).

The example system consists of an ACC2 and of a DIO8 module. The ACC2 module is used to gather the measurement data. One input of the DIO8 will be used to start/stop logging to USB and one digital output will be used to switch a LED on/off when the data is being logged.

Illustration 308 shows what we want to achieve:

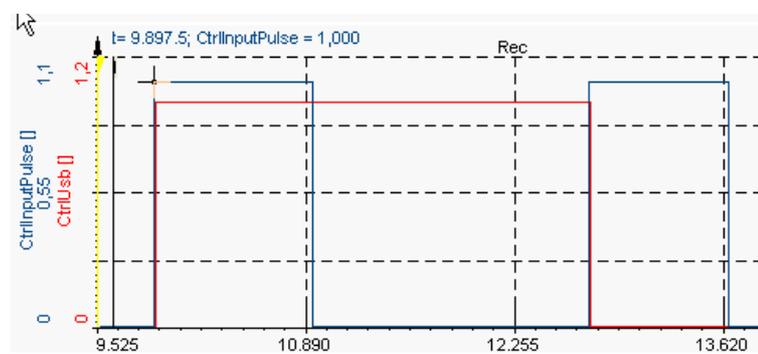


Illustration 308: Log on DI: Result

The blue signal *CtrlInputPulse* is the input signal that is attached to a digital input connector of the DIO8 module. We want to start logging the data to the USB stick on the first pulse (when the *CtrlInputPulse* rises from 0 to 1) and we want to stop on the next pulse (when the *CtrlInputPulse* rises from 0 to 1 the next time).

The red signal *CtrlUsb* is an internal variable that we will setup in `test.commander`, so that it is 0 when we don't log the data and 1 if we log the data.

7.2.1 Variables in test.commander

First we will take a look at the overview of all variables that we will need to define in `test.commander`. All those variables will be explained in detail later. Note, that the order of the variables is important, so make sure, that you create them in the correct order. The rest of this section will explain the variables in logical order – not in the order you need to create them.

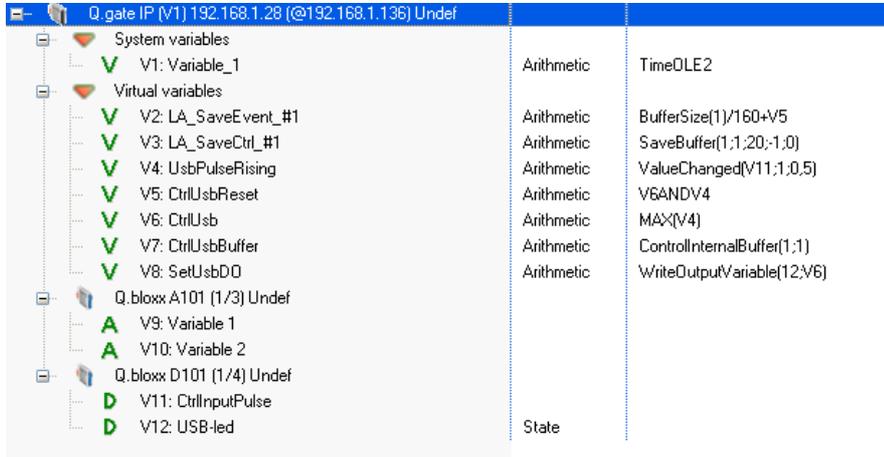


Illustration 309: Log on DI: Variables

When USB-logging has been enabled in the DS NET plugin, we can see that 2 buffers have been set:

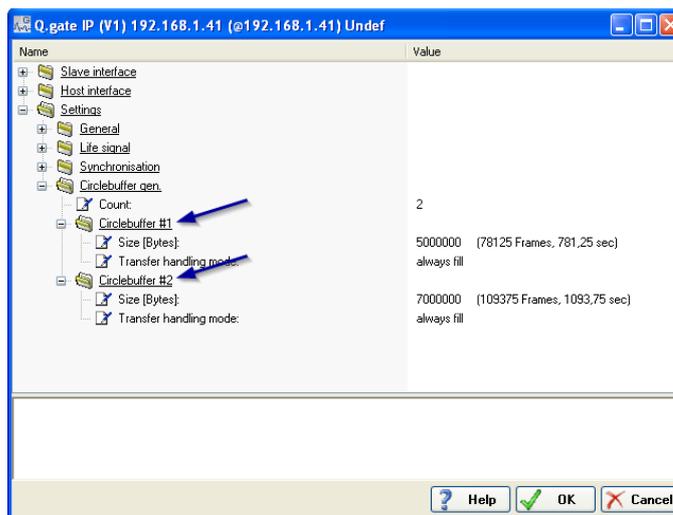


Illustration 310: test.commander: 2 circlebuffers

Circle-buffer #1 is used by DEWESoft™ to read the data (in the fast block-transfer mode) and circle-buffer #2 will gather the data that we will store on the USB stick.

7.2.1.1 UsbPulseRising

The first problem that we have, is that the input signal connected to the DIO8 module will not be a perfect pulse and that we only want to react to the rising edge of the input signal. We can create one single variable called `UsbPulseRising` that solves both problems. The formula that we use is: `ValueChanged(V11;1;0,5)`

This function will monitor `V11` which is our digital input signal and only when the value of the input signal changes (for more than `0.5`) will this variable be `1` (logical `true`), otherwise it will always be `0` (logical `false`).

Since the input signal is digital it can only be 0 or 1 and thus a change by +0.5 means the rising edge of the signal: exactly what we want.

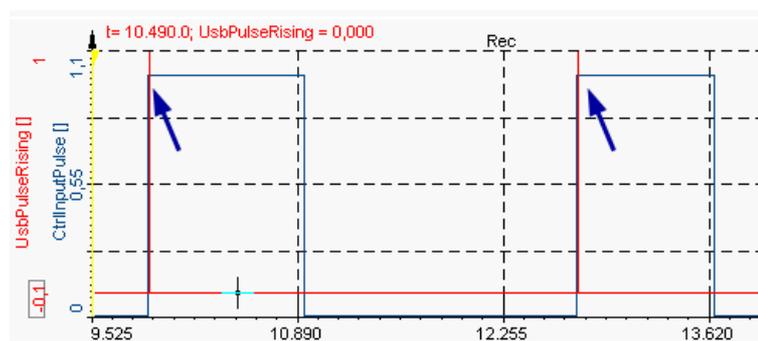


Illustration 311: Log on DI: UsbPulseRising

The blue arrows in Illustration 311 show that *UsbPulseRising* (the red signal) is a pulse signal that is only then active (1, logical true), when the digital input signal *CtrlInputPulse* (the blue signal) goes from 0 to 1.

7.2.1.2 CtrlUsb

Now we need another variable that goes to 1 on the first pulse and back to 0 on the next pulse. We create a variable called *CtrlUsb* with this formula: $\max(V4)$

V4 is *UsbPulseRising* – so this formula would go to 1 on the first pulse, but it would never return back to 0! Thus, we must somehow reset this variable on the second pulse:

7.2.1.3 CtrlUsbReset

We use this variable to reset *CtrlUsb* back to 0 when the next pulse is detected. But how do we distinguish the first from the second pulse? We can use the *CtrlUsb* variable for this. At the beginning *CtrlUsb* will be 0 and when the first pulse arrives it will be set to 1. That means, when the next pulse arrives *CtrlUsb* will still be 1 and that's the difference we are going to use.

So the formula for *CtrlUsbReset* is this logical AND connection: $V6 \text{ AND } V4$

Where *V6* is *CtrlUsb* and *V4* is *UsbPulseRising*.

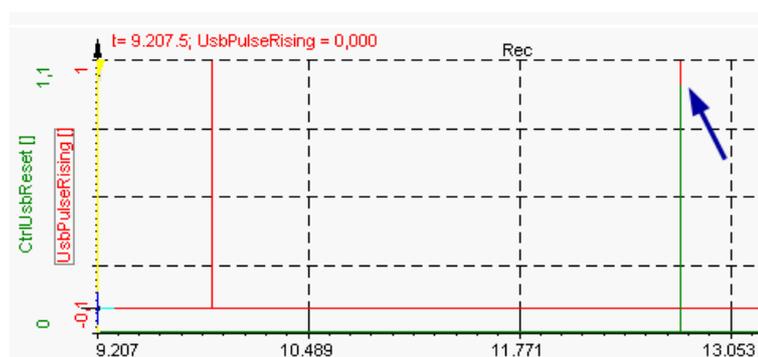


Illustration 312: Log on DI: CtrlUsbReset

You can see that the green signal *CtrlUsbReset* only goes to 1 on the second pulse (see blue arrow in Illustration 312).

The formula is: $SaveBuffer(1;1;20;-1;0)$

This formula will copy the contents of buffer 1 (1st argument, which is our USB-logging buffer: (see Illustration 310 on page 168)) to a file on data drive 1 (2nd argument, which is the USB stick).

But since it makes no sense to call this function all the time (we would get a lot of very small files), DEWESoft™ has set an event to control this function (see next topic):

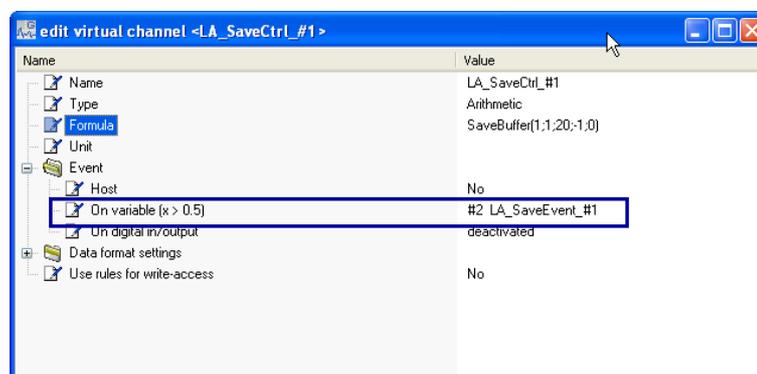


Illustration 316: Log on DI: LA_SaveCtrl_#1 Event

7.2.1.6 LA_SaveEvent_#1

This variable has been created by DEWESoft™ when the USB logging function has been enabled. It will control when *LA_SaveCtrl_#1* (see previous topic) will be executed; that means: when the data from the USB-logging-buffer will be written to the USB-stick.

The default formula for this variable is: $BufferSize(1)/160$

This formula will evaluate to 0.5 when the USB-logging-buffer is filled to 80% - and then the *LA_SaveCtrl_#1* function will be executed (and finally save the buffer data to the USB-stick).

This is fine for the case of continuous logging, but in our case, it may be a problem. Imagine that the buffer is filled to only 25% when USB-logging is turned off. This last data would never be saved to the stick and would be lost.

Thus we must alter this variable to this formula: $BufferSize(1)/160+V5$

Where *V5* is the *CtrlUsbReset* variable that will only then be 1 when the USB logging is turned off. So now everything's fine: whenever USB-logging is turned off the value of *LA_SaveEvent_#1* will for sure be greater than 0.5, so that *LA_SaveCtrl_#1* will be executed.

7.2.1.7 SetUsbDO

This formula will simply set the digital output channel *V12* to the current value of *V6* (*CtrlUsb*). This means, whenever data is being written to the USB-logging-buffer, the digital output will be active.

Formula of variable SetUsbDO: $WriteOutputVariable(12;V6)$

HINT



Note, that the first argument of *WriteOutputVariable* is not a variable reference, but only an index number (which refers to the variable in place). Imagine, you insert another arithmetic variable between *V9* and *V10* of the ACC2 module. All variables with an index of *10* or higher would be increased by one: thus the digital output variable *USB-led* would now be *V13* (instead of *V12*). *test.commander* will automatically adjust all variable references (all the *V12* references that you used would be corrected to *V13*), but it cannot adjust index numbers: That means, you have to manually change the first argument of *WriteOutputVariable* from *12* to *13*!

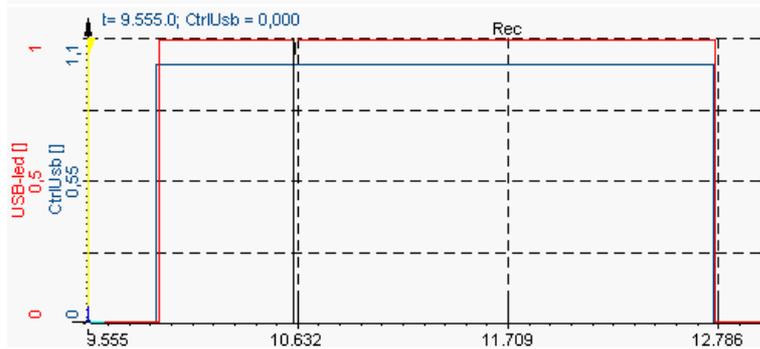


Illustration 317: Log on DI: USB-led

In Illustration 317 you can see that the digital output *USB-led* will be *1* as long as *CtrlUsb* is *1*. If you look close enough, you can see that it is a little bit delayed (by about 13ms). This is the time it takes the DS GATE to calculate the value of the formula and then set it back to the DIO8 modules output channel.

7.3 Working with the logged data

Attach the USB stick with the logged data to your PC. Now go to *Analysis* mode – *Data files* and select the DS NET USB log files (*.dat) filter.

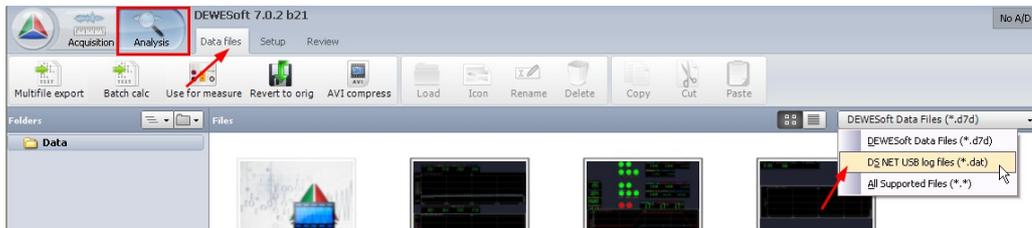


Illustration 318: Analysis Mode: Select *.dat filter

If you don't see the *.dat filter entry in the list, checkout the troubleshooting section of this chapter:

7.4 Troubleshooting.

Now navigate to the file system of your USB stick:

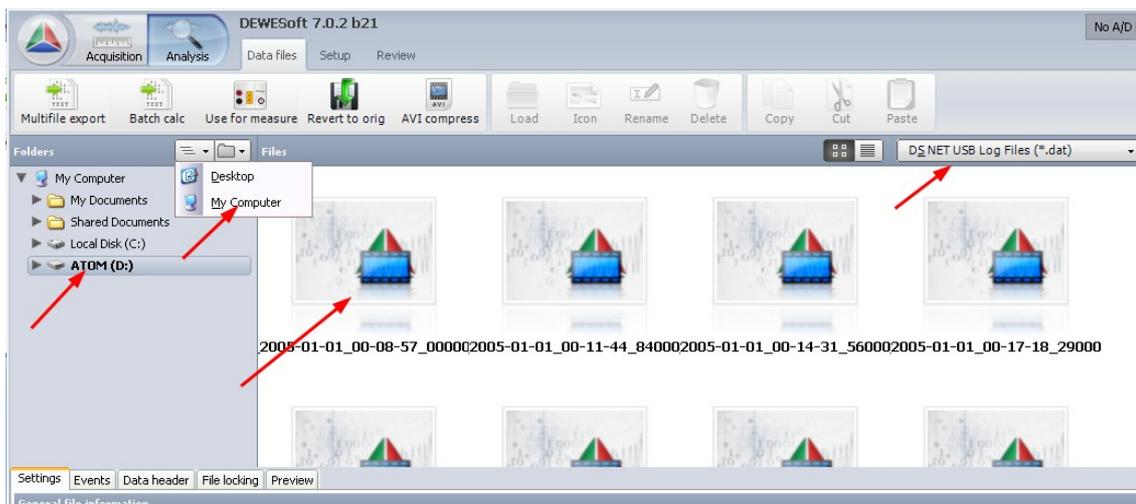


Illustration 319: Analysis Mode: Select *.dat file

In order to see all drives connected to your computer, you may have to click this icon  and select *My Computer* first. Then you see all drives and folders of your PC, including the connected USB drive on the left *Folders* list. Select the USB drive (D: in this case) and then you should see all the *.dat files that have been logged to the USB stick.

Double click the first file to open the DS NET USB Log Files dialog:



Illustration 320: DS NET USB Log Files dialog

Now you can switch to the **Multiple files** tab sheet (all files will be selected by default) and then click **Import...**:

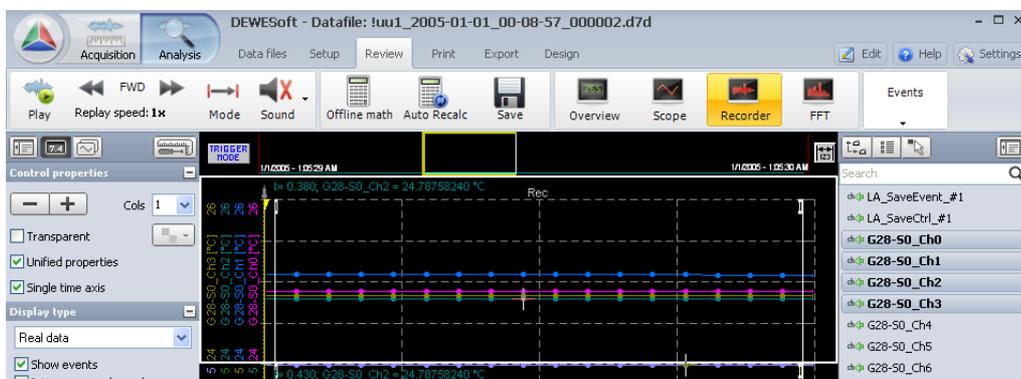


Illustration 321: Analysis view

You can see on the channel list at the right, that all channels have been stored in the USB files, even those that you have set to **Unused** in DEWESoft™.

Just select the channels that are interesting (the internal channels: *LA_SaveEvent_#1* and *LA_SaveCtrl_#1* may not be interesting) and do your analysis.

HINT



If you are using the import add-on version 2.1 or lower and the evaluation copy of DEWESoft™, only the first few samples of the data file will be imported.

7.4 Troubleshooting

There are no datafiles on the USB stick

In this case, please check the following points:

- ▲ The DEWESoft™ version must be 7.0.2b21 or higher
- ▲ The DS NET plugin version must be 3.3.1 or higher
- ▲ The firmware of your DS GATE module must be V0.55 or higher
- ▲ The logging function must be enabled: see 7.1.1 Enable logging
- ▲ Check the physical connection between the USB stick and the *MEM* connector of the DS GATE. Most USB sticks have a LED indicating, that the connection is okay
- ▲ The file format of your USB stick must be FAT32
- ▲ The USB stick must have enough space left for storing the data files

I cannot import the datafiles on the USB stick in DEWESoft™

In this case, please check the following points:

- ▲ The DEWESoft™ version must be 7.0.2b21 or higher
- ▲ The file `DSNETImport.imp` must exist in the `Addons` directory of your DEWESoft™ installation. If this file does not exist, you have to copy it there (on Windows 7 you may also need to run the Plugin Registration: see 3.1.1.2 Windows® 7: DEWESoft™ plugin registration on page 18). You can get the file from
 - ▲ the USB stick that was included with your DS NET shipment (in the directory: `Extended\Bin\Addons`)
 - ▲ The homepage (*Download – Plugins* section) <http://www.dewesoft.com/download/section/6>
Search for: *DS NET Import* in the *DS-NET Plugin* section
- ▲ The USB stick must be attached correctly to your PC

There are only about 1000 files on my USB stick, although there is enough space left

When you are doing slow measurements the DS NET will automatically delete old files, and only keep the 1000 newest files. Thus you have a circle buffer and the most recent 1000 data files will always be available.

With the current version of the firmware V0.55 it is not possible to deactivate this feature or to change the 1000 file limit.

There are only 128 datafiles on my USB stick, although there is enough space left

Most likely your USB stick is formatted with the FAT file-system. The FAT file system can only store 128 files in one directory. Format the USB stick with the FAT32 file-system (make a backup of your data first).

8 Service guide

8.1 Add-on update

Describes what you have to do if you want to update the *DS NET plugin* (see 4 DS NET plugin of page 43) or the *DS NET Import* add-on (see chapter 7 Data Logger on page 165).

The newest version of the DS NET plugin can be downloaded from our homepage: www.dewesoft.com. Go to [Download – Plugins](#) (or use this direct link: <http://www.dewesoft.com/download#Plugins>) and then download the add-on you wish to update: see the blue arrows in Illustration 322.

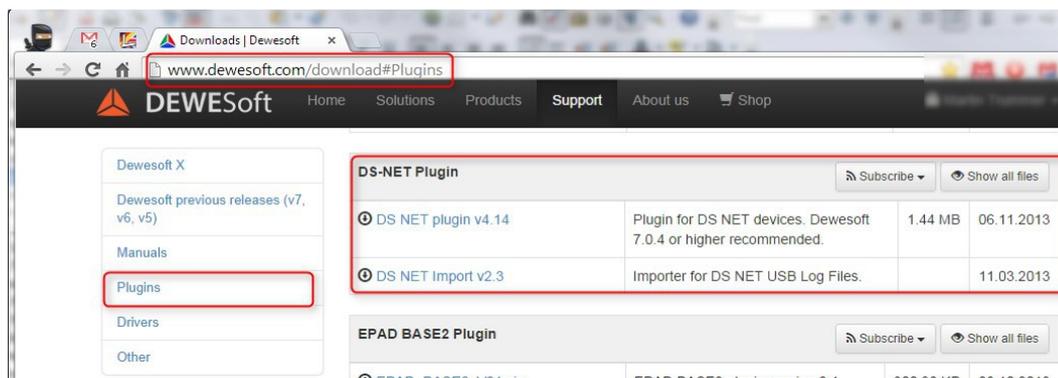


Illustration 322: Download add-ons

When you have downloaded the file, extract the files and folders in the archive and copy them to the Addons directory of your DEWESoft™ installation (replace any existing files if necessary).

The default path of the Addons directory is
D:\DEWESoft7\Bin\V7_0\Addons

The path may vary dependant on your installation (see 3.1.3.2 Installing new DEWESoft™ version for details).

Then you should see the following files and folders in the Addons directory:

-  DSNET (folder)
-  DSNET.dll
-  DSNETImport.imp

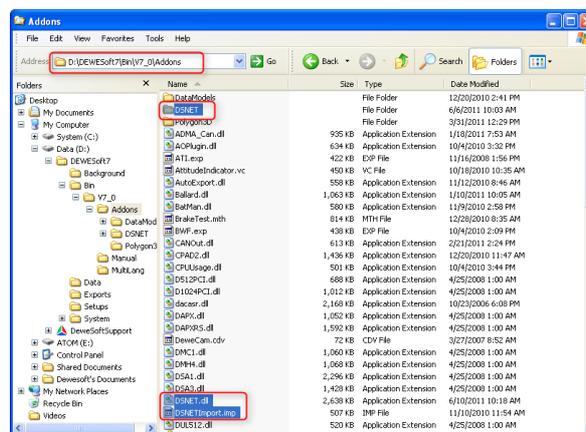


Illustration 323: DS-NET plugin files and folders

8.2 Firmware update

When you get your DS NET system the DS-GATE module and the measurement modules will always include the latest firmware.

But in the following situation it may be necessary for you to update the software of the DS GATE or of the modules:

-  If a newer version of the software is available that includes new features or bug-fixes that you need
-  If you want to combine older modules, with a newer system, it is essential that you update the software of the old modules, because otherwise disturbances in operation due to a communication failure may occur.

The *test.commander* installation (including ICP100), also includes the firmware for the DS GATE and for all measurement modules.

Error checking Software Version!

When the *Slave Firmware Update* dialog shows the error message below, it means that the firmware on your PC cannot be found.

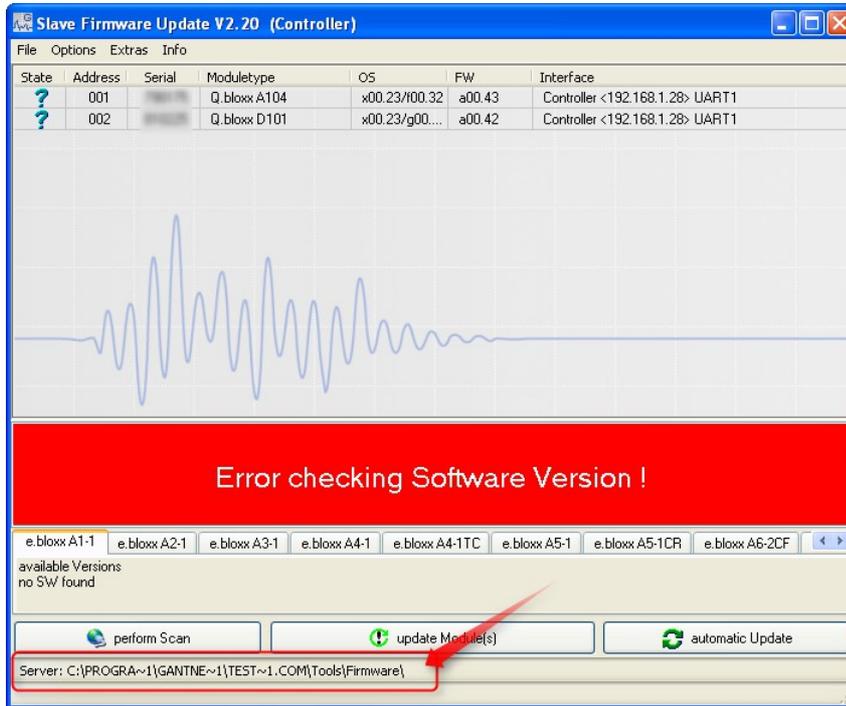


Illustration 328: Slave Firmware Update: Error checking Software Version

Please double-click the *Server path* in the status bar (or go to *Extras - set new Firmware Directory*) and select the ICP100 firmware directory: e.g. C:\Programme\Gantner Instruments\ICP100\Firmware

8.2.2 Firmware update for DS-Gate

8.2.2.1 Prepare DS-Gate firmware update

IMPORTANT



Before you update the firmware of the DS-GATE, you should update the firmware of all modules (see 8.2.1 Firmware update for modules (aka. slaves) on page 176). It is recommended that you read the current configuration with `test.commander` and save a backup of this project. If your DS NET system has no access to a DHCP server (e.g. when you connect the DS-NET directly to your PC), then you must deactivate DHCP in the DS-GATE (under *Settings - Host interface - ETHERNET - Use DHCP server*: select *No*) Do not forget to write the changes to the DS-GATE: *File - Write Project (All)...*

If your DS-NET system is connected directly to your PC, make sure, to deactivate DHCP:
 Navigate to *Host interface* – *ETHERNET* and make sure that *Use DHCP server* is deactivated (select *No* from the drop-down)

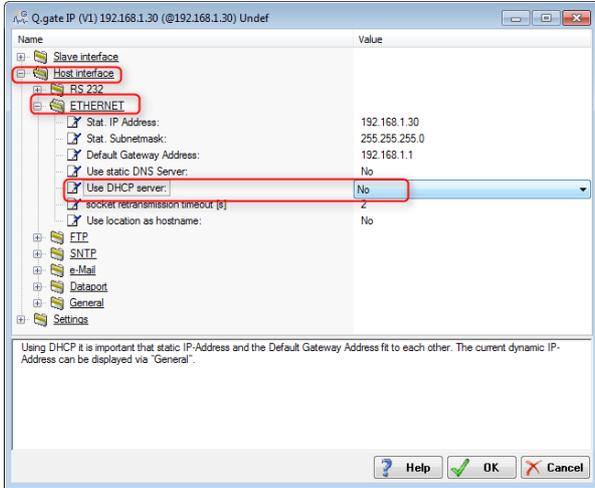


Illustration 335: DHCP settings

Now close the settings dialogue. If anything has been changed, you will see a red asterisk (*) left from the Q.gate IP entry (see marker ❶ in Illustration 336 below). In this case press the *Write Project (Update)...* icon (see marker ❷ in Illustration 336 below)

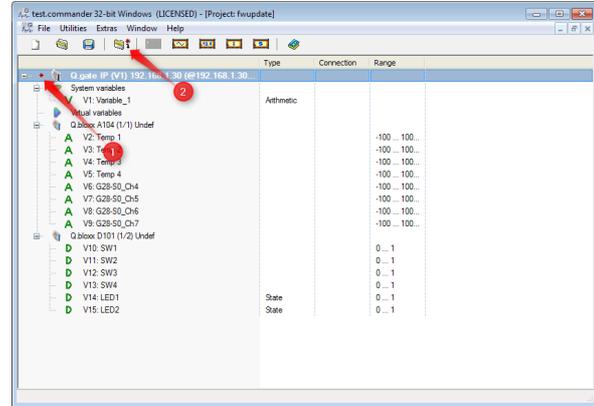


Illustration 336: Write Project (Update)...

and wait until the update is complete:

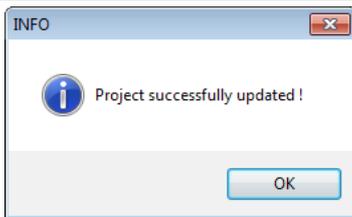


Illustration 337: Project update complete

8.2.2.2 Perform DS-Gate firmware update

In test.commander open the *Controller Firmware Update...* tool

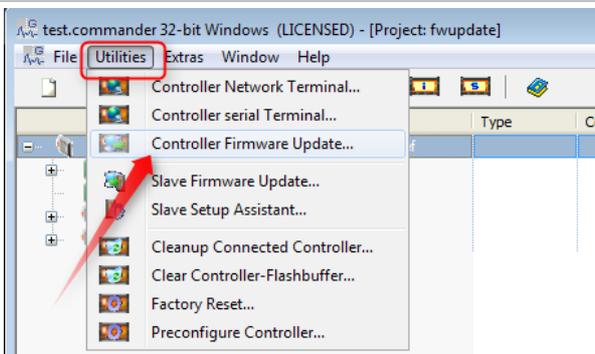


Illustration 338: Open Controller Firmware Update tool

Select the DS-GATE that you want to update. The red rectangle in Illustration 339 shows the current firmware version of the DS-NET device: in this case it's *V0.56*.

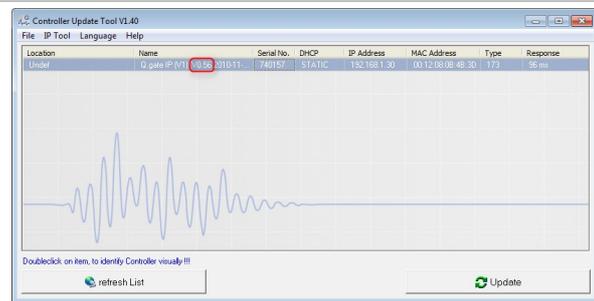


Illustration 339: Select the DS-GATE to update

8.3.1 Release version

In our download section (<http://www.dewesoft.com/download>) under *DEWESoft X* you will always find the latest release version of DEWESoft™. Just download the and run the *Installer*. The installation packet will also include the most current versions of the standard DEWESoft™ add-ons.

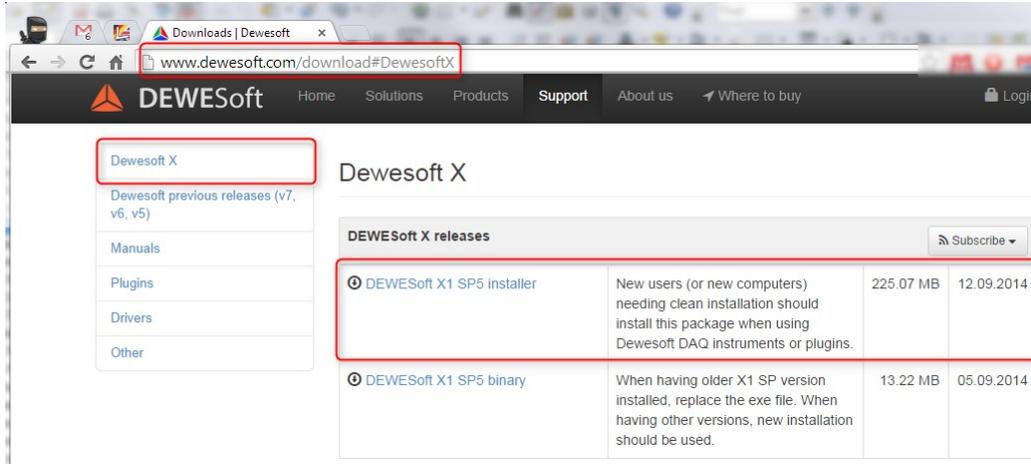


Illustration 345: Download DEWESoft™ release

8.3.2 Beta versions

Sometimes you may need to use a beta version of DEWESoft™.

CAUTION



Beta versions undergo only minimal testing and are thus not recommended for production use. You should always use the well-tested release versions (see 8.3.1 Release version above) instead.

Beta versions can be downloaded from the developers section of our homepage:

<http://www.dewesoft.com/download#DewesoftX>.

Note: before you can download beta-versions you must sign in on our homepage (if you don't have a user account yet, you must register to create one).

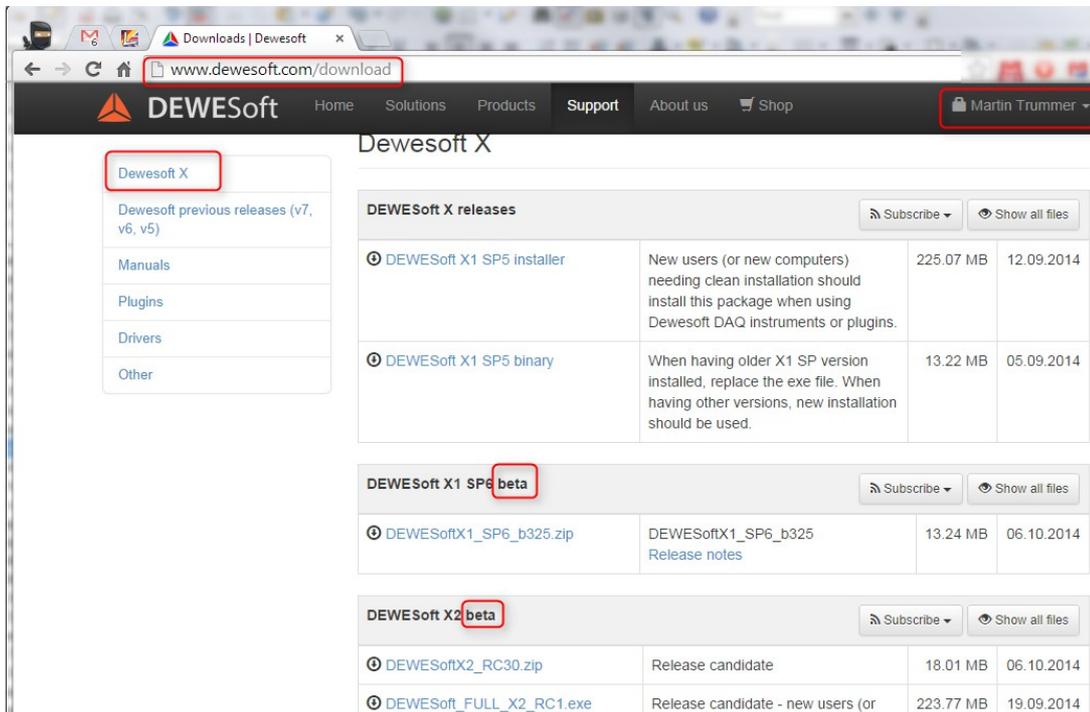


Illustration 346: Download DEWESoft™ beta-version

Note, that the downloaded zip-archive contains only the `Dewesoft.exe` file. You just need to replace the existing `Dewesoft.exe` file of your current installation with the new one (you should consider to rename the original file instead of replacing it – just in case that you want to revert to the last original version).

The default location of the `Dewesoft.exe` is: `D:\DEWESoft7\Bin\V7_0\` (for DEWESoft™ version 7.0.x) and `D:\DEWESoft7\Bin\V7_1\` (for DEWESoft™ version 7.1.x).

The location may vary depending on your installation settings (see 3.1.3.2 Installing new DEWESoft™ version on page 22 for details).

Now drag & drop the device to the project. Click on the row in the 'DLL Scanning Network' dialog and keep the left mouse button pressed. You can see that the cursor icon has changed to indicate that the drag & drop operation has started. While still holding down the left mouse button, move the cursor over the 'Q.gate IP' entry in the Project window (the colour of the Q.gate IP entry will then change) and finally release the left mouse button.

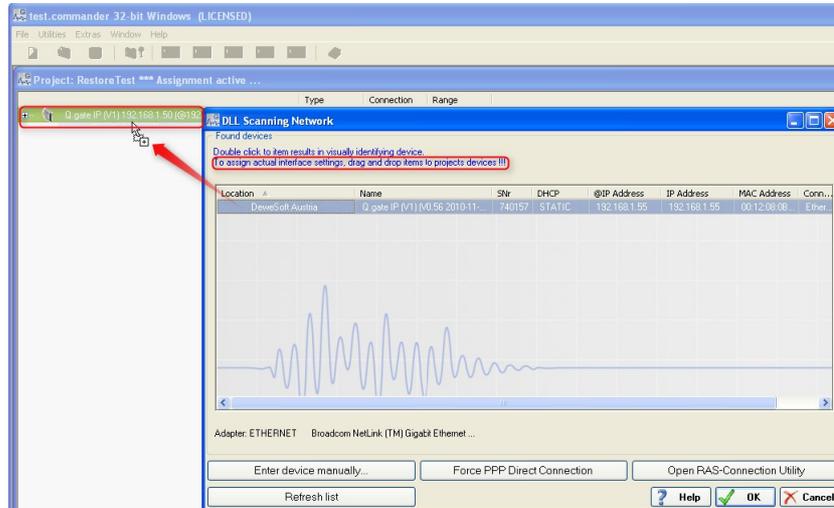


Illustration 351: Drag & Drop the device to assign it to the project

If everything is okay, the entry in the DLL Scanning Network dialogue has a green check mark at the left side, and the actual IP address of the Q.gate IP entry in the Project window now shows the correct IP-address (in this case 192.168.1.55).

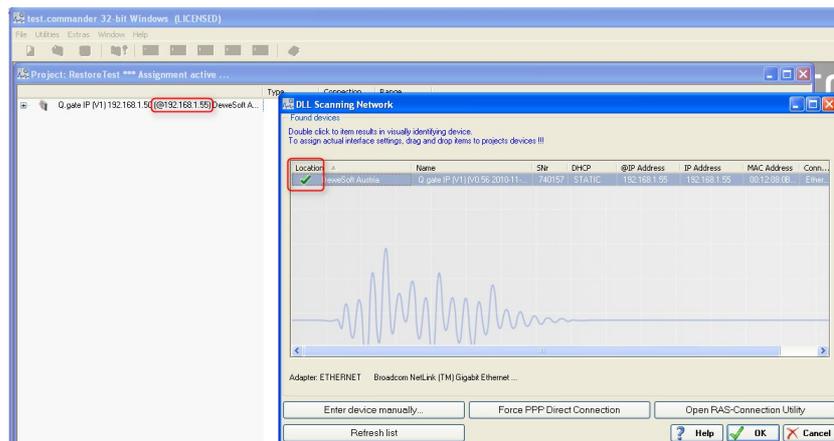


Illustration 352: Assignment finished

Finally press the **OK** button to write the project to the DS-GATE and finish the offline-setup.

9.2 Controlling digital outputs

9.2.1 DEWESoft™ control channels

When you have configured a digital output channel of type *State* (*Status indicator*: see 4.3.4.4 Digital inputs/outputs on page 81)

Type	Variable Name	Sensor	Type of	Connection	Terminals	Format/Adjustment	Range/Error	Additional	DP Real Cfg.
V1	DI	SW1	State	0V	Connector 1 6 (DI1)	f.fff.fff			93h
V2	DI	SW2	State	0V	Connector 1 7 (DI2)	f.fff.fff			93h
V3	DI	SW3	State	0V	Connector 1 8 (DI3)	f.fff.fff			93h
V4	DI	SW4	State	0V	Connector 1 9 (DI4)	f.fff.fff			93h
V5	DO	LED1	Process Out	0V	Connector 1 2 (DO1)	f.fff.fff	Independent	Threshold	93h
V6	DO	LED2	State	0V	Connector 1 3 (DO2)	f.fff.fff	Independent		B3h

Illustration 353: Digital Output of type State

the channel can be used as *control channel* in DEWESoft™. The next chapters will explain how to use a control channels manually or automatically in the DEWESoft™ *Sequencer*.

IMPORTANT



Keep in mind, that setting output signals from the PC to the measurement system should only be used for non-critical data: e.g. as status indication.

Never use it for critical purposes: e.g. to switch off a circuit in case of an alarm condition:

- 1) the reaction time of setting the output from the PC to the measurement system is slow and no guarantees about the timing can be made
- 2) the PC could crash and thus alarm would never be set

9.2.1.1 Manually controlled

Manually controlling the digital output is easy. Just go to the Design modus and:

- 1) add a control channel GUI element to your measurement screen
- 2) select this new GUI element and select the *Display type*: *Control Channel* and *Switch* (instead of *Input Field*)
- 3) and also do not forget to select the correct control channel in the channel list

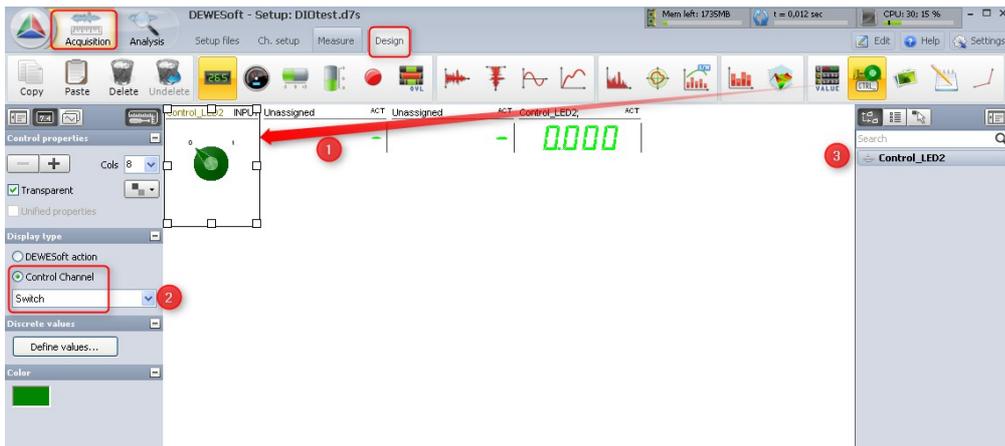


Illustration 354: Control Channel Manually Controlled

After you have switched back to *Measure Mode*, you can simply change the status of the digital output channel by clicking on the *Switch*.

9.2.1.2 Sequencer controlled

Using the DEWESoft™ *Sequencer* gives you full control of the digital output channel. In the *Event* block of the sequence you can use a *Calculation* item to assign every result of all possible mathematical formulas to the channel.

We will demonstrate this with a simple example.

We have a DS-NET system with a TH8 and a DIO8 module. The TH8 module has a channel called 'Temp 1' which shows the temperature of an attached sensor. The DIO8 module has a channel called 'LED2' where a LED is connected to. In this example we want to activate the LED when the temperature is higher than 26°C.

We will add a *Math* channel called 'TriggerCondition' that will output 0 whenever the temperature is lower than the 26°C and 1 otherwise. The formula for this is easy: it's just a comparison:

'Temp 1' > 26

We save this channel setup under the name: *DIOtest.d7s* (we will need this later in our sequence).

Create a new simple sequence:



Illustration 355: Create New Sequence

Then add and connect all items so that the final result looks like the following image:

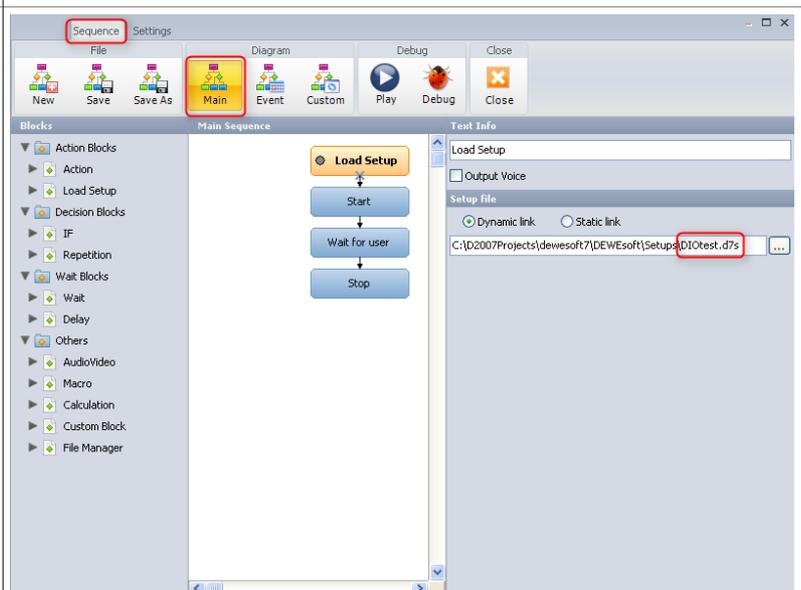


Illustration 356: Simple Sequence Main

The first thing we need to do in the DIO8 module is to get the current value of our *Temperature* channel (which is the 2nd channel of the TH4-module). This is done via a so called *Setpoint*:

To create a new *Setpoint*, click the *Type* cell of an empty row (in our case V9 is the first empty row⁶³). Then select *Setpoint* from the pop-up menu.

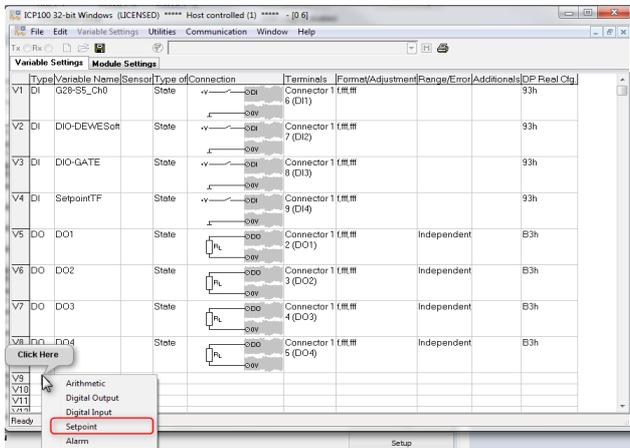


Illustration 360: Create *Setpoint*

Next, click on the *Variable Name* cell of our *Setpoint* row and give it a meaningful name: e.g. *Temp. Import*. And then click on the *Additional*s cell of our *Setpoint* row to define the value of the *Setpoint*:

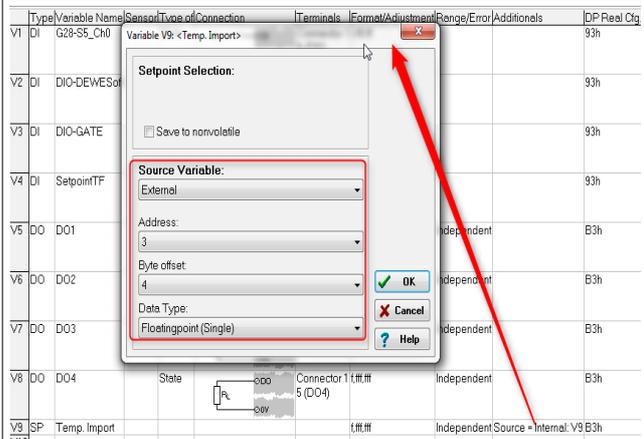


Illustration 361: Create *Setpoint*

The settings in detail:

- 🚩 **Source Variable:** defines where to get the value from. We select *External*, because the value that we want to access (the temperature channel of the TH4 module) is external (relative to the current DIO8 module) i.e. *Internal* means that we can use data from the same module and *Constant* means, that we use a constant value instead.
- 🚩 **Address:** this is the address of the module where we want to get the data from (the TH4 module), starting at 1. In our case the TH4 is the 3rd module (1st is a TH8, 2nd is a BR4-D).
- 🚩 **Byte offset:** this defines which channel from the TH4 module we want to use. It is simply the channel number (starting at 0) multiplied with 4 (since all channels store their data in a 4 byte variable). In our case we want to get the data of the 2nd channel of the TH4 module: thus we enter: 4.
Other examples for the byte offset:
 - the 1st channel has byte offset 0 (0x4)
 - the 2nd channel has byte offset 4 (1x4)
 - the 3rd channel has byte offset 8 (2x4)
 - and so on
- 🚩 **Data Type:** you always have to select *Floatingpoint (Single)* – it's the only available option anyway.

63 If there is no empty row, you can select any row that you don't need and delete it (in the menu select: **Edit - Delete**)

Result

In DEWESoft™ we can now display the function that we have setup in a recorder screen:

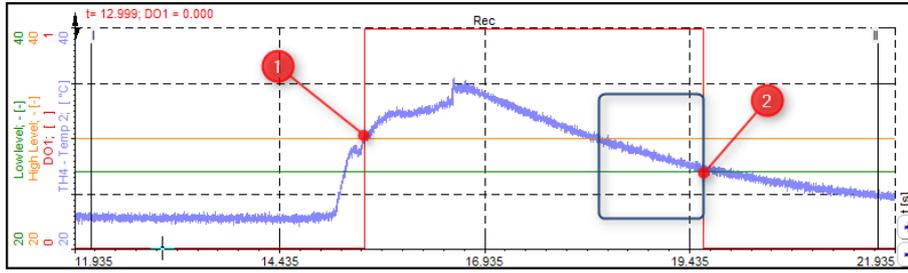


Illustration 365: Alarm condition: Recorder Screen

The blue signal is the temperature of the TH4 module. At the start it's about 24°C (the room air temperature). After about 15 seconds I touched the thermocouple it and the temperature rises over the 30°C level (orange line). When this is the case, the *Digital out* channel DOI (red signal) is switched on.

Then I stop touching the thermocouple, so that the temperature starts to decrease to the room air temperature again. After about 18 seconds, the temperature falls below the 30°C line – and you can see that the alarm is still active (blue rectangle), until the temperature ultimately drops below the 27°C level.

Alarm-handling comparison

You might know that you can also setup alarm conditions directly in DEWESoft™. Here we give a short comparison of the DEWESoft™ alarm handling and the alarm handling in DS-NET.

	DEWESoft™ alarms	DS-NET alarms
Setup	convenient and easy-to-use DEWESoft™ like setup	more complicated setup via ICP100 program
Offline	Not possible – only works when DEWESoft™ is running	Can work completely offline . Will work immediately after the DS-NET has booted up (which only takes some seconds) No need for DEWESoft™ to run you don't even need a PC to be connected.
Response time	Variable due to the nature of the Windows operating systems a fixed response time cannot be guaranteed. e.g. if Windows is busy running other tasks, DEWESoft™ might not get a chance to evaluate the alarm conditions in that time.	Fixed there's no Windows involved – the DS-NET system can guarantee fixed response times – in the range of milliseconds (depending on the sample rate)
Robustness	Windows could crash or freeze and so could DEWESoft™.	No Windows involved. The internal OS of the DS-GATE is very reliable .

9.3 Multiple DEWESoft™ instances

This chapter will show you how to setup DEWESoft™, so that you can 2 DEWESoft™ instances.

When you have several DS-NET systems you may want to run multiple instances of DEWESoft™ at the same time on the same PC. To use this feature you need DEWESoft™ Version 7.0.4 (or higher) and DS-NET plugin version 4.3 (or higher).

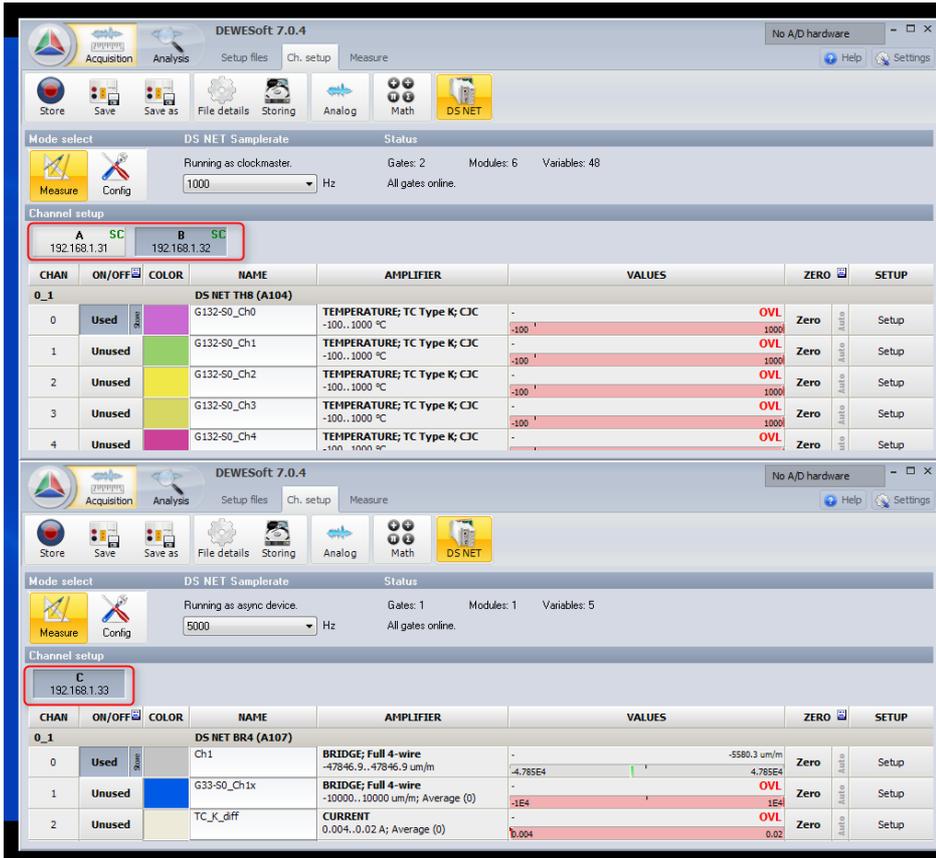


Illustration 380: 2 DEWESoft™ instances

9.4 IRIG sync with Dewesoft USB devices

This chapter describes how to use hardware-synchronisation between a DS-NET and other Dewesoft USB devices (e.g. DEWE-43, MINITAUR).

9.4.1 Prerequisites

In order to use the hardware-synchronisation you need the following hard/software:

- 🚩 You need DEWESoft™ version 7.1.x (e.g. at the time of writing the version 7.1-b53 is the most current one: this is required because older versions (7.0.x) do not support IRIG master for Dewesoft USB devices. See 8.3.2 Beta versions on page 182
- 🚩 Use the DS-NET plugin version 4.3 or higher (see 8.1 Add-on update on page 175)
- 🚩 The Dewesoft USB device (e.g. DEWE-43) needs firmware version 5.4.0.16 or higher: see 8.4 Dewesoft USB devices firmware upgrade on page 184
- 🚩 The DS-GATE needs firmware version 0.59 or higher (see 8.2.2 Firmware update for DS-Gate on page 178)
- 🚩 You need a special sync cable between the DS-NET (2 pin sync connector) and the Dewesoft USB device (4 pin sync connector): contact sales@dewesoft.org



Illustration 381: sync cable connectors between DS-NET and Dewesoft USB devices

9.4.2.3 DS-NET plug-in setup

In the *Hardware setup* go to the **Plugins** tab-sheet, select *DS NET* from the list and then set the *Sync mode* to *IRIG*.

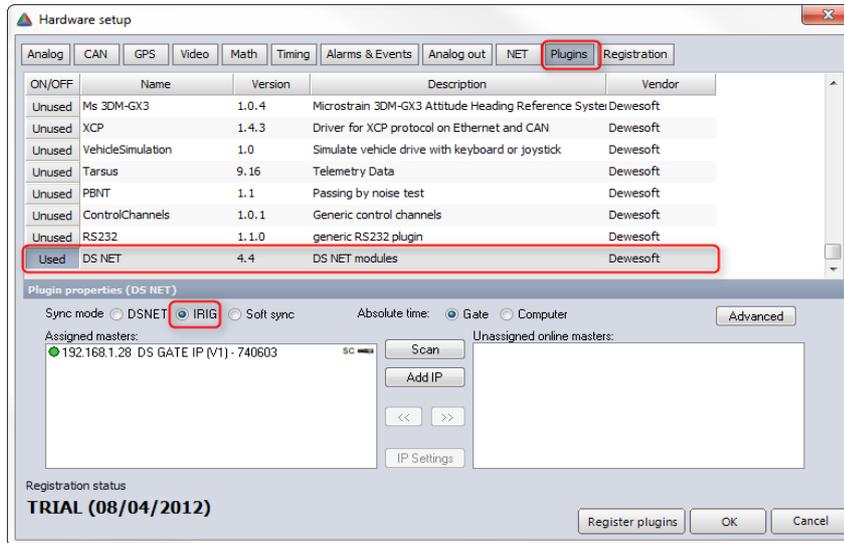


Illustration 384: Timing source: IRIG B DC

That's it. Now the *DEWE-43* will output the *IRIG* signal on it's *Sync* connector and the *DS-GATE* will use this signal to synchronize it's internal clock. Since we have also setup the *Timing* device, *DEWESoft™* will use the same signal as masterclock.

10 Appendix

10.1 Documentation version history

Version	Date [dd.mm.yyyy]	Notes
3.3.3	14.02.2012	<ul style="list-style-type: none"> <input checked="" type="checkbox"/> Reformatted specification tables <input checked="" type="checkbox"/> BR4-D: added note about max. current of power supply <input checked="" type="checkbox"/> added chapter: 9.3 Multiple DEWESoft™ instances
3.3.4	23.04.2012	<ul style="list-style-type: none"> <input checked="" type="checkbox"/> added chapter 8.3 DEWESoft™ update <input checked="" type="checkbox"/> added chapter 8.4 Dewesoft USB devices firmware upgrade <input checked="" type="checkbox"/> added chapter 9.4 IRIG sync with Dewesoft USB devices <input checked="" type="checkbox"/> improved <i>Module Specification</i> sections: <ul style="list-style-type: none"> <input type="checkbox"/> improved <i>Isolation Voltage</i> information (was missing in some module specification sections) <input type="checkbox"/> removed <i>General module specifications</i> section and added the detailed information to each module <input type="checkbox"/> corrected power consumption of CFB2 and BR-4 <input checked="" type="checkbox"/> Updated time-delay info (chapter 4.1.2.3 Software synchronisation) which has been improved since plugin version 4.1 <input checked="" type="checkbox"/> Updated Anti-aliasing filter data of V8 module <input checked="" type="checkbox"/> Updated to DS-NET plugin V 4.4
3.3.5	20.06.2012	<ul style="list-style-type: none"> <input checked="" type="checkbox"/> new chapter: 9.2.2 Alarms inside DS-NET <input checked="" type="checkbox"/> TH-8 specification: removed old information about $\pm 0.5^{\circ}\text{C}$ accuracy <input checked="" type="checkbox"/> chapter 6 DS-GATE had the wrong topic level
3.3.6	13.08.2013	<ul style="list-style-type: none"> <input checked="" type="checkbox"/> added BR8 module <input checked="" type="checkbox"/> added values for over-voltage to specifications of modules <input checked="" type="checkbox"/> 5.2.4.1 Back side connector: illustration was missing <input checked="" type="checkbox"/> 5.15 DS NET SUPPLY: improved description <input checked="" type="checkbox"/> added information about shield connection of bridge measurement with BR4 <input checked="" type="checkbox"/> corrected info in “5.5.3 CFB2: Strain gauge quarter bridge”: “Half-bridge 3 wire” (instead of “Full 4 wire”) <input checked="" type="checkbox"/> TOC now has clickable links <input checked="" type="checkbox"/> added BR4-L pinning <input checked="" type="checkbox"/> removed 3-wire for ACC2 Pt100/Pt1000 <input checked="" type="checkbox"/> clarified load specs of DIO8 (per channel) <input checked="" type="checkbox"/> 5.2.4.1 Back side connector: Illustration was missing <input checked="" type="checkbox"/> ACC2 and BR-4: RTD max. Deviation is now $\pm 0.25^{\circ}\text{C}$ (was $\pm 0.5^{\circ}\text{C}$)
3.3.7	07.10.2014	<ul style="list-style-type: none"> <input checked="" type="checkbox"/> Updated accuracy of V8 module <input checked="" type="checkbox"/> Added new backplane rev. 2.0 and updated the dip-switch configuration table <input checked="" type="checkbox"/> Added some notes to GPS (units for speed, lat/long) <input checked="" type="checkbox"/> Smaller font for table captions <input checked="" type="checkbox"/> Changed design – new orange logos <input checked="" type="checkbox"/> Removed some image frames <input checked="" type="checkbox"/> 4.1.1.6 Absolute time: added info about battery powered RTC <input checked="" type="checkbox"/> Updated screenshots from Webpage <input checked="" type="checkbox"/> Removed old history rows

Revision number: 839

Last modified: Tue 07 Oct 2014, 18:40