



Auto Hand Changer MJC Series



- Lightest in the World (Compared to weight for equivalent payload of other companies) Helps speed up robots for improved productivity
- Many pneumatic interfaces

4 to 13 ports, according to product

Size Variations

NEW

New 60 kg [132.3 lb], 100 kg [220.5 lb], and 150 kg [330.8 lb] payloads added to 3 kg [6.615 lb], 10 kg [22.050 lb], and 20 kg [44.100 lb] payloads

Various electrical NEW interfaces



New solder terminals with cables, non-contact terminals, and round connectors have been added to solder terminals, D-sub connectors, and mini-connectors

Auto Hand Changer

 * MJB series auto hand changer models were changed to MJC series.
 See page 54 for details.

MJC Series

Auto hand changer allows robots and automated equipment to change hands and tools automatically.

Compact and lightweight to help speed up robots for improved productivity.

Lightest in the World (Compared to weight for equivalent payload of other companies)

Makes robots faster.



Electric hand Flat type



6 payload sizes at 3 kg [6.615 lb], 10 kg [22.050 lb], 20 kg [44.100 lb], 60 kg [132.3 lb], 100 kg [220.5 lb], and 150 kg [330.8 lb].

		Model and payload								
Electric Interface	Number of electric connectors	3 kg [6.615 lb] Page ②	MJC10 10 kg [22.050 lb] Page 26	MJC20 20 kg [44.100 lb] Page 28	MJC60 NEW 60 kg [132.3 ib] Page ③	MJC100 100 kg [220.5 ib] Page 3	MJC150 150 kg 150 kg [330.8 lb] Page ①			
Solder terminals	15	•	•	•	•	•	•			
Solder terminals with cables	15	•	•	•	•	•	•			
Mini-connectors	9	•	•	•	•	•	•			
D-sub connector	15	_	•	•	•	•	•			
Non-contact terminals	12	_	•	•	•	•	•			
Round connectors	10	_	_	_	•	•	•			

-: Not selectable



Equipped with multiple pneumatic interfaces

The MJC60 ☐ has 13 ports

Ample electrical interfaces

Solder terminals with cables



Eliminates on-site soldering work

D-sub connector



Mini-connectors Round connectors




Supports large currents (13 A)

Non-contact terminals



Suitable for environments with water or cutting fluid

Explanation of operation

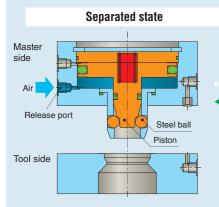

Air pressure is applied to the release port.
The air presses up on the piston, which frees the steel halls

The tool side separates from the master side.

Lock port Air Normal


Mated state

The master side approaches the tool side. Air pressure is applied to the port for locking.

The air presses down on the piston, which applies outward force to the steel balls. The balls work to lift up the tool side, so

the balls work to lift up the tool side, s the tool side mates to the master side.

Air cut-off state (anti-drop mechanism)

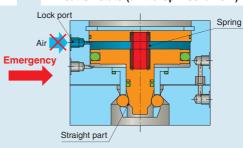

If air is cut off, such as by a power failure, while air pressure is applied to the port for locking in the mated state, then the load on the tool side moves the steel balls inwards, to press up on the piston.


However, the steel balls contact the straight part of the piston, so the pistons cannot be pressed any higher. The spring is applying downward force to the piston, so the piston and steel balls remain in the same positions, and the tool side does not fall.


The tool changer has compressed air Note 1 and electric Note 2 interface functions that allow it to connect to the compressed air and electric signals needed on the tool side to change the handling end of the robot.

When combined with the compliance light direct piping specifications, an option is available that uses a dedicated port on the air interface to apply air pressure to lock the error correction function.

Note 1: The number and size of ports varies according to the main unit specifications. See page 14 for details.


Note 2: The types of interfaces that are supported vary according to the main unit specifications. This can be selected as an option.

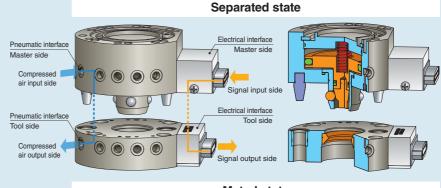

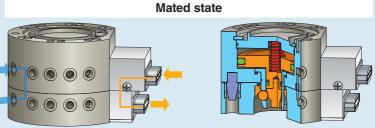


Workpieces can be inserted more rapidly when the compliance light is used in combination.

Parallel type

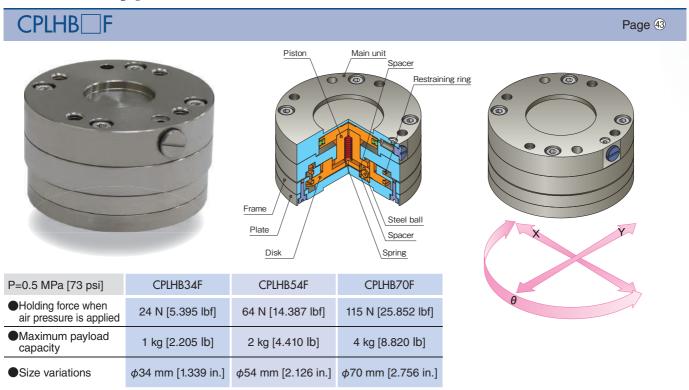

^{*} Holding force based on in-house measuring methods (reference value)

Swing type

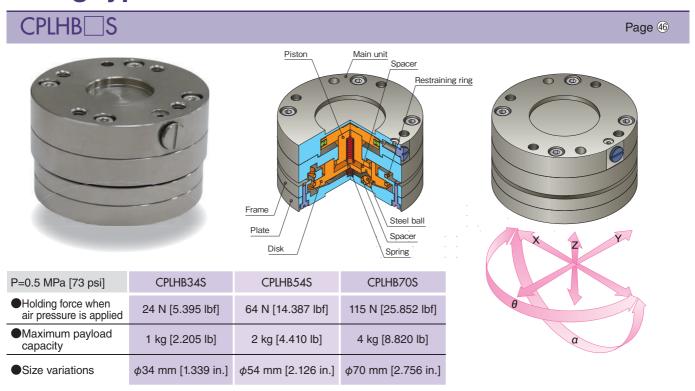

^{*} Holding force based on in-house measuring methods (reference value)



Additional parts

Robot adapter (for auto hand changer)

This adapter is to install auto hand changer (MJC□) to a robot.

The procedure to install the adapter uses ISO (JIS) standards, so easy installation to various types of robots is possible.

*See page 40 and the following pages for details.



Robot adapter

Application example

Robot adapter + Auto hand changer




Adapter for flat type electric hand (for compliance light)

*See Catalog No. C2221 Electric Actuator Elewave Series for details.

Adapter for air hand (for auto hand changer and for compliance light)

*See page 41 and the following pages for details.

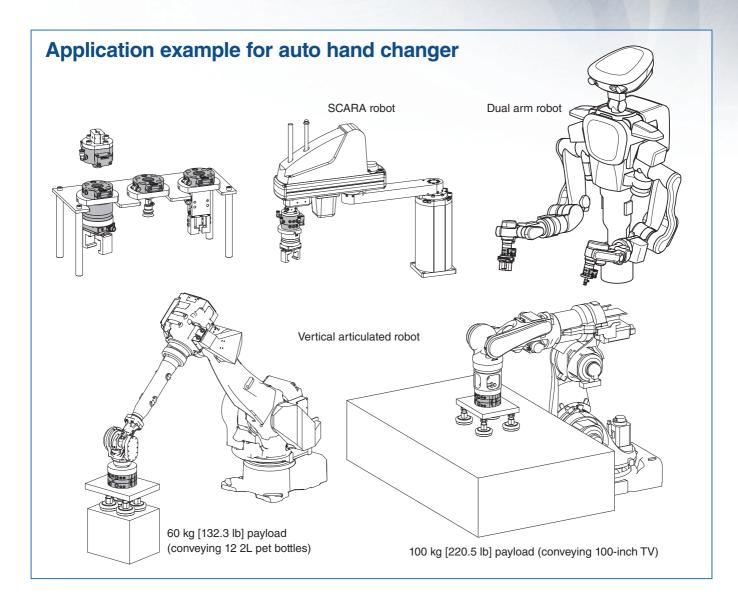

Before selecting and using products, please read all the Safety Precautions carefully to ensure proper product use.

The Safety Precautions shown below are to help you use the product safely and correctly, and to prevent injury or damage to assets.

Follow the Safety Precautions in ISO4414 (Pneumatic fluid power-General rules and safety requirements for systems and their components), JIS B 8370 (Pneumatic system regulations), and other safety regulations.

The directions are ranked according to degree of potential danger or damage: "DANGER!", "WARNING!", "CAUTION!", and "ATTENTION!".

⚠ DANGER	Indicates situations that can be clearly predicted as dangerous. Death or serious injury may result if the situation is not avoided. It could also result in damage or destruction of assets.
⚠ WARNING	Indicates situations that, while not immediately dangerous, could become dangerous. Death or serious injury may result if the situation is not avoided. It could also result in damage or destruction of assets.
⚠ CAUTION	Indicates situations that, while not immediately dangerous, could become dangerous. Minor or semi-serious injury may result if the situation is not avoided. It could also result in damage or destruction of assets.
ATTENTION	While there is no chance of injury, these points should be observed for appropriate use of the product.

This product was designed and manufactured as parts for use in general industrial machinery.

- In the selection and handling of the equipment, the system designer or other responsible person with fully adequate knowledge and experience should always read the Safety Precautions, Catalog, Owner's Manual and other literature before commencing operation. Incorrect handling is dangerous.
- After reading the Owner's Manual, etc., always store them where they are easily available for reference to users of this product.
- If transferring or lending the product to another person, always attach the Owner's Manual, etc., to the product where they are easily visible, to ensure that the new user can use the product safely and properly.
- The danger, warning, and caution items listed under these "Safety Precautions" do not cover all possible cases. Read the Catalog and Owner's Manual carefully, and always keep safety first.

DANGER

- Do not use the product for the purposes listed below:
 - 1. Medical equipment related to maintenance or management of human lives or bodies
 - 2. Mechanical devices or equipment designed for the purpose of moving or transporting people
 - 3. Critical safety components in mechanical devices
 - This product has not been planned or designed for purposes that require advanced stages of safety. It could cause loss of human life.
- Do not use the product in locations with or near dangerous substances, such as flammable or ignitable substances. This product is not explosion-proof. It could ignite or burst into flames.
- When installing the product, always firmly support and secure it (including the workpiece) in place. Injury could result if the product overturns, falls, or is operated abnormally.
- Never attempt to modify the product. Abnormal operation could result
- Never attempt inappropriate disassembly, assembly, or repair of the product relating to its basic inner construction, performance, or functions. It could result in injury.
- Do not splash water on the product. Spraying the product with water, washing it, or using it in water could result in malfunction leading to injury.
- While the product is in operation, avoid touching it with your hands or otherwise approaching too close. In addition, do not make any adjustments to the interior or to the attached mechanisms (such as disconnection of piping tubes).

The actuator may move unexpectedly, possibly resulting in injury.

WARNING

- Do not use the product in excess of its specification range. Using the product outside of its specified range could result in product breakdowns, stop of functions, or damage. It could also drastically reduce the operating life.
- Before supplying air to the product and starting operation, always conduct a safety check within the range of machine operations. Unintentional supply of air or electricity could possibly result in injury caused by contact with moving parts.

- Do not touch the terminals or various switches, etc, while the electric power is on. There is a possibility of electric shock and abnormal operation.
- Always check the catalog and other reference materials for correct product wiring and piping. Improper wiring or piping causes abnormal operation of the actuator, etc.
- Do not throw the product into fire.
 - The product could explode and/or release toxic gases.
- Do not sit on the product, place your foot on it, or place other objects
 - Doing so creates the risk of injury due to tripping or the product tipping over or falling, and erratic or runaway operation due to damage or breakage to the product.
- When conducting any kind of operation for the product, such as maintenance, inspection, repair, or replacement, always turn off the air supply completely and confirm that residual pressure inside the product or in piping connected to the product is zero before proceeding.
 - In particular, be aware that residual air will still be in the air compressor or air storage tank. If residual air pressure remains inside the piping, the actuator could abruptly move and cause injury.
- Do not use the actuator for equipment whose purpose is absorbing the shocks and vibrations of mechanical devices. It could break and possibly result in injury or in damage to mechanical devices.
- Use within the maximum load capacity. Using the product beyond the maximum load capacity may damage equipment or cause personal
- Use safety circuits or system designs to prevent damage to machinery or injury to personnel when the machine is shut down abnormally due to emergency stop or power failure.
- In initial operations after the equipment has been idle for 48 hours or more, or has been in storage, there is a possibility that contacting parts may stick, resulting in equipment operation delays or sudden movements. For these initial operations, always run a test operation before use to check that operating performance is normal.
- Do not use the product near the ocean, in direct sunlight, near mercury vapor lamps, or near equipment that generates ozone. Deterioration of rubber parts caused by ozone may reduce performance and functions or stop functions.

- Because Koganei products may be used under a wide variety of conditions, decisions concerning conformance with a particular system should be made upon the careful evaluation by the person in charge of system design. Assurances concerning expected system performance and safety are the responsibility of the designer who decides system conformity. Be sure to use the latest catalogs and technical materials to study and evaluate specification details, to consider the possibility of machine breakdown, and to configure a system that ensures safety and reliability, such as by using fail-safes.
- Do not use the product in locations subject to direct sunlight (ultraviolet radiation), in locations with dust, salt, or iron particles, or in locations with media and/or ambient atmosphere that include organic solvents, phosphate ester type hydraulic oil, sulfur dioxide gas, chlorine gas, acids, etc. Such uses could lead to loss of functions within a short period, sudden degradation in performance, or reduced operating life. For details on materials used in the product, refer to the description of materials used in major parts.

CAUTION

- When installing the product, leave room for adequate working space around it. Failure to ensure adequate working space will make it more difficult to conduct daily inspections or maintenance, which could eventually lead to system shutdown or damage to the product.
- Do not scratch, dent, or deform the actuator by climbing on the product, using it as a scaffold, or placing objects on top of it. Doing so could damage or break the product, resulting in operation shutdown or degraded performance.
- Post "Work in Progress" signs when doing installations, adjustments, or other work, so that air or electricity is not supplied unintentionally. Unintentional supply of air or electricity could result in injury due to electric shock or sudden operation of the actuator.
- Using extremely dry air with a dew point lower than -20°C [-4°F], may affect the quality of the lubricating oil used. This creates the risk of degraded performance, loss of function, or other problems.

ATTENTION

- When considering using the product for applications that demand extreme safety, such as aviation facilities, combustion equipment, leisure equipment, safety devices, or in other ways predicted to greatly affect assets or human lives, or in situations or environments not described in the Catalog or Owner's Manual, etc., take sufficient safety precautions, such as by allowing ample rating and performance margins for the application and by implementing adequate safety measures, such as fail-safes.
 - Also, be sure to consult us about such applications.
- Use protective covers, etc., to isolate moving parts, such as mechanical equipment, so direct contact with a person's body is not possible.
- Do not arrange controls such that workpieces fall if there is a power failure.
 - Configure controls to prevent workpieces from falling in case of power failure or emergency stop of the machine.
- When handling the product, wear protective gloves, safety glasses, safety shoes, etc., as required to maintain safety.
- When the product can no longer be used, or is no longer necessary, dispose of it appropriately as industrial waste.
- Pneumatic equipment can exhibit degraded performance and function over its operating life. Always conduct daily inspections of the pneumatic equipment, and confirm that all requisite system functions are satisfactory, to prevent accidents from happening.
- For inquiries about the product, contact your nearest Koganei sales
 office or Koganei overseas department. The address and telephone
 number are shown on the back cover of this catalog.

OTHERS

- Always observe the following items.
 - When using this product in pneumatic systems, always use genuine Koganei parts or compatible parts (recommended parts).
 When doing maintenance or repairs, always use genuine Koganei parts or compatible parts (recommended parts).
 Always observe the required methods.
 - 2. Never inappropriately disassemble or assemble the product in relation to its basic construction, performance, or functions.

Koganei bears no responsibility if all safety precautions are not properly observed.




General precautions

Piping


- 1. Before using the product, thoroughly flush the inside of the pipes (blow out with compressed air). Machining chips, sealing tape, rust and other debris remaining from the piping work may cause malfunctions, such as air leaks.
- 2. Even though mechanisms are equipped so the tool side does not fall if the air is turned off, to be safe, install the piping so air is supplied to the lock port even when the solenoid valve for mating/unmating is in a non-energized state.
- 3. Use a 3-port valve or 3 position (all port block) valve for the tool port, to cut off the air while unmated.

<Recommended circuit diagram>

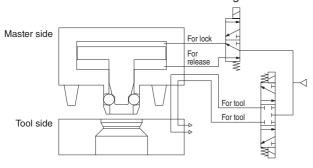


4. To check for a tight fit between the master side and the tool side, use a pressure switch between the tool port and valve, to seal the tool port.

<Reference circuit diagram (tight fit check)>

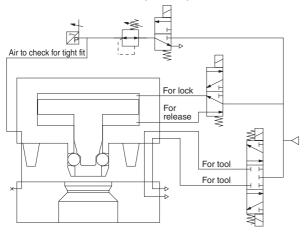

<Piping diagram>

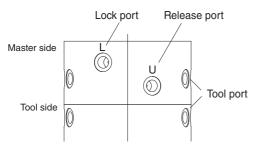

Note: An "L" (lock) is engraved on the lock port, and a "U" (unlock) is engraved on the release port. If nothing is engraved on the tool port, the port links to the same position as the master side and tool side.

Air supply

- 1. Use air as the medium. For the use of any other medium, consult your nearest Koganei sales office.
- 2. Air used for the product should be clean air that contains no degraded compressor oil, etc. Install an air filter (filtration of 40 µm or less) near the product to remove collected liquid and dust. Also drain the air filter periodically. If liquid or dust gets into the product, it may cause defective operation.

Lubrication

The cylinder can be used without lubrication, however, if lubrication, such as a lubricator, is used, use turbine oil type 1 (ISO VG32) or an equivalent. Avoid using spindle oil or machine

Environment

- 1. Protect the product, such as with covers, when using it in locations subject to spatter, excessive dust, dripping water, dripping oil, metal chips, etc.
- 2. Do not use the product in environments which may be corrosive. Using the cylinder in these types of environments may result in damage or defective operation.
- 3. Do not use it in excessively dry conditions.
- 4. Do not use it if the ambient temperature is over 60°C [140°F]. Doing so may result in damage or erratic operation. Also, consider anti-freezing measures if the temperature is less than 5°C [41°F], because moisture may freeze and result in damage or erratic operation.
- 5. The material used for the MJC3, 10, and 20 ball guide, housing, round pins, diamond pins, and center pin and the MJC60, 100, and 150 ball guide, tool plate, round pins, diamond pins, and center pin is stainless steel, however, rust may occur in some usage conditions. Apply anti-rust oil or grease if the product is not used for a long period. Refer to the internal construction on page ® for the application locations.

Mounting

- 1. The mounting surface must be flat. If the cylinder twists or bends when mounted, not only will it be inaccurate, but there may be air leaks and defective operation.
- 2. Note that if the product's mounting surface is scratched or dented it can adversely affect flatness.
- 3. In cases where loosening of bolts due to impact and/or vibration may be a factor, consider looseness prevention measures. Be careful of overspreading of adhesive. If the adhesive gets into the product, it may cause defective operation.
- 4. Be careful that mating/unmating operations of the auto hand changer are not obstructed by piping and wiring when mounting hands, etc., to the mounting surface.
- 5. Tighten mounting bolts to the torque shown in the attached table. We also recommend using positioning pins to assure the characteristics of the torsion moment.
- 6. Arrange the wiring so the cables are not stretched when the robot moves. Otherwise, there is a possibility of defective contacts or disrupted wiring.

Mating and unmating

<Mating procedure>

- While air is supplied to the release port, bring the master side to above the tool side.
- 2 Bring the master side closer to the tool side, then bring the master side close enough so the t dimension is within the following value.

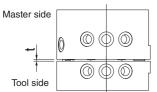



Diagram	1) Allowable	connection gap	

Model	Allowable connection gap t (mm [in.])
MJC3	0.6 [0.024]
MJC10	1 [0.039]
MJC20	1 [0.039]
MJC60	0.5 [0.020]
MJC100	0.5 [0.020]
MJC150	0.5 [0.020]

- 3 Exhaust air from the release port.
- 4 Supply air pressure to the lock port to finish mating.

<Unmating procedure>

- 1 In the unmating position, exhaust air from the lock port.
- 2 Supply air to the release port.
- 3 Raise the master side so it does not hit the tool side to finish unmating.
- **1.** During mating and unmating operations, do not supply air to the tool port. Air will blow out and may damage the product or surrounding equipment.
- **2.** During mating and unmating operations, do not transmit electric signals from the master side to the tool side. Doing so causes extreme wear on the electric contacts.
- 3. Prevent any dust, etc., from getting between the mating surfaces of the master side and tool side. It degrades the flatness and may affect product life.
- **4.** For the MJC60, 100, and 150, 100 N [22.480 lbf] of reaction force is generated at the master side and tool side when the t dimension is 1 or less, so consider this when designing peripheral equipment.
- **5.** For the MJC60, 100, and 150, mate the master side and tool side so the notches have the same orientation.

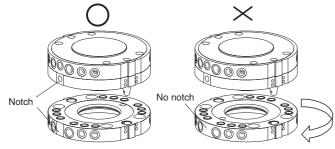

When teaching

1. When teaching, the positioning error between the master side and the tool side must be within the following ranges.

Note: Set the range of motion without completely fixing the tool side and tool holder.

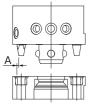


Diagram 2) Horizontal tolerance

Model	Horizontal tolerance for A (mm [in.])
MJC3	±0.7 [0.028]
MJC10	±1 [0.039]
MJC20	±1.6 [0.063]
MJC60	±1.6 [0.063]
MJC100	±2 [0.079]
MJC150	±2 [0.079]

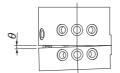


Diagram 3) Incline tolerance

Model	Incline tolerance $ heta$ (deg)
MJC3	1.5
MJC10	1.5
MJC20	1.5
MJC60	0.3
MJC100	0.2
MJC150	0.2


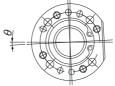


Diagram 4) Rotational tolerance

Model	Rotational tolerance θ (deg)
MJC3	±3.0
MJC10	±2.0
MJC20	±3.0
MJC60	±2.0
MJC100	±2.0
MJC150	±1.5

Model selection method

When selecting a product, select a product so the inertial moment and allowable moment are not exceeded when the robot, including the payload, is operating automatically at maximum speed.

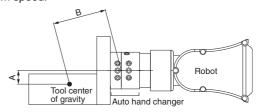

Example calculation

<Operating conditions>

A = 0.1 m [0.328 ft]

B = 0.3 m [0.984 ft]

W = 3 kg [6.615 lb] (tool side weight)

Change in acceleration $\alpha = 19.6 \text{ m/s}^2$ (for 2 G)

- Tool side weight (including payload)
 3 kg [6.615 lb]
- Bending moment
 - 3 kg [6.615 lb] \times 19.6 m/s² [2 G] \times 0.3 m [0.984 ft]=17.64 N·m [13.011 ft·lbf]
- Torsional moment
 - 3 kg [6.615 lb] \times 19.6 m/s² [2 G] \times 0.1 m [0.328 ft]=5.88 N·m [4.337 ft·lbf]
- → The allowable bending moment for MJC3 is 5 N·m [3.688 ft·lbf] and for the MJC10 it is 30 N·m [22.128 ft·lbf], so select the MJC10.

Maintenance (main unit)

- Periodically clean the mating surfaces of the master side and tool side. Any dirt on them could cause air leakage or affect product life.
- 2 Apply grease all over the steel balls on the master side and the steel ball races on the tool plate (the housing for the MJC3, 10, and 20) every 100,000 operations. Applying grease to the steel balls on the master side is easier if you apply air pressure to the release port while doing the work. Grease can be ordered as additional parts.

Electrical interface (contact terminals)

Solder-type terminals

Connect the various probes and contact pins with solder. Recommended wire diameters: AWG24 or smaller wire diameters

Solder terminals with cables

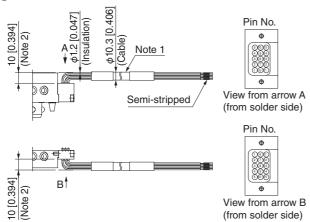


Chart of supported cables

Pin No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Insulation color	Light blue Pink		Lig gre	ght en			Gray		Light blue		Pink		Light green		
Dot mark type		1 line of short dots 2 lines of short dots													
Dot color	Black	Red	Black	Red	Black	Red	Black	Red	Black	Red	Black	Red	Black	Red	Black

Note 1: The following cables are used.

Hanshin Electric Wire & Cable: MRC UL20276-SB 8P × 24AWG (Twisted pair, core wire count: 8P, shielded cable)


- 2: When placing an adapter, or other component, on the soldered side of a soldered terminal, consider the allowable bending radius of the wire, and allow a margin of 10 mm [0.394 in.] or more above the soldered terminal.
- 3: The * mark in the chart of supported cables indicates twisted pair cables.
- 4: The cable's fixed bending radius is 42 mm [1.654 in.] or higher, and the cable's movable bending radius is 62 mm [2.441 in.] or higher.

D-sub connector

Use D-sub connectors that are equivalent to the following for connections.

Manufactured by Fujikura: 17JE-23150

Manufactured by Hirose: RDAB-15P

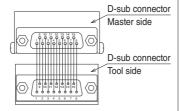


Note 1: The pin numbers for the 15 electric contact pins are connected so they are the same on the master side and the tool side.

Mini-connectors

We have cables for miniconnectors, but if you are making your cables, use connectors that are equivalent to the following for connections. Manufactured by J. S. T. MFG. Connector: GHR-09V-S Contact: SSHL-002T-P0.2


Hand-crimping tool: YRS-1590

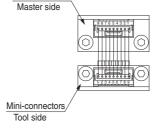

Mini-connectors

Note 1: The pin numbers for the 9 electric contact pins are connected so that the master side and the tool side are reversed.

Cable for mini-connectors

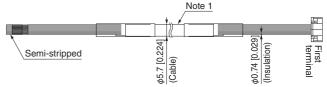

<Master side>

Model: MJCE-C ☐ M

Chart of supported cables

Pin No.	1	2	3	4	5	6	7	8	9
Insulation color	Blue	White	Yellow	Brown	Green	Black	Red	Gray	Purple

<Tool side>

Model: MJCE-CAT

Chart of supported cables


Pin No.	1	2	3	4	5	6	7	8	9
Insulation color	Purple	Gray	Red	Black	Green	Brown	Yellow	White	Blue

Note 1: The following cables are used.

Oki Electric Cable: ORP-SL0.1SQ × 5P(SB)(2464)

- 2: The * mark in the chart of supported cables indicates twisted pair cables.
- 3: The cable's fixed bending radius is 23 mm [0.906 in.] or higher, and the cable's movable bending radius is 46 mm [1.811 in.] or higher.

Round connectors

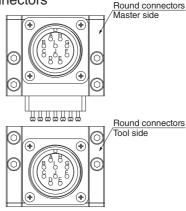

Use connectors that are equivalent to the following for connections.

Fujikura: D/MS3106A18-1P

Japan Aviation Electronics Industry: N/MS3106B18-1P


Note 1: The pin codes for the 10 electric contact pins are connected so they are the same on the master side and the tool side.

Maintenance (electrical interface)

- 1. Periodically clean the electric contacts. If they are dirty, transmission of electric signals becomes difficult.
- 2. If the probe terminal causes poor contact, replace the probe terminal. They are available as additional parts

The procedure for changing probe terminals is shown below.


- <Extraction method>
- Hook the tip of the probe, with your fingers or pliers, and then pull it out of the socket.

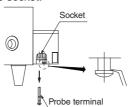

<Installation procedure>

- 1. Use your hands to temporarily insert the probe.
- 2. Use your hand or a plastic rod to press in the tip of the probe
- * For round connectors, use a plastic rod that is] less than ϕ 4.5 [0.177]. As you push them in, when you feel the probe terminal fit into the socket, go to step 3. If you apply excessive force continuously, the position of the socket will change and affect performance.
- 3. Without applying force on the probe terminal, be sure to confirm the tip of the probe is in the position shown below.

Electrical interface	Position of tip of probe terminal
Solder terminals (with cables)	Flush with end of probe holder
Mini-connectors	Flush with end of probe holder
D-sub connector	L=1.2 mm [0.047 in.]
Round connectors	L=5.5 mm [0.217 in.]

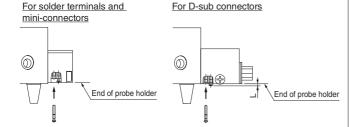


Ф End of probe holder

For round connectors

Electrical interface (non-contact terminals)

Non-contact terminals

<System configuration>

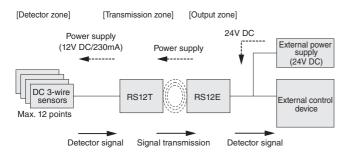

[Role of each component]

Detector:

Connect a commercially available detector switch to send "Detected signals" to the "Transmitter".

Supplies power to the "Detector" and does non-contact transmission of detected signals from the "Detector" to the "Output component".

Output component:

Outputs detected signals transmitted by the "Transmitter" and supplies the electric power needed to operate the "Detector" and "Transmitter".

■ Master side specifications

Model	MJCE-RM
Power supply voltage	24 VDC ±10% (including ripple)
Consumption current	≦ 600mA
Output signal points	12 points + 1 point (status)
Load current	≤ 50 mA/1 output
LED indicator	Status (green), output (orange)
Circuit protection	Short protection, reverse contact protection, surge protection
Operating ambient temperature	0 to 50°C [32 to 122°F]
Protective structure	IP67 (Note 1)
Connecting cable	PUR ϕ 8.6 × 2 m [6.560 ft] 2 × 0.5mm ² +13 × 0.18mm ²
Material	ABS

* Uses RS12E-422N-PU-02 manufactured by B & Plus.

■ Tool side specifications


Model	MJCE-RT
Supported sensors	DC 3-wire sensors
Drive voltage	12 V ± 1.5 VDC
Drive current	≦ 230 mA (note 2)
Input signal points	12 points
Transmission distance	5 mm [0.197 in.]
Allowable axial misalignment	±3 mm [0.118 in.]
Operating ambient temperature	0 to 50°C [32 to 122°F]
Protective structure	IP67 (Note 1)
Connecting cable	PUR φ 8.6 × 1 m [3.280 ft] 2 × 0.5mm ² +13 × 0.18mm ²
Material	ABS

- * Uses RS12T-422-PU-01 manufactured by B & Plus.
- Note 1: Compatible for non-contact terminals, not including auto hand changer itself.
 - 2: Use within a range that the total consumed current of the connected detection sensors and drive units does not exceed the drive current value

<Usable sensors>

Power supply voltage	12 VDC
Total consumed current	≦ 230mA
Residual voltage	≦ 3.5V
Load current	_


<Wiring diagram>

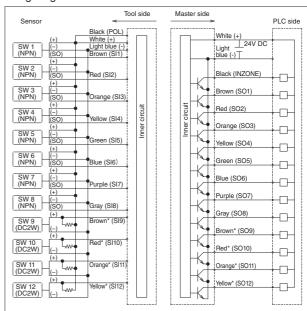

- SW9 to 12 in the above diagram are examples using DC 2-wire wiring (use wiring for resistance of about 1 to 2 K Ω). DC 3-wire sensors can also be used.
- Green*, blue*, and purple* cables are not used.

<Installation conditions>

• When installing the product, be sure to leave at least as much open space around it, as shown in the diagram, to avoid the effects of surrounding metal objects and interference with the product.

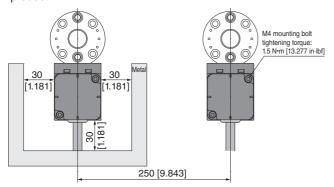

Note 1: The cables have a bending radius of 50 [1.969 in.] mm or more. Also, do not pull too strongly on the cables.


WARNING

• If the power is turned on while metal dust or chips are stuck to the transmission surface, the transmitter and the metal dust and chips stuck to it will heat up, which may lead to an unexpected accident. Be sure to remove any metal dust or chips stuck to the transmission surface before operating the system.

<Description of LED indicators>

■ Status LED (green)

State of LED	Flashing cycle	Pattern	Description
Lit O	_	_	Power is being supplied correctly.
Off	_	_	Power is not being supplied.
Flashing 🌣	Clow (1 F coo)	Long off	When temperature is abnormal.
Flashing 🌣	Slow (1.5 sec)	Long on	Over-current on oscillator circuit
Flashing 🌣	Medium speed	Long off	Voltage is high.
Flashing 🌣	(0.6 sec)	Long on	Voltage is low.
Flashing 🌣	High speed (0.2 sec)	Equal interval Flashing	Short protection has activated.

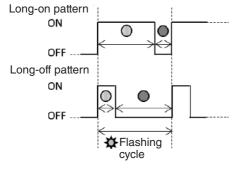

■ Signal LED (orange)

The in-zone LEDs are opposite each other on the master side and the tool side, when transmission is possible, they light. Also, they flash when signals are output from the various sensors.

The information on the page is excerpted from the remote system users guide from B & Plus. For details, refer to the "Remote System Users Guide" and "Safety Precautions" provided with the non-contact terminals from B and Plus, for their correct usage.

Tightening torque

Installing the main unit

Model	Screw size	Tightening torque (N·m [in·lbf])
MJC3M MJC3T MJC3TC	МЗ	0.63 [5.576]
MJC10M MJC10T MJC10TC	M5	3 [26.553]
MJC20M MJC20T MJC20TC	M5	3 [26.553]
MJC60M MJC60T	M8	22 [194.7]
MJC100M MJC100T	M8	22 [194.7]
MJC150M MJC150T	M10	44 [389.4]

Installing the electrical interface

			ectrical erface	C	Cover		Adapter	
Туре	Model	Screw size	Tightening torque (N·m [in·lbf])	Screw size	Tightening torque (N·m [in·lbf])	Screw size	Tightening torque (N·m [in·lbf])	
Solder terminals	MJCE-PM(-3,-60) MJCE-PT(-3,-60)	МЗ	0.32 [2.832]	M2	0.09 [0.797]	M3 Note 1 M4 Note 3	0.63 [5.576] Note 1 1.5 [13.277] Note 3	
Solder terminals with cables	MJCE-PAM(-3,-60) MJCE-PBM(-3,-60) MJCE-PAT(-3,-60)	МЗ	0.32 [2.832]	M2	0.09 [0.797]	M3 Note 1 M4 Note 3	0.63 [5.576] Note 1 1.5 [13.277] Note 3	
Mini- connectors	MJCE-CM(-3,-60) MJCE-CT(-3,-60)	МЗ	0.32 [2.832]	_	_	M3 Note 1 M4 Note 3	0.63 [5.576] Note 1 1.5 [13.277] Note 3	
D-sub connector	MJCE-DM(-10,-60) MJCE-DT(-10,-60)	МЗ	0.32 [2.832]	_	_	M3 Note 2 M4 Note 3	0.63 [5.576] Note 2 1.5 [13.277] Note 3	
Non- contact terminals	MJCE-RM(-10,-60) MJCE-RT(-10,-60)	M4	1.5 [13.277]	_	_	M3 Note 2 M4 Note 3	0.63 [5.576] Note 2 1.5 [13.277] Note 3	
Round connectors	MJCE-QM(-60) MJCE-QT(-60)	M4	0.75 [6.638]	_	-	M4 Note 3	1.5 [13.277] Note 3	

Note 1: When -3 is selected

2: When -10 is selected 3: When -60 is selected

Installing the fittings

Model	Screw size	Tightening torque (N·m [in·lbf])
MJC3M MJC3T MJC3TC	МЗ	0.7 [6.196]
MJC10M MJC10T MJC10TC	M5	1 to 1.5 [8.851 to 13.277]
MJC20M MJC20T MJC20TC	M5	1.0 to 1.5 [8.851 to 13.277]
MJC60M	M5	1.0 to 1.5 [8.851 to 13.277]
MJC60T	Rc1/8	4.5 to 6.5 [39.830 to 57.532]
MJC100M	Rc1/8	4.5 to 6.5 [39.830 to 57.532]
MJC100T	Rc1/4	7 to 9 [61.957 to 79.659]
MJC150M	Rc1/8	4.5 to 6.5 [39.830 to 57.532]
MJC150T	Rc1/4	7.0 to 9.0 [61.957 to 79.659]



General precautions

Piping

Before performing piping work on the product, thoroughly flush the inside of the pipes (blow out with compressed air). Machining chips, sealing tape, rust and other debris remaining from the piping work may cause malfunctions, such as air leaks.

Air supply

- 1. Use air as the medium. For the use of any other medium, consult your nearest Koganei sales office.
- 2. Air used for the product should be clean air that contains no degraded compressor oil, etc. Install an air filter (filtration of 40 µm or less) near the product to remove collected liquid and dust. Also drain the air filter periodically. If liquid or dust gets into the product, it may cause defective operation.

Lubrication

- The cylinder can be used without lubrication, however, if lubrication, such as a lubricator, is used, use turbine oil type 1 (ISO VG32) or an equivalent. Avoid using spindle oil or machine oil.
- Never apply lubrication to the sliding parts of the swing type. Doing so may cause defective operation.

Environment

- **1.** Cover the unit when using it in locations where it might be subject to excessive dust, dripping water, dripping oil, etc.
- 2. Do not use the product in environments which may be corrosive. Using the cylinder in these types of environments may result in damage or defective operation.
- 3. Do not use it in excessively dry conditions.
- **4.** Do not use it if the ambient temperature is over 60°C [140°F]. Doing so may result in damage or erratic operation. Also, consider anti-freezing measures if the temperature is less than 5°C [41°F], because moisture may freeze and result in damage or erratic operation.

Handling

- Confirm that there is no residual pressure in the product before starting maintenance work.
- 2. Displacement should not exceed the allowed range of movement in any direction. Doing so could damage or break the product, resulting in operation shutdown or degraded performance.
- 3. To lock or unlock the function for error correction (compliance), switch between applying and not applying air pressure. When inserting or pushing, do so in an unlocked state with no air pressure applied. When moving, do so in a locked state with air pressure applied. Moreover, install a shock absorber, etc., where the movement comes to a standstill to ensure as smooth a stop as possible. Sudden stops may cause the lock to disengage, and reduce the centripetal accuracy.
- **4.** Use within the range for the maximum load capacity. Using this unit while exceeding the maximum load capacity may cause wear or degradation to the sliding parts.
- 5. The value for the allowable load is a static load. Treat it as a temporary load in a stationary state. Ensure that there are sufficient allowances if the unit is subjected to impacts. When applying pressure, use a load that is 1/10 or less of the withstand load.

- **6.** The parallel type can also be used in a lower position. The mounted load should be less than the maximum load capacity.
- **7.** The plate may become misaligned from the center position when air pressure is applied and not applied.
- **8.** Avoid overhanging operation conditions by keeping the installed center of gravity positioned within the outer diameter of the plate. May cause wear or degradation to sliding parts.
- **9.** The retaining force and retaining moment of products (-N) that have no centripetal force are the same values (reference values) as in the graph for each product.

Mounting

- 1. Use this unit so it is in a horizontal position when no air pressure is applied (unlocked). The mounting surface should be flat. If the cylinder twists or bends when mounted, not only will it be inaccurate, but there may be air leaks and defective operation.
- 2. Note that if the product's mounting surface is scratched or dented it can adversely affect flatness.
- 3. Be sure that the unit and the mounting bolts are strong enough.
- 4. In cases where loosening of bolts due to impact and/or vibration may be a factor, consider looseness prevention measures. Be careful of overspreading of adhesive. If the adhesive gets into the product, it may cause defective operation.
- **5.** Be careful that error correction (compliance) is not obstructed by piping and wiring when mounting hands, etc., to the mounting surface.


Repeatability

With no load and no air pressure applied, move the plate in a random direction, and then apply air pressure and measure the position that the plate stops. Do this measurement 10 times to find the largest difference. The repeatability accuracy is \pm 1/2 of the largest difference you found.

Angle repeatability

Bidirectional repeatability


With no load and no air pressure applied, rotate the plate left or right, and then apply air pressure and measure the angle that the plate stops. Do this measurement 10 times to find the largest difference. The angle repeatability accuracy is \pm 1/2 of the largest difference you found.

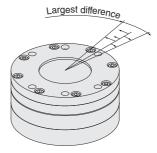


Bidirectional repeatability

Tightening torque

Mounting a workpiece

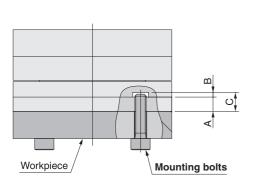

Installing the main unit

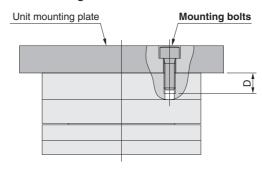

Туре	Model	Bolt	Maximum tightening torque (N•m [in-lbf])	A (mm [in.])	B (mm [in.])	C (mm [in.])	D (mm [in.])
	CPLHB34F	M3 × 0.5	0.63 [5.576]	4.3 [0.169]	1 [0.039]	5.3 [0.209]	6 [0.236]
Parallel type	CPLHB54F	M5 × 0.8	3 [26.553]	5.2 [0.205]	1.5 [0.059]	6.7 [0.264]	10 [0.394]
	CPLHB70F	M5 × 0.8	3 [26.553]	6.3 [0.248]	1.5 [0.059]	7.8 [0.307]	11 [0.433]
	CPLHB34S	M3 × 0.5	0.63 [5.576]	4.8 [0.189]	1 [0.039]	5.8 [0.228]	6 [0.236]
Swing type	CPLHB54S	M5 × 0.8	3 [26.553]	6.7 [0.264]	1.5 [0.059]	8.2 [0.323]	10 [0.394]
	CPLHB70S	M5 × 0.8	3 [26.553]	7.8 [0.307]	1.5 [0.059]	9.3 [0.366]	11 [0.433]

Auto hand changer

MJC series





Specifications

Main unit specifications

Ba	isic type ^{Note 1}	Master side	MJC	3M	MJC	10M	MJC20M		
Item		Tool side	MJC3T	MJC3TC	MJC10T	MJC10TC	MJC20T	MJC20TC	
Maximum payload kg [lb]		kg [lb]	3 [6.6	615]	10 [22	.050]	20 [44	4.100]	
Mated axial force ^{Note}	2	N [lbf]	500 [1	12.4]	1300 [2	292.2]	3200 [719.4]	
	Master side	g [oz]	45 [1	59]	160 [5.64]	305 [10.76]	
Mass	Tool side	g [oz]	20 [0	.71]	75 [2	.65]	165 [5.82]	
	Both sides	g [oz]	65 [2	.29]	235 [3.29]	470 [16.58]	
Port size			M	3	М	5	N	15	
Bending moment ^{Note}	2	N•m [in·lbf]	5 [44.	255]	30 [2	65.5]	75 [6	63.8]	
Torsional moment		N•m [in·lbf]	15 [13	2.8]	45 [3	98.3]	100 [8	385.1]	
Operating pressure	range	MPa [psi]	0.35 to 0.7 [51 to 102]						
Operating type			Double acting type (with anti-drop)						
Medium			Air						
Proof pressure		MPa [psi]	1.05 [152]						
Operating temperate	ure range	°C [°F]	0 to 60 [32 to 140] ^{Note 3}						
Lubrication	Cylinder p	parts	Not required						
Lubrication	Steel balls a	and sliding parts	Required (additional parts GR-HA-030) ^{Note 4}						
Repeatability		mm [in.]	±0.01 [0.0003]						
	Operating pressur	re range MPa [psi]			-0.1 to 0.7 [-15 to 102]			
Pneumatic interface	Number/size	Э	4•M3	3•M3	6•M5	5•M5	10•M5	9•M5	
	Orifice diame	eter			φ1.5				
	Solder term	inals	С))	()	
	Solder termina	als with cables	С))	()	
Electrical interface	Mini-connec	otors	С)		0			
	D-sub conne	ector	-)	0		
	Non-contact	t terminals	-)	0		

	Basic type	Master side	MJC60M	MJC100M	MJC150M		
Item		Tool side	MJC60T	MJC100T	MJC150T		
Maximum payload		kg [lb]	60 [132.3]	100 [220.5]	150 [330.8]		
Mated axial force ^{Note}	2	N [lbf]	6300 [1416]	10200 [2293]	15700 [3529]		
	Master side	g [oz]	1000 [35.27]	1800 [63.49]	2700 [95.24]		
Mass	Tool side	g [oz]	600 [21.16]	1100 [38.80]	1500 [52.91]		
	Both sides	g [oz]	1600 [56.44]	2900 [102.29]	4200 [148.15]		
Port size			M5	Rc1/8	Rc1/8		
Bending moment ^{Note}	2	N•m [in·lbf]	200 [1770]	390 [3452]	730 [6461]		
Torsional moment		N•m [in·lbf]	180 [1593]	310 [2744]	710 [6284]		
Operating pressure	range	MPa [psi]		0.35 to 0.7 [51 to 102]			
Operating type			Double acting type (with anti-drop)				
Medium			Air				
Proof pressure		MPa [psi]	1.05 [152]				
Operating temperat	ure range	°C [°F]	0 to 60 [32 to 140] ^{Note 3}				
Lubrication	Cylinder p	oarts	Not required				
Lubrication	Steel balls and sliding parts		Required (additional parts GR-HA-030) ^{Note 4}				
Repeatability		mm [in.]	±0.003 [0.0001]				
	Operating pressur	re range MPa [psi]		-0.1 to 0.7 [-15 to 102]			
Pneumatic interface	Number/size	е	4•Rc1/8, 9•M5	4•Rc1/4, 6•Rc1/8	4•Rc1/4, 8•Rc1/8		
	Orifice diame	eter	Rc1/8:φ6, M5:φ1.5	Rc1/4:φ9, Rc1/8:φ6	Rc1/4:φ9, Rc1/8:φ6		
	Solder term	inals	\circ	0	0		
	Solder termina	als with cables	0	0	0		
Electrical interface	Mini-connec	ctors	0	0	0		
Lieumai intende	D-sub conn	ector	0	0	0		
	Non-contact	t terminals	0	0	0		
	Round conn	nectors	0	0	0		

Note 1: For chart comparing previous models, see page 🗐.
2: For applied pressure of 0.5 MPa [73 psi] — Selectable, -: Not selectable
3: When using non-contact terminals, 0 to 50°C [32 to 122°F]
4: As a guideline, apply grease to steel balls and sliding parts every 100,000 operations. See page ® for details.

Electrical interface specifications

		Basic type	Master side	MJCE-PM	MJCE-PAM	MJCE-PBM	MJCE-CM
Item			Tool side	MJCE-PT	MJCE-PAT	_	MJCE-CT
Wiring type		Solder terminals	Solder terminals with 1-m [3.280 ft] cables	Solder terminals with 3-m [9.840 ft] cables	Mini-connectors		
Numb	er of con	nectors	рс	15	15	15	9
Rated	current		Α	3	2.3	2.3	1
		Terminal	g [oz]	11 [0.39]	11 [0.39]	11 [0.39]	9 [0.32]
	Master	(Adapter addition	onal mass) g [oz]	When -3 is selected: +6 [0.21]	When -3 is selected: +6 [0.21]	When -3 is selected: +6 [0.21]	When -3 is selected: +6 [0.21]
	side	(Adapter addition	onal mass) g [oz]	When -60 is selected: +20 [0.71]	When -60 is selected: +20 [0.71]	When -60 is selected: +20 [0.71]	When -60 is selected: +20 [0.71]
Mass		Cable		_	+150	+450	_
IVIASS		Terminal	g [oz]	7 [0.25]	7 [0.25]	_	8 [0.28]
	Tool	(Adapter addition	onal mass) g [oz]	When -3 is selected: +4 [0.14]	When -3 is selected: +4 [0.14]	_	When -3 is selected: +4 [0.14]
	side	(Adapter addition	onal mass) g [oz]	When -60 is selected: +20 [0.71]	When -60 is selected: +20 [0.71]	_	When -60 is selected: +20 [0.71]
		Cable		_	+150	_	_

		Basic type	Master side	MJCE-DM	MJCE-QM	MJCE-RM	MJCE-CAM	MJCE-CBM
Item			Tool side	MJCE-DT	MJCE-QT	MJCE-RT	MJCE-CAT	-
Wiring	j type			D-sub connector	Round connectors	Non-contact terminals	1-m [3.280 ft] cable for mini-connectors	3-m [9.840 ft] cable for mini-connectors
Numb	er of con	nectors	рс	15	10	12	9	9
Rated	current		Α	3	13 ^{Note 1}	Note 2	1	1
		Terminal	g [oz]	29 [1.02]	180 [6.35]	80 [2.82]	5 [0.18]	5 [0.18]
	Master	(Adapter additi	onal mass) g [oz]	When -10 is selected: +20 [0.71]	When -60 is selected: +40 [1.41]	When - is selected: +60 [2.12]	_	_
	side	(Adapter additi	onal mass) g [oz]	When -60 is selected: +20 [0.71]	_	When -60 is selected: +60 [2.12]	_	_
Mass		Cable		_	_	+210	+50	+150
IVIASS		Terminal	g [oz]	22 [0.78]	180 [6.35]	80 [2.82]	5 [0.18]	_
	Tool	(Adapter additi	onal mass) g [oz]	When -10 is selected: +13 [0.46]	When -60 is selected: +40 [1.41]	When -10 is selected: +60 [2.12]	_	_
	side	(Adapter additi	onal mass) g [oz]	When -60 is selected: +20 [0.71]	_	When -60 is selected: +60 [2.12]	_	_
		Cable		_	_	+105	+50	_

Note 1: If applying a current of 3 A or higher, limit it to 5 minutes. Also, keep the total current load for all 10 electric contact pins to 57.2 A or less. 2: To confirm the specifications for current values, see the non-contact terminals specifications below.

Non-contact terminals specifications (excerpt)

■ Master side specifications

Model	MJCE-RM
Power supply voltage	24 VDC ±10% (including ripple)
Consumption current	≦ 600mA
Output signal points	12 points + 1 point (status)
Load current	≤ 50 mA/1 output
LED indicator	Status (green), output (orange)
Circuit protection	Short protection, reverse contact protection, surge protection
Operating ambient temperature	0 to 50°C [32 to 122°F]
Protective structure	IP67 (Note 1)
Connecting cable	PUR ϕ 8.6 × 2 m [6.560 ft] 2 × 0.5mm ² +13 × 0.18mm ²
Material	ABS

^{*} Manufactured by B and Plus Uses RS12E-422N-PU-02.

■ Tool side specifications

Model	MJCE-RT
Supported sensors	DC 3-wire sensors
Drive voltage	12 V ± 1.5 VDC
Drive current	≦ 230 mA (note 2)
Input signal points	12 points
Transmission distance	5 mm [0.197 in.]
Allowable axial misalignment	±3 mm [0.118 in.]
Operating ambient temperature	0 to 50°C [32 to 122°F]
Protective structure	IP67 (Note 1)
Connecting cable	PUR ϕ 8.6 × 1 m [3.280 ft] 2 × 0.5mm ² +13 × 0.18mm ²
Material	ABS

Uses RS12T-422-PU-01.

Note 1: Compatible for non-contact terminals, not including auto hand changer itself.

Mass

Robot adapter [g [oz]] RA-MJC3-A RA-MJC3-B RA-MJC10-B RA-MJC10-C RA-MJC20-C RA-MJC20-D Basic type Mass 42 [1.48] 63 [2.22] 118 [4.16] 153 [5.40] 150 [5.29] 354 [12.49]

Adapter for air hand

[g [oz]]

<Usable sensors>

Total consumed

Load current

current Residual voltage

Power supply voltage 12 VDC

≦ 230mA

≦ 3.5V


Basic type	HA-MJC3-A	HA-MJC3-N	HA-MJC10-A	HA-MJC10-N	HA-MJC20-A	HA-MJC20-N
Mass	34 [1.20]	19 [0.67]	83 [2.93]	66 [2.33]	518 [18.27]	129 [4.55]


^{*} Manufactured by B and Plus

^{2:} Use within a range that the total consumed current of the connected detection sensors and drive units does not exceed the drive's current value.

^{*} See page 10 for details of the specifications.


Mated axial force

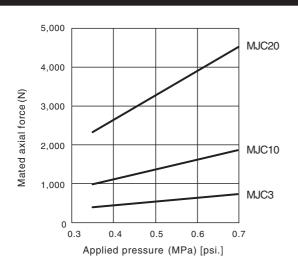


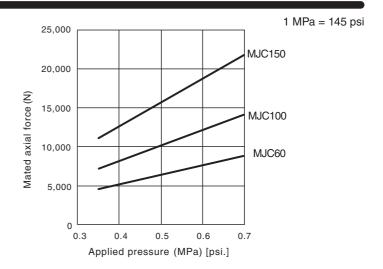



Bending moment


•Allowable bending moment in relation to applied pressure

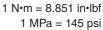


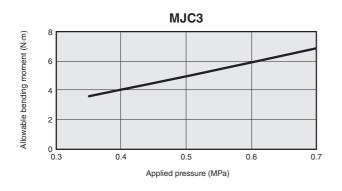


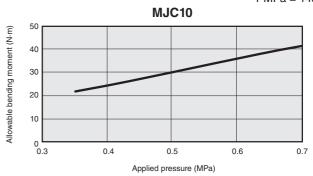

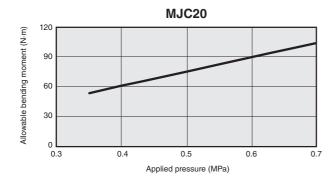


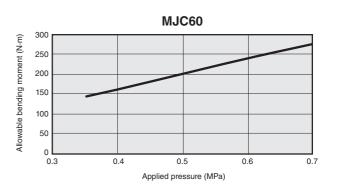

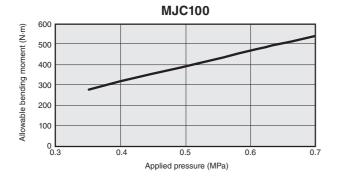


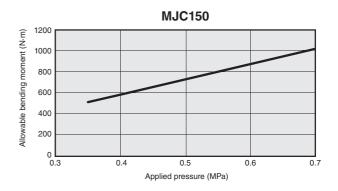



●Displacement in relation to bending moment when 0.5 MPa [73 psi] pressure

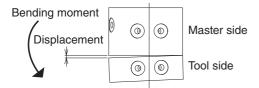



1 N•m = 8.851 in•lbf

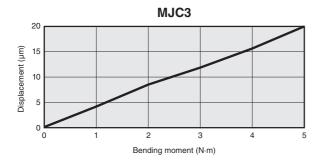


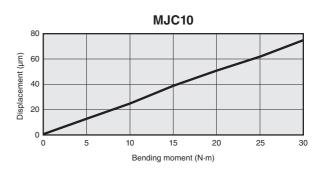

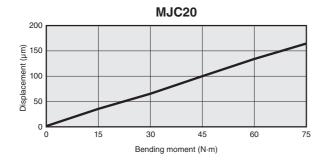

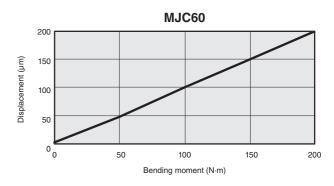


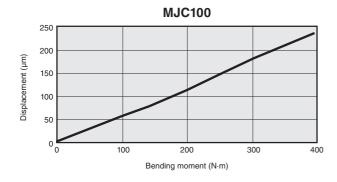

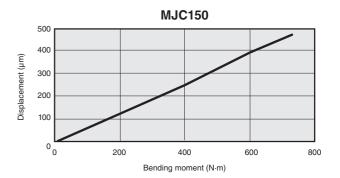

Inner construction

MJC3-10-20

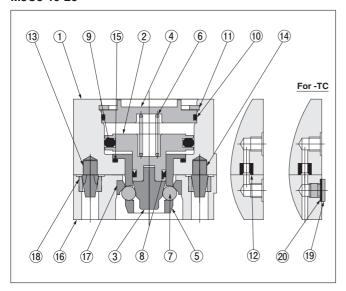


Major parts and materials

MJC3-10-20

No.	Model Name	МЈСЗМ	MJC10M	MJC20M
1	Master plate	Aluminum a	lloy (electroless n	ickel plated)
2	Piston	Alum	ninum alloy (anod	ized)
3	Center pin	Stainl	ess steel (heat-tre	eated)
4	Head cover	Alum	ninum alloy (anod	ized)
(5)	Hole guide	Stainl	ess steel (heat-tre	eated)
6	Spring	Piano wire		
7	Steel ball	Hard steel		
8	Rod packing	Synthetic rubber (NBR)		
9	Piston packing	Syr	nthetic rubber (NE	BR)
10	O-ring	Syr	nthetic rubber (NE	BR)
11)	Retaining ring	Steel (e	electroless nickel	plated)
12	Packing	Synthetic rubber (NBR)		
13	Diamond pin	Stainless steel (heat-treated)		
14)	Round pin	Stainless steel (heat-treated)		
(15)	O-ring	Syr	nthetic rubber (NE	BR)

No.	Model Name	MJC3T MJC3TC	MJC10T MJC10TC	MJC20T MJC20TC
16	Tool plate	Aluminum alloy (electroless nickel plated)		
17	Housing	Stainless steel (heat-treated)		
18	Bushing	Stainless steel		
19	Plug	Stainless steel		
20	Packing	Stainless steel + synthetic rubber (NBR)		

MJC60·100·150

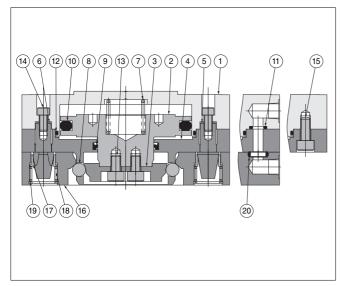


MJC60·100·150

NI.	Model	MJC60M	MJC100M	MJC150M	
No.	Name	MIJCOUM	MJC TOOM	MJC 150M	
1	Master plate	Aluminum a	lloy (electroless n	ickel plated)	
2	Piston	Alum	inum alloy (anod	ized)	
3	Center pin	Stainle	ess steel (heat-tre	eated)	
4	Hole guide	Stainle	ess steel (heat-tre	eated)	
(5)	Round pin	Stainl	Stainless steel (heat-treated)		
6	Diamond pin	Stainless steel (heat-treated)			
7	Spring	Piano wire			
8	Steel ball	Hard steel			
9	Rod packing	Synthetic rubber (NBR)			
10	Piston packing	Syr	nthetic rubber (NE	BR)	
11)	O-ring	Syr	nthetic rubber (NE	BR)	
12	O-ring	Synthetic rubber (NBR)		BR)	
13	Bolt	Stainless steel			
14)	Bolt	Stainless steel			
15)	Bolt		Stainless steel		

No.	Model Name	MJC60T	MJC100T	MJC150T
16	Tool plate	Stainless steel (heat-treated)		
17)	Bushing	Stainless steel		
18	Spring	Piano wire		
19	Retaining ring	Stainless steel		
<u>20</u>	Air nacking	Synthetic rubber (NBR)		

■Main unit model (MJC3·10·20)

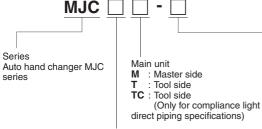

Size (payload) 3:3 kg [6.615 lb] 10:10 kg [22.050 lb] 20:20 kg [44.100 lb]

Electrical interface Blank: None

Solder terminals PΑ Solder terminals with 1-m [3.280 ft] cables (Note 1) PR


Solder terminals with 3-m [9.840 ft] cables (Note 1) (Note 2)

С : Mini-connectors D-sub connector (Note 3)

D : Non-contact terminals (Note 1) (Note 3)

Note 1: Terminals are shipped attached. 2: Cannot be selected for tool side. 3: Cannot be selected for MJC3.

■Main unit model (MJC60·100·150)

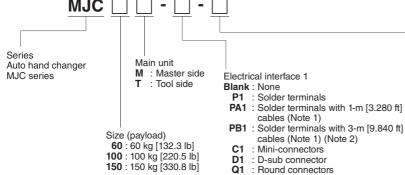

Electrical interface 1 Blank: None

P1 : Solder terminals PA1 : Solder terminals with 1-m [3.280 ft] cables (Note 1)

cables (Note 1) (Note 2) : Mini-connectors D1 D-sub connector

: Round connectors : Non-contact terminals (Note 1)

Electrical interface 2 Blank: None

P2 : Solder terminals

Solder terminals with 1-m [3.280 ft] cables PA2

(Note 1)

PB2 Solder terminals with 3-m [9.840 ft] cables

(Note 1) (Note 2) Mini-connectors D2 D-sub connector Round connectors Q2


: Non-contact terminals (Note 1)

Note 1: Terminals are shipped attached. 2: Cannot be selected for tool side.

Additional Parts

Electrical interface

Solder terminals

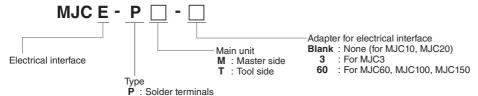




Set contents

Model	Part name	Material	Count
MJCE-PM MJCE-PT	Terminal(*)	_	1
	Hexagon socket head bolt M3 × 0.5, length under head 16 [0.630]	Stainless steel	2
	Terminal(*)	_	1
MJCE-PM-3 MJCE-PT-3	Hexagon socket head bolt M3 × 0.5, length under head 16 [0.630]	Stainless steel	2
	Adapter(*)	Aluminum alloy (electroless nickel plated)	1
	Hexagon socket head bolt M3 × 0.5, length under head 6 [0.236]	Stainless steel	2
	Terminal(*)	_	1
	Hexagon socket head bolt M3 × 0.5, length under head 16 [0.630]	Stainless steel	2
MJCE-PM-60 MJCE-PT-60	Adapter	Aluminum alloy (electroless nickel plated)	1
	Hexagon socket head bolt M4 × 0.7, length under head 10 [0.394]	Stainless steel	2
	Parallel pin JIS B 1354 B type 4 × 8	Stainless steel	2

Note: The * mark indicates parts with different shapes for the master side and the tool side.

· Solder terminals with cables

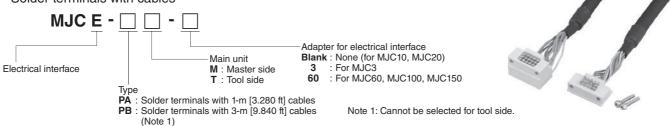


Set contents

Model	Part name	Material	Count
MJCE-PAM	Terminal(*)	_	1
MJCE-PBM MJCE-PAT	Hexagon socket head bolt M3 $ imes$ 0.5, length under head 16 [0.630]	Stainless steel	2
	Terminal(*)	_	1
MJCE-PAM-3 MJCE-PBM-3	Hexagon socket head bolt M3 × 0.5, length under head 16 [0.630]	Stainless steel	2
MJCE-PAT-3	Adapter(*)	Aluminum alloy (electroless nickel plated)	1
	Hexagon socket head bolt M3 \times 0.5, length under head 6 [0.236]	Stainless steel	2
	Terminal(*)	_	1
MJCE-PAM-60	Hexagon socket head bolt M3 \times 0.5, length under head 16 [0.630]	Stainless steel	2
MJCE-PBM-60	Adapter	Aluminum alloy (electroless nickel plated)	1
MJCE-PAT-60	Hexagon socket head bolt M4 \times 0.7, length under head 10 [0.394]	Stainless steel	2
	Parallel pin JIS B 1354 B type 4 × 8	Stainless steel	2

Note: The * mark indicates parts with different shapes for the master side and the tool side.

• Mini-connectors

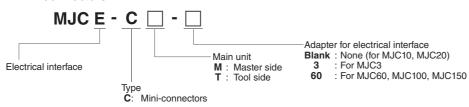




Set contents

Model	Part name	Material	Count
MJCE-CM MJCE-CT	Terminal(*)	_	1
	Hexagon socket head bolt M3 \times 0.5, length under head 16 [0.630]	Stainless steel	2
	Terminal(*)	_	1
MJCE-CM-3	Hexagon socket head bolt M3 \times 0.5, length under head 16 [0.630]	Stainless steel	2
MJCE-CT-3	Adapter(*)	Aluminum alloy (electroless nickel plated)	1
	Hexagon socket head bolt M3 × 0.5, length under head 6 [0.236]	Stainless steel	2
	Terminal(*)	_	1
	Hexagon socket head bolt M3 \times 0.5, length under head 16 [0.630]	Stainless steel	2
MJCE-CM-60 MJCE-CT-60	Adapter	Aluminum alloy (electroless nickel plated)	1
	Hexagon socket head bolt M4 \times 0.7, length under head 10 [0.394]	Stainless steel	2
	Parallel pin JIS B 1354 B type 4 × 8	Stainless steel	2

Note: The * mark indicates parts with different shapes for the master side and the tool side.

• Cable for mini-connectors

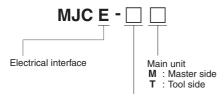


Type **CA**: 1-m [3.280 ft] cable for mini-connectors

CB: 3-m [9.840 ft] cable for mini-connectors (Note 1)



Note 1: Cannot be selected for tool side.

• D-sub connector

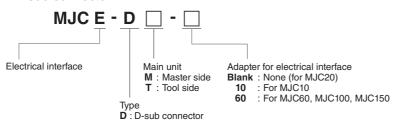




Set contents

Model	Part name	Material	Count
MJCE-DM	Terminal(*)	_	1
MJCE-DT	Specialized bolt (*)	Mild steel (nickel plated)	2
	Terminal(*)	_	1
MJCE-DM-10	Specialized bolt (*)	Mild steel (nickel plated)	2
MJCE-DT-10	Adapter(*)	Aluminum alloy (anodized)	1
	Hexagon socket head bolt M3 × 0.5, length under head 6 [0.236]	Stainless steel	2
	Terminal(*)	_	1
	Specialized bolt (*)	Mild steel (nickel plated)	2
MJCE-DM-60 MJCE-DT-60	Adapter	Aluminum alloy (anodized)	1
	Hexagon socket head bolt M4 \times 0.7, length under head 10 [0.394]	Stainless steel	2
	Parallel pin JIS B 1354 B type 4 × 8	Stainless steel	2

Note: The * mark indicates parts with different shapes for the master side and the tool side.

Round connectors

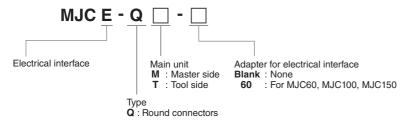




Set contents

Model	Part name	Material	Count
	Terminal(*)	_	1
MJCE-QM MJCE-QT	Hexagon socket head bolt M4 \times 0.7, length under head 60 [2.362]	Stainless steel	4
	Parallel pin JIS B 1354 B type 4 × 8	Stainless steel	2
	Terminal(*)	_	1
	Hexagon socket head bolt M4 × 0.7, length under head 60 [2.362]	Stainless steel	4
MJCE-QM-60 MJCE-QT-60	Parallel pin JIS B 1354 B type 4 × 8	Stainless steel	4
MOOL Q1 00	Adapter	Aluminum alloy (anodized)	1
	Hexagon socket head bolt M4 \times 0.7, length under head 10 [0.394]	Stainless steel	2

Note: The * mark indicates parts with different shapes for the master side and the tool side.

Air packing for pneumatic interface

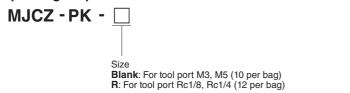




Probe terminal for electrical interface



Blank: For solder terminals, solder terminals with cables, mini-connectors, D-sub connectors (15 per bag) **Q**: For round connectors (10 per bag)



Non-contact terminals

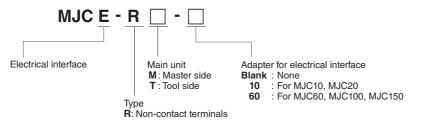




Set contents

Model	Part name	Material	Count
MJCE-RM MJCE-RT	Terminal(*)	ABS	1
	Hexagon socket head bolt M4 \times 0.7, length under head 12 [0.472]	Stainless steel	2
	Terminal(*)	ABS	1
	Hexagon socket head bolt M4 × 0.7, length under head 12 [0.472]	Stainless steel	2
MJCE-RM-10 MJCE-RT-10	Adapter	Aluminum alloy (anodized)	1
MIGGE III 10	Hexagon socket head bolt M3 × 0.5, length under head 10 [0.394]	Stainless steel	2
	Parallel pin JIS B 1354 B type 3 × 6	Stainless steel	2
	Terminal(*)	ABS	1
	Hexagon socket head bolt M4 × 0.7, length under head 12 [0.472]	Stainless steel	2
MJCE-RM-60 MJCE-RT-60	Adapter	Aluminum alloy (anodized)	1
WIGGE-111-00	Hexagon socket head bolt M4 × 0.7, length under head 10 [0.394]	Stainless steel	2
	Parallel pin JIS B 1354 B type 4 × 8	Stainless steel	2

Note: The * mark indicates parts with different shapes for the master side and the tool side.

Adapter

Robot adapter

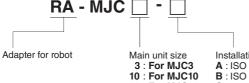

20 : For MJC20

Installation type


A: ISO (JIS) standard series 25

B: ISO (JIS) standard series 31.5 C: ISO (JIS) standard series 40
D: ISO (JIS) standard series 80

* The following table shows combinations of unit size and installation type

Size	-A	-B	-C	-D
3	0	0	_	_
10	_	0	0	_
20	_	ı	0	0

Adapter for air hand

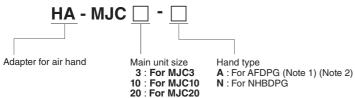

* The following table shows air hand and adapter compatibility

Size	-A	-N	
3	For AFDPG-8	For NHBDPG-8	
10	For AFDPG-14 (Note 1)	For NHBDPG-16	
20	For AFDPG-25 (Note 2)	For NHBDPG-25	
	· ·	·	


Note 1: HA-MJC10-A cannot be used with MJC10T-PA or MJC10T-R. 2: HA-MJC20-A cannot be used with MJC20T-R.

Grease


GR - HA - 030

* 30 g [1.06 oz] of NSF standard H1 certified grease Note: Apply this grease to steel balls and sliding parts every 100,000 operations. See page ® for application method.


MJC3M

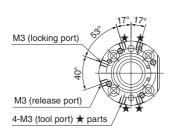


Piping dimensions diagram

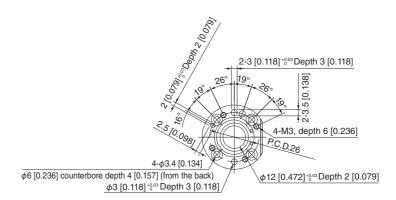


Mounting dimensions diagram

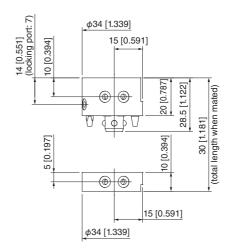

MJC3T

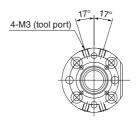


Piping dimensions diagram

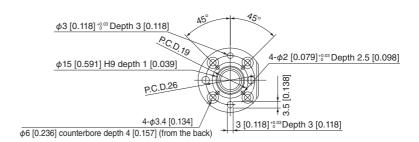

Mounting dimensions diagram

MJC3TC

* The following diagram shows the only difference to the MJC3T.

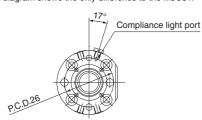



MJC3


For **-P**





For **-C**

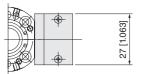


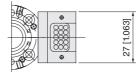


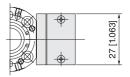


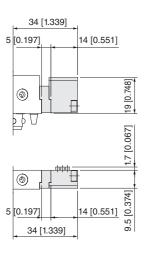


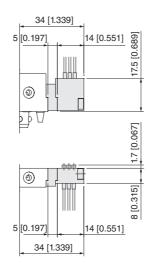

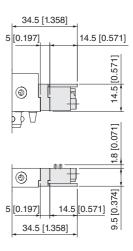


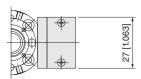

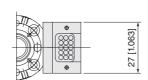


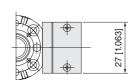


MJC10M

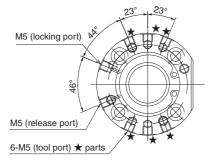


Piping dimensions diagram

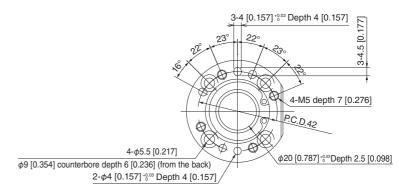


Mounting dimensions diagram

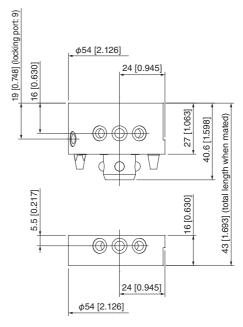

MJC10T

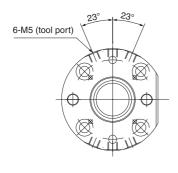


Piping dimensions diagram

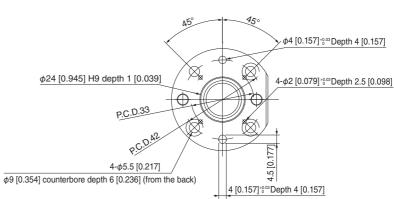

Mounting dimensions diagram

MJC10TC

* The following diagram shows the only difference to the MJC10T.

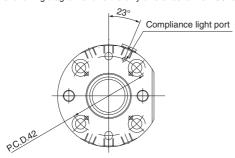


Piping dimensions diagram


MJC10


For **-P**


For **-PA**, **-PB**


For **-C**

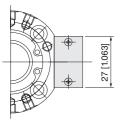


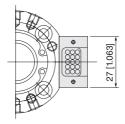


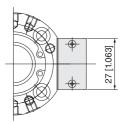


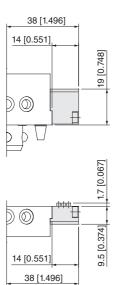


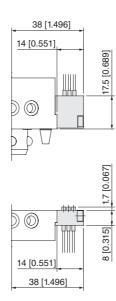

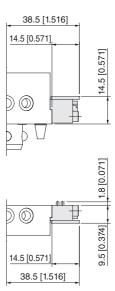

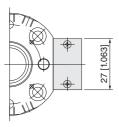

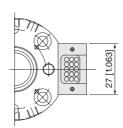


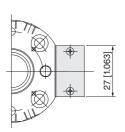


Dimensions (mm [in.]) MJC10 For -R For -D 15.5 [0.610] 4-M4 30° □35 Select from 3 directions to install 2-M2.6 depth 4 [0.157] how cables come out (Note 1) 4 42 [1.654] 33.3 [1.311] 45 [1.772] 46 [1.811] 2-R5 Φ √30° 6.5 [0.256] 80 [3.150] 56 [2.205] 60.5 [2.382] 5 [0.197] 4 [0.157] 7 [0.276] 29.5 [1.161] 2-M5, depth 5 [0.197] (Both sides) 15 [0.591] 11 [0.433] 31 [1.220] 24 [0.945] 19.5 [0.768] 20 [0.787] 0 30 [1.181] 10 [0.394] 15 [0.591] .551 7 [0.276] 21 [0.827] 52 [2.047] 2-M5 depth 5 [0.197] 5 [0.197] (Both sides) 56 [2.205] 80 [3.150] 15.5 [0.610] Select from 3 directions to install how cables come out (Note 1) 2-M2.6 depth 4 [0.157] Φ' Φ 42 [1.654] 33.3 [1.311] 40 [1.575] 46 [1.811] 2-R5 Ф Ф 4300 6.5 [0.256] Note 1: Transmission is possible even when the cables come out

in different directions on the master side and tool side. 2: The * marks are parts (2-M5) for cable clips. Please


purchase cable clips separately.

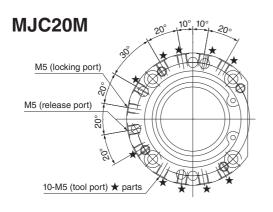


Piping dimensions diagram

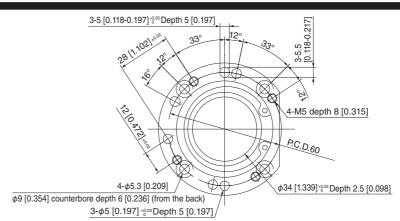

Mounting dimensions diagram

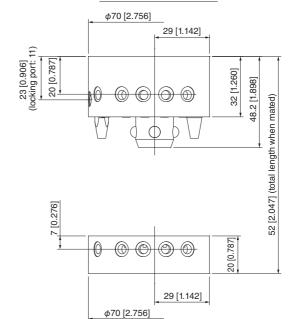


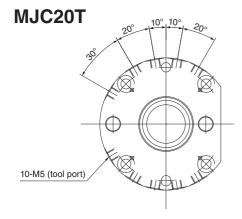

Piping dimensions diagram


45° φ5 [0.197] ^{+0.03} Depth 5 [0.197] ϕ 29 [1.142] H9 depth 3 [0.118] P.C.D.51 4-φ2 [0.079]^{+0.03}Depth 2.5 [0.098] P.C.D.60 4-φ5.3 [0.209] [0.217] ϕ 9 [0.354] counterbore depth 6 [0.236] (from the back) 5 [0.197]+0.03 Mounting dimensions diagram

MJC20TC

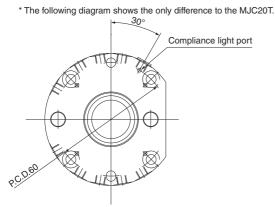


MJC20


For **-P**

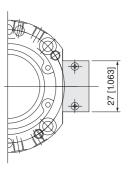



For -PA, -PB

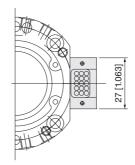



For **-C**

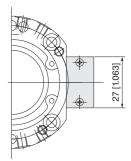


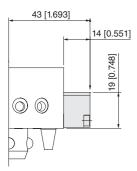


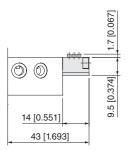


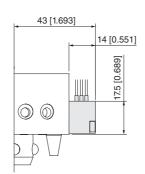


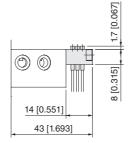


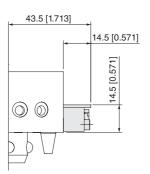

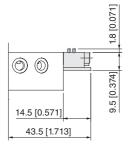

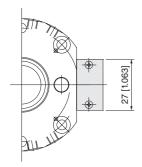


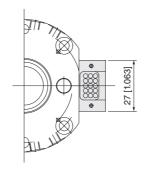


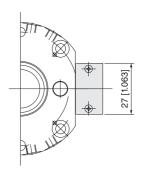



MJC20


For **-D**

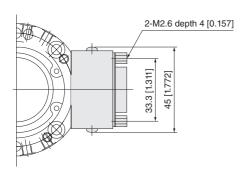


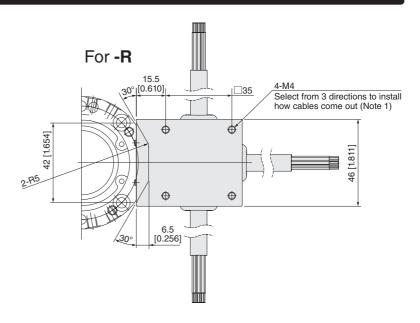


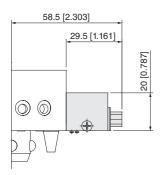


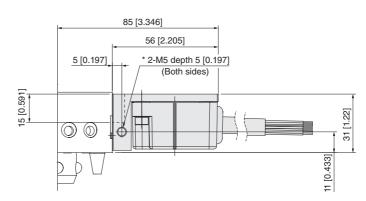

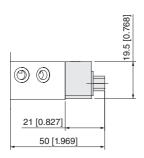

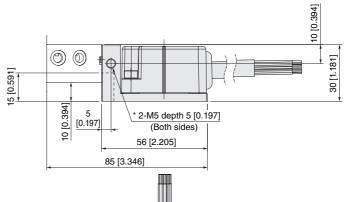

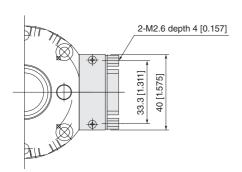


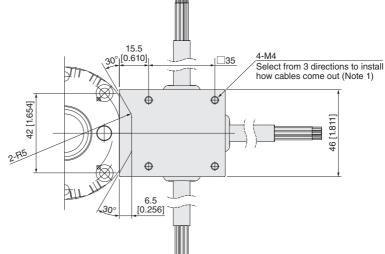



Note 1: Transmission is possible even when the cables come out

in different directions on the master side and tool side. 2: The * marks are parts (2-M5) for cable clips. Please purchase cable clips separately.


MJC60M

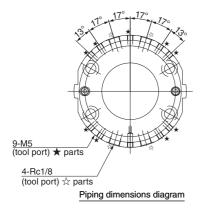

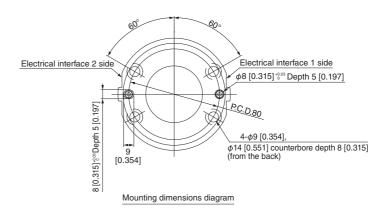


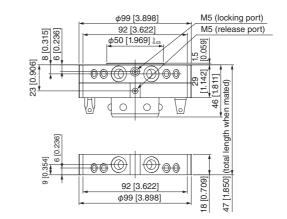

MJC60T

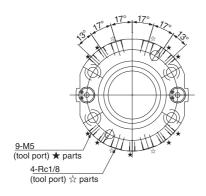

Piping dimensions diagram

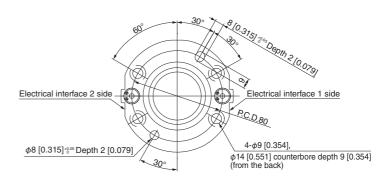


Mounting dimensions diagram

MJC60

For **-PA1**, **-PB1** For **-P1** For -C1 40 [1.575] 40 [1.575] 70 [2.756] 70 [2.756] 70.5 [2.776] 10 [0.394] 14 [0.551] 10 [0.394] 14 [0.551] 10 [0.394] 14.5 [0.571] 5 [0.197] * 2-M5 depth 5 [0.197] 5 [0.197] 5 [0.197] * 2-M5 depth 5 [0.197] * 2-M5 depth 5 [0.197] (Both sides) (Both sides) (Both sides) 15 [0.591] 15 [0.591] 15 [0.591] 18.5 [0.728] \bigcirc (0)0 14 [0.551] 1.8 [0.071] 1.7 [0.067] 1.7 [0.067] 5 [0.197] 5 [689] 5 [0.197] 5 [0.197] 5 [0.197] 2.2 * 2-M5 depth 5 [0.197] * 2-M5 depth 5 [0.197] * 2-M5 depth 5 [0.197] (Both sides) 10 [0.394] (Both sides) 10 [0.394] (Both sides) 10 [0.394] 14 [0.551] 14 [0.551] 14.5 [0.571] 70 [2.756] 70 [2.756] 70.5 [2.776]

Note 1: For dimensions of the electrical interface 2 side (- \square 2), refer to the electrical interface 1 side (- \square 1). 2: The * marks are parts (2-M5) for cable clips. Please purchase cable clips separately.

MJC60□

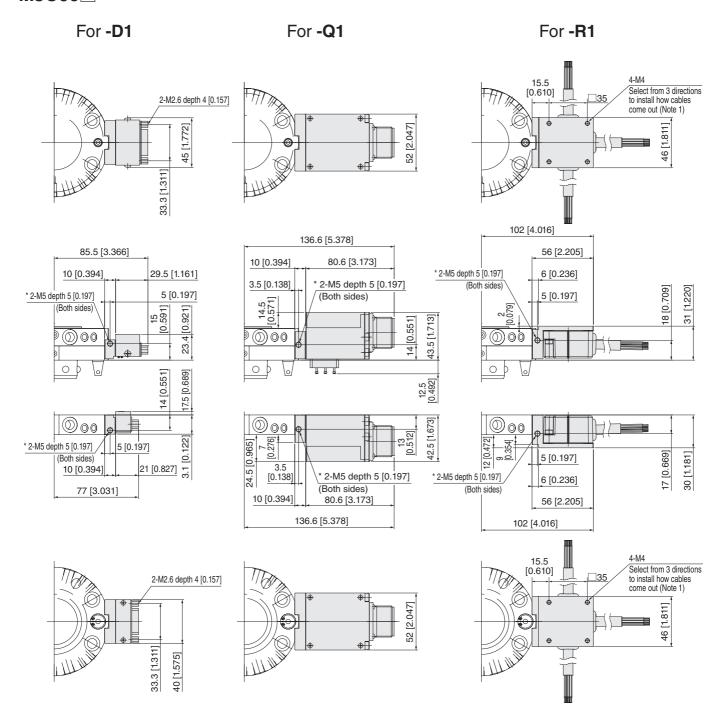


Note 1: Transmission is possible even when the cables come out in different directions on the master side and tool side.


2: The * marks are parts (2-M5) for cable clips. Please purchase cable clips separately.


3: For dimensions of the electrical interface 2 side (- \square 2), refer to the electrical interface 1 side (- \square 1).


MJC100M

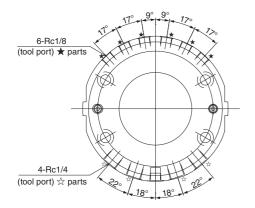

Piping dimensions diagram

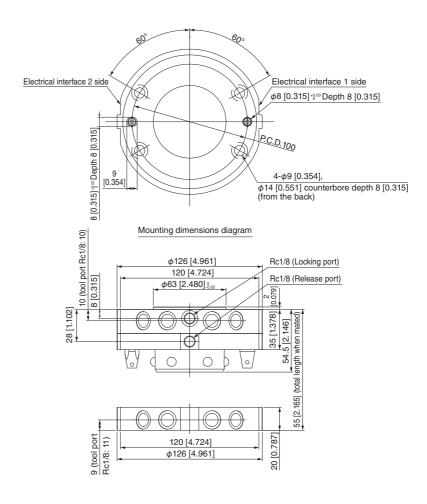

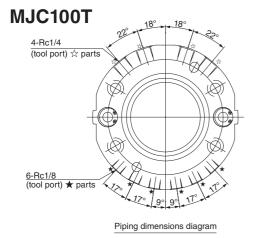


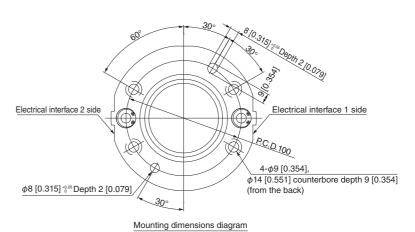


MJC100


For -P1


40 [1.575]

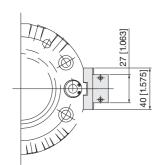


For **-PA1**, **-PB1**

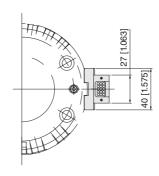


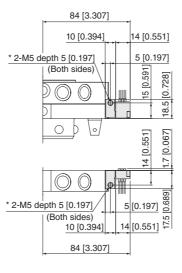


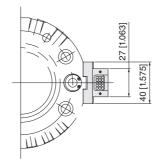

For -C1

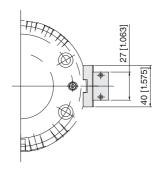


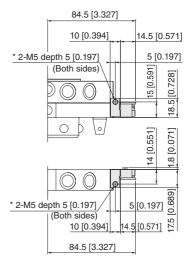

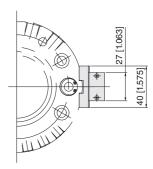

Note 1: For dimensions of the electrical interface 2 side (- \square 2), refer to the electrical interface 1 side (- \square 1). 2: The * marks are parts (2-M5) for cable clips. Please purchase cable clips separately.


MJC100

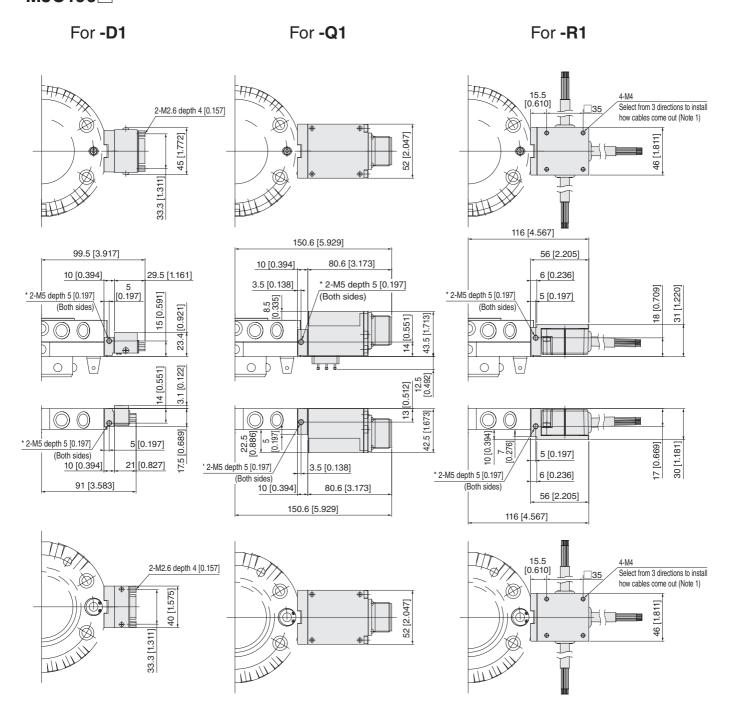



Note 1: Transmission is possible even when the cables come out in different directions on the master side and tool side.

2: The * marks are parts (2-M5) for cable clips. Please purchase cable clips separately. 3: For dimensions of the electrical interface 2 side (- \square 2), refer to the electrical interface 1 side (- \square 1).


MJC150M

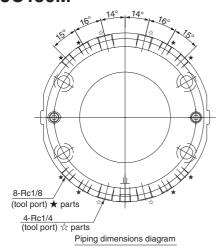

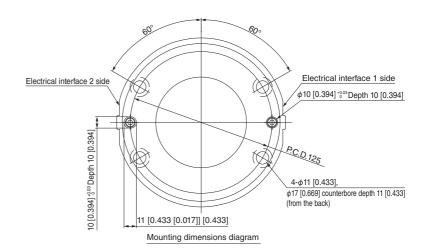


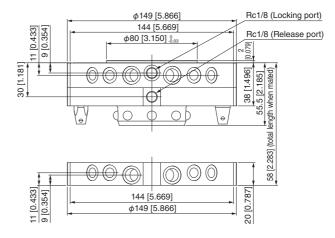

MJC150T

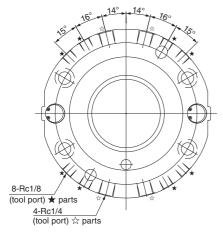

Piping dimensions diagram

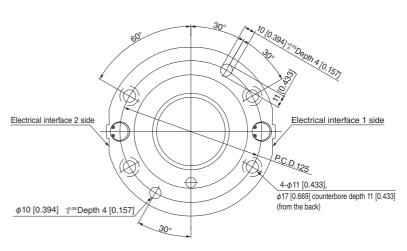

Mounting dimensions diagram

MJC150□

For -P1

27 [1.063]

96 [3.780]

10 [0.394]

14 [0.551]

* 2-M5 depth 5 [0.197]

(Both sides)

15 [0.197]

(Both sides)

16 [29]

17 [29]

18 [29]

18 [29]

19 [29]

10 [0.394]

11 [0.551]

12 [29]

13 [29]

14 [0.551]

14 [0.551]

15 [0.197]


16 [0.394]

16 [0.394]


17 [0.394]


18 [0.551]


19 [0.394]

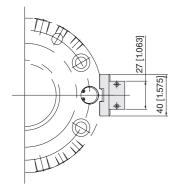


For **-PA1**, **-PB1**

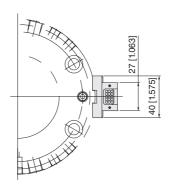


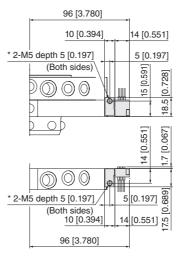


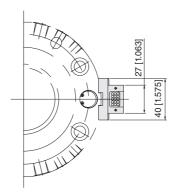

For -C1

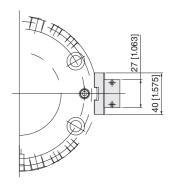


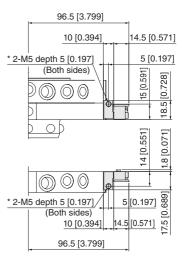

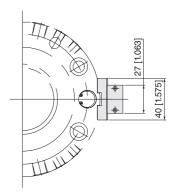

Note 1: For dimensions of the electrical interface 2 side (- \square 2), refer to the electrical interface 1 side (- \square 1). 2: The * marks are parts (2-M5) for cable clips. Please purchase cable clips separately.

MJC150 □

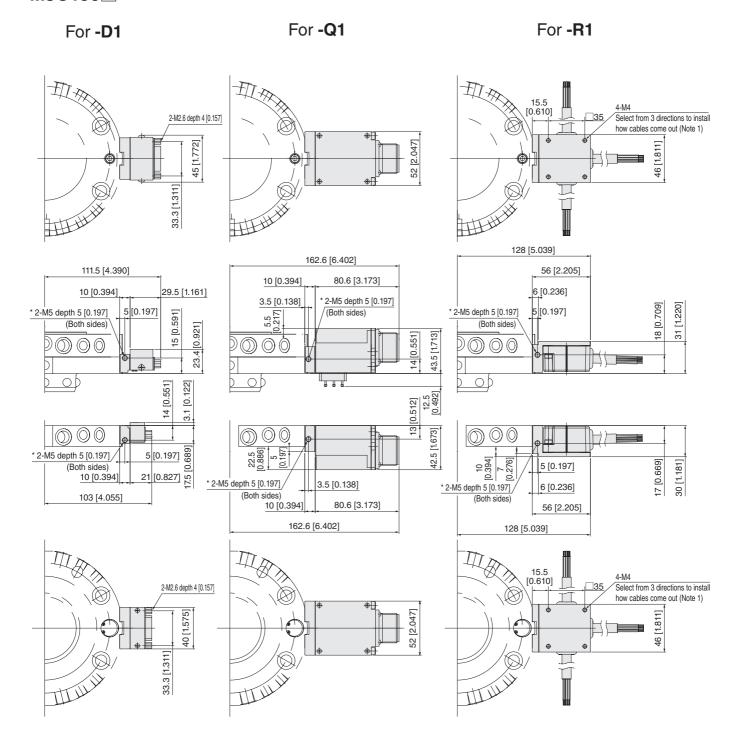

Note 1: Transmission is possible even when the cables come out in different directions on the master side and tool side.


2: The * marks are parts (2-M5) for cable clips. Please purchase cable clips separately.

3: For dimensions of the electrical interface 2 side (- 🗌 2), refer to the electrical interface 1 side (- 🔲 1).

Robot adapter

For MJC3M

External dimensions of assembled auto hand changer and robot adapter MJC3M + RA-MJC3-B MJC3M + RA-MJC3-A

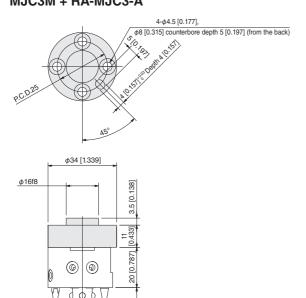


Attached parts Parallel pin: B type 2×5 1 pc Parallel pin: B type 4×8 1 pc

Hexagon socket head bolt: M3×0.5, length under head 20 [0.787] 4 pc Hexagon socket head bolt: M4×0.7, length under head 12 [0.472] 4 pc

Note: Materials are as follows.

Robot adapter: Aluminum alloy (anodized) Attached parts mentioned above: Stainless steel

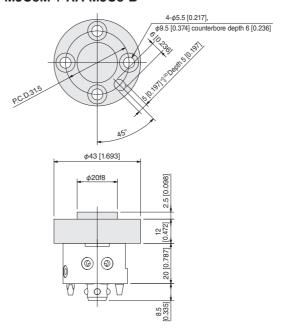


Attached parts Parallel pin: B type 2×5 1 pc

Parallel pin: B type 5×10 1 pc
Hexagon socket head bolt: M3×0.5, length under head 20 [0.787] 4 pc
Hexagon socket head bolt: M5×0.8, length under head 12 [0.472] 4 pc

For MJC10M

External dimensions of assembled auto hand changer and robot adapter MJC10M + RA-MJC10-B MJC10M + RA-MJC10-C

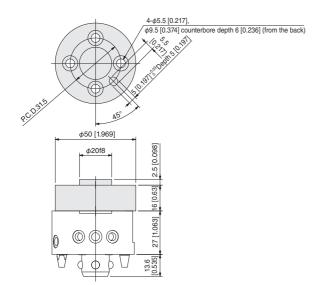


Attached parts

Parallel pin: B type 4×8 1 pc

Parallel pin: B type 5×10 1 pc
Hexagon socket head bolt: M5×0.8, length under head 16 [0.630] 4 pc
Hexagon socket head bolt: M5×0.8, length under head 30 [1.181] 4 pc

Note: Materials are as follows.

Robot adapter: Aluminum alloy (anodized) Attached parts mentioned above: Stainless steel

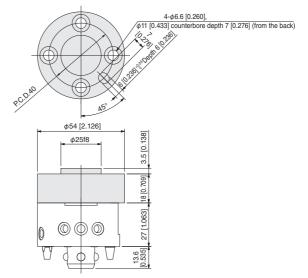

Attached parts

Parallel pin: B type 4×8 1 pc


Parallel pin: B type 6×12 1 pc
Hexagon socket head bolt: M5×0.8, length under head 30 [1.181] 4 pc
Hexagon socket head bolt: M6×1, length under head 20 [0.787] 4 pc


For MJC20M

External dimensions of assembled auto hand changer and robot adapter

MJC20M + RA-MJC20-C

MJC20M + RA-MJC20-D

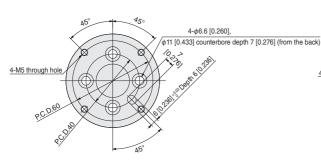

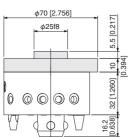


Attached parts

Parallel pin: B type 5×10 2 pc Parallel pin: B type 6×12 1 pc

Hexagon socket head bolt: M5×0.8, length under head 35 [1.378] 4 pc Hexagon socket head bolt: M6×1, length under head 12 [0.472] 4 pc

Note: Materials are as follows.

Robot adapter: Aluminum alloy (anodized) Attached parts mentioned above: Stainless steel

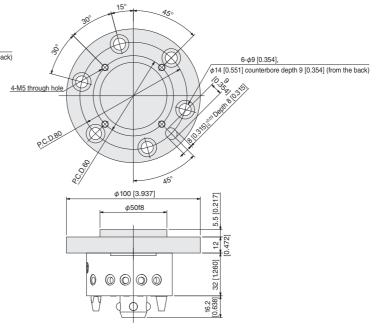

Attached parts

Parallel pin: B type 5×10 1 pc

Parallel pin: B type 8×16 1 pc


Hexagon socket head bolt: M5×0.8, length under head 35 [1.378] 4 pc Hexagon socket head bolt: M8×1.25, length under head 14 [0.551] 6 pc


Adapter for air hand

For MJC3T

External dimensions of assembled auto hand changer and adapter for air hand

MJC3T + HA-MJC3-A

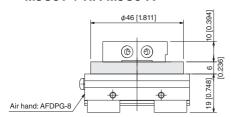

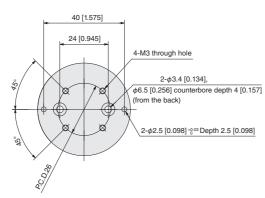

Attached parts

Parallel pin: B type 2.5×5 2 pc


Parallel pin: B type 3×6 1 pc


Hexagon socket head bolt: $M3\times0.5$, length under head 6 [0.236] 2 pc Hexagon socket head bolt: $M3\times0.5$, length under head 10 [0.394] 4 pc

Note: Materials are as follows.

Adapter for air hand: Aluminum alloy (anodized) Attached parts mentioned above: Stainless steel

MJC3T + HA-MJC3-N

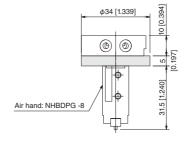

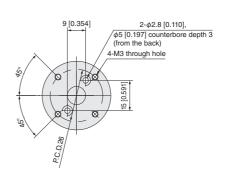

Attached parts

Parallel pin: B type 3×6 2 pc

Hexagon socket head bolt: M2.5 \times 0.45, length under head 5 [0.197] 2 pc Hexagon socket head bolt: M3 \times 0.5, length under head 10 [0.394] 4 pc


For MJC10T


External dimensions of assembled auto hand changer and adapter for air hand

MJC10T + HA-MJC10-A

φ62 [2.441] 0 Air hand: AFDPG-14

MJC10T + HA-MJC10-N

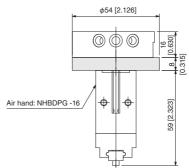

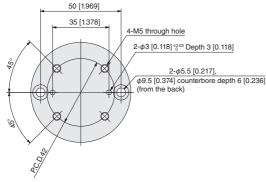

2-φ4.5 [0.177], 14 [0.551] ϕ 8 [0.315] counterbore depth 5 [0.197] (from the back) 4-M5 through hole Ø 26 [1.024] Ø(A) P.C.D.42

Attached parts Parallel pin: B type 3×6 2 pc Parallel pin: B type 4×8 1 pc

Hexagon socket head bolt: M5×0.8, length under head 8 [0.315] 2 pc Hexagon socket head bolt: M5×0.8, length under head 16 [0.630] 4 pc

Note: Materials are as follows.

Adapter for air hand: Aluminum alloy (anodized)
Attached parts mentioned above: Stainless steel

Attached parts

Parallel pin: B type 4×8 1 pc


Hexagon socket head bolt: M4×0.7, length under head 8 [0.315] 2 pc Hexagon socket head bolt: M5×0.8, length under head 16 [0.630] 4 pc

For MJC20T

External dimensions of assembled auto hand changer and adapter for air hand

MJC20T + HA-MJC20-A

MJC20T + HA-MJC20-N

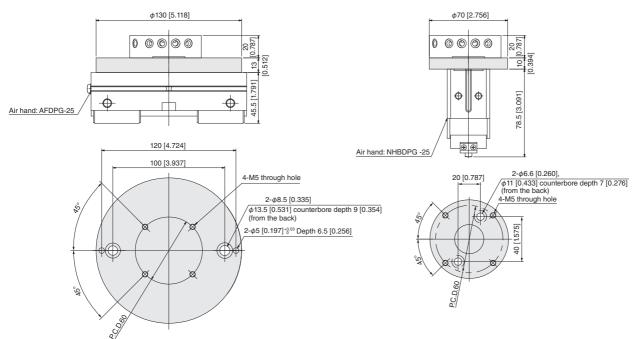

Attached parts

Parallel pin: B type 5×10 3 pc Hexagon socket head bolt: M5×0.8, length under head 20 [0.787] 4 pc Hexagon socket head bolt: M8×1.25, length under head 10 [0.394] 2 pc

Note: Materials are as follows.

Adapter for air hand: Aluminum alloy (anodized) Attached parts mentioned above: Stainless steel Attached parts

Parallel pin: B type 5×10 1 pc Hexagon socket head bolt: M5×0.8, length under head 20 [0.787] 4 pc Hexagon socket head bolt: M6×1, length under head 12 [0.472] 2 pc

Compliance light

Direct piping specifications Parallel type



Specifications


Item	Basic type	CPLHB34F	CPLHB34F-N	CPLHB54F	CPLHB54F-N	CPLHB70F	CPLHB70F-N		
Cylinder bore	mm [in.]	16 [0	.630]	25 [0).984]	40 [1.575]			
External dimensions	mm [in.]	φ34 [1.339]	φ54 [2.126]	φ70 [2.756]			
Height	mm [in.]	25 [0.984]		31 [1.220]		36 [1	.417]		
Weight	g [oz]	60 [2.12]			[6.35]	360 [12.70]		
Operating type				Single a	cting type				
Medium				P	Air				
Operating pressure	range MPa [psi]			0.2 to 0.7	[29 to 102]				
Proof pressure	MPa [psi]	1.05 [152]							
Operating temperatu	ure range °C [°F]			0 to 60 [3	32 to 140]				
Connection port size	e mm [in.]	φ1.5 [0.059]		φ2 [0	0.079]			
Lubrication	Cylinder parts			Not re	equired				
Lubrication	Sliding part	Not required							
Maximum payload	kg [lb]	1 [2	.205]	2 [4.410]		4 [8.820]			
Mayamant range	X-Y mm [in.]	±0.5 [0.020]	±1 [0.039]		±1.5 [0.059]			
Movement range	θ (twisting) $^{\circ}$	±	:3		±	4			
Centripetal force (when move	ement is 5 mm [0.197 in.])Note 1 N [lbf]	3 [0.674]	0	5 [1.124]	0	5 [1.124]	0		
Repeatability ^{Note 2} (in the direction of X and Y)	P=0.5 MPa [73 psi] mm [in.]			±0.05	[0.002]				
Angle repeatability ^{Note 3} (in the direction of θ)	P=0.5 MPa [73 psi] °	±0.1 (Bidirectional repeatability)		±0.05 (Bidirection		ional repeatability)			
Withstand load ^{Note 5}	Pushing direction, N [lhf]		1580 [355.2]		2840 [638.4]		[1158]		
willistatiu load	Pulling direction N [lbf]	840 [188.8]	1480	[332.7]	2980 [669.9]			

Note 1: Centripetal force: Indicates the force generated by the restraining ring to maintain a center position, when no load or pressure is applied.

- 2: Repeatability: Maximum error of positions at which the plate stops when air pressure is applied after the plate is moved in a random direction with no load and no air pressure applied. See page 12 for details.
- 3: Angle repeatability: Bidirectional repeatability
- Maximum error of angles at which the plate stops when air pressure is applied after the plate is rotated left and right with no load and no air pressure applied. See page 12 for details.
- 4: The center position when pressure is applied to the plate and the center position when pressure is not applied may be misaligned.
- 5: When applying pressure, use a load that is 1/10 or less of the withstand load. See page @ for details.
- 6: Avoid overhanging operation conditions by keeping the installed center of gravity positioned within the outer diameter of the plate.
- 7: See page 12 for handling instructions and precautions.

Order Codes


Direct piping specifications, parallel type

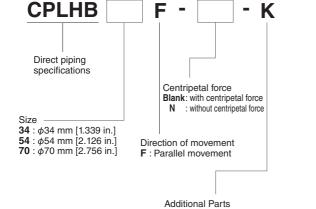


Blank: No additional parts : With additional parts attached (K-CPLHB
)
*See page 49 for details.

Direction of movement

lacktriangle X, Y, and θ axes

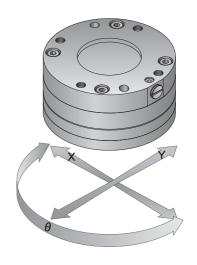

Inner construction

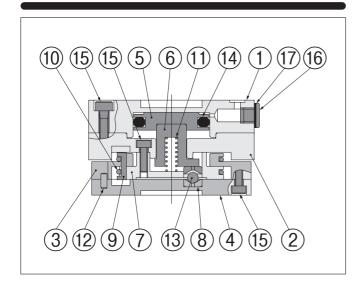

Major parts and materials

No.	Model Name	CPLHB34F	CPLHB54F	CPLHB70F			
1	Main unit	Aluminum alloy (electroless nickel plated					
2	Mated unit	Aluminum a	lloy (electroless n	ickel plated)			
3	Frame	Aluminum a	lloy (electroless n	ickel plated)			
4	Plate	Aluminum a	lloy (electroless n	ickel plated)			
(5)	Piston	Alum	ninum alloy (anod	ized)			
6	Lock piston	Steel (e	electroless nickel	plated)			
7	Disk	Aluminum alloy (special anti-abrasion treatr					
8	Spacer	Stainless steel (heat-treated)					
9	Alignment pin	Stainl	ess steel (heat-tre	eated)			
10	Restraining ring		Stainless steel				
11)	Spring		Piano wire				
12	Parallel pin		Stainless steel				
13	Steel ball		Hard steel				
14)	Seal	Syr	nthetic rubber (NE	BR)			
15	Bolt		Stainless steel				
16	Plug	Stainless steel Carbon steel (nickel plated)					
17	Gasket	Stainless steel c	oated with synthe	tic rubber (NBR)			

Graph (reference values)

Centripetal force

0.3

* Centripetal force:The force generated by the restraining ring to maintain a center position, when no load or pressure is applied


Retaining force, retaining moment Retaining moment


- * Retaining force: Force to hold the center position in the X-Y direction while air pressure is applied
- * Retaining moment: Force to hold the center position in the $\,\theta\,$ direction while air pressure is applied




Movement range (mm [in])


1 mm = 0.039 in

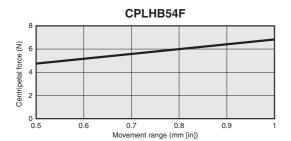


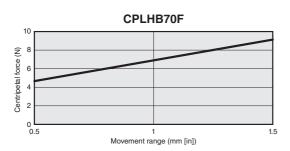


1 MPa = 145 psi

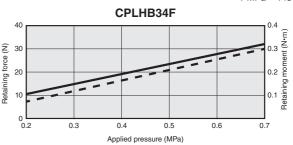

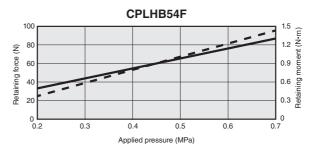

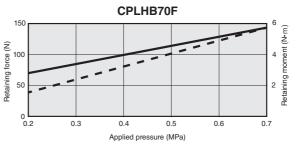


CPLHB34F CPLHB54F

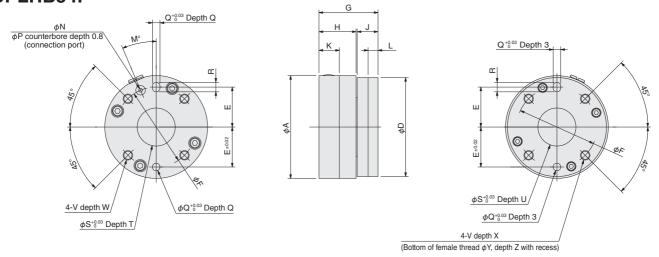

Model Code	Α	D	Е	F	G	Н	J	K	L	М	N	Р	Q	R
CPLHB34F	34	32	13	26	25	15.9	8.7	8.7	4.3	17	1.5	4	3	4
	[1.339]	[1.260]	[0.512]	[1.024]	[0.984]	[0.626]	[0.343]	[0.343]	[0.169]	[0.669]	[0.059]	[0.157]	[0.118]	[0.157]
CPLHB54F	54	52	21	42	31	19.5	10.9	10.7	5.2	23	2	5	4	5
	[2.126]	[2.047]	[0.827]	[1.654]	[1.220]	[0.768]	[0.429]	[0.421]	[0.205]	[0.906]	[0.079]	[0.197]	[0.157]	[0.197]

Model Code	S	Т	U	V	W	Х	Υ	Z
CPLHB34F	12 [0.472]	2 [0.079]	1.5 [0.059]	M3 × 0.5	6 [0.236]	4.3 [0.169]	4 [0.157]	1 [0.039]
CPLHB54F	20 [0.787]	2.5 [0.098]	1.5 [0.059]	M5 × 0.8	10 [0.394]	5.2 [0.205]	6 [0.236]	1.5 [0.059]

CPLHB70F

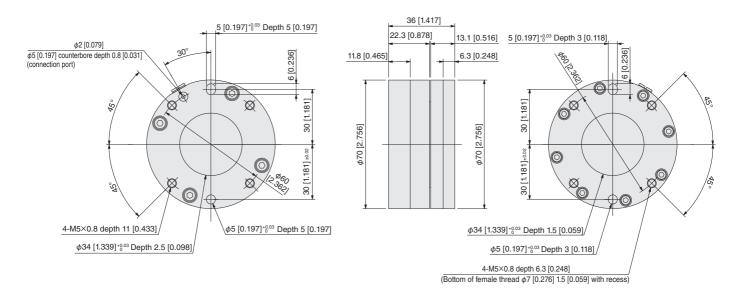

Compliance light

Direct piping specifications Swing type



Specifications


Item		Basic type	CPLHB34S	CPLHB34S-N	CPLHB54S	CPLHB54S-N	CPLHB70S	CPLHB70S-N			
Cylinder bore		mm [in.]	16 [0	.630]	25 [0	9841	40 [1.575]			
External dimension	ns	mm [in.]		1.339]	φ54 [-	φ70 [2.756]				
Height		mm [in.]		.024]		.299]		1.535]			
Weight		g [oz]		2.12]	190 [-		13.05]			
Operating type		3 [1	Single acting type								
Medium						ir					
Operating pressure	range	MPa [psi]		0.2 to 0.7 [29 to 102]							
Proof pressure		MPa [psi]			1.05	[152]					
Operating tempera	ture range	°C [°F]	0 to 60 [32 to 8700]								
Connection port size	ze	mm [in.]	φ1.5 [0.059]		φ2 [0	.079]				
Cylinder parts			-	-	Not re	quired					
Lubrication	Sliding part				Ν	lo					
Maximum payload	·	kg [lb]	1 [2.	205]	2 [4.	410]	4 [8	.820]			
	X-Y	mm [in.]	±0.5 [0.020]		±1 [0.039]		±1.5	[0.059]			
	Z	mm [in.]	-0.5 [-	0.020]	-0.5 [-	0.020]	-0.7 [-0.028]				
Movement range	θ (twisting)	0	±	:3	±4						
	a. (4:14:)	Swing angle	±C).5		±	1				
	α (tilting)	Incline angle	±1	1.4		±0	1.7				
Centripetal force (when mo	vement is 5 mm [0.19	97 in.]) ^{Note 1} N [lbf]	3 [0.674]	0	5 [1.124]	0	5 [1.124]	0			
Repeatability ^{Note 2} (in the direction of X and Y) P=0.5 MPa [73 psi] mm [in					±0.05	[0.002]					
Angle repeatability ^{Note 3} (in the direction of θ) P=0.5 MPa [73 psi]			±0.2 (Bidirection	nal repeatability)		nal repeatability)					
Withstand load ^{Note 5}	Pushing direct	ction N [lbf]	1,580	[355.2]	2,840	[638.4]	5,150	[1158]			
withstand load.	Pulling direct	ion N [lbf]	840 [188.8]	1,480	[332.7]	2,980	[669.9]			

- Note 1: Centripetal force: Indicates the force generated by the restraining ring to maintain a center position, when no load or pressure is applied.
 - 2: Repeatability: Maximum error of positions at which the plate stops when air pressure is applied after the plate is moved in a random direction with no load and no air pressure applied. See page @ for details.
 - 3: Angle repeatability: Bidirectional repeatability

 Maximum error of angles at which the plate stops when air pressure is applied after the plate is rotated left and right with no load and no air pressure applied. See page ② for details.
 - 4: The center position when pressure is applied to the plate and the center position when pressure is not applied may be misaligned.
 - 5: When applying pressure, use a load that is 1/10 or less of the withstand load. See page @ for details.
 - 6: Avoid overhanging operation conditions by keeping the installed center of gravity positioned within the outer diameter of the plate.
 - 7: See page 12 for handling instructions and precautions.


Order Codes

Direct piping specifications, swing type

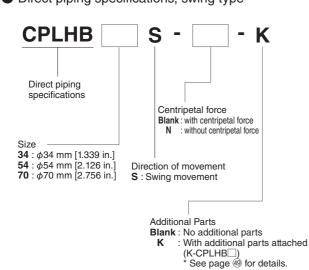


Direction of movement

 \bullet X, Y, Z, θ , and α axes

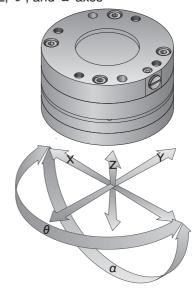

Inner construction

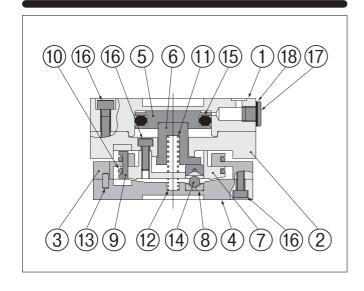

Major parts and materials


No.	Model Name	CPLHB34S	CPLHB54S	CPLHB70S	
1	Main unit	Aluminum a	ickel plated)		
2	Mated unit	Aluminum a	lloy (electroless n	ickel plated)	
3	Frame	Aluminum a	lloy (electroless n	ickel plated)	
4	Plate	Aluminum a	lloy (electroless n	ickel plated)	
(5)	Piston	Alum	ninum alloy (anod	ized)	
6	Lock piston	Steel (e	electroless nickel	plated)	
7	Disk	Aluminum alloy (special anti-abrasion treat			
8	Spacer	Stainless steel (heat-treated)			
9	Alignment pin	Stainless steel (heat-treated)			
10	Restraining ring		Stainless steel		
11)	Spring		Piano wire		
12	Spring		Stainless steel		
13	Parallel pin		Stainless steel		
14)	Steel ball		Hard steel		
15)	Seal	Syr	nthetic rubber (NE	BR)	
16	Bolt		Stainless steel		
17)	Plug	Stainless steel Carbon steel (nickel plated			
18)	Gasket	Stainless steel c	oated with synthe	tic rubber (NBR)	


Graph (reference values)


Centripetal force

* Centripetal force: The force generated by the restraining ring to maintain a center position, when no load or pressure is applied.

1 mm = 0.039 in

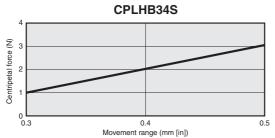

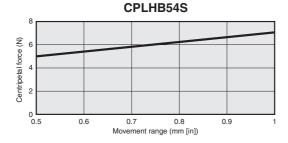


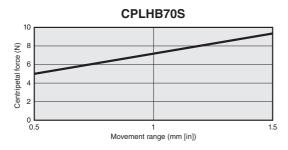



Retaining force Retaining force, retaining moment - Retaining moment

- * Retaining force: Force to hold the center position in the X-Y direction while air pressure is applied.
- * Retaining moment: Force to hold the center position in the $\, heta\,$ direction while air pressure is applied.


1 MPa = 145 psi

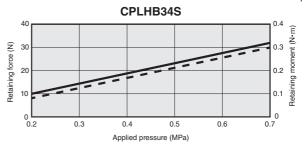

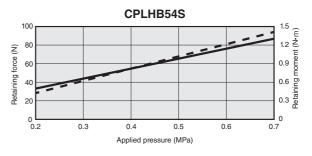

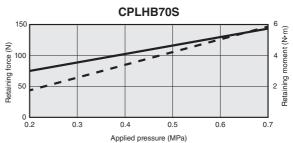


CPLHB34S CPLHB54S

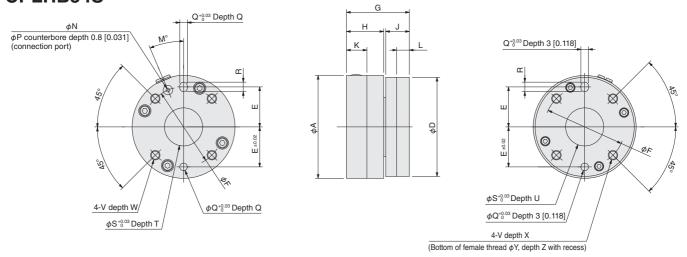

Model Code	Α	D	E	F	G	Н	J	K	L	М	N	Р	Q	R
CPLHB34S	34	32	13	26	26	15.9	9.2	8.7	4.8	17	1.5	4	3	4
	[1.339]	[1.260]	[0.512]	[1.024]	[1.024]	[0.626]	[0.362]	[0.343]	[0.189]	[0.669]	[0.059]	[0.157]	[0.118]	[0.157]
CPLHB54S	54	52	21	42	33	19.5	12.4	10.7	6.7	23	2	5	4	5
	[2.126]	[2.047]	[0.827]	[1.654]	[1.299]	[0.768]	[0.488]	[0.421]	[0.264]	[0.906]	[0.079]	[0.197]	[0.157]	[0.197]

Model Code	S	Т	U	V	W	Х	Υ	Z
CPLHB34S	12 [0.472]	2 [0.079]	1.5 [0.059]	M3 × 0.5	6 [0.236]	4.8 [0.189]	4 [0.157]	1 [0.039]
CPLHB54S	20 [0.787]	2.5 [0.098]	1.5 [0.059]	M5 × 0.8	10 [0.394]	6.7 [0.264]	6 [0.236]	1.5 [0.059]

CPLHB70S

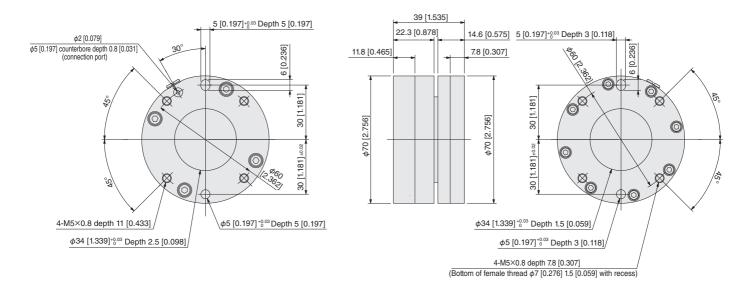

Additional parts

· Auto hand changer installation set



34 : For CPLHB34 **54: For CPLHB54**

70 : For CPLHB70

[Set contents]

- SRK-CPLHB□
- P-CPLHB
- AD-CPLHB
- BLT-CPLHB

Individual parts

· Packing to connect auto hand changer



34 : For CPLHB34 (1 pc) 54 : For CPLHB54 (1 pc)

70 : For CPLHB70 (1 pc)



Model	Α	В	Material
SRK-CPLHB34	1	2	NBR
SRK-CPLHB54	1	3	NBR
SRK-CPLHB70	1	3	NBR

Positioning pin





34 : For CPLHB34 (2 pc) 54 : For CPLHB54 (2 pc)

70 : For CPLHB70 (2 pc)



Model	Α	В	Nominal	Material
P-CPLHB34	6	3h8 (0 -0.014)	JIS B 1354 B type 3×6	Stainless steel
P-CPLHB54	8	4h8 (0 -0.018)	JIS B 1354 B type 4×8	Stainless steel
P-CPLHB70	10	5h8 (0 -0.018)	JIS B 1354 B type 5×10	Stainless steel


Positioning plate



AD-CPLHB 34

34 : For CPLHB34 54 : For CPLHB54

70 : For CPLHB70

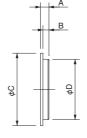

Model	Α	В	С	D	Material
AD-CPLHB34	2.3	1.5	15g6 (-0.006)	12g6 (-0.006)	Aluminum alloy
AD-CPLHB54	2.8	2	24g6 (-0.007)	20g6 (-0.007)	Aluminum alloy
AD-CPLHB70	3.3	1	34g6 (-0.009)	29g6 (-0.007)	Aluminum alloy

Mounting bolts



BLT-CPLHB 34

34 : For CPLHB34 (4 pc) 54 : For CPLHB54 (4 pc)

70 : For CPLHB70 (4 pc)



Model	Α	В	С	D	Material
BLT-CPLHB34	3	10	5.5	M3×0.5	Stainless steel
BLT-CPLHB54	5	16	8.5	M5×0.8	Stainless steel
BLT-CPLHB70	5	20	8.5	M5×0.8	Stainless steel

Adapter set for air hand

HA-CPLHB 34 - A

A: For AFDPG N: For NHBDPG

34: For CPLHB34

54: For CPLHB54 70: For CPLHB70 * The adapter set for air hands is the hand adapter A, hand adapter B, positioning pins, and mounting bolts. However, only the set for HA-CPLHB34-A has the hand adapter A, positioning pins, and mounting bolts.

The following table shows air hands for their intended adapter sets.

Size Type	-A	-N	
34	For AFDPG-6	For NHBDPG-10	
54	For AFDPG-8	For NHBDPG-16	
70 For AFDPG-14		For NHBDPG-20	

Mass


y [oz]


						01.
Basic type	HA-CPLHB34-A	HA-CPLHB34-N	HA-CPLHB54-A	HA-CPLHB54-N	HA-CPLHB70-A	HA-CPLHB70-N
Mass	18 [0.64]	33 [1.16]	118 [4.16]	113 [3.99]	183 [6.46]	184 [6.49]

For CPLHB34

External dimensions of assembled compliance light and adapter for air hand

CPLHB34F(S) + HA-CPLHB34-A

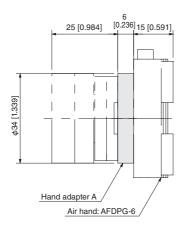

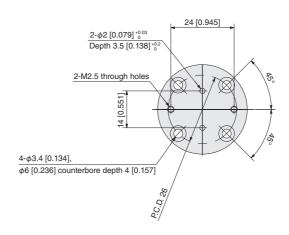


Attached parts


Parallel pin: B type 2×5 2 pc
Parallel pin: B type 3×6 1 pc
Hexagon socket head bolt: M2.5×0.45, length under head 12 [0.472] 2 pc
Hexagon socket head bolt: M3×0.5, length under head 6 [0.236] 4 pc

Note: Materials are as follows.

Hand adapter A: Aluminum alloy (anodized) Attached parts mentioned above: Stainless steel

CPLHB34F(S) + HA-CPLHB34-N

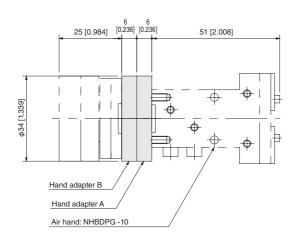

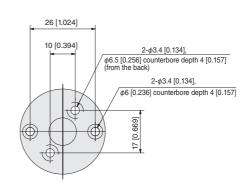

Parallel pin: B type 3×6 2 pc Hexagon socket head bolt: M3×0.5, length under head 6 [0.236] 8 pc

Note: Materials are as follows.


Hand adapter A, hand adapter B: Aluminum alloy (anodized)

Attached parts mentioned above: Stainless steel

For CPLHB54

External dimensions of assembled compliance light and adapter for air hand

CPLHB54F(S) + HA-CPLHB54-A

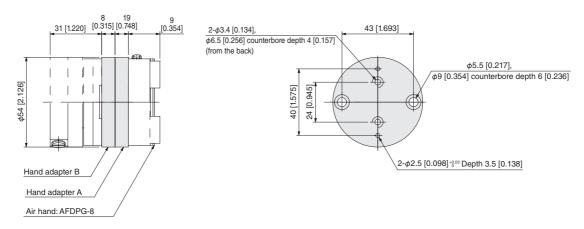

Attached parts


Parallel pin: B type 2.5×6 2 pc Parallel pin: B type 4×8 2 pc


Hexagon socket head bolt: M3×0.5, length under head 8 [0.315] 2 pc Hexagon socket head bolt: M5×0.8, length under head 8 [0.315] 6 pc

Note: Materials are as follows. Hand adapter A, hand adapter B: Aluminum alloy (anodized)

Attached parts mentioned above: Stainless steel

CPLHB54F(S) + HA-CPLHB54-N

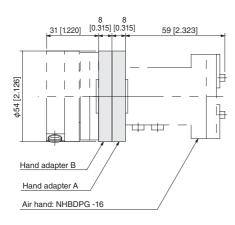

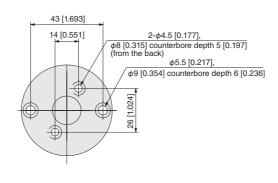

Attached parts

Parallel pin: B type 4×8 2 pc Hexagon socket head bolt: M4×0.7, length under head 8 [0.315] 2 pc Hexagon socket head bolt: M5×0.8, length under head 8 [0.315] 6 pc

Note: Materials are as follows.


Hand adapter A, hand adapter B: Aluminum alloy (anodized)


Attached parts mentioned above: Stainless steel

For CPLHB70

External dimensions of assembled compliance light and adapter for air hand

CPLHB70F(S) + HA-CPLHB70-A

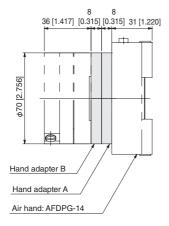

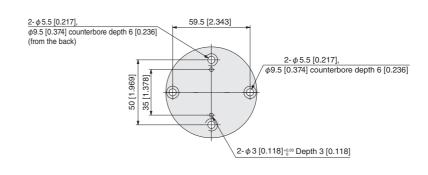


Attached parts


Parallel pin: B type 3×6 2 pc
Parallel pin: B type 5×10 2 pc
Hexagon socket head bolt: M5×0.8, length under head 8 [0.315] 8 pc

Note: Materials are as follows. Hand adapter A, hand adapter B: Aluminum alloy (anodized)

Attached parts mentioned above: Stainless steel

CPLHB70F(S) + HA-CPLHB70-N

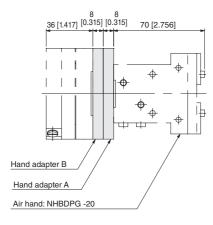

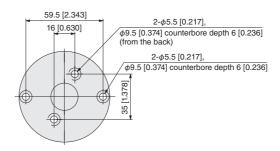

Attached parts


Parallel pin: B type 5×10 2 pc Hexagon socket head bolt: M5×0.8, length under head 8 [0.315] 8 pc

Note: Materials are as follows. Hand adapter A, hand adapter B: Aluminum alloy (anodized)


Attached parts mentioned above: Stainless steel

Example of unit dimensions


■ Robot adapter (RA-MJC10-B) Auto hand changer (MJC10M-P, MJC10TC-P) Compliance light (CPLHB54F) Adapter for air hand (HA-CPLHB54-A) Air hand (AFDPG-8)

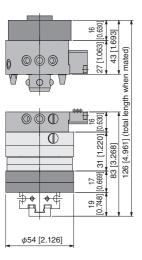


Robot adapter (RA-MJC10-B) Auto hand changer (MJC10M-P, MJC10TC-P) Compliance light (CPLHB54F) Adapter for electric hand (EW2A-H18) Flat type electric hand (EW2H18)

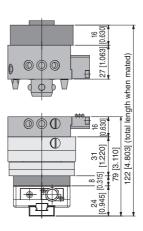

■ Robot adapter (RA-MJC10-B) Auto hand changer (MJC10M-P, MJC10T-P) Adapter for air hand (HA-MJC10-A) Air hand (AFDPG-14)

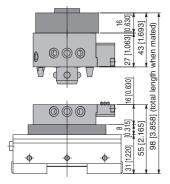

Robot adapter (RA-MJC10-B) Auto hand changer (MJC10M-P, MJC10T-P) Flat type electric hand (EW2H18)

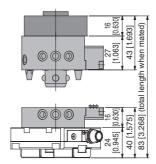

* The previous "MJB series auto hand changer series" models were changed to the "MJC series", as of October 2019. We apologize for inconveniencing our customers using these products. Please refer to the following compatibility table.

Master side		
Previous model	New model	Compatibility
MJB34M	MJC3M	
MJB34M-P	MJC3M-P	
MJB34M-C	MJC3M-C	
MJB54M	MJC10M	
MJB54M-P	MJC10M-P] _
MJB54M-C	MJC10M-C	\neg
MJB54M-D	MJC10M-D	7
MJB70M	MJC20M	
MJB70M-P	MJC20M-P	
MJB70M-C	MJC20M-C	
MJB70M-D	MJC20M-D	

Tool side		
Previous model	New model	Compatibility
MJB34T	MJC3T	
MJB34T-P	MJC3T-P	
MJB34T-C	MJC3T-C	
MJB34TC	MJC3TC	
MJB34TC-P	MJC3TC-P	
MJB34TC-C	MJC3TC-C	
MJB54T	MJC10T	
MJB54T-P	MJC10T-P	
MJB54T-C	MJC10T-C	
MJB54T-D	MJC10T-D	
MJB54TC	MJC10TC	
MJB54TC-P	MJC10TC-P	
MJB54TC-C	MJC10TC-C	
MJB54TC-D	MJC10TC-D	
MJB70T	MJC20T	
MJB70T-P	MJC20T-P	
MJB70T-C	MJC20T-C	
MJB70T-D	MJC20T-D	
MJB70TC	MJC20TC	
MJB70TC-P	MJC20TC-P	
MJB70TC-C	MJC20TC-C	
MJB70TC-D	MJC20TC-D	

Addit	ional Parts	7
Previous model	New model	Compatibility
MJBE-PM-34	MJCE-PM-3	
MJBE-PT-34	MJCE-PT-3	7
MJBE-CM-34	MJCE-CM-3	7
MJBE-CT-34	MJCE-CT-3	7
MJBE-DM-54	MJCE-DM-10	7
MJBE-DT-54	MJCE-DT-10	
MJBE-PM	MJCE-PM	7
MJBE-PT	MJCE-PT	
MJBE-CM	MJCE-CM	7
MJBE-CT	MJCE-CT	7
MJBE-DM	MJCE-DM	
MJBE-DT	MJCE-DT	
RA-MJB34-A	RA-MJC3-A	
RA-MJB34-B	RA-MJC3-B	
RA-MJB54-B	RA-MJC10-B	
RA-MJB54-C	RA-MJC10-C	
RA-MJB70-C	RA-MJC20-C	7
RA-MJB70-D	RA-MJC20-D	
HA-MJB34-A	HA-MJC3-A	
HA-MJB34-N	HA-MJC3-N	
HA-MJB54-A	HA-MJC10-A	
HA-MJB54-N	HA-MJC10-N	7
HA-MJB70-A	HA-MJC20-A	
HA-MJB70-N	HA-MJC20-N	
MJBZ-PK	MJCZ-PK	
MJBZ-PR	MJCZ-PR	7

Limited Warranty

KOGANEI CORP. warrants its products to be free from defects in material and workmanship subject to the following provisions.

Warranty Period The warranty period is 180 days from the date of delivery.

Koganei Responsibility

If a defect in material or workmanship is found during the warranty period, KOGANEI CORP. will replace any part proved defective under normal use free of charge and will provide the service necessary to replace such a part.

Limitations

This warranty is in lieu of all other warranties, expressed or implied, and is limited to the original cost of the product and shall not include any transportation fee, the cost of installation or any liability for direct, indirect or consequential damage or delay resulting from the defects.

- KOGANEI CORP. shall in no way be liable or responsible for injuries or damage to persons or property arising out of the use or operation of the manufacturer's product.
- This warranty shall be void if the engineered safety devices are removed, made inoperative or not periodically checked for proper functioning.
- Any operation beyond the rated capacity, any improper use or application, or any improper installation of the product, or any substitution upon it with parts not furnished or approved by KOGANEI CORP., shall void this warranty.
- This warranty covers only such items supplied by KOGANEI CORP. The products of other manufacturers are covered only by such warranties made by those original manufacturers, even though such items may have been included as the components.

The specifications are subject to change without notice.

URL http://www.koganei.co.jp

E-mail: overseas@koganei.co.jp



KOGANEI CORPORATION

OVERSEAS DEPARTMENT

3-11-28, Midori-cho, Koganei City, Tokyo 184-8533, Japan Tel: (+81)42-383-7271 Fax: (+81)42-383-7276

KOGANEI INTERNATIONAL AMERICA.INC.

48860 Milmont Drive, Suite 108C Fremount, CA 94538,U.S.A Tel: (+1)510-744-1626 Fax: (+1)510-744-1676

SHANGHAI KOGANEI INTERNATIONAL TRADING CORPORATION

RM 2606-2607, Tongda Venture Building No. 1, Lane 600, Tianshan Road, Shanghai, China Tel: (+86)021-6145-7313 Fax: (+86)021-6145-7323

TAIWAN KOGANEI TRADING CO.,LTD

Rm.2,16F.,No88,Sec.2,zhongxiao E.Rd.,ZhongZheng Dist.,Taipei City 10050,Taiwan(ROC) Tel: (+886)02-2393-2717 Fax: (+886)02-2393-2719

KOGANEI KOREA CO.,LTD

A-3001, Heungdeok IT Valley Bldg., Heungkeok 1-ro, Giheung-gu, Yongin-si, Gyeonggi-do, 446-908,KOREA
Tel: (+82)31-246-0414 Fax: (+82)31-246-0415

KOGANEI (THAILAND) CO.,LTD

555 Rasa Tower I, Unit1207,1202,12th floor, Phaholyothin Road, Chomphon, Chatuchak, Bangkok 10900 Thailand

Tel: (+66)02-513-1228 Fax: (+66)02-513-1232

KOGANEI ASIA PTE. LTD.

69 Ubi Road 1, #05-18 Oxley Bizhub Singapore 408731 Tel: (+65)6293-4512 Fax: (+65)6293-4513